# **End-to-End Protection Wrapper Generator**

**User Manual** 

 Version:
 2.0.1

 Date:
 13.03.2015

 Document number:
 D-MSP-G-70-001

#### TTTech Automotive GmbH

Schoenbrunner Str. 7, A-1040 Vienna, Austria, Tel. + 43 1 585 34 34-0, Fax +43 1 585 34 34-90, support@tttech-automotive.com

The data in this document may not be altered or amended without special notification from TTTech Automotive GmbH. TTTech Automotive GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license.

Using and copying is only allowed in concurrence with the specifications stipulated in the contract. Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system, or translated into another language without written permission of TTTech Automotive GmbH.

The names and designations used in this document are trademarks or brands belonging to the respective owners.



# **Table of Contents**

1 Intro	oduction	4
1.1 E2E	Protection Wrapper Generator	4
1.2 Too	ols Integration	5
	e Cases.	
		-
2 Vers	ions	7
3 Insta	allation	7
4 Dros	aroon cor	8
-	processor	_
4.1 Pre	processor Help	8
	4.1.1 Using the Preprocessor	
	4.1.2 Behavior and Log Output	
	4.1.3 Log Message Format	
	4.1.4 Warning and Info Log Messages	12
5 E2E	Protection Wrapper Generator	14
5.1 Usi	ng the Generator	14
5.2 E2E	EConfig file	15
	5.2.1 Syntax	
	5.2.2 Description of Elements	
	5.2.3 File Content Checks	
	erated Code	26
61 AP	l	26
	6.1.1 Initialization	
	6.1.3 Transmission and Reception	
	6.1.4 Usage Example Code	
	Application Sample Code	
	6.1.5 Differences to SW-C End-to-End Communication Protection Library	
	•	
7 File	Structure	44
8 Fund	ctional Specification	45
8.1 Re1	turn values	45
8.2 Fu	nction E2EPW Write <o> ()</o>	45
	nction E2EPW_Read <o> ()</o>	
9 Env	ironment Specifics	51
9.1 Ve	ctor DaVinci Developer/RTE Configurator for AUTOSAR 3.2	51
	9.1.1 Configuration Restrictions	
	9.1.2 Preprocessor Restrictions	
	9.1.3 E2EPW and RTE in a Safety-Related System	
9.2 Oth	ner Issues	52



10 Integration Notes	53
10.1 Checking the Tool Input	53
10.2 Checking the Generated Files	53
10.3 Performing an Integration Test	53
10.3.1 Using Restbus Simulation	53
Example Scenarios	
Integration Test Message Sequence	58
Hints for Integration Test Setup	63
10.3.2 Using Intra-ECU Signaling	63
Sending Correct Messages	64
Sending Manipulated Messages	64
11 Abbreviations	66
12 Glossary	67
13 References	68

# <sup>1</sup> Introduction

Many automotive applications are distributed among several **electronic control units** (**ECU**) and include communication via embedded networks. The exchanged data is often critical (for example, car speed or steering angle), and incorrect data could endanger both, the driver and the car. Therefore, special mechanisms have been introduced to prevent the processing of incorrect data. One of them is the **End-to-End Communication Protection Library (E2Elib)**, which has been standardized in AUTOSAR [AS E2E SWS] (68).

Most automotive networks protect data with checksums. These mechanisms are not adequate for protecting the application data, because errors in gateways or software layers within the ECU could destroy the data before and after it is transferred over the network. End-to-end protection also covers this path. The E2Elib uses an additional checksum and a sequence counter in order to detect false and missing data directly in the application.

The figure below shows an **I-PDU** with a length of four bytes and a **signal** with two bytes:



The **end-to-end communication protection** requires additional signals in the protected signal area for the checksum and the sequence counter:



For details about this mechanism, see the *AUTOSAR E2Elib Specification* [AS\_E2E\_SWS] and the communication protection specification of the original equipment manufacturer.

# 1.1 E2E Protection Wrapper Generator

Applications using the **E2Elib** or similar communication protection mechanisms have one major problem: the E2E library protection routines need the I-PDU representation to apply protection mechanisms.

Therefore, the application would have to provide the DE in that I-PDU representation, which means that the signals of the DE must be marshaled using information the application normally does not have: byte order, bit length and start bit position of each signal, and the length of the I-PDU.

To write CPU-independent code and reuse application functions for more than one customer (OEM), it is necessary to have a software layer to deal with this. Usually, a so-called COM layer is used. The application of the E2E-Lib must create a similar layer beside or above COM. That is, the application must implement parts of the COM layer again. The application must know details of the communication system that can normally be accessed only in lower layers.

The **E2E Protection Wrapper (E2EPW)** provides a layer that circumvents this problem. The protection wrapper is generated code. That code consists of copy routines which know about the I-PDU layout and contain calls to the E2Elib routines. For transmission, the application passes the DE to the wrapper instead of the RTE. The

wrapper then builds the I-PDU representation, invokes the E2E library function, and then the RTE function. For reception, the application calls the wrapper instead of the RTE. The wrapper receives the DE from the RTE and invokes the E2E library function before returning the DE.

According to the *AUTOSAR E2Elib Specification* [AS E2E SWS] 68, the **E2E Protection Wrapper Generator (E2EPWG)** generates the code for the protection wrapper from a specific **E2EConfig file**.


**Note:** This user manual does not cover safety-related topics. For safety-critical projects that need to fulfill ISO 26262 requirements, refer to the *End-to-End Protection Wrapper Safety Manual* [TT\_E2EPW\_SM] (68).

# 1.2 Tools Integration

This document describes how to use the **E2EPWG** developed by TTTech Automotive.

## **Example (integration into the Vector tools environment):**

In this environment, a special preprocessor is available. This preprocessor converts the XML files produced by the Vector tools to a **E2EConfig file** that can be used as an input for the **E2EPWG**.

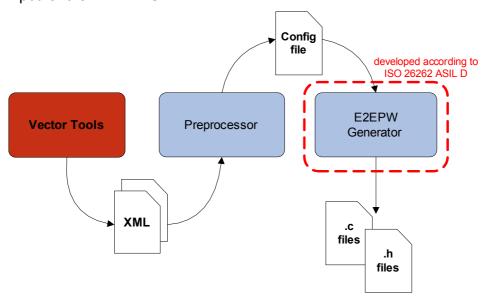

Overview of the E2EPW Generator and Preprocessor

#### 1.3 Use Cases

End-to-end protection is a technique that has been used in safety-relevant distributed applications, in the automotive and other industrial sectors for quite some time. The **E2EPW** is intended for use in all areas where **checksum (CRC)** and **sequence counter (SC)** are used in the data area for **end-to-end communication protection**. However, the way data is exchanged differs slightly in different scenarios. The defined use cases are:

- AUTOSAR E2E Protection Wrapper with RTE for data exchange (use case AUTOSAR RTE)
- AUTOSAR E2E Protection Wrapper without RTE (use case AUTOSAR NO



## RTE)

 J1939 CAN stack with an E2E Protection Wrapper using the transport layer (use case J1939 CAN)

Currently, only the use cases **AUTOSAR RTE** and **AUTOSAR NO RTE** are supported.

This user manual gives a detailed description of use case **AUTOSAR RTE** only.


#### **Overview of Use Case AUTOSAR RTE**

In this use case, the SW-C sends/receives DataElement (complex data element of AUTOSAR) data structures, consisting of fields for signals and a special CRC and SC signal. The **Protection Wrapper** is called by the **SW-C**.

At **transmission** (see **left** figure below), the Protection Wrapper calculates the CRC and SC and passes the DataElement to the RTE.

At **reception** (see **right** figure below), the Protection Wrapper checks the CRC and SC in the received DataElement and passes it to the SW-C.

The status provides additional information, such as error codes and the number of lost DataElements.

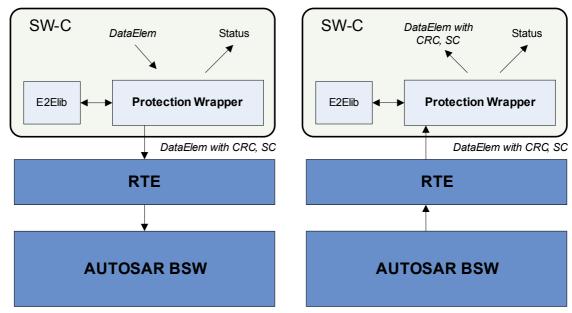

Overview of Use Case AUTOSAR RTE

# <sup>2</sup> Versions

This User Manual describes

- the Preprocessor Version 2.0.2 and
- the Protection Wrapper Generator Version 2.0.1.

# 3 Installation

The **Preprocessor** and the **E2EPWG** are Windows console applications. There is no special installation procedure for them.

If the **E2EPW** is shipped together with Vector BSW, the files

- E2EPW MemMap.inc and
- E2EPW\_Compiler\_Cfg.inc

are already incorporated into the Vector BSW.

Otherwise the files E2EPW\_Compiler\_Cfg.inc and E2EPW\_MemMap.inc are also shipped with the **Preprocessor** and the **E2EPWG** and are example files that must be adapted to the actual build environment and requirements according to the AUTOSAR Specification of Compiler Abstraction [AS\_COMABS\_SWS] and the AUTOSAR Specification of Memory Mapping [AS\_MEM\_SWS] 88.

For tool integration, the Preprocessor can be invoked using the command line parameters. Please refer to the respective tool manual for how to do this.

Note: If the Preprocessor and the E2EPWG are part of a software package, they may be installed and integrated transparently. The content of E2EPW\_Compiler\_Cfg.inc and E2EPW\_MemMap.inc may then be already included in the corresponding Compiler\_Cfg.h and MemMap.h files of the software package.

The Preprocessor is built with py2exe and includes Python 2.7.3 and lxml 2.2.8.

The corresponding software licenses for these open source packages are contained in the file LICENSE, which is bundled with the Preprocessor executable.

The following **DLLs** must be available in the system:

- USER32.dll
- SHELL32.dll
- WSOCK32.dll
- ADVAPI32.dll
- WS2 32.dll
- KERNEL32.dll
- MSVCR90.dll

**Note**: If this DLL is not available, it must be installed manually. The installer for this DLL is availbale from <a href="http://www.microsoft.com/downloads/details.aspx?">http://www.microsoft.com/downloads/details.aspx?</a>
FamilyID=9b2da534-3e03-4391-8a4d-074b9f2bc1bf&displaylang=en



# 4 Preprocessor

The Preprocessor takes the **ECU information** of the system description and the **SW-C** design information as an input. The output of the Preprocessor is a **E2EConfig file** (in a specific format) that can be interpreted by the **E2EPWG** in order to generate the protection wrapper code.

The behavior of the preprocessor is controlled with command line parameters (8).

## 4.1 Preprocessor Help

The behavior of the Preprocessor is controlled with command line parameters.

Calling the preprocessor with the command line parameter -h gives the following output:

```
E2EPWG PreProcessor v2.0.2
Usage: pwg_preprocessor.exe [options] ProjectName [SystemDescriptionComm]
SystemDescription OutputDir
Options:
 -h, --help
                       show this help message and exit
  -b BYTEORDER, --cpu-byte-order=BYTEORDER
                       Set the cpu-byte-order to BYTEORDER. Valid values are:
                       BIG_ENDIAN, LITTLE_ENDIAN, HIGH_BYTE_FIRST,
                       LOW BYTE FIRST.
  -e FILE, --e2epwg=FILE
                       Execute E2EPWG using the config file created by the
                       PreProcessor.
  -v LEVEL, --verbose=LEVEL
                       Output extended information (with LEVEL verbosity
                       level). Levels above 1 are useful for debugging.
 -f, --error format
                      Enables the Vector tool error format.
  -E FILE, --ecuc=FILE Additional ECU Description File containing byte-order
```

#### 4.1.1 Using the Preprocessor

To run the **Preprocessor**, enter the following **command** in a command prompt window:

raye

## The following table describes the **mandatory** command line **parameters**:

Name	Meaning
<projectname></projectname>	This is an arbitrary name. This parameter is used as the file <b>name</b> of the <b>generated configuration</b> file.
[ <systemdescriptioncom m="">]</systemdescriptioncom>	This parameter specifies the <b>location</b> and <b>name</b> of the (ECU extract of the) <b>system description file</b> . It contains the communication part of the system description, e.g., the signals and their corresponding mapping to I-PDUs.
	This file is <b>optional</b> for <b>AUTOSAR 3</b> formats, because it is only necessary if the information is not already contained in SystemDescription, which is always the case for AUTOSAR 4 formats.
<systemdescription></systemdescription>	This parameter specifies the <b>location</b> and <b>name</b> of the <b>system description</b> file (application part). This file contains the design of the software components together with all the tasks, events, ports and (variable) data prototypes. It can also contain signals, I-PDUs and mappings between signals and I-PDUs. For AUTOSAR 4 formats, this information is mandatory.
	The ECU file is an XML file with a format that conforms to the meta model of the AUTOSAR specification versions 3.1.4, 3.2.1, 3.2.2, 4.0.3, 4.1.2, or 4.1.3. The file is generated by the Vector tools. The file extension is .arxml.
<outputdir></outputdir>	This parameter specifies the <b>path</b> where the <b>generated configuration</b> file will be stored.

## The following table describes the **optional** command line **parameters**:

Name	Meaning
-h	Shows the help message 8.
-b BYTEORDER,cpu-byte-order=BYTEORDER	This parameter specifies the value that must be assigned to the attribute Byte_Order_CPU of the generated E2EConfig file.
	The CPU byte order must be provided, either by using command line parameter -b or -E.
	Possible values: BIG_ENDIAN (=HIGH_BYTE_FIRST),



Name	Meaning
	■ LITTLE_ENDIAN (=LOW_BYTE_FIRST).
-e FILE,e2epwg=FILE	This parameter specifies the location of the <b>E2EPWG</b> . When this parameter is specified, the generator is invoked after the Preprocessor has successfully generated the <b>E2EConfig file</b> .
	The command line option —e accepts a path to an executable file (the E2EPWG) and calls this file after configuration generation as follows: <file> <outputdir>\<ecuprojectname>.cfg <outputdir></outputdir></ecuprojectname></outputdir></file>
	where
	<file> is the executable file FILE,</file>
	• <outputdir> is the OutputDir parameter provided to the Preprocessor and</outputdir>
	■ <ecuprojectname> is the EcuProjectName parameter provided to the Preprocessor.</ecuprojectname>
-v LEVEL, verbose=LEVEL	This parameter is used for <b>detailed error reporting</b> . The higher the verbosity level, the more detailed is the report.
	Possible values:
	<ul> <li>Levels above 1 are useful for debugging. The default value is 0 (a short error notice is written to stderr).</li> </ul>
	■ For <b>level 1</b> , the context of the action that failed is also printed to stderr. If the error occurred during the parsing of the XML input data, the location within the XML file (line number) is provided.
	■ For <b>level 2</b> , the XPATH query that failed is also printed. If the XPATH query is not based on the root node, the location within the XML document, from where the XPATH query was started, is also provided.
-f, error_format	This parameter enables the error format needed by the Vector tools to parse the output messages of the Preprocessor.
-E, ecuc	This parameter is used to provide the ECUC file, which contains the definition of the CPU byte order. If this option is not used, the byte order must be provided by using the -b parameter.

**Note:** Given the call parameters above, the **E2EPWG** will put all the generated files into the <OutputDir> directory. If a file created by the **E2EPWG** exists already, e.g., from a previous run, the generator will output an error message and exit. It is therefore recommended to provide an empty, but existing <OutputDir> directory to the Preprocessor when the command line option -e is used.

### 4.1.2 Behavior and Log Output

The overall behavior of the Preprocessor was changed for version 1.6.1, 2.0.1 and onward. Previously, the Preprocessor would have aborted with an error message if the resulting E2EConfig file had not been complete/valid regarding the provided ARXML input.

The new behavior performs a best-effort strategy to provide as much content derived from the input ARXML as possible, even if the result is only partial and not a valid E2EConfig file. This has several implications:

- Almost all error messages are now reported as warning. This is mainly due to the default behavior of the default tool chain (Vector DaVinci), which discards all generated output if an error is reported.
- Warnings may build up and result in causally linked warning messages.
- The overall amount of log output messages increases drastically as the preprocessor continues to process the input ARXML, where it previously would have simply aborted with a single error message.
- The generated E2EConfig file may not be valid and result in an error message of the E2EPW Generator. Manual adaptions of the E2EConfig file or of the ARXML input may be necessary to get a valid E2EConfig file. Hints are provided in [Warning] and [Info] messages.
- EndToEndProtections may be skipped due to errors and a warning message is provided. There will not be a corresponding Protected\_Area defined in the eventually generated E2EConfig file.

In general, log output is written to stderr.

## 4.1.3 Log Message Format

The format of log output messages is aligned to the format specification of the Vector DaVinci tools.

#### The format is as follows:

```
[<Severity>] E2E<ID> - <Summary>
- <Description>
```

Where <Severity> is one of the following:

- [Info] For information only, guiding through the process or indicating what the Preprocessor currently does.
- [Warning] Depending on the particular message, this can be a simple indication as "that there might be a problem" as well as a severe warning like "the output file is incomplete / cannot be used as is".



• [Error] - For hard errors where no output can be created. Typically, these are runtime errors, e.g. input file missing, cannot write to file, or unrecoverable parsing errors.

<ID> is a five-digit number indicating the message type.

- <summary> is optional and provides a short summary of the particular message.
- <Description> provides detailed information about the cause of the message.

## 4.1.4 Warning and Info Log Messages

The Preprocessor provides helpful log output, which should always be checked for [Warning] and [Info] messages.

Some of the [Info] messages are only provided if the verbose level is greater 0 (command line option -v / --verbose).

This section lists common [Warning] and [Info] log messages and describes their meaning. Some of them are also related to each other.

Message	Description
[Info] E2E01004 Found maximum value for MaxDeltaCounterInit of 15 which should actually be 14 - value will be corrected in generated E2E-config file	This message occours if MaxDeltaCounterInit is set to the maximum value as described in SWS_E2Elibrary, which is apparently not a meaningful value and therefore rejected by the E2EPW Generator. Background: MaxDeltaCounterInit is used to initialize the status variable MaxDeltaCounter. The maximum possible value is 14 (Profile 1) respectively 15 (Profile 2). However, MaxDeltaCounter is always incremented by the E2Elib before it is used. Therefore, a MaxDeltaCounterInit value of 13 and 14 is semantically equivalent with Profile 1 (14 and 15 are equivalent with Profile 2). The E2EPW Generator, however, is pessimistic and assumes an erroneous configuration if a configuration value makes no sense. Therefore, the Preprocessor adapts the value and provides an [Info] message. Additionally, the Preprocessor places a comment after the corrected value in the E2EConfig file.
[Info] E2E01100 -  Could not find adequate signals in signal group 'example_sgrp_with_offset' to be configured as protection signals - trying non-zero data offset of signal group to find matching signals.	Only appears if verbose level is greater 0. It indicates that the protection signals could not be found at their expected position, but they simply might be offset from the start. The preprocessor then tries several offsets to find a matching value for all signals. If a matching offset is found, another [Info] E2E01100 message is provided.
[Info] E2E01100 - Signal Group offset seems to fit with offset 16 (at begin of first signal)	This message only appears if the previous <code>[Info]</code> <code>E2E01100</code> message was provided. It states the result of the offset search. Please note that the E2EPW Generator has no direct support for non-zero offsets, so the Preprocessor will substract this offset value from the Bit_Position of each signal

Message	Description
	in the E2EConfig file. This is also stated as a comment before the signals block in the corresponding Protected_Area in the E2EConfig file.
[Warning] E2E00210 Could not determine position/name of (all) protection signals in signal group 'Eng_Rs_EngCtrl_Pr2_24huh6mozixa c7wbqdhljanf' Resulting E2E Config file must be adapted manually regarding Bit_Position and Signal_Property	This [Warning] message indicates that there was no match for the determination of protection signals. This might be due to a mismatching <code>Bit_Position</code> of single signals, <code>Signal_Type</code> or <code>Bit_Length</code> , but most probably there is a misconfiguration in the system (missing mapping of signals to data elements, or signal layout configuration). The E2EPW Generator will not accept this E2EConfig file without modification.
[Info] E2E01101 There was an error/warning during processing an End-To-End-Protection ('End-To-End-Protection_SHORT-NAME'). No E2E config section will be generated for this End-To-End-Protection. However, continuing to process remaining End-To-End-Protections.	This info message refers to a previously stated warning for that End-To-End-Protection. The severity of that warning leads to this info message, which states that the preprocessor did not generate a Protected_Area for that End-To-End-Protection. However, it will go on with processing the next End-To-End-Protection.
[Warning] E2E01003 Profile 'PROFILE_04' is not supported/ignored for E2EPW configuration generation - Please use E2E Transformer (E2EXf) generator. Found End-To-End-Profile with Category 'PROFILE_04' Example.arxml.	If Profile 4, 5, or 6 are found, the Preprocessor provides a warning message, which states that these profiles are not handled by the Preprocessor. End-To-End-Protections are ignored, so that they can be processed using the E2E Transformer (E2EXf) tool chain.
[Warning] E2E00206 No supported End-to-End protection found.	A follow-up warning message to message [Info] E2E01101 or [Warning] E2E01003. If all End-To-End-Protections are skipped due to severe warnings, no E2EConfig file will be generated. Also, no final "Configuration file <filename> successfully written." message will be provided.</filename>

# <sup>5</sup> E2E Protection Wrapper Generator

The generator is a Microsoft Windows console application. It uses an **E2EConfig file** to generate files that contain the **E2EPW** code.

The Windows version on which the generator was tested during development is noted in the corresponding Safety Manual [TT\_E2EPW\_SM] (68). An addendum also confirms compatibility with Microsoft Windows 7. However, as there are no special system requirements, the generator should run without problems on all Windows version since Microsoft Windows XP SP3.

# 5.1 Using the Generator

To use the generator, use the following command line:

pwg.exe <config-file> <output-path>

where <config-file> and <output-path> must exist.

The following table lists the command line **parameters**:

Name	Meaning
<config-file></config-file>	This parameter specifies the path to a valid <a href="E2EConfig file">E2EConfig file</a> 15.
<output-path></output-path>	This parameter specifies the path to which the generator will write the created files.

The E2EPWG will output an error message and quit if something goes wrong. This will be the case if:

- command line parameters are omitted.
- the E2EConfig file could not be found.
- the output path does not exist.
- the <config-file> or the <output-path> parameter exceeds the maximum length of a valid file path (260 characters).
- the major version of the E2EConfig file and the E2EPWG do not match.
- the minor version of the E2EConfig file is larger than the minor version of the E2EPWG.
- the E2EConfig file has an invalid syntax.
- the E2EConfig file has an invalid content.
- a file the E2EPWG wants to create already exists (for example, from a previous run).
- a **file I/O error** occurs, such as insufficient disk space or missing write permissions.
- there is not enough memory left.

**Note:** It is also possible to call the E2EPWG directly from the preprocessor.

# 5.2 E2EConfig file

This Section gives a description of the  $\underline{\text{syntax}}^{(15)}$  of the **E2EConfig file** and its  $\underline{\text{elements}}$ 

## 5.2.1 Syntax

The **E2EConfig file** version 2.0.0 syntax has a **human-readable** text format. The encoding is **ASCII**. Comments can be added using C++-style syntax:

```
/* comment until asterisk-slash */
// comment until end of line
```

All the **keywords** (field names and keyword values) are **case-sensitive**.

**Note:** The order of the field names is fixed.

The syntax is given in EBNF:

Symbol	Meaning
::=	A name on the left side of the ::= is expressed with the syntax on its right side.
<>	Angle brackets are used to mark objects that are specified later.
1	The definition separator symbol indicates <b>choice</b> . Exactly one of the choices must appear.
[ ]	The text between the square brackets is <b>optional</b> .
{}	The text between the curly brackets may be omitted or may appear once or may be repeated arbitrarily. The <b>brackets</b> are <b>underlined</b> to distinguish them from the <b>literals</b> "{" and "}".
<string></string>	Indicates any character string enclosed in double quotes (i.e., "string").



## The syntax is as follows:

```
<E2EPW configuration file> ::=
    E2EPW configuration
        Version Major = <integer> ;
        Version Minor = <integer> ;
        Version_Patch = <integer> ;
        Protected Areas <protected area> {, <protected area>} ;
    } ;
cted area> ::=
        PDE_Name = <string> ;
        PDE_Type = <string> ;
        Node Name = <string> ;
        Direction = <direction> ;
        Byte_Order_CPU = <byte_order> ;
        Bit_Order = <bit_order> ;
        Bit_Counting = <bit_counting> ;
        Unused_Bit_Value = <integer> ;
        Check DeSerial = <no_yes> ;
        [ Includes_H = <string_list> ; ]
        [ Includes C = <string_list> ; ]
        Profile <profile p01>
              | profile_p02>
        Signals \langle \text{signal} \rangle ;
        Protection_Wrapper <autosar_rte>
                          | <autosar no rte>
                          | <j1939 can>
    }
cprofile p01> ::=
        Category = P01 ;
        Data Length = <integer> ;
        Data ID = <hex>;
        Data_ID_Mode = <data_id_mode> ;
        Max Delta Counter Init = <integer> ;
        CRC Offset = <hex>;
        Counter_Offset = <hex> ;
        Data_ID_Nibble_Offset = <hex> ;
        Max_No_New_Or_Repeated_Data = <integer> ;
        Sync Counter Init = <integer> ;
    } ;
cprofile_p02> ::=
    {
        Category = P02;
        Data_Length = <integer> ;
        Data ID_List = <hex_list_16> ;
        Max Delta Counter Init = <integer> ;
        Max No New Or Repeated Data = <integer> ;
        Sync Counter Init = <integer> ;
        Offset = <integer> ;
    } ;
<signal> ::=
    {
        Signal Name = <string> ;
        Signal_Type = <sig_type> ;
Signal_ID = <integer> ;
        Signal Property = <sig prop> ;
        Byte Order = <byte order> ;
        Bit Length = <integer> ;
        Bit_Position = <integer> ;
```

}



```
<autosar_rte> ::=
        E2EPW_Usecase = AUTOSAR_RTE ;
        Port Name = <string> ;
        VDP Name = <string> ;
        Is_Opaque = <no_yes> ;
        Use_Call_By_Ref = <no_yes> ;
        Use_RTE_Update = <no_yes> ;
        Use RTE Instance = <no yes> ;
    } ;
<autosar no rte> ::=
        E2EPW_Usecase = AUTOSAR_NO_RTE ;
        Signal_Grp_ID = <integer> ;
        Is Opaque = <no yes> ;
    } ;
<j1939_can> ::=
    {
        E2EPW_Usecase = J1939_CAN ;
        PGN_Number = <integer> ;
        Is_Opaque = <no_yes> ;
<direction> ::=
   RX | TX
<br/><byte_order> ::=
   LITTLE_ENDIAN | BIG_ENDIAN
<br/>dit order> ::=
    DECREASING | INCREASING
<br/>
<br/>
dit counting> ::=
   SAWTOOTH | MONOTONE
<no yes> ::=
   NO | YES
<string list> ::=
    <string> {, <string>}
<data_id_mode> ::=
   BOTH | ALT | LOW | NIBBLE
<hex_list_16> ::=
     <hex>, <hex>, <hex>, <hex>
    , <hex>, <hex>, <hex>, <hex>
    , <hex>, <hex>, <hex>, <hex>
    , <hex>, <hex>, <hex>, <hex>;
<sig type> ::=
    UINT8 | UINT16 | UINT32 | SINT8 | SINT16 | SINT32 | BOOLEAN | UINT8N
<sig prop> ::=
    NORMAL | CHK | SEQCNT | NIBBLE
<integer> ::=
    <digit>{<digit>}
<digit> ::=
    0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9
```

## 5.2.2 Description of Elements

Although the **syntax** of the **E2EConfig file** is **defined** for **3 use cases** and several profiles, **only** the use case **AUTOSAR RTE** is supported by the delivered package. Depending on the delivered E2EPWG variant, different profiles may be supported. The E2EPWG checks the semantics for plausibility, but further checks must be done manually. They are described in the *E2E Protection Wrapper Safety Manual* [TT\_E2EPW\_SM] (68). Also, the cause of validation errors is explained here.

The description of the semantics is structured in the same way as the BNF description of the syntax.

A **C-identifier** is a string that has some **limitations** regarding the contained characters and the length: It starts with a **letter** or an **underscore** and contains only letters, numbers, and underscores. It must not be identical to one of the **ANSI C** keywords. The **maximum length** of a C-identifier allowed in the **E2EConfig file** is **128** characters.

A **name identifier** is a string that consists only of letters, numbers, and underscores (max. 128 characters).

<e2epw_configuration_file></e2epw_configuration_file>	
Version_Major	Must match the corresponding values of the E2EPWG version.
Version_Minor	Must be smaller than or equal to the corresponding values of the E2EPWG version.
Version_Patch	Can differ from the corresponding value of the E2EPWG version.

<pre><pre><pre>cted_area&gt;</pre></pre></pre>	
PDE_Name	This parameter defines a <b>name identifier</b> for the <b>PDE</b> . This string is used as part of the file name of some of the generated files. It must not be longer than 128 characters. For the use case AUTOSAR RTE, PDE_Name must be equal to VDP_Name.
PDE_Type	This parameter defines the <b>data type</b> of the <b>PDE</b> data structure. This string is a <b>C-identifier</b> or begins with struct followed by a white space and a C-identifier. The C-identifier part must not be longer than 128 characters in both cases. PDE_Type must match the data type defined for and used by the application.

Node_Name	This parameter defines the <b>name identifier</b> that is used as a part of the file name of some of the generated files. It must not be longer than 128 characters. For use case <code>AUTOSAR RTE</code> , the SW-C type must be used (name of the software component).
Direction	<ul> <li>This parameter defines the direction of the message flow.</li> <li>TX means that the PDE is sent by the application, therefore the E2EPW must provide a write function.</li> <li>RX means that the PDE is received, so the E2EPW must provide a read function.</li> </ul>
Byte_Order_CPU	This parameter defines the <b>byte order</b> of the host CPU.  BIG_ENDIAN means that the most significant byte is stored at the lowest address.  LITTLE_ENDIAN means that the least significant byte is stored at the lowest address.
Bit_Order	This parameter defines the <b>ordering</b> of the <b>bits</b> within a byte. In AUTOSAR, this is used to define the order of bits that are transmitted.
	<ul> <li>DECREASING means that the logical numeration of bits in a byte is decreasing, e.g., 7, 6, 5, 4, 3, 2, 1, 0 for the first byte of a sequence.</li> <li>INCREASING means that the logical numeration of bits in a byte is increasing, e.g., 0,1,2,3,4,5,6,7 for the first byte of a sequence.</li> </ul>
Bit_Counting	This parameter defines the order of significance of bits over a transmitted data unit.  MONOTONE means that the significance is either increasing or decreasing constantly, while  SAWTOOTH means that there is a discontinuity between consecutive bytes.  Only the following combinations of Bit_Order and Bit_Counting are supported:  DECREASING with SAWTOOTH and  INCREASING with MONOTONE.
Unused_Bit_Value	This parameter defines the <b>value</b> to which <b>unused bits</b> in the I-PDU must be set. The only valid values are <b>0</b> and <b>1</b> .
Check_DeSerial	If YES, a deserialization check is done when a PDE is received. The value can only be YES if Direction is RX and Is_Opaque is NO. In [AS E2E SWS] (68), this value is defined to be YES if Direction is RX and Is_Opaque is NO.
Includes_H	This parameter defines the external include files that must be included in the generated header files. Each file name must be unique within this list, and the length of each file name must not be greater than 260 characters.  For use case AUTOSAR RTE, the value will contain Rte_Type.h and the header file of the application.
Includes_C	This parameter defines the external include files that must be



included in the generated <b>source</b> files. Each file name must be unique within this list, and the length of each file name must not be greater than 260 characters.
For use case AUTOSAR RTE, all necessary files are included in Includes_H.

<pre><pre><pre>profile_p01&gt;</pre></pre></pre>		
Category	This parameter defines the <b>name</b> of the <b>profile</b> , in this case <b>P01</b> . Unsupported profiles will cause an error message that is reported by the E2EPWG.	
Data_Length	This parameter defines the <b>length</b> of the <b>I-PDU</b> in bits. The minimum value is 16. The maximum value is 240. The value must be a <b>multiple of 8</b> .	
Data_ID	The sender and the receiver share the same <code>Data_ID</code> , which is incorporated into the CRC calculation. In this way, it is possible to detect if the sender and/or receiver is the intended one or not. The <code>Data_ID</code> has <b>2 bytes</b> . For profile P01, the <code>Data_ID</code> is equivalent to the Application ID in <code>[BMW_LAST_KOMM]</code> <sup>68</sup> .	
Data_ID_Mode	This parameter defines how the Data_ID is incorporated into the CRC calculation.  BOTH means that both bytes of the Data_ID are used for CRC calculation (lower byte first).  LOW means that only the lower byte is used.  ALT means that the lower byte is used when the counter is even, otherwise the higher byte is used.  NIBBLE means that the lower 8 bits are used for implicit inclusion in CRC calculation, while additional 4 bits are explicitly placed in the transmitted I-PDU array as distinct signal.	
Max_Delta_Counter_Init	This parameter defines the initialization value of the variable Max_Delta_Counter as specified in [TT E2EPW SM] 68. The value must be in the closed interval [013].	
CRC_Offset	This parameter determines, in bits, the offset of the CRC byte in the I-PDU array. It must be a <b>multiple of 8</b> . The CRC_Offset is the position of the least significant bit.	
Counter_Offset	This parameter determines, in bits, the offset of the Counter in the I-PDU array. It must be a <b>multiple of 4</b> . The Counter_Offset is the position of the least significant bit.	
Data_ID_Nibble_Offset	Determines the offset of the Data ID nibble in the PDU array in bits. The Data_ID_Nibble_Offset is the position of the least significant bit.	
Max_No_New_Or_Repeated_ Data	The threshold value of maximum consecutive data losses or repetitions before re-synchronization according to AUTOSAR SWS E2Elib is performed. The value must be in the closed interval	

	[015]. Backward-compatibility to previous E2Elib profile versions without this feature is given by the default value 15.
Sync_Counter_Init	After re-synchronization according to AUTOSAR SWS E2Elib is performed, Sync_Counter_Init determines how many SYNC states are returned on valid receptions before normal operation continues. The value must be in the closed interval [0255]. Backward-compatibility to previous E2Elib profile versions without this features is given by the default value <b>0</b> .

<pre><pre>file_p02&gt;</pre></pre>		
Category	This parameter defines the <b>name</b> of the <b>profile</b> , in this case <b>P02</b> . Unsupported profiles will cause an error message that is reported by the E2EPWG.	
Data_Length	This parameter defines the <b>length</b> of the <b>I-PDU</b> in bits. The minimum value is 16. The maximum value is 2048. The value must be a <b>multiple of 8</b> .	
Data_ID_List	This parameter defines a <b>list</b> of <b>16 values</b> in hexadecimal format. Each value must be in the range $0 \times 0 \cdot 0 \cdot 0 \times ff$ . This is the list of <b>data IDs</b> as specified in <a href="ITT_E2EPW_SM]">[ITT_E2EPW_SM]</a> [68].	
Max_Delta_Counter_Init	This parameter defines the initialization value of the variable ${\tt Max\_Delta\_Counter}$ as specified in ${\tt [TT\_E2EPW\_SM]}^{(68)}$ . The value must be in the closed interval ${\tt [014]}$ .	
Max_No_New_Or_Repeated_ Data	The threshold value of maximum consecutive data losses or repetitions before re-synchronization according to AUTOSAR SWS E2Elib is performed. The value must be in the closed interval [016]. Backward-compatibility to previous E2Elib profile versions without this feature is given by the default value 16.	
Sync_Counter_Init	After performing are-synchronzation according to AUTOSAR SWS E2Elisb, Sync_Counter_Init determines how many SYNC states are returned on valid receptions before normal operation continues. The value must be in the closed interval [0255]. Backward-compatibility to previous E2Elib profile versions without this features is given by the default value <b>0</b> .	
Offset	Additional offset of the CRC and sequence counter signals in the PDU array in bits. The value must be a <b>multiple of 8</b> . Backward-compatibility to previous E2Elib profile versions without this feature is given by the default value <b>0</b> .	

<signal></signal>	
Signal_Name	This parameter defines the <b>name</b> of the <b>signal</b> . The signal name is <b>unique</b> within the protected area. The signal name must be the

	same as the one that is defined in the data type definition of the data element used by the application. The value must be a valid C-identifier.
Signal_Type	This parameter defines the <b>data type</b> of the <b>signal</b> . It must be the same as in the data type definition of the data element used by the application. The value must be a valid C-identifier.
Signal_ID	This parameter defines the unique numeric identifier of a signal. For use case AUTOSAR RTE, the only requirement to the Signal_ID is that it must be in the range [065535] and be unique within the protected area.
Signal_Property	This parameter defines if the signal is a normal user signal (Signal_Property is NORMAL) or a special signal used for the protection of the protected area. There must be exactly one signal with Signal_Property CHK for the profiles P01, P02 and exactly one with the Signal_Property SEQCNT for all profiles. Also, Bit_Length, Bit_Position and Signal_Type must meet the requirements and settings for the used profile. The allowed value for Bit_Position also depends on the Byte_Order of the signal.
Byte_Order	This parameter defines the <b>byte order</b> of the signal. Depending on this value and the values of <code>Bit_Length</code> and <code>Bit_Position</code> , the signal is <b>mapped</b> to the corresponding <b>I-PDU</b> .
Bit_Length	This parameter defines the length of the signal in bits.  • If the Signal_Type is BOOLEAN, Bit_Length must be 1.  • If the Signal_Type is UINT8N, the signal length must be a multiple of 8.
Bit_Position	<ul> <li>This parameter defines the position of the signal within the I-PDU.</li> <li>If Byte_Order is LITTLE_ENDIAN, Bit_Position defines the position of the least significant bit.</li> <li>If Byte_Order is BIG_ENDIAN, Bit_Position defines the position of the most significant bit.</li> <li>If the Signal_Type is UINT8N, this parameter specifies the least significant bit of the first byte.</li> </ul>

There are further restrictions that must be met, some of them are provided in this section. However, all restrictions, if not explicitly stated in the safety manual, are also automatically checked by the E2EPWG. Therefore, this section is for information purposes only.

- Signals must not overlap each other or exceed the I-PDU length.
- The Signal Type of both, the checksum and the sequence counter signal must be UINT8.

# Profile 1<sup>(20)</sup>

■ The checksum signal must be byte-aligned (i.e., it can occupy any byte of the protected area). The Bit Length must be 8.

- The sequence counter signal must be positioned in the 4 least or most significant bits of any byte of the protected area. The Bit Length must be 4.
- The data ID nibble signal must be present if Data\_ID\_Mode is NIBBLE and be positioned in the 4 least or most significant bits of any byte of the protected area. The Bit Length must be 4.

# Profile 2<sup>21</sup>

- The checksum signal must be positioned in the 8 bits of the first byte of the protected area.
  - o For Byte Order = BIG ENDIAN, the Bit Position must be 7.
  - o For Byte\_Order = LITTLE\_ENDIAN, the Bit\_Position must be 0.
  - o The Bit Length must be 8.
- The sequence counter signal must be positioned in the 4 least significant bits of the second byte of the protected area.
  - o For Byte\_Order = BIG\_ENDIAN, the Bit\_Position must be 11.
  - o For Byte Order = LITTLE ENDIAN, the Bit Position must be 8.
  - o The Bit Length must be 4.

<autosar_rte></autosar_rte>		
E2EPW_Usecase	Value must be AUTOSAR_RTE.	
Port_Name	This parameter defines the <b>name identifier</b> of the <b>communication port</b> . This parameter is used as a part of the names of some generated functions.	
VDP_Name	This parameter defines the <b>name identifier</b> of the <b>VDP</b> . This parameter is used as a part of the names of some generated functions. The parameter VDP_Name must be the DataElement name used by the RTE.	
Is_Opaque	This parameter defines if the PDE is provided as I-PDU at application level. If YES, the application is responsible for marshaling or unmarshaling the DE. The DE is provided as byte array to the protection wrapper. Also, the lower layers must be configured to handle the DE as I-PDU.	
Use_Call_By_Ref	For complex data types, the RTE expects that DEs are provided by reference. If Direction is RX, the RTE always expects the DE to be provided by reference.	
USE_RTE_Update	If YES, the E2EPW calls the RTE function Rte_IsUpdated_ <o> (), where  is the port and <o> the VariableDataElement. The value must be NO, if the AUTOSAR RTE does not support this function.</o></o>	
Use_RTE_Instance	Must be ${\tt YES}$ if the SW-C supports multiple RTE instances (multiple instantiation). Otherwise, the value must be ${\tt NO}.$	

#### 5.2.3 File Content Checks

This Section only lists a selection of important checks revealing missing files or files that cannot be compiled. For detailed instructions on how to check a **E2EConfig file**, refer to the *E2E Protection Wrapper Safety Manual* TT E2EPW SMI<sup>68</sup>.

- The parameter combination PDE\_Name, Node\_Name, Port\_Name and Direction must be unique within the E2EConfig file. Also, the parameter combination VDP\_Name, Node\_Name, Port\_Name, and Direction must be unique within the E2EConfig file.
- The PDE\_Name needs not be unique, but make sure by review that PAs with the same PDE Name have the same signal definition if marshaling is required.
- Make sure that file names generated by the E2EPWG do not exceed the limitations of the file system or the operating system.
- Most Windows applications are bound to a restrictive limitation: Using the standard file access functions restricts the total path length to 260 characters, including the drive letter prefix and the null termination character. This also refers to relative paths, and can only be mitigated by path substitution using the DOS command subst.
- The **files** generated by the E2EPWG are named according to the following patterns.

```
These files contain the protection wrapper interface functions:
```

```
o E2EPW_<Node_Name>_<Port_Name>_<PDE_Name>_<Direction>.h
o E2EPW_<Node_Name>_<Port_Name>_<PDE_Name>_<Direction>.c
```

These files contain the marshaling functions if required:

```
o E2EPW_Marshal_<PDE_Name>.h
o E2EPW_Marshal_<PDE_Name>.c
```

These files contain the deserialization check function if required:

```
o E2EPW_CheckDeserial_<PDE_Name>.h
o E2EPW CheckDeserial <PDE Name>.c
```

- It must be ensured that the overall file name length does not exceed the 260 character limit for the absolute path length. Otherwise it will not be possible to create some files, and the E2EPWG will exit with an error message.
- The generated code contains **memory mapping defines**, which require a corresponding counterpart in the <code>MemMap.h</code> include file. Otherwise, the <code>MemMap.h</code> include file will prompt the compiler to display a warning or error message. There are three types of defines used in the generated code:
  - 1. Defines with the **prefix E2EPW\_**, which are provided in the E2EPW\_MemMap.inc file and should be incorporated into the MemMap.h include file of the system, and
  - 2. **SW-C-specific** defines.

#### The SW-C specific defines are:

```
- <swc>_START_SEC_CODE

- <swc>_STOP_SEC_CODE

- <swc>_START_SEC_CONST_UNSPECIFIED

- <swc>_STOP_SEC_CONST_UNSPECIFIED
```

- <swc> START SEC VAR INIT UNSPECIFIED
- <swc> STOP SEC VAR INIT UNSPECIFIED
- <swc> START SEC VAR NOINIT UNSPECIFIED
- <swc> STOP SEC VAR NOINIT UNSPECIFIED
- <swc>\_START\_SEC\_VAR\_ZERO\_INIT\_UNSPECIFIED
- <swc> STOP SEC VAR ZERO INIT UNSPECIFIED

where  $\langle swc \rangle$  is the value of the configuration field Node Name.

These are assumed to be provided in a file <swc>\_MemMap.h, which is generated by the RTE generator or must be created manually.

- 3. The defines for software component independent code (marshaling and check-deserialization check) are:
  - E2EPW START SEC CODE LIB
  - E2EPW STOP SEC CODE LIB.



# **Generated Code**

#### 6.1 API

This Section describes the API of the generated functions.

Note: When referring to a byte number within a multi-byte value, the number describes bytes of increasing order. Byte 0 is therefore of least significance.

The function names use the following placeholders:

Placeholder	Config field	Description
<node></node>	Node_Name	The node name. Also referred to as SW-C name.
<0>	VDP_Name	The VariableDataPrototype (VariableDataElement) of the messages through a port.
, <port></port>	Port_Name	The port name.
<pde></pde>	PDE_Name	The PDE name.
<profile></profile>	Category	P01 or P02, depending on the E2Elib profile used.
<pde-type></pde-type>	PDE_Type	The data type of the PDE.
<rxtx></rxtx>	Direction	The direction (RX or TX) in lowercase.

### 6.1.1 Initialization

Syntax	<pre>void E2EPW_WriteInit<o>x ()</o></pre>	
Reentrancy	reentrant	
Parameters	none	
Return value	none	
Description	This function initializes the E2Elib communication state for a DE defined by $<$ p $>$ and $<$ o $>$ on the sender side.	

Syntax	<pre>void E2EPW_ReadInit<o> ()</o></pre>	
Reentrancy	reentrant	
Parameters	none	
Return value	none	
Description	This function initializes the E2Elib communication state for a DE defined by $<$ p $>$ and $<$ o $>$ on the receiver side.	

## **6.1.2 Status**

Syntax	E2E_ <profile>ProtectStateType * E2EPW_Get_ProtectState<o> ()</o></profile>	
Reentrancy	reentrant	
Parameters	none	
Return value	E2E_ <profile>ProtectStateType *</profile>	<pre>pointer to  E2E_<profile>ProtectStateTyp e</profile></pre>
Description	Returns a pointer to the current E2Elib communication state on the sender side.	

Syntax	E2E_ <profile>CheckStateType * E2EPW_Get_CheckState<o> ()</o></profile>	
Reentrancy	reentrant	
Parameters	none	
Return value	E2E_ <profile>CheckReceiverSt ateType*</profile>	<pre>pointer to E2E_<pre>profile&gt;CheckStateType</pre></pre>
Description	Returns a pointer to the current E2Elib communication state on the receiver side.	

## 6.1.3 Transmission and Reception

The following function is provided for protected transmission with E2EPW:

Syntax	uint32 E2EPW_Write <o></o>
--------	----------------------------



	( [Rte_Ins	stance instance, ] <type> [*] AppData)</type>
Reentrancy	not reentrant	
Parameters (in)	instance	The instance value is passed to Rte_Write <o> (). This is an optional parameter, which depends on the configuration option Use_RTE_Instance.</o>
	AppData	This parameter defines the DE to be protected and transmitted. Its type, <type>, depends on the configuration of the DE.  This parameter can be called:  • by value (AppData is passed by value) or  • by reference (a pointer to AppData is passed).</type>
Return value	uint32	Byte 0, the return-code of E2E_Protect ():  E2E_E_INPUTERR_NULL  E2E_E_INPUTERR_WRONG  E2E_E_OK (default)  Byte 1, the return-code of Rte_Write <o> ():  RTE_E_COM_STOPPED  RTE_E_SEG_FAULT  RTE_E_OK (default)  Byte 2, the result of the AppData=NULL check:  E2E_E_INPUTERR_NULL  E2E_E_OK (default)  Byte 3, always 0</o>

Note: The default value is the value that is used when the corresponding function/check is not called (e.g., in case of a previous error).

The following function is provided for protected reception with E2EPW:

Syntax		EPW_Read <o> stance instance, ] <type> [*] AppData)</type></o>
Reentrancy	not reentrant	
Parameters (in)	instance	The <code>instance</code> value is passed to <code>Rte_Read<o></o></code> (). This is an optional parameter, which depends on the configuration option <code>Use_RTE_Instance</code> .
	AppData	This parameter defines the DE to be protected and transmitted. Its type, $<$ type>, depends on the configuration of the DE.
Return value	uint32	Byte 0, the return-code of E2E_Check ():      E2E_E_INPUTERR_NULL     E2E_E_INPUTERR_WRONG     E2E_E_OK (default)  Byte 1, the return-code of Rte_Read<0> ():     RTE_E_INVALID RTE_E_MAX_AGE_EXCEEDED RTE_E_NEVER_RECEIVED RTE_E_UNCONNECTED RTE_E_OK (default)  Byte 2, the result of the AppData=NULL check:     E2E_E_INPUTERR_NULL     E2E_E_OK  Byte 3/Bit 7, deserial check:     1 (E2EPW_DESERIAL_ERR)     O (default)
		■ 0 (default)  Byte 3/Bit 06, State->Status:  ■ E2E_ <profile>STATUS_OK: 0x00  ■ E2E_<profile>STATUS_NONEWDATA: 0x01  ■ E2E_<profile>STATUS_WRONGCRC: 0x02  ■ E2E_<profile>STATUS_SYNC: 0x03  ■ E2E_<profile>STATUS_INITIAL: 0x04  ■ E2E_<profile>STATUS_REPEATED: 0x08  ■ E2E_<profile>STATUS_OKSOMELOST: 0x20  ■ E2E_<profile>STATUS_WRONGSEQUENCE 0x40</profile></profile></profile></profile></profile></profile></profile></profile>

**Note:** The default value is the value that is used when the corresponding function/check is not called (e.g., in case of a previous error).

## 6.1.4 Usage Example Code

## 6.1.4.1 Application Sample Code

This is an application sample code to be used with use case  $\frac{\text{AUTOSAR RTE}}{2^{2}}$  and  $\frac{\text{profile 2}}{2^{2}}$ .

The following code example is a guideline only and must be adapted to the respective application design. In particular, the error handling depends on the application and on how and when to use the received data in case of errors.

The placeholders defined in the previous sections are used here again with the same meaning.

#### Necessary include files:

```
#include "E2EPW_<node>_<port>_<pde>.h"
..
```

#### **Convenience Code**

```
#define RETURNCODE_E2E (x) ((uint32)(x) & 0xFF)
#define RETURNCODE_RTE (x) (((uint32)(x) & 0xFF00) >> 8)
#define RETURNCODE_APPDATA (x) (((uint32)(x) & 0xFF0000) >> 16)
#define RETURNCODE E2ESTATUS (x) (((uint32)(x) & 0x7F000000) >> 24)
#define RETURNCODE_DESER (x) (((uint32)(x) & 0x80000000) >> 31)
const uint32 e2epw_read_status_ok_u32 =
      (0<<31)
                                        /* Deserial-Check */
    (E2E E OK<<16)
                                        /* Protection Wrapper */
    (RTE_E_OK<<8)
                                        /* Rte_Read/Rte_Write */
                                        /* E2E P02Check/E2E P02Protect */
    (E2E_E_OK);
const uint32 e2epw write status ok u32 =
                                        /* Deserial-Check */
       (0<<31)
    (E2E E OK<<16)
                                        /* Protection Wrapper */
                                        /* Rte Read/Rte Write */
    | (RTE E OK<<8)
    | (E2E E OK);
                                        /* E2E P02Check/E2E P02Protect */
```

#### **Code for Initialization**

```
/* initialize all tx */
E2EPW_WriteInit__<o> ();
...
/* initialize all rx */
E2EPW_ReadInit__<o> ();
```

#### Code for Transmission and Check of Return Values

```
uint32    r_tx_u32;
Rte_Instance inst;
<type>    AppData;
<type> * AppDataPtr = &AppData;

/* set AppData */
...

/* send AppData */
r_tx_u32 = E2EPW_Write__<o> ( inst, AppDataPtr);

if (r_tx_u32 != e2epw_write_status_ok_u32)
{
    /* something went wrong - find out what */
    if (RETURNCODE_APPDATA (r_tx_u32) != E2E_E_OK)
    {
        /* AppDataPtr was NULL */
```

}



```
}
if (RETURNCODE_E2E (r_tx_u32) != E2E_E_OK)
{
    /* E2Elib reported some error */
}
if (RETURNCODE_RTE (r_tx_u32) != RTE_E_OK)
{
    /* RTE reported some error */
}
...
```

## **Code for Reception and Check of Return Values**

```
r_rx_u32;
11 i n + 32
Rte Instance inst;
<type>
            AppData;
<type> *
            AppDataPtr = &AppData;
/* receive AppData */
r rx u32 = E2EPW Read  <o> (inst, AppDataPtr);
if (r_rx_u32 != e2epw_read_status_ok_u32)
    /* something went wrong - find out what */
    if (RETURNCODE APPDATA (r rx u32) != E2E E OK)
        /* AppDataPtr was NULL */
    if (RETURNCODE E2E (r rx u32) != E2E E OK)
        /* E2Elib reported some error */
    if (RETURNCODE RTE (r rx u32) != RTE E OK)
       /* RTE reported some error */
    if (RETURNCODE DESER (r rx u32) != 0)
        /* E2EPW detected some deserialization error caused by the COM */
    if (RETURNCODE E2ESTATUS (r rx u32) != E2E P02STATUS OK)
        /* E2Elib detected some status other than ok */
        switch (RETURNCODE E2ESTATUS (r rx u32))
            case E2E_P02STATUS_NONEWDATA:
                                                /* no new message was available */
                                 break;
            case E2E P02STATUS WRONGCRC:
                                                /* CRC was wrong */
                                 break;
            case E2E_P02STATUS_SYNC:
                                                /* sync in progress */
                                 break;
                                                /* first data received */
            case E2E_P02STATUS_INITIAL:
                                 break;
                                                /* message was repeated */
            case E2E P02STATUS REPEATED:
                                 break;
            case E2E P02STATUS_OKSOMELOST:
                                                /* some messages were lost, but it's
ok */
                                 break;
            case E2E P02STATUS WRONGSEQUENCE:
                                               /* message had invalid sequence count
                                 break;
        }
```

}

**Note:** For debugging, all values of E2E\_P02CheckStatesType () may be relevant. Then the function E2EPW\_Get\_CheckState\_\_<o> () can be used to retrieve state information.

#### 6.1.5 Differences to SW-C End-to-End Communication Protection Library

The implementation of the E2EPW is based on the guideline in [AS\_E2E\_SWS] (68), Annex B.

However, there are some deviations from the guideline.

Deviations are required/suggested due to:

- Incompleteness or errors in the guideline of the initial AUTOSAR Release 4.0.1/3.2.1, or
- Extensions for easier integration and application of the E2EPW API, or
- Backward-compatibility with previous versions of the E2EPW by TTTech.

The deviations are listed here:

Title	API Extension
AUTOSAR 3.2.1/4.0.1	AUTOSAR does not provide API functions to initialize the E2Elib communication state.
TTTech E2EPW 1.3	Additional functions:  E2EPW_Init <o>_rx () and  E2EPW_Init<o>_tx ()</o></o>
AUTOSAR 4.2.1	<pre>Init Functions defined as: Std_ReturnType</pre>
TTTech E2EPW 2.0	Renamed functions to conform to AUTOSAR Release: 4.2.1:  void E2EPW_ReadInit <o> (void) and  void E2EPW_WriteInit<o>_tx (void)</o></o>
Reason	API extension: Initialization shall be possible each time the application is reset. Renaming of initialization functions due to increase compatibility to AUTOSAR specification document. However, return value is not used, the parameter must not be present according to AUTOSAR specification.

Title	API Extension
AUTOSAR 3.2.1/4.0.1	AUTOSAR does not provide API functions for retrieving the current E2Elib communication state.
TTTech E2EPW 1.3	Additional functions:  E2E_ <profile>SenderStateType *  E2EPW_Get_SenderState<o> (void)  and  E2E_<profile>ReceiverStateType *  E2EPW_Get_ReceiverState<o> (void)  Where <profile> is the short name of the profile.</profile></o></profile></o></profile>
AUTOSAR 4.2.1	-
TTTech E2EPW 2.0	Renamed additional functions to reflect renamed state type of E2Elib:  E2E_ <profile>ProtectStateType *  E2EPW_Get_ProtectState<o> (void)  and  E2E_<profile>CheckStateType *  E2EPW_Get_CheckStateType *  E2EPW_Get_CheckState<o> (void)  Where <profile> is the short name of the profile.</profile></o></profile></o></profile>
Reason	API extension: The AUTOSAR guideline does not include an API to retrieve the current state.  Note: The internal State variable has been moved from function level to module level.  The internal State variable cannot be read directly, but only by these functions.

Title	Communication State State.
AUTOSAR 3.2.1/4.0.1	The communication state is function-local (in E2EPW_Read/Write <o> ()).</o>
TTTech E2EPW 1.3	The communication state is defined at module level.
AUTOSAR 4.2.1	The communication state is defined at module level.
TTTech E2EPW 2.0	The communication state is defined at module level.



Title	Communication State State.
Reason	The Communication State must be accessible among several functions in the module, variables must be defined at module level to be memory-mapped using the MemMap approach of AUTOSAR.

Title	Deserialization return value of E2EPW_Read <o> () (see E2E0265)</o>
AUTOSAR 3.2.1/4.0.1	AUTOSAR specifies <b>byte 3</b> of the return value to mark a deserialization error, which is <b>0</b> (OK) or <b>1</b> (failed).
TTTech E2EPW 1.3	The value of the descrialization error has been moved to bit 7 of byte 3. Use bits 0-6 for the value of State->Status.
AUTOSAR 4.2.1	The layout of the return value changed various times in previous AUTOSAR releases. No backward-compatibility between releases. Deserialization error is currently reported in <b>byte 1</b> .
TTTech E2EPW 2.0	The layout is backward-compatible to TTTech E2EPW 1.3.
Reason	Usage:  With the State->Status value in the return value of function E2EPW_Read <o> (), the reception result can be easily analyzed. A call of function E2EPW_Get_ReceiverState<o> () is only required for special cases, like retrieving State-&gt;LostData if State-&gt;Status is E2E_<profile>STATUS_OKSOMELOST, where <pre><pre>cprofile&gt; is the short name of the profile.</pre></pre></profile></o></o>

Title	Return value layout of E2EPW_Write <o> () and E2EPW_Read<o> ()</o></o>
AUTOSAR	AUTOSAR specifies the following for E2EPW_Write <o> ():</o>
3.2.1/4.0.1	<b>byte 0</b> is the return value of E2E_ <profile>Protect ().</profile>
	<b>byte 1</b> is the status of Rte_Write <o> ().</o>
	<b>byte 2</b> is the status of E2EPW_Write <o> () internal checks.</o>
	byte 3is E2E_E_OK (not used).
	and for E2EPW_Read <o> ():</o>
	<b>byte 0</b> is the return value of E2E_ <profile>Check ().</profile>

Title	Return value layout of E2EPW_Write <o> () and E2EPW_Read<o> ()</o></o>
	<pre>byte 1 is the status of Rte_Read<o> (). byte 2 is the status of E2EPW_Read<o> () internal checks. byte 3 is the status of the deserialization check (bit extension) .</o></o></pre>
TTTech E2EPW 1.3	The value of the descrialization error has been moved to bit 7 of byte 3. Use bits 0-6 for the value of State->Status.
AUTOSAR 4.2.1	The layout of the return value changed various times in previous AUTOSAR releases. No backward-compatibility between releases.
	The current layout for E2EPW_Write <o> ():</o>
	<b>byte 0</b> is the status of Rte_Write <o> ().</o>
	<b>byte 1</b> is the status of E2EPW_Write <o> () internal checks.</o>
	<b>byte 2</b> is the return value of E2E_ <profile>Protect ().</profile>
	byte 3is е2е_е_ок (not used).
	and for E2EPW_Read <o> ():</o>
	<b>byte 0</b> is the status of Rte_Read <o> ().</o>
	<b>byte 1</b> is the status of E2EPW_Read <o> () internal checks, including deserialization (bit extension) check.</o>
	<b>byte 2</b> is the return value of E2E_ <profile>Check ().</profile>
	<pre>byte 3is the value of State-&gt;Status (E2E_<profile>CheckStatusType).</profile></pre>
TTTech E2EPW 2.0	The layout is backward-compatible to TTTech E2EPW 1.3.
Reason	Initially, the deviation was to fix severe flaws in the AUTOSAR specification. Now, backward-compatibility to previous versions of TTTech E2EPW is to be maintained.

Title	Abortion in case of errors
AUTOSAR 3.2.1/4.0.1	AUTOSAR defines that all steps in E2EPW_Read/Write <o></o>
TTTech E2EPW 1.3	In case of an error, the generated function aborts and returns a proper error code. This includes the following kinds of errors:



Title	Abortion in case of errors
	• NULL check of parameter AppData,
	• E2E_ <profile>Protect/Check () returns an error,</profile>
	• RTE_Write <o> () returns an error or</o>
	deserialization check returns an error.
	Where <profile> is the short name of the profile.</profile>
	Note that the return-values of RTE_Read <o> () is not considered to be an error (in the manner that <math>E2EPW_Read<o> ()</o></math> needs to abort).</o>
AUTOSAR 4.2.1	Changed specification to abort in case of error, as in TTTech E2EPW 1.3
TTTech E2EPW 2.0	Behavior as in TTTech E2EPW 1.3 and therefore conform to AUTOSAR 4.2.1.
Reason	Safer code:
	Continuation does not make sense after an error was detected. Continuation in case of an error can cause other errors.

Title	Return Code Interpretation for E2EPW_Read/Write <o></o>
AUTOSAR 3.2.1/4.0.1	All steps in E2EPW_Read/Write <o> () are done even if errors occur. Thus, each byte 03 of the return value gets a corresponding value.</o>
TTTech E2EPW 1.3	In case of error, E2EPW_Read/Write <o> () aborts and the result values of further steps still have default values.</o>
	The return codes are interpreted as follows:
	E2EPW_Read <o> ():</o>
	1. If byte 0 is unequal to E2E_E_OK (0), then a severe error occurred in E2E_ <profile>Check (). All other bytes are irrelevant.</profile>
	2. If <b>byte 2</b> is unequal to E2E_E_OK (0), then a severe error occurred in the Protection Wrapper code. All other bytes are irrelevant.
	3. If <b>bit 7</b> in <b>byte 3</b> is <b>1</b> , then the deserialization check failed. All other bytes are irrelevant.
	4. If byte 0 and byte 2 are E2E_E_OK and bit 7 of byte 3 is 0, then
	a. byte 1 holds the return value of Rte_Read <o> () and</o>
	b. bits 06 in byte 3 hold the communication status from

Title	Return Code Interpretation for E2EPW_Read/Write <o></o>
	<pre>E2E_<profile>Check (). Both are to be interpreted by the application. E2EPW_Write<o> ():  1. If byte 0 is unequal to E2E_E_OK (0), then a severe error occurred in E2E_<profile>Protect (). All other bytes are irrelevant.</profile></o></profile></pre>
	2. If <b>byte 2</b> is unequal to E2E_E_OK (0), then a severe error occurred in the Protection Wrapper code. All other bytes are irrelevant.
	3. If byte 0 and byte 2 are E2E_E_OK, then byte 1 holds the return value of RTE_Write <o> (), which is to be interpreted by the application.</o>
	4. Byte 3 is always 0.
AUTOSAR 4.2.1	Changed specification to abort in case of error, as in TTTech E2EPW 1.3.
TTTech E2EPW 2.0	Behavior as in TTTech E2EPW 1.3 and therefore conform to AUTOSAR 4.2.1.
Reason	Interpretation is consequence of abortion in case of severe errors.

Title	Variables ret0ret3 in E2EPW_Read/Write <o> ()</o>
AUTOSAR 3.2.1/4.0.1	AUTOSAR defines a separate variable for each check within the read/write function.
TTTech E2EPW 1.3	The generated code holds an internal uint32 variable, which represents the return value and is filled in case of an error. It is a merge of the variables ret0ret3.
AUTOSAR 4.2.1	AUTOSAR specification more relaxed on the internal variables, semantically backward-compatible. Code Example and activity diagrams use more verbose names.
TTTech E2EPW 2.0	As in TTTech E2EPW 1.3.
Reason	Simpler code:
	Before each step, it must be evaluated whether an error has raised or not. A single <code>uint32</code> variable makes these evaluations simpler.



Title	NULL_PTR Check at begin of E2EPW_Read/Write <o> ()</o>
AUTOSAR 3.2.1/4.0.1	AUTOSAR proposes a NULL_PTR check for AppData at the end of the function.
TTTech E2EPW 1.3	The $_{\mathtt{NULL}}$ check is the first step to do in the functions.
AUTOSAR 4.2.1	Changed specification to check AppData at beginning and abort in case of error, as in TTTech E2EPW 1.3.
TTTech E2EPW 2.0	Behavior as in TTTech E2EPW 1.3 and therefore conform to AUTOSAR 4.2.1.
Reason	Safer code: Applying AppData before NULL_PTR check may cause other errors.

Title	E2E_USING_RTE_ISUPDATED
AUTOSAR 3.2.1/4.0.1	AUTOSAR uses a #define to control the setting of State->NewDataAvailable.
TTTech E2EPW 1.3	The configuration of State->NewDataAvailable is moved to the E2EConfig file.
	As a result, the generated code contains either  State->NewDataAvailable = Rte_IsUpdated <o> ()  or  State-&gt;NewDataAvailable = TRUE</o>
	There is no #define anymore.
AUTOSAR 4.2.1	Rte_IsUpdated <o> () is no longer used (since 4.1.1), return value of Rte_Read<o> () is used instead now (non-configurable). If return is not RTE_E_OK, then State-&gt;NewDataAvailable is set to FALSE.</o></o>
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3. Return value of $Rte_Read ()$ does not affect further evaluation, but is returned in the E2EPW return code. Therefore, while in AUTOSAR 4.2.1 the unavailability of new data by the RTE would be treated as "no new data", it will be treated as "repeated" here, if Rte_lsUpdated_Rte_IsUpdated <o> () is not used.</o>
Reason	All configuration for generated code is gathered in the E2EConfig file. Simpler code.

Title	Encapsulation of marshaling in separate function.
AUTOSAR 3.2.1/4.0.1	AUTOSAR defines the marshaling code directly in the wrapper code.
TTTech E2EPW 1.3	E2EPW_Read/Write <o> () calls a separate function E2EPW_Marshal_<pde> ().</pde></o>
AUTOSAR 4.2.1	No change to AUTOSAR 3.2.1/4.0.1.
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.
Reason	Simpler code. Improved structure. Code-sharing for same Signal Group (e.g. multiple Receivers) possible.

Title	Encapsulation of deserialization check in separate function.
AUTOSAR 3.2.1/4.0.1	AUTOSAR defines the code for the check directly in the wrapper code.
TTTech E2EPW 1.3	E2EPW_Read/Write <o> () calls a separate function E2EPW_CheckDeserial_<pde> ().</pde></o>
AUTOSAR 4.2.1	No change to AUTOSAR 3.2.1/4.0.1.
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.
Reason	Simpler code. Improved structure. Code-sharing for same Signal Group (e.g. multiple Receivers) possible.

Title	Variants for parameters of E2EPW_Read/Write <o> ()</o>
AUTOSAR 3.2.1/4.0.1	AUTOSAR defines the parameters Instance and AppData (call by reference).
TTTech E2EPW 1.3	The following variants are configurable:  Instance may be given as a parameter or not. However, it has no meaning to the functionality of the E2EPW code and is merely used as call parameter for Rte_Read/Write <o> ().</o>
	AppData can be passed call by value or call by reference. For E2EPW_Read <o> (), it is always call by reference.</o>
AUTOSAR 4.2.1	Parameter Instance is specified in all API functions as optional,



Title	Variants for parameters of E2EPW_Read/Write <o> ()</o>
	additional specifications state that the Instance feature is explicitly not supported by E2E.
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.
Reason	Call signature of E2EPW_Read/Write <o> () is aligned to the specification of Rte_Read/Write<o> () in the AUTOSAR RTE document.</o></o>

Title	Variables Config and ConfigVal in E2EPW_Read <o> () and E2EPW_Write<o> () are 'const'.</o></o>
AUTOSAR 3.2.1/4.0.1	The variables Config and ConfigVal are declared static and non-constant.
TTTech E2EPW 1.3	Config and ConfigVal are defined static and const.
AUTOSAR 4.2.1	config was renamed to config <o> and is defined as static and const. ConfigVal was removed from the code examples in 4.2.1 as it is not required to achieve the desired functionality.</o>
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.
Reason	<ul> <li>static is by specification in [AS_E2E_SWS]<sup>68</sup>.</li> <li>const moves the variables from (often sparse) RAM to ROM.</li> <li>Note: The variables have been renamed to config<o> and configVal<o> to satisfy MISRA rules. This has no effect on the E2EPW API.</o></o></li> </ul>

Title	Redundant Wrapper not implemented
AUTOSAR	Specified as an optional feature in AUTOSAR.
TTTech E2EPW 1.3	Redundant Wrapper (E2EPW_Write1/2 <o> (), E2EPW_Read1/2<o> ()), which is not implemented. Only single channel is implemented.</o></o>
AUTOSAR 4.2.1	No change.
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.

Title	Redundant Wrapper not implemented
Reason	The Redundant Wrapper is not an appropriate solution to achieve the system-wide ASIL D level. Another solution (e.g., ASIL D HW) would be a better approach. However, redundant channels can be modeled on SW-C level.

Title	Direct use of opaque parameter in E2EPW_Write <o> ()</o>
AUTOSAR 3.2.1/4.0.1	When the parameter AppData is opaque, E2EPW_Write <o> () copies the array to a local variable Data. Then it protects Data and copies CRC and counter in Data back to AppData and passes AppData to Rte_Write<o> ().</o></o>
TTTech E2EPW 1.3	When the parameter AppData is opaque, E2EPW_Write <o> () passes AppData directly to E2E_<profile>Protect and Rte_Write<o> (). No local variable is used.  Side-effect:  AppData is modified.  After E2EPW_Write<o> () returned, CRC and counter are visible to the application.</o></o></profile></o>
AUTOSAR 4.2.1	No change.
TTTech E2EPW 2.0	Backward-compatible to TTTech E2EPW 1.3.
Reason	Improved runtime performance (no copy), less memory consumption (no copy).

Title	The array ppa_ <port>_<vdp>_au8 [] is module-local.</vdp></port>					
AUTOSAR 3.2.1/4.0.1	The variable to store the marshaled version of a given PDE is local in E2EPW_Read <o> () and E2EPW_Write<o> ().</o></o>					
TTTech E2EPW 1.3	The variable is module-local and static.					
AUTOSAR 4.2.1	The variable is still local in the code example.					
TTTech E2EPW 2.0	No change to TTTech E2EPW 1.3.					
Reason	MemMap.h is used for both, the function and the variable. MemMap sections cannot be stacked.					




Title	Profile configuration is module-local.					
AUTOSAR 3.2.1/4.0.1	The profile configuration constant E2E_ <profile>ConfigType is local in E2EPW_Read<o> () and E2EPW_Write<o> ().</o></o></profile>					
TTTech E2EPW 1.3	The constant is module-local and static.					
AUTOSAR 4.2.1	The profile configuration is defined as module-local as constant.					
TTTech E2EPW 2.0	No change to TTTech E2EPW 1.3.					
Reason	MemMap.h is used for both, the function and the variable. MemMap sections cannot be stacked.					

Title	File Structure			
AUTOSAR 3.2.1/4.0.1	A separate pair of files (*.c and *.h) for each SW-C, containing wrapper code for all protected data elements on this SW-C:  • E2EPW_ <swc>.h and  • E2EPW_<swc>.c.</swc></swc>			
TTTech E2EPW 1.3	A separate pair of files (*.c and *.h) for each protected data element:  • E2EPW <swc> <o>.h and</o></swc>			
	The code for marshaling and deserialization check is also extracted into separate files:			
	• E2EPW_Marshal_ <pde>.c</pde>			
	• E2EPW_Marshal_ <pde>.h</pde>			
	• E2EPW_CheckDeserial_ <pde>.c</pde>			
	• E2EPW_CheckDeserial_ <pde>.h</pde>			
	Where			
	• <swc> is the Node_Name</swc>			
	•  is the Port_Name :- the			
	• <o> is the VDP_Name</o>			
	• <pde> is the PDE_Name</pde>			
AUTOSAR 4.2.1	The file structure has not changed since AUTOSAR 3.2.1/4.0.1.			
TTTech E2EPW 2.0	No change to TTTech E2EPW 1.3.			
Reason	Significantly simpler design of the E2EPWG. Shared code for marshaling/deserial check for the same PDE.			



#### 7 File Structure

The file structure of the generated files is shown in the figure below (for Profile  $2^{(21)}$ ). For simplicity, inclusions of the files StdTypes.h, MemMap.h, <swc>\_MemMap.h and of files stated in Includes\_H and Includes C are not shown.

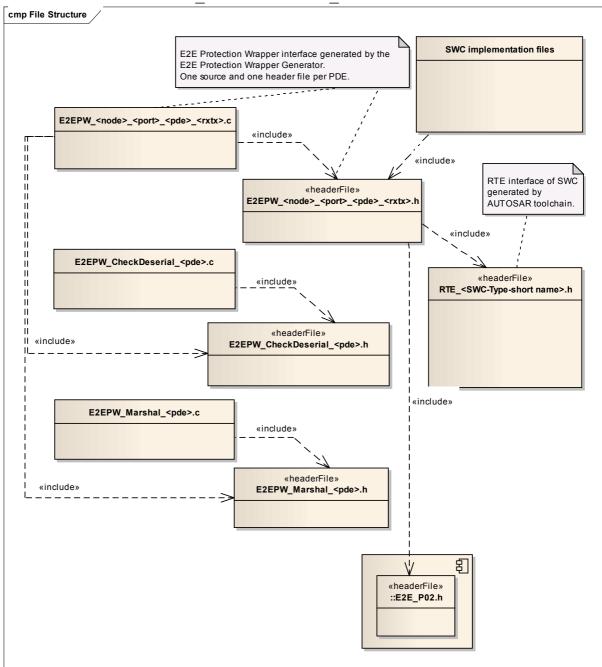

File structure

## 8 Functional Specification

This Section contains the functional specification of the two main functions of the protection wrapper: E2EPW\_Write\_\_<o> () and E2EPW\_Read\_\_<o> ()

#### 8.1 Return values

The return values of the write and read function are a composition of several values.

Each step or function call within the write and read function results in a value that is incorporated into the return value of the function. As the further execution of the read or write function depends on the result of such a step or function call, the return value is referred to as status.

The status value is a 32-bit unsigned integer value which is composed as follows:

E2EPW\_Write\_()

		-	0			AppData==NULL					Rte_Write <o> ()</o>						E2E_ <profile>Protect ()</profile>									
																										$\equiv$
31					24						16							8								

E2EPW\_Read\_ ()
E2EPW\_CheckDeserial\_()

	State -> Status				AppData==NULL						Rte_Read <o> ()</o>							E2E_ <profile>Check ()</profile>											
									ı											ı		-			1				
																													L
31						24	4						16								8								0

**Note:** The figures above show the logical bit and byte order. The generated code uses logical bit operations to maintain this logical representation regardless of the platform byte order.

## 8.2 Function E2EPW\_Write\_\_<o>()


Depending on the configuration, the E2EPW\_Write\_\_<o> () function is generated differently.

Options that affect the data flow are:


- Use Call By Ref
- IsOpaque



The following figures show variants of the E2EPW Write <o> () function:

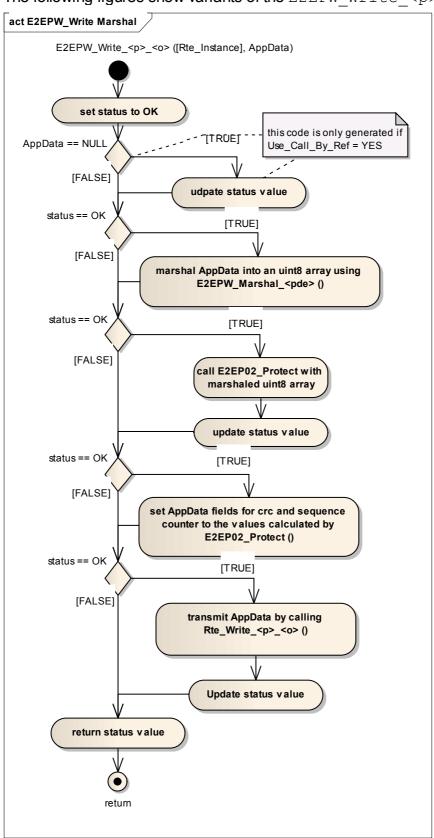

E2EPW\_Write\_<o> () With Use\_Call\_By\_Ref = YES and Is\_Opaque = NO

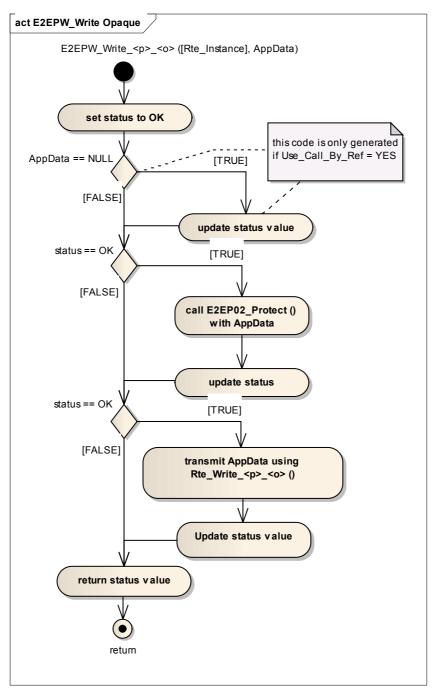

E2EPW\_Write\_<o> () with Use\_Call\_By\_Ref = YES and Is\_Opaque = YES


## 8.3 Function E2EPW\_Read\_\_<o>()

Depending on the configuration, the  $E2EPW_Read__<o>$  () function is generated differently. Options that affect the data flow are:


- CheckDeserial
- IsOpaque
- Use Rte Update




The following figures show variants of the E2EPW Read <o> () function:

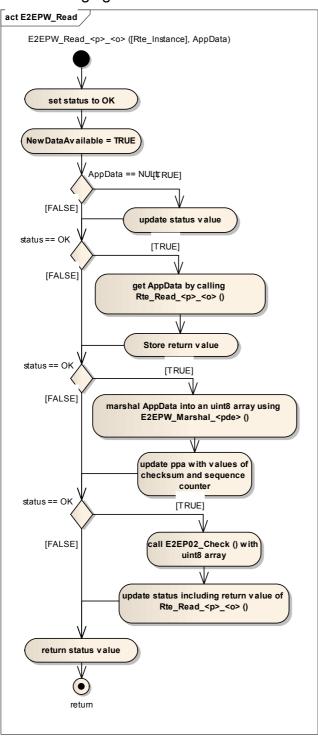

 ${\it E2EPW\_Read\_\_<o>~() \ \textit{With CheckDeserial=NO, Use\_Rte\_Update=NO and Is\_Opaque=NO}$ 

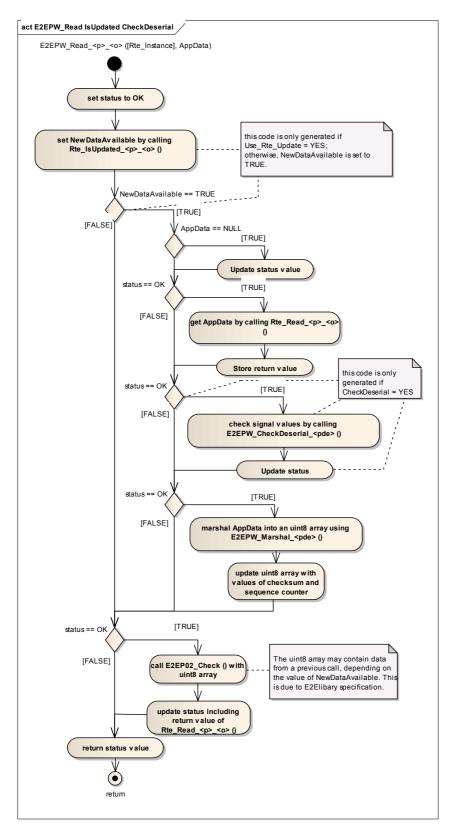

E2EPW\_Read\_\_<o> () with CheckDeserial = YES, Use\_Rte\_Update = YES and Is\_Opaque = NO

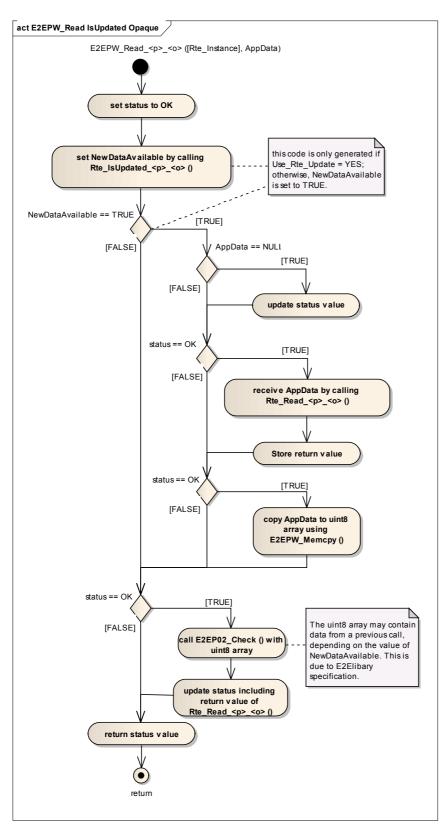

E2EPW\_Read\_\_<o> () with CheckDeserial = NO, Use\_Rte\_Update = YES and Is\_Opaque = YES

## 9 Environment Specifics

This Section explains the properties and restrictions of the build and runtime environment. They affect the Preprocessor, the E2EPWG and the E2EConfig file, and depend not only on the build environment, but also on the AUTOSAR revision, the use case, and the supported profiles of the protection wrapper generator and the preprocessor.

### 9.1 Vector DaVinci Developer/RTE Configurator for AUTOSAR 3.2

In this build environment, only the use case <u>AUTOSAR RTE</u> is available. The Preprocessor and Generator support one or more of the E2Elib profiles  $\underline{P01}^{(20)}$  and  $\underline{P02}^{(21)}$ , depending on the product license purchased.

The Preprocessor and Generator are integrated into this environment, and are automatically invoked when building the project. See the corresponding DaVinci user manuals for details.

#### 9.1.1 Configuration Restrictions

There are several restrictions to the configuration when the Vector RTE for AUTOSAR 3.2 and AUTOSAR 4.0 is used:

- IsOpaque must always be NO (the RTE does not support opaque DEs)
- Use\_Call\_By\_Ref must always be YES (only record-type DEs are supported by the RTE)
- Use\_Rte\_Update is YES by default. If the RTE in the given system does not support the function Rte\_Is\_Updated\_\_<o> (), then Use\_Rte\_Update must be No. The preprocessor for this build environment generates E2EConfig files that conform to those restrictions. Restrictions relating to the preprocessor itself are described in the following Section.

#### 9.1.2 Preprocessor Restrictions

• The preprocessor uses the name of the VDP (VDP\_Name) for the PDE\_Name and the SW-C name for the Node\_Name in the E2EConfig file.

The combination of the attributes <code>Node\_Name</code> and <code>VDP\_Name</code> in the configuration must be unique. As the <code>PDE\_Name</code> can be chosen freely (it is only used in file names and internal functions such as <code>Marshal</code> and <code>CheckDeserial</code>), it can be changed manually in the <code>E2EConfig</code> file. With the DaVinci tools release R12, the DaVinci Developer supports SW-C-specific defines for the memory mapping (see also <a href="Other issues">Other issues</a> (52)). <code>Node\_Name</code> must be the SW-C name because this identifier is used in the generated <code>MemMap</code> defines.

• The Byte\_Order\_CPU must be provided as command line parameter. The default value is LITTLE\_ENDIAN. If the Byte\_Order\_CPU is not set to the correct value, signals with a length of more than 8 bits are not correctly marshaled.

#### 9.1.3 E2EPW and RTE in a Safety-Related System

If a safety-relevant application developed according to ISO 26262 calls functions which are generated by a tool in QM quality, the *called* functions must be considered as

safety-relevant as well, as they can potentially interfere with the *calling* application (e.g., by overwriting data, consuming execution time, etc.). Therefore, additional measures can be necessary to ensure **freedom from interference**. These can be applied at the function level (e.g., code reviews, tests, development process) or already at the system design level (**decoupling**).

In the present implementation, the generated E2EPW directly calls RTE functions which are generated by a tool in QM quality (i.e., the **DaVinci RTE Configurator**), which fits into the scenario described above. As the RTE functions are rather small and simple, both kinds of measures (code review and decoupling) are suitable, whereas the complex COM is almost impossible to be tackled without decoupling. The following example illustrates both cases.

#### Example:

A safety-related software component SW-C A sends a message using the E2EPW. As the RTE is generated by the RTE generator, the RTE code of SW-C A **must be reviewed manually** by the integrator to meet the requirements of ISO 26262. However, the function  $Rte_Write__<0>$  () (see <u>Functional specification</u> (45)) calls some COM functions, which are also not developed according to ISO 26262. Therefore, the safety-related SW-C A sends the protected data element to another SW-C B. This SW-C B runs in a **different context** (i.e., in the same as the COM) and can call the COM directly. Thus the SW-C B is used as a proxy, and the E2EPW is only called in SW-C A. The RTE and the E2EPW must be configured accordingly.

#### 9.2 Other Issues

- As of version 1.3, the E2EPWG uses the contents of the configuration field <code>Node\_Name</code> to generate SW-C specific defines for the memory mapping. As of version 2.0.1, those must be defined in the corresponding <code><swc>\_MemMap.h</code> include file of the software component which are generated by the RTE gnerator. If not present, a compiler warning or error may be triggered.
- File names of the generated files can become very long. As the maximum length of most string-type fields in the E2EConfig file is 128 characters, it is possible that files cannot be generated due to file name or path length restrictions.

For example, Windows XP and Windows 7 restrict the maximum total path length to 260 characters (including the terminating null character). If <code>Node\_Name</code>, <code>PDE\_Name</code> and <code>VDP\_Name</code> are very long, the generated files can easily exceed this length, especially if they are generated into a subdirectory. A possible solution is to choose a short <code>PDE\_Name</code> and change it manually in the E2EConfig file.

## <sup>10</sup> Integration Notes

This Section contains further information and work instructions regarding the integration and integration testing of the **E2EPW** and the **E2EIb**.

It extends the requirements and comments of the *E2E Protection Wrapper Safety Manual* (TT E2EPW SM] (68) and provides further explanations and code examples.

### 10.1 Checking the Tool Input

Make sure the settings in the Vector tools are as expected and the signals are mapped correctly to the signals on the bus.

This can be done by comparing the communication specification of the system specification with the settings in the Vector tools and the content of the generated E2EConfig file. A detailed description of the syntax and semantics of the E2EConfig file can be found in Section E2EConfig file (15).

### 10.2 Checking the Generated Files

Make sure that

- the E2EConfig file generated by the preprocessor is generated correctly (generation messages/errors on stdout it is not sufficient to watch message on stdout, the E2EConfig file must be checked).
- the files generated by the E2EPWG (pwg.exe) are generated correctly (generation messages/errors on stdout).
- the files are compiled and linked correctly to the binary (.elf file, memory mapping; build environment messages/errors).

## 10.3 Performing an Integration Test

There are several ways to ensure that End-to-End Protection is integrated properly. The most common option is to build the target and perform an integration test by simulating the environment. For End-to-End Protection, this could be done by simulating the communication of the other ECUs on the communication network (restbus simulation ). Here, the communication network is simulated, and messages are sent to and received from the target ECU. This can be done with or without a special test application, depending on the test requirements (unaltered target, test coverage, etc.), which also depends on the application using End-to-End Protection.

Another way to perform an integration test is a self-test using <u>internal (intra-ECU)</u> <u>signaling</u> <sup>63</sup>. A sending and a receiving software component communicates with End-to-End Protection. After checking that End-to-End Protection is working when no fault is present, the sender produces sequences of messages simulating predefined faults.

#### 10.3.1 Using Restbus Simulation

A common way to check the effectiveness of the End-to-End protection is to test it by simulating the bus communication. This also enables testing of the fault handling mechanisms of the receiving application using the End-to-End Protection. As the E2EPW only reports the status of the End-to-End protection, the test highly relies on the



receiving application using the E2EPW and its behavior in case of communication faults.

The sender application does not get any information about the state of the End-to-End protection. The test of the sender side is therefore always straight forward: Send some predefined data, check if the checksum is correct regarding the sent data and the DataID, and check if the sequence counter is incremented with each message.

If there are no special requirements given by the application, a test for the End-to-End protection at the receiver shall systematically provoke the different communication status values the E2EPW can report:

E2Elib <profile> status defines</profile>	Description
E2E_ <profile>STATUS_INITIAL</profile>	Initial (Message ok)
E2E_ <profile>STATUS_OK</profile>	Message ok
E2E_ <profile>STATUS_WRONGCRC</profile>	Wrong CRC
E2E_ <profile>STATUS_OKSOMELOST</profile>	Some messages lost, but within tolerance
E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	Messages received in wrong sequence
E2E_ <profile>STATUS_REPEATED</profile>	Message repeated
E2E_ <profile>STATUS_NONEWDATA</profile>	No new message

By its design, the E2EPW only reports symptoms of communication faults, not their cause. Using additional information, the application can derive some possible causes, depending on assumptions regarding attributes of the system and communication behavior.

An example list of communication faults and the status reported by the E2EPW:

Status Fault	Wrong CRC	Messages lost	Invalid sequence	Message repeated	No new Message
Bit flip	Х				
Byte swap	Х				
Wrong sender <sup>1</sup>	Х				
Message(s) lost on bus		X	X		Х
Message not sent (in time)		X			Х
Message repeated at sender				Х	

<sup>&</sup>lt;sup>1</sup> Refers to masquerading / message insertion

There are some faults that induce a characteristic sequence of status values. Some values depend on the system (communication) characteristics, others are reported in sequence:

For the scenario where messages are lost on the bus, a periodically checking receiver would yield a status depending on the following cases:

- 1. As long as no message has been received after a startup/restart, the status is NONEWDATA.
- 2. If a message has been received since the last startup/restart, then, depending on the number of lost messages and the configuration, the status might be either messages lost or invalid sequence, depending on the setting of Max\_Delta\_Counter\_Init. Also, message ok or message repeated would also be possible if a multiple of 16 (15 for E2Elib profile 1) messages were lost consecutively. For the latter case, the sequence checking capabilities of End-to-End Protection would not be suitable if the system is expected to be capable of such a fault.

#### 10.3.1.1 Example Scenarios

The following examples show how important the system attributes and assumptions are for the handling of communication faults.

#### Example 1:

Assuming a given system of a sender ECU and a receiver ECU, having the following properties:

- 1. The sender application is called periodically to send an end-to-end-protected message.
- 2. The sender communication stack periodically takes the last message sent by the sender application and sends it over the communication bus.
- 3. The receiver communication stack periodically checks for received messages on the bus.
- 4. The receiver application periodically queries the communication stack for received messages using the E2EPW.
- 5. All periods are equal; the tasks are in sync with each other.

The following fault is simulated: after message 3, the sender application misses its deadline for sending the end-to-end-protected message.

The result of the fault in the system: The sender communication stack does not get the next message (counter=4) and sends the last message (counter=3) again on the bus. The receiver receives the old message (counter=3) again. In the next communication cycle, the sender application sends the next message (counter=5) at the proper time. The sender communication stack takes the message (counter=5) and sends it on the bus.

Status values reported by the E2EPW at the receiver side:

Call Number	Sequence counter	Status
1	1	E2E_ <profile>STATUS_INITIAL</profile>
2	2	E2E_ <profile>STATUS_OK</profile>



Call Number	Sequence counter	Status
3	3	E2E_ <profile>STATUS_OK</profile>
4	3	E2E_ <profile>STATUS_REPEATED</profile>
5	5	E2E_ <profile>STATUS_OKSOMELOST</profile>
6	6	E2E_ <profile>STATUS_OK</profile>

#### Example 2:

In the next scenario, the same fault as in *Example 1* is introduced, but some of the above assumptions are extended:

- The sender communication stack uses an update bit (extends assumption 2).
- The receiver communication stack evaluates the update bit (extends assumption 3).
- The E2EPW checks for updated data (by using the RTE function Rte\_Is\_Updated\_\_<o> (); extends assumption 4).

Now the fault is perceived in a slightly different way:

Call Number	Sequence counter	Status
1	1	E2E_ <profile>STATUS_INITIAL</profile>
2	2	E2E_ <profile>STATUS_OK</profile>
3	3	E2E_ <profile>STATUS_OK</profile>
4	3	E2E_ <profile>STATUS_NONEWDATA</profile>
5	5	E2E_ <profile>STATUS_OKSOMELOST</profile>
6	6	E2E_ <profile>STATUS_OK</profile>

Here, instead of Repeated, No new message is reported.

#### Example 3:

As a next modification, let the sender communication stack use a queue for the sent messages:

Call Number	Sequence counter	Status
1	1	E2E_ <profile>STATUS_INITIAL</profile>
2	2	E2E_ <profile>STATUS_OK</profile>
3	3	E2E_ <profile>STATUS_OK</profile>
4	3	E2E_ <profile>STATUS_NONEWDATA</profile>
5	4	E2E_ <profile>STATUS_OK</profile>

Call Number	Sequence counter	Status
6	5	E2E_ <profile>STATUS_OK</profile>

Here, the sender misses the deadline for message 4, and as a result the messages are queued. The message with counter 4 is received in call 5, as there was no new message received before. By assuming that the receiving application was executed as specified, a timing violation can be derived by the receiving application when receiving message with counter 4 in call 5, when expecting message with counter 5.

#### Example 4:

Using the original assumptions, but with the following fault scenario:

After call 3, the receiver communication stack is not called before the receiver application tries to receive the next message.

The result of the fault on the system: the receiver application misses the deadline for message 4. It receives the old message with counter 3 again, and then the receiver communication stack is called and receives the new message with counter 4. Before the receiver application is called the next time, the receiver communication stack receives the next message, with counter 5.

Call Number	Sequence counter	Status
1	1	E2E_ <profile>STATUS_INITIAL</profile>
2	2	E2E_ <profile>STATUS_OK</profile>
3	3	E2E_ <profile>STATUS_OK</profile>
4	3	E2E_ <profile>STATUS_REPEATED</profile>
5	5	E2E_ <profile>STATUS_OKSOMELOST</profile>
6	6	E2E_ <profile>STATUS_OK</profile>

Here, the reported status values are the same as in the first scenario. The conclusion is that the cause of the perceived communication fault cannot be determined reliably without further information (which is out of the scope of the E2EPW).

#### 10.3.1.2 Integration Test Message Sequence

In this Section, a small example integration test is provided using fixed sequences of messages to trigger all status values the E2EPW can report.

The following system properties are assumed:

- 1. The receiver communication stack periodically checks for received messages on the bus.
- 2. The receiver application periodically queries the communication stack for received messages using the E2EPW.
- 3. All periods are of equal duration; the tasks are 'in sync' with each other.
- 4. The receiver application uses the RTE function Rte\_IsUpdated\_\_<o> () to determine if a new message is received since the last call of Rte\_Read\_\_<o> ().
- 5. The E2Elib configuration has Max\_Delta\_Counter\_Init = 2, SyncCounterInit = 0.

Each of the following tables is a message sequence. The message sequence of the first table is retrieved by sending valid messages and recording them. The message sequences of the other tables are modifications of the message sequence of the first table.

The meaning of the columns of the following tables is:

Call	The call number of the function E2EPW_Read <o> ().</o>
sc	The sequence counter value of the message sent over the bus by the E2EPW.
CRC	■ OK if the CRC is as expected. ■ NOK if the CRC is wrong.
Status	The expected status value reported by the E2EPW.
Description	A short description of the semantics of the simulated fault.
*	For E2Elib <u>profile 1</u> (20), there is no counter value 15. This line can be omitted.

#### Sequence of correct messages:

Call	sc	CRC	Status	Description
1	0	OK	E2E_ <profile>STATUS_INITIAL</profile>	
2	1	OK	E2E_ <profile>STATUS_OK</profile>	
3	2	OK	E2E_ <profile>STATUS_OK</profile>	
4	3	OK	E2E_ <profile>STATUS_OK</profile>	
5	4	OK	E2E_ <profile>STATUS_OK</profile>	
6	5	OK	E2E_ <profile>STATUS_OK</profile>	
7	6	OK	E2E_ <profile>STATUS_OK</profile>	
8	7	OK	E2E_ <profile>STATUS_OK</profile>	
9	8	OK	E2E_ <profile>STATUS_OK</profile>	
10	9	OK	E2E_ <profile>STATUS_OK</profile>	
11	10	OK	E2E_ <profile>STATUS_OK</profile>	
12	11	OK	E2E_ <profile>STATUS_OK</profile>	
13	12	OK	E2E_ <profile>STATUS_OK</profile>	
14	13	OK	E2E_ <profile>STATUS_OK</profile>	
15	14	OK	E2E_ <profile>STATUS_OK</profile>	
16	15*	OK	E2E_ <profile>STATUS_OK</profile>	

## Deleted and repeated messages:

Call	sc	CRC	Status	Description
1	0	OK	E2E_ <profile>STATUS_INITIAL</profile>	First message.

Call	sc	CRC	Status	Description
2	1	OK	E2E_ <profile>STATUS_OK</profile>	
3	_	-	E2E_ <profile>STATUS_NONEWDATA</profile>	No new message received.
4	3	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	One message lost (2).
5	4	OK	E2E_ <profile>STATUS_OK</profile>	
6	5	OK	E2E_ <profile>STATUS_OK</profile>	
7	5	OK	E2E_ <profile>STATUS_REPEATED</profile>	Message 5 received again.
8	7	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	One message lost (6).
9	8	OK	E2E_ <profile>STATUS_OK</profile>	
10	9	OK	E2E_ <profile>STATUS_OK</profile>	
11	9	OK	E2E_ <profile>STATUS_REPEATED</profile>	Message 9 received again.
12	10	OK	E2E_ <profile>STATUS_OK</profile>	Message 10 received at call 11.
13	11	OK	E2E_ <profile>STATUS_OK</profile>	Message 11 received at call 12.
14	13	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	One message lost (12).
15	14	OK	E2E_ <profile>STATUS_OK</profile>	
16	15*	OK	E2E_ <profile>STATUS_OK</profile>	

## Wrong CRC due to different failure modes:

Cycle	sc	CRC	Status	Description
1	0	OK	E2E_ <profile>STATUS_INITIAL</profile>	
2	1	OK	E2E_ <profile>STATUS_OK</profile>	
3	2	NOK	E2E_ <profile>STATUS_WRONGCRC</profile>	Bit flip in message.
4	3	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	One message lost (2).
5	4	OK	E2E_ <profile>STATUS_OK</profile>	
6	5	NOK	E2E_ <profile>STATUS_WRONGCRC</profile>	Used different DataID.
7	6	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	One message lost (5).
8	7	OK	E2E_ <profile>STATUS_OK</profile>	
9	8	OK	E2E_ <profile>STATUS_OK</profile>	
10	13	NOK	E2E_ <profile>STATUS_WRONGCRC</profile>	Bit flip in sequence counter signal.
11	14	NOK	E2E_ <profile>STATUS_WRONGCRC</profile>	Bit flip in sequence counter signal.
12	11	OK	E2E_ <profile>STATUS_OKSOMELOST</profile>	Two messages lost (with sequence counter values 9 and

Cycle	sc	CRC	Status	Description
				10).
13	12	OK	E2E_ <profile>STATUS_OK</profile>	
14	13	OK	E2E_ <profile>STATUS_OK</profile>	
15	14	OK	E2E_ <profile>STATUS_OK</profile>	
16	15*	OK	E2E_ <profile>STATUS_OK</profile>	

## Sequence error because of swap and sender reset:

Cycle	sc	CRC	Status	Description
1	0	OK	E2E_ <profile>STATUS_INITIAL</profile>	
2	1	OK	E2E_ <profile>STATUS_OK</profile>	
3	2	OK	E2E_ <profile>STATUS_OK</profile>	
4	4	OK	E2E_ <profile>STATUS_OKSOMELOS T</profile>	One message lost (3).
5	3	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	Messages 3 and 4 swapped.
6	5	OK	E2E_ <profile>STATUS_OK</profile>	
7	6	OK	E2E_ <profile>STATUS_OK</profile>	
8	-	-	E2E_ <profile>STATUS_NONEWDATA</profile>	No new message received.
9	0	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	Sender was reset.
10	1	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	
11	2	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	
12	3	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	
13	4	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	
14	5	OK	E2E_ <profile>STATUS_WRONGSEQU ENCE</profile>	
15	6	OK	E2E_ <profile>STATUS_REPEATED</profile>	
16	7	OK	E2E_ <profile>STATUS_OK</profile>	

Sequence error because of receiver timing violation:



Call	sc	CRC	Status	Description
1	0	OK	E2E_ <profile>STATUS_INITIAL</profile>	
2	1	OK	E2E_ <profile>STATUS_OK</profile>	
3	2	OK	E2E_ <profile>STATUS_OK</profile>	
4	-	_	E2E_ <profile>STATUS_NONEWDAT A</profile>	No new data received (extra call of receiver task simulated).
5	-	_	E2E_ <profile>STATUS_NONEWDAT A</profile>	No new data received (extra call of receiver task simulated).
6	5	OK	E2E_ <profile>STATUS_OKSOMELO ST</profile>	Two messages lost (3, 4).
7	6	OK	E2E_ <profile>STATUS_OK</profile>	
8	10	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	Three messages lost because E2EPW_Read <o> () was</o>
9	11	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	not called three times in a row. Only two losses are tolerated because of
10	12	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	<pre>Max_Delta_Counter_Init = 2.</pre>
11	13	OK	E2E_ <profile>STATUS_WRONGSEQ UENCE</profile>	As the sequence counter of the sender increases, but the receiver expects values 7, 8 or 9, the
12	14	OK	E2E_ <profile>STATUS_WRONGSEQ UENCE</profile>	E2EPW reports an error.
13	15*	OK	E2E_ <profile>STATUS_WRONGSEQ UENCE</profile>	
14	0	OK	E2E_ <profile>STATUS_WRONGSEQ UENCE</profile>	
15	1	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	
16	2	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	
17	3	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	
18	4	OK	E2E_ <profile>STATUS_WRONGSEQUENCE</profile>	
19	5	OK	E2E_ <profile>STATUS_WRONGSEQ UENCE</profile>	
20	6	OK	E2E_ <profile>STATUS_REPEATED</profile>	Got the same sequence counter as last valid message.
21	7	OK	E2E_ <profile>STATUS_OK</profile>	Finally got a valid sequence counter.

#### 10.3.1.3 Hints for Integration Test Setup

Using the tables in the Section above, it is necessary to be able to check the correctness of protected messages as well as to generate correct and incorrect messages according to the test sequences.

One way to establish this is to build a test environment that provides the E2Elib functionality and generates and checks protected messages dynamically. If this is not possible, static message sequences can be used:

- 1. For each data element received using the E2EPW, configure another data element that is sent using the E2EPW.
- 2. Send 16 messages and record them. Make sure that this sequence of messages corresponds to the message sequence listed in Table <u>Sequence of correct messages</u> and make sure that the CRC is correct.
- 3. Build the message sequences of the other tables by adapting the recorded messages.
- 4. Use the message sequences to test the E2EPW for the data elements it is configured to receive and check the reported return values.

**Note:** To get the message sequences of the other tables, the original message sequence must be adapted (reordering, bit-manipulation,...). For message 5 in Table <u>Wrong CRC due to different failure modes</u> 60, the CRC must be calculated with a different message ID. This can be done with the sent messages, but by modifying the configuration of the E2EPW to use a different message ID and record message 5 of the sequence.

#### 10.3.2 Using Intra-ECU Signaling

Another way to test the E2EPW and the E2Elib is to set up a software component that checks the functionality by sending end-to-end-protected messages, manipulating them according to some fault assumptions, and evaluating the reported status of the E2EPW on the receiver side. This can be done at any time, possibly at startup, regularly during runtime, or after a software update.

**Note1:** This test only covers the code of the E2Elib and the part of the E2EPW that is used for the protected messages sent/received. There is no test coverage for the actual E2EPW code used by the other applications, or for the code of the communication layers or the applications themselves.

*Prerequisites:* A sender and a receiver port using the E2EPW must be configured and connected. Both ports must use the same VDP.

**Note 2:** As those ports do not send to or receive from a communication bus, there is no tool support for adding End-to-End Protection (an I-PDU layout is needed for the marshaling). The configuration of End-to-End Protection must be done manually. A convenient way to do this is to reuse an existing data element and copy the signal definitions from there.


Note 3: The function  $Rte_IsUpdated__<o> ()$  must be emulated if it is used by  $E2EPW_Read__<o> ()$ , which is assumed in the message sequences described in this document. Therefore, the  $Use_RteUpdate$  must be YES in the E2EConfig file. The RTE generator must not generate the function, because the return value must be chosen according to the message sequence: Each time a message is





sent by the sender, the function  $Rte_IsUpdated__<o>$  () must return TRUE once. The user must provide this function.

As the RTE functions  $Rte_Write__<o> ()$  and  $Rte_Read__<o> ()$  only pass on pointers to the sent/received data structure, there is no need for multiple software components or even runnables for this test. However, transmission using multiple software components can be beneficial if memory partitioning is used, and is hence also subject to this test.

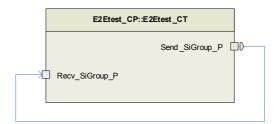

Software component setup

#### 10.3.2.1 Sending Correct Messages

The **correct messages** sequence (see Table <u>Sequence of correct messages</u>  $^{(59)}$ ) is the simple part: The sender just sends messages using E2EPW\_Write\_\_<o> (), and the receiver checks the reported status returned by E2EPW\_Read\_\_<o> ().

#### 10.3.2.2 Sending Manipulated Messages

For manipulated messages, the sender cannot use the function  ${\tt E2EPW\_Write\_}_{<o>}$  () directly, because not all manipulation operations can be performed before or after the call of  ${\tt E2EPW\_Write\_}_{<o>}$  () (e.g., the manipulation of the DataID used for the CRC calculation). Therefore, the sender must emulate the function  ${\tt E2EPW\_Write\_}_{<o>}$  () and modify it according to the message sequence. The functional behavior of the E2EPW write function is as follows:

- 1. Build a byte array representing the I-PDU of the data element by calling the function E2EPW\_Marshal\_<pde> (). The parameters are a pointer to the array and a pointer to the data element.
- 2. Call E2E\_<profile>Protect (), with the parameters being pointers to the configuration data structure, to the status data structure and to the I-PDU byte array.
- 3. Extract the counter and CRC value from the byte array (configuration-dependent position) and write them to the corresponding signals in the data element data structure.
- 4. Call Rte Write <o> () with the data element as parameter.

To generate and send manipulated messages, the configuration and/or status of the E2Elib must be altered (sequence counter value, DatalD, ...), and data manipulation may be necessary (to provoke a wrong CRC), before sending the data with Rte\_Write\_\_<o> (). While the status data structure is available to the application, the configuration data structure is declared as static const in the E2EPW\_Write\_\_<o> () function and therefore not accessible. The application must emulate E2EPW Write with its own configuration data structure, which can then

be altered if necessary.

The steps to send manipulated messages are:

- 1. Prepare the data element.
- 2. Call the function E2EPW\_Marshal\_<pde> () with a pointer to the data element data structure and a pointer to a byte array in order to get a byte array representing the I-PDU of the data element.
- 3. Alter the Counter field of the status data structure to be <Counter Value> 1 mod 16 (mod 15 for profile 1) according to the message sequence.
- 4. Alter the configuration data structure, if necessary (e.g., change the DatalD field).
- 5. Call E2E\_<profile>Protect (), with the parameters being pointers to the configuration data structure, to the status data structure and to the I-PDU byte array.
- 6. Extract the counter and CRC value from the byte array according to the E2Elib configuration and write them to the signals in the message data structure.
- 7. Manipulate the data element data structure, if necessary (according to message sequence).
- 8. Call Rte\_Write\_\_<o> () with a pointer to the data element data structure.
- 9. Maintain the value returned by Rte IsUpdated  $\langle p \rangle \langle o \rangle$  ().





## 11 Abbreviations

Abbreviation	Description
API	Application Programming Interface
ASIL	Application Safety Integrity Level
СОМ	Communication layer, a software layer that un/packs signal from a network PDU
CRC	Cyclic Redundancy Check
DE	Data Element
E2EConfig file	E2E Configuration File, which is the input for the E2EPWG
E2EPW	E2E Protection Wrapper
E2EPWG	E2E Protection Wrapper Generator
E2Elib	End-to-End Communication Protection Library
EBNF	Extended Backus-Naur-Form (see <a href="http://en.wikipedia.org/wiki/Extended_Backus Naur_Form">http://en.wikipedia.org/wiki/Extended_Backus Naur_Form</a> )
ECU	Electronic Control Unit
QM	Quality Management (safety level according to company standards, but not ISO26262)
PA	Protected Area
PDE	Protected Data Element
I-PDU	Interaction Layer Protocol Data Unit
PGN	Parameter Group Number
RTE	Run-Time Environment
sc	Sequence Counter
sw-c, swc	Software Component
VDP	Variable Data Prototype

# <sup>12</sup> Glossary

Term	Description
Communication stack	The Autosar software stack (in the context of E2EPW: Flexray or CAN stack).
Data Element (DE)	A C-like structure containing signal values. Used at application level. A DE is the smallest unit that can be transmitted/received with a single transmission/reception-function from the application view.  If the transmission/reception of a Data Element is protected by the E2Elib, it is called a <i>Protected Data Element</i> .
(E2E)Protection	A set of API functions that encapsulates the protection and
Wrapper	check mechanisms of the E2Elib at application level:
	<ul> <li>At sender side, there is an API function which adds CRC and counter to the data and passes it along to the next lower layer (RTE, COM or Transport layer).</li> </ul>
	At reception side, there is an API function that receives data from the lower layer, checks its CRC and counter and returns a state telling if the data is correct or not.
Marshaling	The process of copying the DE (a C struct) to the I-PDU representation of the DE. The CRC evaluation is done on the I-PDU representation.
Protected Area	The E2EConfig file contains a list of Protected Areas. Each protected area holds all information that is required to generate wrapper code to send/receive a certain signal group using the COM layer:
	• information for the E2EPW API (e.g., the PDE name, node name, communication direction),
	• information for the calls of the COM API (e.g., signal group ID, opaque property), and
	• information on signals for marshaling (signal positions, signal lengths).
Protected Data Element	See Data Element.



## <sup>13</sup> References

[TT\_E2EPW\_SM] TTTech Automotive GmbH. *E2E Protection Wrapper Safety Manual*, SafetyManual\_E2EPW.pdf, D-MSP-M-70-002

[AS\_E2E\_SWS] AUTOSAR. Specification of SW-C End-to-End Communication Protection Library, Version 1.2.0, Release 3.2.1, Annex B Section 12.1.

[TT\_E2EP01\_SM] TTTech Automotive GmbH, *E2Elib Profile-1 Safety Manual*, D-MSP-M-70-003, V 1.1.8, 2012

[TT\_E2EP02\_SM] TTTech Automotive GmbH, *E2Elib Profile-2 Safety Manual*, D-001-M-70-001, V 1.2.9, 2012

[BMW\_LAST\_KOMM] Lastenheft Bordnetz-Kommunikation, 10000235-000-09, BMW Group, 2009 [AS\_COMABS\_SWS] AUTOSAR Gbr, Specification of Compiler Abstraction, ID 051, V2.1.0, Rel. 3.2.1 [AS\_MEM\_SWS] AUTOSAR Gbr, Specification of Memory Mapping, ID 128, V1.2.1, Rel 3.2.1