

MICROSAR CAN Transport Layer

Technical Reference

Version 3.00.01

Authors	Thomas Dedler, Anthony Thomas
Status	Released



Document Information

History

Author	Date	Version	Remarks
Thomas Dedler	2012-07-11	1.00.00	Initial version
Thomas Dedler	2012-11-26	1.01.00	Synchronous transmission feature removed
Thomas Dedler	2013-04-15	1.02.00	Configuration Hint chapter addedDescription of Post-Build Loadable
Thomas Dedler	2013-08-26	1.03.00	 Limitations of Single Channel Optimization added Limitation of data length parameter added Dcm OnRequestDetection feature removed
Thomas Dedler	2014-04-10	1.04.00	 Synchronous / Asynchronous Transmission AR4.1.2 PduR API support
Thomas Dedler	2014-08-22	2.00.00	 SingleChannel optimization removed Support of CAN-FD added Application callbacks changed Postbuild-Build Selectable
Thomas Dedler	2015-01-12	2.01.00	 Missing description of CanTp_InitMemory() added Reentrancy of CanTp_GetVersionInfo() corrected Minor clarifications in regarding CAN-FD
Thomas Dedler	2015-07-01	2.02.00	 Separation Time by Application Dynamic BS feature description adapted according to latest ISO specification
Thomas Dedler	2015-12-11	3.00.00	 Obsolete features removed: Notification of Failed Cancellations Ignore FC with invalid flow status Ignore FC with reserved STmin Ignore CF with wrong sequence number Clarification of performance parameter configuration Rework of Critical Section chapter Hint for DET configuration added
Anthony Thomas	2016-08-05	3.00.01	 Updated document template Documented features, deviations and extensions properly.



Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_SWS_CANTransportLayer.pdf	4.0.0
[2]	AUTOSAR	AUTOSAR_SWS_CANInterface.pdf	5.0.0
[3]	AUTOSAR	AUTOSAR_SWS_PDURouter.pdf	3.2.0
[4]	ISO	/ISO/TF2/: ISO FDIS 15765-2; Road vehicles — Diagnostics on CAN — Part 2: Network layer services	2015
[5]	AUTOSAR	AUTOSAR_SWS_DevelopmentErrorTracer.pdf	3.2.0
[6]	Vector	TechnicalReference_Asr_Dbg.pdf	1.0.0
[7]	Vector	TechnicalReference_PostBuildLoadable.pdf	1.2.0
[8]	Vector	TechnicalReference_IdentityManager.pdf	1.0.0
[9]	Vector	TechnicalReference_Det.pdf	2.0.4





Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Caution

This symbol calls your attention to warnings.

4



Contents

1	Comp	onent His	story			10
2	Introd	uction				11
	2.1	Archited	cture Overvie	ew		12
3	Funct	ional Des	scription			14
	3.1	Feature	s			14
		3.1.1	Deviations	S		14
		3.1.2	Additions/	Extensions		15
			3.1.2.1	Split CanTp	_MainFunction	15
			3.1.2.2	Notification	of Failed Buffer Request	15
			3.1.2.3	Handling of	FC Frames with a Reserved STmin	15
			3.1.2.4	Dynamic ar	nd Static BlockSize and STmin	16
			3.1.2.5	Dynamic C	hannel Assignment	16
			3.1.2.6	Single Buffe	er Optimization	16
			3.1.2.7	Transmit Q	ueue	17
			3.1.2.8		ous and Synchronous behavior of insmit	18
			3.1.2.9		PduR Interface according to AUTOSAR	18
			3.1.2.10	CAN-FD St	upport	19
				3.1.2.10.1	CAN Messages with more than 8 Byte	19
				3.1.2.10.2	CAN-FD Frame Padding	20
				3.1.2.10.3	Segmented Messages with more than 4095 Byte	20
			3.1.2.11	Separation	Time by Application	21
	3.2	Limitation	ons			22
		3.2.1	Memory C	Optimization		22
		3.2.2	Channel A	Assignment		22
		3.2.3	Channel A	Addressing		22
		3.2.4	Data Leng	gth Paramete	r	23
	3.3	Initializa	ation			23
	3.4	States .				23
	3.5	Main Fu	unctions			24
	3.6	Error Ha	andling			24
		3.6.1	_		oorting	
			3.6.1.1	-	Checking	
		3.6.2	Productio	n Code Error	Reporting	28
	3.7	Channe	el Mode			29



	3.8	Connec	tion Channe	els	29
	3.9	Connec	tion Timings	s	30
		3.9.1	Timing P	arameters	30
		3.9.2	Timing C	onsiderations and Jitter	31
			3.9.2.1	Jitter	31
			3.9.2.2	Separation Time	31
			3.9.2.3	Implementation of N_Br	32
4	Integr	ation			33
	4.1	Scope of	of Delivery		33
		4.1.1	Static File	es	33
		4.1.2	Dynamic	Files	33
	4.2	Include	Structure		34
	4.3	Compile	er Abstractio	on and Memory Mapping	35
		4.3.1	Memory	mapping rules	35
	4.4	Critical	Sections		36
	4.5	Buffer C	Configuration	n	36
		4.5.1	Constant	Block Size	36
		4.5.2	Zero Blo	ck Size	37
		4.5.3	Zero WF	Tmax	37
		4.5.4	Zero STr	nin	37
5	API D	escription	າ		38
	5.1			by CanTp	
		5.1.1		nitMemory	
		5.1.2	CanTp_I	nit()	39
		5.1.3	CanTp_S	Shutdown()	39
		5.1.4	CanTp_N	MainFunction()	40
		5.1.5		MainFunctionRx()	
		5.1.6	CanTp_N	MainFunctionTx()	41
		5.1.7	CanTp_0	GetVersionInfo()	41
		5.1.8	CanTp T	Fransmit()	42
		5.1.9	CanTp_C	CancelReceive()	43
		5.1.10		CancelTransmit()	
		5.1.11	CanTp (ChangeParameter()	45
		5.1.12	CanTp_F	ReadParameter()	46
	5.2	Services		CanTp	
	5.3		,	·	
		5.3.1		RxIndication()	
		5.3.2	• •	FxConfirmation()	
		5.3.3		StopSeparationTime()	



	5.4	Configu	urable Interfa	aces	49
		5.4.1	Appl_Sta	rtSeparationTime()	49
		5.4.2	Notification	on Functions	50
			5.4.2.1	Appl_CanTpRxSFIndication()	50
			5.4.2.2	Appl_CanTpRxFFIndication()	50
			5.4.2.3	Appl_CanTpRxCFIndication()	51
			5.4.2.4	Appl_CanTpFrameTransmission ()	51
			5.4.2.5	Appl_CanTpFrameTxConfirmation ()	52
6	Confi	iguration.			53
	6.1	_		nts	
	6.2			st-Build	
	6.3	Additio	nal Configur	ation Hints	54
		6.3.1	Canlf Tx	Buffering	54
		6.3.2	ISO Perf	ormance Requirements	54
7	Gloss	sary and <i>l</i>	Abbreviatio	ns	55
	7.1				
	7.2	Abbrev	iations		57
8	Conta	act			59



Illustrations

Figure 2-1	AUTOSAR 4.x Architecture Overview	
Figure 2-2	Interfaces to adjacent modules of the CanTp	
Figure 3-1	Sequence Diagram: Asynchronous Transmission	18
Figure 3-2	Sequence Diagram: Synchronous Transmission	
Figure 3-3	Separation Time by Application	
Figure 3-4	Channel Assignment for N-SDUs and N-PDUs	22
Figure 3-5	CanTp internal states	
Figure 3-6	Connection Timing	
Figure 4-1	Include structure	34
Tables		
Table 1-1	Component History	10
Table 3-1	Supported AUTOSAR standard conform features	
Table 3-1	Not supported AUTOSAR standard conform features	
Table 3-2	Features provided beyond the AUTOSAR standard	
Table 3-3	PduR API changes between AR4.0.3 and 4.1.2	
Table 3-4	Service IDs	
Table 3-5	Errors reported to DET	
Table 3-6	Development Error Reporting: Assignment of checks to services	
Table 3-7	Connection Timing Parameters	
	Examples for requested and observed separation times	
Table 3-9 Table 4-1		
Table 4-1	Static files	
Table 4-2		
	Compiler abstraction and memory mapping	
Table 5-1	CanTp_InitMemory	
Table 5-2 Table 5-3	CanTp_Init() CanTp_Shutdown()	
Table 5-3	• = "	
Table 5-4	CanTp_MainFunction() CanTp_MainFunctionRx()	
Table 5-6 Table 5-7	CanTp_MainFunctionTx()CanTp_GetVersionInfo()	
Table 5-7	CanTp Transmit()	
Table 5-6	CanTp CancelReceive()	
Table 5-9	CanTp CancelTransmit()	
Table 5-10	CanTp_ChangeParameter()	
Table 5-11	CanTp_ReadParameter()	
Table 5-12	Services used by the CanTp	
Table 5-13	CanTp_RxIndication()	
Table 5-15	CanTp_TxConfirmation()	
Table 5-16	CanTp StopSeparationTime()	
Table 5-17	Appl StartSeparationTime()	
Table 5-17	Appl CanTpRxSFIndication()	
Table 5-16	Appl_CanTpRxFFIndication()	
Table 5-19	Appl_CanTpRxCFIndication()	
Table 5-20	Appl_CanTpFrameTransmission ()	
Table 5-21	Appl_CanTpFrameTransmission ()	
Table 5-22	Example for typical timing parameter specification	
Table 0-1	GlossaryGlossary	
Table 7-1	Abbreviations	
IUDIC I-Z	/ NOTE VIGUOUS	





1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.00	Initial implementation of CanTp according to AR4.0.3
1.01	Synchronous transmission feature removed due to PduR compatibility
1.02	Debugging Concept Post-Build Loadable
2.00	Generator changed to Java7
2.01	Generator framework supports AR4.1.2 schema
2.02	Synchronous transmission re-introduced (now supported by PduR) Support for AR4.1.2 PduR APIs
3.00	Post-Build Selectable CAN-FD support
3.01	SafeBSW Step I
3.02	SafeBSW Step II Separation Time by Application
4.00	SafeBSW Step III
4.01	SafeBSW Step IV
4.02	First SafeBSW release

Table 1-1 Component History



2 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module CanTp as specified in [1].

Supported AUTOSAR Release:	4		
Supported Configuration Variants:	pre-compile, post-build-loadable, post-build-selectable		
Vendor ID:	CANTP_VENDOR_ID 30 decimal (= Vector-Informatik, according to HIS)		
Module ID:	CANTP_MODULE_ID	35 decimal (according to ref. [1])	

According to AUTOSAR basic software architecture, CanTp provides services for

- > Segmentation of data in transmit direction
- > Reassembly of data in receive direction
- Control of data flow
- > Detection of errors in segmentation sessions

AUTOSAR module specifications are based on existing standards. Thus this AUTOSAR CAN Transport Layer specification is based on the international standard ISO 15765 which is the most widespread standard in the automotive domain.

ISO 15765 contains four sections and describes two applicable CAN Transport Layer specifications: ISO 15765-2 for OEM enhanced diagnostics (see [4]) and ISO 15765-4 for OBD diagnostics. Concerning the transport layer, ISO 15765-4 (the section of ISO 15765 which also covers the data link layer and the physical layer) is in accordance with ISO 15765-2 with some restrictions/additions. In order that there is no incompatibility problem between ISO 15765-2 and ISO 15765-4, differences will be solved by the CAN Transport Layer configuration.

Although the CAN transport protocol is mainly used for vehicle diagnostic systems, its design also incorporates requirements from other CAN based systems employing transport layer protocols.



2.1 **Architecture Overview**

The following figure shows where the CanTp is located in the AUTOSAR architecture.

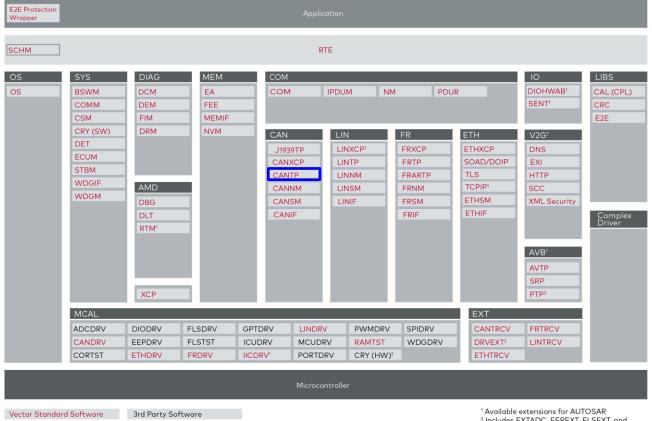


Figure 2-1 AUTOSAR 4.x Architecture Overview

¹ Available extensions for AUTOSAR ² Includes EXTADC, EEPEXT, FLSEXT, and WDGEXT



The next figure shows the interfaces to adjacent modules of the CanTp. These interfaces are described in chapter 5.

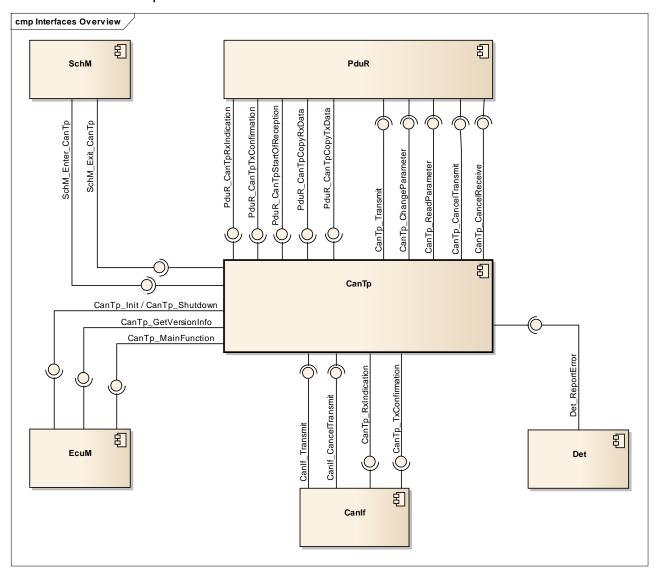


Figure 2-2 Interfaces to adjacent modules of the CanTp



3 Functional Description

3.1 Features

The features listed in the following tables cover the complete functionality specified for the CanTp.

The AUTOSAR standard functionality is specified in [1], the corresponding features are listed in the tables

- > Table 3-1 Supported AUTOSAR standard conform features
- > Table 3-2 Not supported AUTOSAR standard conform features

Vector Informatik provides further CanTp functionality beyond the AUTOSAR standard. The corresponding features are listed in the table

> Table 3-3 Features provided beyond the AUTOSAR standard

The following features specified in [1] are supported:

Supported AUTOSAR Standard Conform Features
Segmented and unsegmented data transmission
Segmented and unsegmented data reception
Control of data flow
Supervision of timeouts
Detection of errors during segemented communication
Transmission cancellation
Reception cancellation
Post-Build Loadable
MICROSAR Identity Manager using Post-Build Selectable

Table 3-1 Supported AUTOSAR standard conform features

3.1.1 Deviations

The following features specified in [1] are not or only partly supported:

Category	Description	ASR Version
Functional	8.3.4 CanTp_Transmit: For robustness reasons (e.g. in case of delayed buffer provision), the CanTp internally stores the frames to be transmitted.	4.0.3
API	8.3.2 CanTp_ GetVersionInfo: The function is always implemented as a regular function.	4.0.3

Table 3-2 Not supported AUTOSAR standard conform features



3.1.2 Additions/ Extensions

The following features are provided beyond the AUTOSAR standard:

Features Provided Beyond The AUTOSAR Standard
Split MainFunction
Notification of Failed Buffer Request
Handling of FC Frames with a Reserved STmin
Dynamic Channel Assignment
Single Buffer Optimization
Transmit Queue
Synchronous Transmission
CAN-FD Support
Separation Time by Application

Table 3-3 Features provided beyond the AUTOSAR standard

3.1.2.1 Split CanTp_MainFunction

In extension to the CanTp SWS [1] the Vector CanTp supports two additional API functions (CanTp_MainFunctionRx and CanTp_MainFunctionTx) in case a split main function is configured. These additional functions can be used instead of the original AUTOSAR CanTp_MainFunction API (which is still supported) to optimize the calling sequence of incoming requests and their responses.

Configuration attribute: CanTpEnableSplitMainFunction

3.1.2.2 Notification of Failed Buffer Request

If the call to <code>CanTpStartOfReception</code> returns <code>BUFREQ_E_NOT_OK</code> or <code>BUFREQ_E_OVFL</code>, according to <code>AUTOSAR</code> the connection shall be terminated. Additionally each terminated reception shall be notified to the upper layer. However, in the mentioned case the upper layer already rejected the reception by returning an invalid buffer status. Therefore no additional notification by the <code>CanTp</code> may be required.

In the Vector CanTp, this behavior is configurable. If the related switch is activated, the notification is only performed if at least one valid buffer (BUFREQ_OK or BUFREQ E BUSY) have been provided.

Configuration attribute: CanTpOnlyNotifyInformedAppl

3.1.2.3 Handling of FC Frames with a Reserved STmin

When using the standard implementation according to ISO 157675-2, the CanTp must accept reserved STmin values (0x80 ... 0xF0, 0xFA ... 0xFF); the connection is then processed with the slowest value for STmin (127msec).

In the CanTp, it can be configured to cancel the transmission instead.



Configuration attribute: CanTpRejectFcWithReservedStMin

3.1.2.4 Dynamic and Static BlockSize and STmin

In AUTOSAR 4 and in older ISO specifications, the block size and the STmin values of the first Flow Control shall be used throughout the whole connection (CANTP067).

ISO 15765-2:20215 ([4]) supports both dynamic and static flow control parameters. In the CanTp, the desired behavior can be configured as follows:

- For Rx connections, the block size can be configured to be constant until the end of the reception. It is then calculated once after receiving the FF, based on the configured maximum block size and the available buffer (default). When using the alternative behavior, the block size is re-calculated whenever a Flow Control have to be transmitted. For STmin, always the configured value is used. Configuration attribute: CanTpEnableConstantBS
- For Tx connections it can be configured if the CanTp shall either evaluate only the first or all Flow Control frames.
 Configuration attribute: CanTpUseOnlyFirstFc

3.1.2.5 Dynamic Channel Assignment

According to AUTOSAR, each N-SDU shall be assigned statically to one connection channel. Since not always all N-SDUs need to be processed simultaneously, the CanTp provides the possibility to limit the number of channels that can be used in parallel. In this case, N-SDUs are dynamically assigned to a channel during runtime. If no channel is available, the reception / transmission is rejected.

This reduces resource consumption, as the memory needed to handle reception or transmission is shared between multiple N-SDUs. However, it adds a little runtime overhead for channel management.

Configuration attribute: CanTpDynamicChannelAssignment

3.1.2.6 Single Buffer Optimization

According to AUTOSAR, the CanTp must include a handling for segmented receive buffers, i.e. it is allowed that CanTpStartOfReception returns a smaller buffer than overall data length specified in the first frame. The CanTp will then request an additional buffer during reception.

For diagnostic applications, often only one buffer is provided at the beginning where its size is sufficient to store the complete message. Therefore no additional buffer must be requested by the CanTp.

If it can be ensured that always only one single buffer is used, the CanTp provides a configuration switch to remove the code to handle segmented buffers. This will reduce size and runtime.

Configuration attributes: CanTpOptimizeSingleRxBuffer



3.1.2.7 Transmit Queue

If an N-PDU is used by different connections and more than one connection requests the Canlf to transmit this N-PDU at the same time, the subsequent TxConfirmation cannot be uniquely assigned to the correct connection.

There may be two reasons why an N-PDU is used by different connections:

- > A channel is configured as full duplex: the conflict occurs here if the Rx connection tries to transmit an FC while the Tx connection is transmitting SF, FF or CFs.
- extended or mixed11 addressing is used: then one N-PDU can be used by multiple channels, as the addressing information is part of the protocol data. However, this protocol data is not available when the TxConfirmation is processed.

Currently AUTOSAR does not describe how to handle these cases. By default the CanTp tracks for each N-PDU if a transmission is in progress or not. If a channel tries to transmit an N-PDU that is in use by another N-SDU, the request is rejected and the respective channel will retry transmission on task level.

However, the more often such conflicts occur (e.g. if many N-SDUs with extended addressing use the same N-PDU), the higher is the risk of sporadically unexpected behavior like connection timeouts due to the delay caused by the retry on task level. To eliminate this risk and to optimize the throughput performance, the CanTp can be configured to queue the transmit requests to the CanIf. Entries in the queue are transmitted as soon as the transmission of the previous N-PDU is completed.

The main drawback of this feature is increased memory consumption.

Configuration attributes: CanTpEnableTransmitQueue



Note

The default transmit queue size is 4. To set a different queue size, the following line must be added to a user config file:

#define CANTP TX QUEUE SIZE <new size>

Please note that due to implementation reasons, only queue sizes with a power of two are allowed (2, 4, 8, 16...).



3.1.2.8 Asynchronous and Synchronous behavior of CanTp_Transmit

By default, the API CanTp_Transmit is asynchronous. This means it only prepares the connection, while the request for the payload data to the upper layer and the transmission of the first CAN frame will be done during the next task cycle.

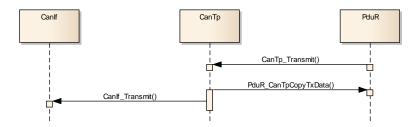


Figure 3-1 Sequence Diagram: Asynchronous Transmission

The CanTp can be configured to make CanTp_Transmit synchronous. Then the payload request to the upper layer and the transmit request to the CanIf are done in the context of CanTp_Transmit. This will slightly improve transmission speed, but requires also that the upper layer is able to handle calls to the CopyTxData function before CanTp_Transmit returns.

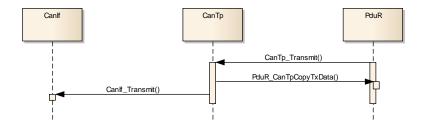


Figure 3-2 Sequence Diagram: Synchronous Transmission

Configuration attributes: CanTpEnableSynchronousTransmit

3.1.2.9 Support of PduR Interface according to AUTOSAR 4.1.2

Although the CanTp is not yet fully compliant with AUTOSAR 4.1.2, it already supports the PduR API signatures according to the updated revision.

The following changes have been made by AUTOSAR in the interface between CanTp and PduR:

- > PduR_CanTpStartOfReception: pointer to PduInfoType as additional parameter added for meta data support (currently not supported by CanTp; will be set to NULL)
- PduR_CanTpRxIndication, PduR_CanTpTxConfirmation: type of the Result parameter changed from NotifResultType to Std_ReturnType



PduR API Changes AUTOSAR 4.0.3 BufReq ReturnType PduR CanTpStartOfReception (PduIdType id, PduLengthType TpSduLength, PduLengthType* bufferSizePtr); void PduR CanTpRxIndication (PduIdType CanTpRxPduId, NotifResultType Result); void PduR CanTpTxConfirmation (PduIdType CanTpTxPduId, NotifResultType Result); **AUTOSAR 4.1.2** BufReq ReturnType PduR CanTpStartOfReception (PduIdType id, PduInfoType * PduInfoPtr, PduLengthType TpSduLength, PduLengthType* bufferSizePtr); void PduR CanTpRxIndication (PduIdType CanTpRxPduId, Std ReturnType Result); void PduR CanTpTxConfirmation (PduIdType CanTpTxPduId, Std ReturnType Result);

Table 3-4 PduR API changes between AR4.0.3 and 4.1.2

With a Vector PduR, the DaVinci Configurator Pro 5 will automatically detect the PduR version and activate the appropriate API signature.

With a Non-Vector PduR in the stack, the AUTOSAR version must be set by providing one of the following definitions (e.g. via compiler config):

```
AUTOSAR 4.0.3: #define MSR_PDUR_API_AR_VERSION 0x403
AUTOSAR 4.1.2: #define MSR PDUR API AR VERSION 0x412
```

3.1.2.10 CAN-FD Support

The CanTp supports the ISO 15765-2:2015, which not only introduces CAN-FD frames with more than 8 byte payload, but also supports segmented transfers with more than 4095 byte.

3.1.2.10.1 CAN Messages with more than 8 Byte

CAN-FD frames support a higher bit rate in the data field of a CAN frame, as well as a maximum length of up to 64 byte per frame. For the CanTp behavior, only the data length is relevant, CAN-FD frames with only 8 byte are treated the same way as classic CAN frames.

The maximum possible CAN DLC is configured by the PduLength parameter of a global PDU in the ECUC:

/EcuC/EcucPduCollection/Pdu/PduLength

To use CAN-FD for an N-SDU, all of the following configuration settings are required:



- CanTpRxNPduRef / CanTpTxNPduRef must reference a global PDU with a PduLength > 8
- > CanTpRxTaType / CanTpTxTaType must be set to Cantp_Canfd_Functional or Cantp Canfd PHYSICAL
- > The global switch CanTpFlexibleDataRateSupport must be enabled

The flow control N-PDU references are not taken into account, as these frames always need less than 8 byte. It does not affect the CanTp behavior whether if they are configured in the CanIf as CAN-FD or as classic CAN.



Reference

For restrictions of the N-PDU usage on a channel, please also refer to chapter 3.2.2.

3.1.2.10.2 CAN-FD Frame Padding

With CAN-FD, not all DLCs between 8 and 64 are valid. A CanTp frame must always be padded to the next valid DLC. The byte value which is used to fill up the frame is either random or user defined, depending on the following configuration parameters:

CanTp/CanTpGeneral/CanTpHavePaddingByte

CanTp/CanTpGeneral/CanTpPaddingByte

The PaddingActivation setting, which can be configured globally and N-SDU specific, only applies for frames which require a DLC less than 8 byte.



Example

- If a CanTp CAN-FD frame (PCI + payload) needs 6 byte, it is padded to 8 byte if padding is active, but left at 6 byte if padding is disabled.
- > If a CanTp CAN-FD frame (PCI + payload) needs 21 byte, it is always extended to 24 byte, which is the next valid CAN-FD length

3.1.2.10.3 Segmented Messages with more than 4095 Byte

ISO15765-2:2015 also introduced an extended first frame definition (in the following referred to as "long first frame"; LFF), which uses a data length of 32 bit. For backward compatibility, LFFs are only used if the overall message length is above 4095 byte. Otherwise, the standard first frame format with 12 bit data length is used.

As the LFF does not depend on the length of the used N-PDUs, it can also be used with classic CAN frames. However, for ISO compatibility it is recommended to enable this functionality when using CAN-FD.

Configuration attribute: CanTpSupportLongFirstFrames





Caution

In the ECUC module, the type of the global PduLength can be configured:

/EcuC/EcucPduCollection/PduLengthTypeEnum

To use the full 32 bit data length of the LFF, it must be set to UINT32.

If set to UINT16, the maximum data length will be limited to 65535 byte and the CanTp will reject received LFFs with a longer data length.

For transmission requests, an overrun can't be detected by the CanTp as the compiler will already truncate the data length passed to CanTp_Transmit.

3.1.2.11 Separation Time by Application

The accuracy of the STmin calculated by the CanTp depends on its task cycle. If STmin values are required which are in the range or below the CanTp task cycle time, this may not be acceptable.

One solution may be to reduce the task cycle time. However, this is usually not satisfying since it produces too high CPU load. An external timer (like in the OS or in hardware) can be an alternative.

For this, the CanTp provides an optional call-out which notifies the application whenever STmin need to be started. By the return value of the notification function, the application can indicate whether to do STmin handling by itself, or leave it to the CanTp.

If the application accepts to handle the separation time, it has to set up a timer and call $CanTp_StopSeparationTime()$ when the timer expired. This will trigger the transmission of the next CF.

It is allowed to call <code>CanTp_StopSeparationTime()</code> anytime between the call to <code>Appl_StartSeparationTime()</code> and before the end of the configured <code>N_Cs</code> time. Only if <code>N_Cs</code> expires and the call-back has not been called yet, the <code>CanTp</code> will send the next <code>CF</code> by itself to fulfill the <code>ISO15765-2</code> performance requirement (see 3.9.2.2). Calling <code>CanTp</code> <code>StopSeparationTime()</code> afterwards has no effect.

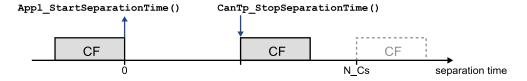


Figure 3-3 Separation Time by Application

To activate the feature, the call-out function name must be specified in the config tool: CanTp/CanTpGeneral/CanTpApplSTminStartFunction



3.2 Limitations

3.2.1 Memory Optimization

Memory optimization by the linker via data scattering:

Some linkers allow filling the "holes" caused by padding with some "foreign" data. Since the generation tool cannot be aware of "foreign" data, such optimizations must be disabled.

3.2.2 Channel Assignment

In the Vector CanTp, a channel always consists of at most one Rx N-SDU and one Tx N-SDU. Furthermore, to each channel at most one Rx N-PDU and one Tx N-PDU is assigned. These N-PDUs are shared between the two N-SDUs as shown in Figure 3-4.

As with CAN-FD an N-PDU can either be CAN2.0 or CAN-FD but not both, this implies that you have to use a CAN-FD Flow Control if the SFs / FFs / CFs of the opposite direction use CAN-FD. Otherwise you will need separate channels for the Rx and Tx N-SDUs.

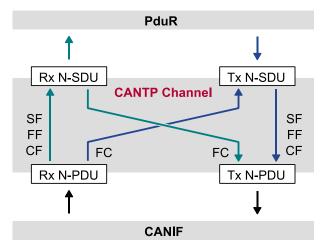


Figure 3-4 Channel Assignment for N-SDUs and N-PDUs

While each N-SDU represents a CanTp connection, the N-PDUs identify the CAN frames that are transmitted and received via the CanIf.

With Standard addressing, each N-PDU can only be assigned to one channel. With extended and mixed11 addressing, an N-PDU may be used on multiple channels, but only with different address information (N TA/N AE).

3.2.3 Channel Addressing

Usage of different addressing within the same channel is not allowed.

The addressing format – CANTP_STANDARD, CANTP_EXTENDED or CANTP_MIXED11 – must be identical for each pair of Rx/Tx N-SDUs assigned to the same channel.



3.2.4 Data Length Parameter

According to the AUTOSAR BSWMD specification, each N-SDU has a Data Length parameter (CanTpRxDI, CanTpTxDI). However, it is not clearly specified if this data length applies to the N-SDU (complete message length) or to the N-PDU (CAN message data length). As furthermore the parameters are anyway deprecated in AR 4.1.1 (see also AUTOSAR RFC 53101), they are no longer evaluated by the CanTp.

For compatibility reasons, the parameters are part of the ECUC file, but their values have no effect.

3.3 Initialization

The API function <code>CanTp_Init()</code> uses the given configuration set to initialize all global variables of the CAN Transport Layer and brings it to the state Idle, where reception and transmission tasks can be started.

3.4 States

The CanTp module has two internal states, CANTP_OFF and CANTP_ON. After power up, the CanTp is in the CANTP_OFF state. In this state no communication tasks can be performed.

The CanTp changes to the internal state <code>CANTP_ON</code> when it has been successfully initialized. Segmentation and reassembly tasks are only performed when the module is in this state. After initialization, all transport protocol connections are in a sub-state of <code>CANTP_ON</code>, in which neither transmission nor reception is in progress (<code>CANTP_RX_IDLE</code> and <code>CANTP_TX_IDLE</code>).

If called when the CanTp module is in the global state CANTP_ON, the function CanTp Init returns the module to state Idle and all current connections are terminated.

The function <code>CanTp_Shutdown</code> stops the CanTp module properly and sets the global state to <code>CANTP_OFF</code>.



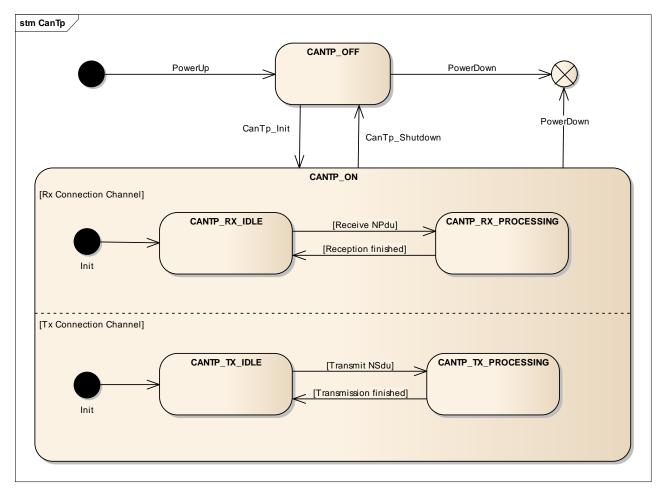


Figure 3-5 CanTp internal states

3.5 Main Functions

The CanTp_MainFunction controls the timing behavior of the CanTp and performs all tasks that have to be done cyclically.

Especially for the calculation of the different timings (delays, timeouts) it is important to call the main function periodically with the time interval that have been configured with the 'CanTpMainFunctionPeriod' parameter in the generation tool.

It is also possible to separate the main function into Rx and Tx, e.g. to optimize the throughput (see chapter 3.1.2.1 for details).

3.6 Error Handling

3.6.1 Development Error Reporting

By default, development errors are reported to the DET using the service <code>Det_ReportError()</code> as specified in [5], if development error reporting is enabled (i.e. <code>pre-compile</code> parameter <code>CANTP_DEV_ERROR_DETECT==STD_ON()</code>.



If another module is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service <code>Det_ReportError()</code>.

The reported CanTp ID is 35.

The reported service IDs identifies the services which are described in 5.1. The following table presents the service IDs and the related services. Services marked with an asterisk (*) are internal service IDs:

Service ID	Service
0x01	CanTp_Init
0x02	CanTp_Shutdown
0x03	CanTp_Transmit
0x04	CanTp_RxIndication
0x05	CanTp_TxConfirmation
0x06	CanTp_MainFunction
0x07	CanTp_GetVersionInfo
80x0	CanTp_CancelTransmit
0x09	CanTp_CancelReceive
0x0A	CanTp_ChangeParameter
0x0B	CanTp_ReadParameter
0x20*	CanTp_MainFunctionRx
0x21*	CanTp_MainFunctionTx
0x30*	CanTp_RxGetBuffer
0x31*	CanTp_TxGetBuffer
0x32*	CanTp_RxTransmitFrame
0x33*	CanTp_TxTransmitFrame
0x34*	CanTp_RxInit
0x35*	CanTp_TxInit
0x36*	CanTp_StopSeparationTimer

Table 3-5 Service IDs

The errors reported to DET are described in the following table. Errors marked with an asterisk (*) are Vector specific:

Error Code		Description				
0x01	CANTP_E_PARAM_CONFIG	API called with wrong parameters				
0x02	CANTP_E_PARAM_ID	API called with wrong parameters				
0x03	CANTP_E_PARAM_POINTER	API called with wrong parameters				
0x20	CANTP_E_UNINIT	API service used without module initialization				
0x30	CANTP_E_INVALID_TX_ID	Invalid Transmit N-PDU identifier				
0x40	CANTP_E_INVALID_RX_ID	Invalid Receive N-PDU identifier				



Error	Code	Description
0x50	CANTP_E_INVALID_TX_BUFFER	Invalid Transmit buffer provided
0x60	CANTP_E_INVALID_RX_BUFFER	Invalid Receive buffer provided
0x70	CANTP_E_INVALID_TX_LENGTH	Invalid data length of the transmit N-PDU
0x80	CANTP_E_INVALID_RX_LENGTH	Invalid data length of the receive N-PDU
0x90	CANTP_E_INVALID_TA_TYPE	Functional FF received, or transmission request for a functional N-SDU with SF data length
0xA0	CANTP_E_OPER_NOT_SUPPORTED	Requested operation is currently not available (e.g. cancel a transmission that is not in progress)
0xB0	CANTP_E_COM	Implementation specific error
0xB1	CANTP_E_INVALID_RX_STATE*	Rx state machine is in an invalid state
0xB2	CANTP_E_INVALID_TX_STATE*	Tx state machine is in an invalid state
0xB3	CANTP_E_INVALID_FRAME_TYPE*	An invalid frame type occurred
0xC0	CANTP_E_RX_COM	General reception error
0xC1	CANTP_E_RX_TIMEOUT_AR*	N_Ar timeout occurred
0xC2	CANTP_E_RX_TIMEOUT_BR*	N_Br timeout occurred
0xC3	CANTP_E_RX_TIMEOUT_CR*	N_Cr timeout occurred
0xC4	CANTP_E_RX_INVALID_SN*	CF with invalid sequence number received
0xC5	CANTP_E_RX_WFTMAX*	Max. number of wait frames transmitted
0xC6	CANTP_E_RX_RESTART*	Connection terminate due to new SF/FF reception
0xC7	CANTP_E_RX_TRANSMIT_ERROR*	Transmission of a flow control frame failed
0xD0	CANTP_E_TX_COM	General transmission error
0xD1	CANTP_E_TX_TIMEOUT_AS*	N_As timeout occurred
0xD2	CANTP_E_TX_TIMEOUT_BS*	N_Bs timeout occurred
0xD3	CANTP_E_TX_TIMEOUT_CS*	N_Cs timeout occurred
0xD4	CANTP_E_TX_FC_OVFL*	FC.OVFL received
0xD5	CANTP_E_TX_INVALID_FS*	FC with invalid flow status received
0xD6	CANTP_E_TX_RES_STMIN*	FC with reserved STmin received, but not allowed
0xD7	CANTP_E_TX_TRANSMIT_ERROR*	Transmission of a frame failed

Table 3-6 Errors reported to DET





FAQ: How to avoid DET errors for failed CanTp communication?

AUTOSAR specifies that the CanTp shall not only report a DET for typical integration errors, but also for communication errors like timeouts. Although sometimes helpful, in most cases this is not desired.

To suppress reporting a DET error for all erroneously terminated connections, filters with the following parameters have to be configured in the DET module:

- > moduleId = 0x23
- > instanceId = 0x00
- \rightarrow apild = 0x34 and 0x35
- > errorld = 0xFF

Please note that the filtering mechanism is a Vector specific feature, which is described in more detail in the Vector DET Technical Reference.

When using other DET implementations, these errors can be filtered in a DET callout which abandons further DET processing and continues the CanTp code.



3.6.1.1 Parameter Checking

AUTOSAR requires that API functions check the validity of their parameters. The checks in Table 3-7 are internal parameter checks of the API functions. These checks are for development error reporting and can be en-/disabled via the configuration parameter Cantp DEV ERROR DETECT.

The following table shows the parameter checks performed by the CanTp services. For parameter checks marked with an asterisk (*), only the error reporting can be deactivated. The check will also be performed if development error reporting is disabled.

Check Service	CanTpRxSduld	CanTpTxSduId	CanTpRxPduld	CanlfTxPduld	pCanTpRxPduPtr	pData	Pid	Pval	pVersionInfo
CanTp_RxIndication									
CanTp_CancelReceive									
CanTp_ChangeParameter	*						*	*	
CanTp_ReadParameter							*	*	
CanTp_Transmit		*							
CanTp_CancelTransmit		*							
CanTp_TxConfirmation									
CanTp_GetVersionInfo									-
CanTp_StopSeparationTime		*							

Table 3-7 Development Error Reporting: Assignment of checks to services

3.6.2 Production Code Error Reporting

In AR4, the CanTp reports no production errors to the Diagnostic Event Manager.

28



3.7 Channel Mode

In the configuration tool, two connections can be grouped to one logical channel (see also 3.2.2).

For each of these logical channels it can be configured if the channel is half or full duplex.

- Half Duplex: only the Rx or the Tx N-SDU of a channel can be active at a time. A connection which is started while the opposite direction is being processed will be rejected.
- > Full Duplex: bidirectional communication is possible at any time.

When only one N-SDU is configured for a channel, the channel mode parameter has no effect.

3.8 Connection Channels

A connection channel represents an internal path for transmission or reception of an N-SDU during runtime. It uses its own resources such as internal buffer, timer or state machine. Therefore, each connection channel is independent from the others. The connection channels are only for CanTp internal use and not accessible externally.

By default, each N-SDU is statically linked to one connection channel (exception: dynamic channel assignment is used; see 3.1.2.5).

The CanTp is able to manage several connections for different N-SDUs simultaneously. However it is not possible to handle two receptions or two transmissions with the same N-SDU identifier in parallel.

If a new FF / SF is received for an already active N-SDU, the connection is terminated and restarted.

If a new transmission request is started for an already active N-SDU, the request is rejected. If it is required to start a new transmission before the previous one is finished, the active connection must first be terminated by using the transmit cancellation function (see 5.1.10 CanTp_CancelTransmit()).



3.9 Connection Timings

3.9.1 Timing Parameters

The ISO specifies several protocol timing parameters for receiver and transmitter side. The following figure shall give an overview which timeouts exist and when they are applied.

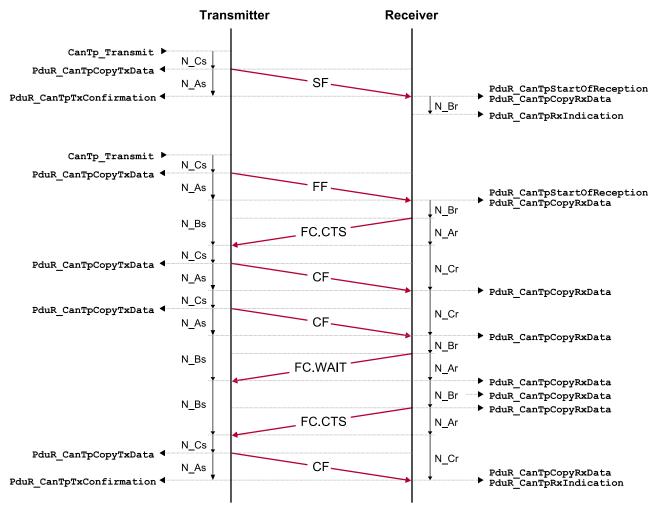


Figure 3-6 Connection Timing

Timeout	Description
Transmissio	on
N_As	Timeout when waiting for the TxConfirmation of a transmitted SF, FF, or CF
N_Bs	Timeout when waiting for a Flow Control
N_Cs	Time until next CF has to be transmitted, or timeout when waiting a buffer
Reception	
N_Ar	Timeout when waiting for the TxConfirmation of a transmitted FC
N_Br	Time before the transmission of the next FC (see 3.9.2.3) or Timeout when waiting after SF reception for a buffer
N_Cr	Timeout when waiting for next CF

Table 3-8 Connection Timing Parameters



3.9.2 Timing Considerations and Jitter

3.9.2.1 Jitter

The time base for all timeout parameters is the main function period of the CanTp. Because the starting point of each timeout may be located sometime between two main function calls, a jitter of up to one task cycle can occur and must be taken into account.

The CanTp tries to compensate this by adding one task cycle to the configured timings, so the observed timings can be longer, but will never be shorter than configured.

3.9.2.2 Separation Time

ISO 15765-2 specifies two timing parameters which determine the time between the transmissions of two consecutive frames.

STmin is the minimum separation time, which is provided by the receiver. If the transmitter sends the CFs faster than requested, there is no guarantee that the receiver of the segmented data transmission will correctly receive and process all frames. Another purpose of STmin is to reduce the bus load produced by CanTp communication.

N_Cs is the maximum separation time, after which the transmission of the next CF has to be started. If the delay is longer than N_Cs, the receiver side may detect an N_Cr timeout.



Caution

In case of a conflict between the configured N_Cs and the requested STmin (N_Cs < STmin), the CanTp will transmit the next CF after the end of N_Cs and therefore violate STmin.

Basically, for STmin the same provisions regarding jitter are made as for all other timings (see 3.9.2.1). However, some STmin specific characteristics apply here:

- in burst mode (STmin = 0) the CFs are sent as fast as possible, i.e. from the context of the TxConfirmation of the previous CF. The observed separation time then only depends on the bus load.
- when a microsecond STmin is requested (0xF1...0xF9) the CF is always sent on the next task. No additional task cycle is added. Therefore if the bus load is very high and the TxConfirmation is delayed too long, the observed separation time might sporadically be above the given value.
- when STmin supervision is done not internally but by the application (see 3.1.2.11), the CanTp only transmits the CF by itself in case N_Cs expires.





FAQ: Why is the observed STmin so much longer than the requested STmin?

Because of the jitter, the CanTp always adds one task cycle to the requested STmin in order to guarantee that the time between two CFs is never below STmin. When the task cycle time is higher than STmin, this may lead to unexpected high separation times (see Table 3-9).

Requested STmin	Observed ST (5ms cyle time)	Observed ST (10ms cyle time)
0ms (burst)	as fast as possible	as fast as possible
100µs	< 5ms	< 10ms
1ms	510ms	1020ms
5ms	510ms	1020ms
6ms	1015ms	1020ms
10ms	1015ms	1020ms
11ms	1520ms	2030ms

Table 3-9 Examples for requested and observed separation times

3.9.2.3 Implementation of N_Br

The ISO 157675-2 defines the parameter N_Br as follows:

N_Br: Time until transmission of the next Flow Control N_PDU

Since N_Br is only a performance parameter and no timeout that must be applied in case of erroneous behavior, it can be seen as the maximum time after which a Flow Control has to be transmitted. Considering this, the following behavior has been implemented in the CanTp:

- After the reception of a First Frame, the first Flow Control is transmitted immediately (N_Br = 0ms).
- > After the reception of the last Consecutive Frame in a block, the next Flow Control is transmitted immediately (N Br = 0ms).
- > After FC.WAIT, the subsequent FC.CTS is transmitted as soon as sufficient buffer is provided. If no buffer is provided, the next FC.WAIT is transmitted after N Br.



Note

The flow status (CTS, WAIT, OVFL) depends on the result of the buffer provision.

FC.WAIT is sent if the buffer is temporarily unavailable or too small. In this case the receiver will continue to send FC.WAIT until the buffer status changes or the maximum number of wait frames (configuration parameter WFTmax) is reached.



4 Integration

This chapter gives necessary information for the integration of the MICROSAR CanTp into an application environment of an ECU.

4.1 Scope of Delivery

The delivery of the CanTp contains the files which are described in the chapters 4.1.1 and 4.1.2:

4.1.1 Static Files

File Name	Source Code Delivery	Object Code Delivery	Description
CanTp.c			Source file of the CanTp
CanTp.h	-		Header file of the CanTp
CanTp_Cbk.h			Header file with CanTp callback function prototypes
CanTp_Types.h	-		Header file with global CanTp type definitions.
CanTp_Priv.h			Header file with internal CanTp definitions.
CanTp.lib			Library of the CanTp

Table 4-1 Static files

4.1.2 Dynamic Files

The dynamic files are generated by the configuration.

File Name	Description
CanTp_Cfg.h	This is the generated header file of CanTp containing pre-compile switches and providing symbolic defines.
CanTp_Cfg.c	This is the generated source file of CanTp containing pre-compile-time configurable parameters
CanTp_Lcfg.h	This is the generated header file of CanTp containing link-time configurable symbols
CanTp_Lcfg.c	This is the generated source file of CanTp containing link-time configurable parameters
CanTp_PBcfg.c	This is the generated source file of CanTp containing post-build-time configurable parameters
CanTp_PBcfg.c	This is the generated source file of CanTp containing post-build-time configurable parameters

Table 4-2 Generated files



4.2 Include Structure

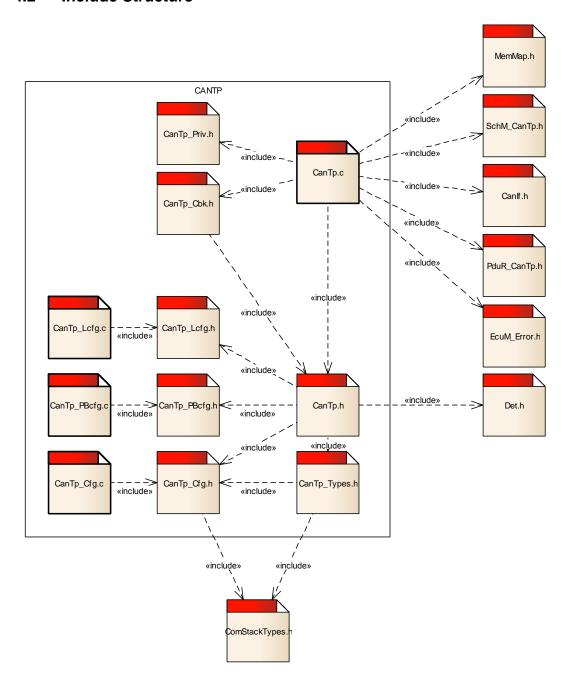


Figure 4-1 Include structure



Note

The only files that need to be included by other modules and software components are ${\tt CanTp.h}$ and ${\tt CanTp_Cbk.h}$. These files contain all definitions and inclusions required to use the CanTp.



4.3 Compiler Abstraction and Memory Mapping

The objects (e.g. variables, functions, constants) are declared by compiler independent definitions – the compiler abstraction definitions. Each compiler abstraction definition is assigned to a memory section.

The following table contains the memory section names and the compiler abstraction definitions of the CanTp and illustrates their assignment among each other.

Compiler Abstraction Definitions Memory Mapping Sections	CANTP_CODE	CANTP_APPL_DATA	CANTP_VAR_NOINIT	CANTP_VAR_INIT	CANTP_PBCFG	CANTP_VAR_PBCFG
CANTP_START_SEC_CODE CANTP_STOP_SEC_CODE	-	•				
CANTP_START_SEC_VAR_NOINIT_8BIT CANTP_START_SEC_VAR_NOINIT_8BIT			•			
CANTP_START_SEC_VAR_INIT_UNSPECIFIED CANTP_STOP_SEC_VAR_INIT_UNSPECIFIED				•		
CANTP_START_SEC_PBCFG CANTP_STOP_SEC_PBCFG						
CANTP_START_SEC_VAR_PBCFG CANTP_STOP_SEC_VAR_PBCFG						

Table 4-3 Compiler abstraction and memory mapping

4.3.1 Memory mapping rules

Due to reuse of existing code, some pointers in the CanTp may point to variables of different memory classes. Therefore it must be ensured that the following compiler abstraction definitions are mapped to compatible memory sections:

- CANTP VAR PBCFG and CANTP APPL DATA
- CANTP VAR PBCFG and PDUR APPL DATA



4.4 Critical Sections

The synchronization mechanism defined by AUTOSAR covers the entering and leaving of so called critical sections. Different critical sections can be handled by using different so called "Exclusive Areas".

CanTp supports only one exclusive area (CANTP_EXCLUSIVE_AREA_0), which can be entered from task and interrupt level. It protects all internal state data against unintended modification due to concurrent access and is entered from the following APIs:

- CanTp_RxIndication
- > CanTp_TxConfirmation
- CanTp_Transmit
- > CanTp ChangeParameter
- CanTp CancelReceive
- CanTp_CancelTransmit
- CanTp_StopSeparationTime
- > CanTp MainFunction

The exclusive area must lock the interrupts from all bus systems which may affect CanTp operation. So while in CAN-only systems, locking the CAN interrupts is sufficent, e.g. in an ECU which does CAN-FlexRay routing, also the FlexRay interrupts have to be locked.

4.5 Buffer Configuration

The CanTp is able to work with segmented reception buffers, i.e. usually it is not necessary to provide a buffer with size of the complete message to be received.

Basically it is sufficient to provide a buffer which is large enough to store the payload of all CFs within a block. The CanTp will adjust the block size and flow status parameters in the FC frames according to the currently available buffer to control the reception data flow. A new buffer is requested before the start of a new block, i.e. when an FC.CTS is sent.

However, some configuration options limit the reception control capabilities of the CanTp. This must be taken into account during configuration of the buffer size in an upper layer module (e.g. in the PduR when using high level routing).

4.5.1 Constant Block Size

If the CanTp is not allowed to change the block size during reception (see also 3.1.2.4), the buffer size which is reported to the CanTp upon request at the end of a block should also not change after the first FC.CTS has been transmitted. Otherwise the CanTp will transmit an FC.WAIT until enough buffer is available, which will unnecessarily delay the reception.



4.5.2 Zero Block Size

If the Block Size is configured as zero, an FC is only allowed after FF reception. If once a FC.CTS is transmitted, the CanTp has no possibility to delay the reception if the upper layer runs out of buffer. The CanTp will try to get more buffer between two CFs while waiting for STmin, but for better robustness it is recommended to use BS = 0 only if a full buffer is available. Otherwise the connection will be terminated with an error if the CanTp is still waiting for a buffer when the next CF is received.

4.5.3 Zero WFTmax

A WFTmax value of zero does suppress the transmission of FC.WAIT, i.e. the CanTp is not allowed to delay reception. If nevertheless a situation occurs where an FC.WAIT is needed, the connection will be terminated. Therefore, similar to the case with constant block size, it is important to provide always enough buffer for one complete block or (if block size is not constant) for at least one CF.

4.5.4 Zero STmin

With a STmin of zero, each CF is transmitted immediately after the previous CF. This eliminates the possibility of a buffer request between two CFs in case of BS = 0. If such a situation nevertheless occurs, the connection will be erroneously terminated on reception of the next CF.

Therefore it is highly recommended to provide always a full buffer when BS = 0 and STmin = 0 are used.



5 API Description

For an interfaces overview please see Figure 2-2.

5.1 Services provided by CanTp

5.1.1 CanTp_InitMemory

Prototype		
<pre>void CanTp_InitMemory (void)</pre>		
Parameter		
N/A	N/A	
Return code		
Void	N/A	
Functional Description		

Functional Description

Service to initialize module global variables at power up. This function initializes the variables in *_INIT_* sections and should be used in case they are not initialized by the startup code.

- > This function must be called prior to CanTp_Init
- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.

Table 5-1 CanTp_InitMemory



5.1.2 CanTp_Init()

Prototype		
<pre>void CanTp_Init (const CanTp_ConfigType* CfgPtr)</pre>		
Parameter		
CfgPtr	Pointer to the CanTp post-build configuration data.	
	In configurations supporting multiple variants or post-build, a #define with a config pointer for each available configuration set is generated.	
	In simple precompile configurations, the parameter is not used by the CanTp and can be set to NULL.	
Return code		
Void	N/A	
Functional Description		
This function initializes the CanTp module.		
Particularities and Limitations		

Table 5-2 CanTp_Init()

5.1.3 CanTp_Shutdown()

This function is non-reentrant.This function is synchronous.

> This function can be called from any context.

-		
Prototype		
void CanTp_Shutdown (void)		
Parameter		
N/A	N/A	
Return code		
Void	N/A	
Functional Description		
This function is called to shut down the CanTp module.		
Particularities and Limitations		
> This function can be called from any context.		
> This function is non-reentrant.		
> This function is synchronous.		

Table 5-3 CanTp_Shutdown()



5.1.4 CanTp_MainFunction()

Prototype		
void CanTp_MainFunction (void)		
Parameter		
N/A	N/A	
Return code		
void	N/A	
Functional Description		
The main function for scheduling the CanTp.		

Particularities and Limitations

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.

Table 5-4 CanTp_MainFunction()

5.1.5 CanTp_MainFunctionRx()

Prototype		
<pre>void CanTp_MainFunctionRx (void)</pre>		
Parameter		
N/A	N/A	
Return code		
void	N/A	
Functional Description		

Functional Description

The main function for scheduling the receive channels of the CanTp. This function is only available if the split MainFunction feature is activated

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated (see 3.1.2.1) Compiler switch: CANTP_RXTX_MAINFUNCTION_API Configuration attribute: CanTpEnableSplitMainFunction

Table 5-5 CanTp_MainFunctionRx()



5.1.6 CanTp_MainFunctionTx()

Prototype		
void CanTp_MainFunctionTx (void)		
Parameter		
N/A	N/A	
Return code		
void	N/A	

Functional Description

The main function for scheduling the transmit channels of the CanTp. This function is only available if the split MainFunction feature is activated

Particularities and Limitations

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated (see 3.1.2.1) Compiler switch: CANTP_RXTX_MAINFUNCTION_API Configuration attribute: CanTpEnableSplitMainFunction

Table 5-6 CanTp_MainFunctionTx()

5.1.7 CanTp_GetVersionInfo()

Prototype		
<pre>void CanTp_GetVersionInfo (Std_VersionInfoType* versioninfo)</pre>		
Parameter		
versioninfo	reference to a variable where to store the version information of the CanTp	
Return code		
void	N/A	
Functional Description		

Functional Description

This function returns the version information of the CanTp module.

The version information includes: Module Id, Vendor Id and Vendor specific version numbers.

The version numbers are BCD-coded.

- > This function can be called from any context.
- > This function is reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated Compiler switch: CANTP_VERSION_INFO_API Configuration attribute: CanTpVersionInfoApi

Table 5-7 CanTp_GetVersionInfo()



5.1.8 CanTp_Transmit()

Prototype

Std_ReturnType CanTp_Transmit (PduIdType CanTpTxSduId, const PduInfoType*
CanTpTxInfoPtr)

campiximiorer /	
Parameter	
CanTpTxSduId	Unique CanTp identifier of the N-SDU to be transmitted.
	Range: 0(maximum number of Tx N-SDU IDs) - 1
CanTpTxInfoPtr	This reference to a PduInfoType structure contains the length to be transmitted (SduLength) and a data pointer (SduDataPointer). Only the SduLength is used by CanTp_Transmit. The data to be transmitted is requested separately by the CanTp. Thereto the function PduR_CanTpCopyTxData is used.
Return code	
Std_ReturnType	E_OK: The transmit request has been started successfully E_NOT_OK: The request cannot be started (e.g. a transmit request is in progress with the same N-SDU identifier)

Functional Description

This service is used to request the transfer of segmented data.

If data length is less than 7 or 6, depending on the addressing format (standard, extended. mixed11), a SF N-PDU is sent. Otherwise, if data length is greater than 7 or 6, a multiple frame transmission session is initiated.

When the transmit request has been completed, the CanTp notifies the upper layer by calling the PduR_CanTpTxConfirmation callback function.

Also, if an error occurred (overflow, timeout etc.), the transmit request is aborted and the PduR_CanTpTxConfirmation callback is called with the appropriate error result value.

Particularities and Limitations

- > This function can be called from any context.
- > This function is reentrant.
- This function can be configured to be synchronous or asynchronous (see 0).

Table 5-8 CanTp_Transmit()



5.1.9 CanTp_CancelReceive()

Prototype	
Std_ReturnType CanTp_CancelReceive (PduIdType CanTpRxSduId)	
Parameter	
CanTpRxSduId	Identifier of the Rx N-SDU, for which a reception shall be cancelled.
	Range: 0(maximum number of Rx N-SDU IDs) - 1
Return code	
Std_ReturnType	E_OK: Cancellation request of the specified N-SDU is accepted.
	E_NOT_OK: Cancellation request is rejected; the reason can be that the request is issued for an N-SDU that is not segmented or that is not in the reception process.
Functional Descripti	ion

Functional Description

This service is used to cancel the ongoing reception of an N-SDU.

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated Compiler switch: CANTP_RC Configuration attribute: CanTpRc

Table 5-9 CanTp_CancelReceive()



5.1.10 CanTp_CancelTransmit()

Prototype		
Std_ReturnType CanTp_CancelTransmit (PduIdType CanTpTxSduId)		
Parameter		
CanTpTxSduId	Identifier of the Tx N-SDU, for which a transmission shall be cancelled.	
	Range: 0(maximum number of Tx N-SDU IDs) - 1	
Return code		
Std_ReturnType	E_OK: Cancellation request of the specified N-SDU is accepted.	
	E_NOT_OK: Cancellation request is rejected; the reason can be that request is issued for an N-SDU that is not segmented, request is issued after the last CF has been requested for transmission or cancellation is not possible for the related N-SDU due to configuration.	
Functional Description		
This service is used to cancel the ongoing transmission of an N-SDU.		
Particularities and Limitations		

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated Compiler switch: CANTP_TC Configuration attribute: CanTpTc

Table 5-10 CanTp_CancelTransmit()



5.1.11 CanTp_ChangeParameter()

Prototype

 $\label{thm:changeParameter} \textbf{Std_ReturnType} \ \textbf{CanTp_ChangeParameter} \ (\ \ \textbf{PduIdType} \ \ id, \ \ \textbf{TPParameterType} \ \ parameter, \\ \textbf{uint16} \ \ \textbf{value} \)$

Parameter	
id	Identifier of the Rx N-SDU, for which a parameter shall be changed. Range: 0(maximum number of Rx N-SDU IDs) - 1
parameter	Parameter type of which the value has to be changes (TP_BS or TP_STMIN).
value	The new value of the parameter.
Return code	
Std_ReturnType	E_OK: request is accepted. E_NOT_OK: request is not accepted.

Functional Description

This service is used to request the change of reception parameters BS and STmin for a specified N-SDU. Modification of parameters is only allowed if currently no reception for the respective N-SDU is in progress.

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated Compiler switch: CANTP_ENABLE_CHANGE_PARAM Configuration attribute: CanTpChangeParameterApi

Table 5-11 CanTp_ChangeParameter()



5.1.12 CanTp_ReadParameter()

Prototype

Std_ReturnType CanTp_ReadParameter (PduIdType id, TPParameterType parameter,
uint16* value)

Parameter	
id	Identifier of the Rx N-SDU, for which a flow control parameter shall be read. Range: 0(maximum number of Rx N-SDU IDs) - 1
parameter	Parameter type of which the value has to be read (TP_BS or TP_STMIN).
value	Pointer where the parameter value will be stored.
Return code	
Std_ReturnType	E_OK: request is accepted. E_NOT_OK: request is not accepted.

Functional Description

This service is used to read the current value of reception parameters BS and STmin for a specified N-SDU.

- > This function can be called from any context.
- > This function is non-reentrant.
- > This function is synchronous.
- This API is optional and can be deactivated Compiler switch: CANTP_ENABLE_READ_PARAM Configuration attribute: CanTpReadParameterApi

Table 5-12 CanTp_ReadParameter()



5.2 Services used by CanTp

In the following table services provided by other components, which are used by the CanTp are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
Canlf	CanIf_Transmit
	CanIf_CancelTransmit
Det	Det_ReportError
EcuM	EcuM_BswErrorHook
PduR	PduR_CanTpCopyRxData
	PduR_CanTpCopyTxData
	PduR_CanTpRxIndication
	PduR_CanTpStartOfReception
	PduR_CanTpTxConfirmation
	PduR_CanTpChangeParameterConfirmation
SchM	SchM_Enter_CanTp_*
	SchM_Exit_CanTp_*

Table 5-13 Services used by the CanTp



Prototype

5.3 Callback Functions

This chapter describes the callback functions that are implemented by the CanTp and can be invoked by other modules. The prototypes of the callback functions are provided in the header file CanTp Cbk.h by the CanTp.

5.3.1 CanTp_RxIndication()

1 Tototype			
<pre>void CanTp_RxIndication (PduIdType CanTpRxPduId, const PduInfoType* CanTpRxPduPtr)</pre>			
Parameter			
CanTpRxPduId	Identifier of the Rx N-PDU that have been received. Range: 0(maximum number of Rx N-PDU IDs) - 1		
CanTpRxPduPtr	Reference to structure with the size of the received N-PDU (SduLength) and to the payload data (SduDataPointer)		
Return code			
void	N/A		

Functional Description

This function is called by the CAN Interface after a successful reception of an N-PDU.

Particularities and Limitations

- > This function can be called from any context.
- > This function is reentrant.
- > This function is synchronous.

Table 5-14 CanTp_RxIndication()

5.3.2 CanTp_TxConfirmation()

Prototype			
<pre>void CanTp_TxConfirmation (PduIdType TxPduId)</pre>			
Parameter			
TxPduId	Identifier of the Tx N-PDU that have been transmitted successfully.		
	Range: 0(maximum number of Tx N-PDU IDs) - 1		
Return code			
void	N/A		
Functional Description			

This function is called by the CAN Interface to confirm the successful transmission of an N-PDU.

Particularities and Limitations

- > This function can be called from any context.
- > This function is reentrant.
- > This function is synchronous.

Table 5-15 CanTp_TxConfirmation()



5.3.3 CanTp_StopSeparationTime()

Prototype			
void CanTp_StopSep	void CanTp_StopSeparationTime(PduIdType CanTpTxSduId)		
Parameter			
CanTpTxSduId	Symbolic name value of the Tx connection		
	Note: this is the same ID as it has been passed to the application in the StartSeparationTime call-out.		
Return code			
-	-		

Functional Description

Called by the application to trigger transmission of the next CF when its separation timer expired.

Particularities and Limitations

- > Feature "STmin by Application" must be active (see 3.1.2.11)
- > The request to do the separation time handling must have been accepted by the application (see 5.4.1). If CanTp_StopSeparationTime() is called before Appl_StartSeparationTime returns (e.g. in case of a fast timer interrupt), the CanTp assumes a positive result and accepts the function call.
- In the context of this function, the CanTp will request the CF payload from its upper layer and transmit the next CF

Table 5-16 CanTp_StopSeparationTime()

5.4 Configurable Interfaces

5.4.1 Appl_StartSeparationTime()

Prototype			
boolean Appl_StartSeparationTime(PduIdType CanTpTxSduId, uint8 STmin)			
Parameter			
CanTpTxSduId	Symbolic name value of the Tx connection.		
STmin	STmin value from the flow control (encoding according to ISO).		
Return code			
TRUE	request to handle Separation Time is accepted by the application		
FALSE	request to handle Separation Time is rejected and will be done by CanTp		
Functional Description			

Particularities and Limitations

- > The function is called from the TxConfirmation context
- The actual name of the function is configured by the parameter 'CanTp/CanTpGeneral/CanTpApplSTminStartFunction'

Called by the CanTp to notify the application that a separation timer need to be started.

Table 5-17 Appl_StartSeparationTime()



5.4.2 Notification Functions

Additional notification callouts can be defined to notify the application about the reception or transmission of CanTp frames. This may be used for project specific extensions or workarounds. The function declarations are provided in CanTp_Cbk.h. To activate a callout, an according compiler switch must be defined to STD ON in a user config file.

5.4.2.1 Appl_CanTpRxSFIndication()

Prototype			
void Appl_CanTpRxSFI	ndication	(PduIdType const PduInfoType*	PduRRxPduId, PduInfoPtr);
Parameter			
PduRRxPduId		e connection, which is defir PduR_CanTpRxIndication(ned by the PduR; the same Id is passed).
PduInfoPtr		to structure with the size (Sointer) of the single frame.	duLength) and the CAN frame content
Return code			
_	-		
Functional Description			
Function is called upon successful reception of a single frame N-PDU before the call of PduR_CanTpStartOfReception().			
Particularities and Limitations			
> To activate the callout, CANTP_APPL_RX_SF_INDICATION must be defined to STD_ON			

Table 5-18 Appl_CanTpRxSFIndication()

5.4.2.2 Appl_CanTpRxFFIndication()

Prototype			
void Appl_CanTpR	xFFIndication	(PduIdType const PduInfoType*	PduRRxPduId, PduInfoPtr);
Parameter			
PduRRxPduld		e connection, which is defir PduR_CanTpRxIndication(ned by the PduR; the same Id is passed ().
PduInfoPtr		Reference to structure with the size (SduLength) and the CAN frame content (SduDataPointer) of the first frame.	
Return code			
_	-		
Functional Description			
Function is called upon successful reception of a first frame N-PDU before the call of PduR_CanTpStartOfReception().			
Particularities and Limitations			
> To activate the callout, CANTP_APPL_RX_FF_INDICATION must be defined to STD_ON			

Table 5-19 Appl_CanTpRxFFIndication()



5.4.2.3 Appl_CanTpRxCFIndication()

Prototype			
void Appl_CanTpRxCFI	ndication	(PduIdType const PduInfoType*	PduRRxPduId, PduInfoPtr);
Parameter			
PduRRxPduld		e connection, which is defined the connection of the contraction of the contraction of the connection	ned by the PduR; the same Id is passed ().
PduInfoPtr		to structure with the size (Sointer) of the consecutive f	SduLength) and the CAN frame content rame.
Return code			
-	-		
Functional Description			
Function is called upon successful reception of a consecutive frame N-PDU before the call of PduR_CanTpCopyRxData().			

Particularities and Limitations

> To activate the callout, CANTP_APPL_RX_CF_INDICATION must be defined to STD_ON

Table 5-20 Appl_CanTpRxCFIndication()

5.4.2.4 Appl_CanTpFrameTransmission ()

Prototype			
<pre>void Appl_CanTFrameTransmission</pre>		(PduIdType const PduInfoType*	<pre>CanIfTxPduId, PduInfoPtr);</pre>
Parameter			
CanlfTxPduld		ransmitted CAN message, value to CanIf_Transmit().	which is defined by the CanIf; the
PduInfoPtr		structure with the size (Sdu ter) of the transmitted CAN	
Return code			
-	-		

Functional Description

Function is called if transmission of a CanTp N-PDU has successfully been started (CanIf_Transmit() has been called and returned E_OK).

Particularities and Limitations

> To activate the callout, CANTP_APPL_FRAME_TRANSMISSION must be defined to STD_ON

Table 5-21 Appl_CanTpFrameTransmission ()



5.4.2.5 Appl_CanTpFrameTxConfirmation ()

Prototype		
void Appl_CanTFrameTx	cConfirmation (PduIdType CanIfTxPduId);	
Parameter		
CanlfTxPduld	Pduld of the transmitted CAN message, which is defined by the CanIf; the same Id is passed to CanIf_Transmit().	
Return code		
-	-	
Functional Description		
Function is called if a CanTp N-PDU has successfully been transmitted (at the beginning of CanTp_TxConfirmation).		
Particularities and Limitations		
> To activate the callout, CANTP_APPL_FRAME_CONFIRMATION must be defined to STD_ON		

Table 5-22 Appl_CanTpFrameTransmission ()



6 Configuration

The CanTp attributes can be configured with the following tool:

Configuration in DaVinci Configurator Pro 5

6.1 Configuration Variants

The CanTp supports the configuration variant

- > VARIANT-PRE-COMPILE
- > VARIANT-POST-BUILD-LOADABLE
- > VARIANT-POST-BUILD-SELECTABLE

The configuration classes of the CanTp parameters depend on the supported configuration variants. For their definitions please see the CanTp_bswmd.arxml file.

6.2 Configuration of Post-Build

The configuration of post-build loadable is described in [7].

In the CanTp, the following configuration changes are possible at post-build time:

- Modify timing parameters of existing N-SDUs
- Activate or disable N-PDU padding of existing N-SDUs (padding must have been globally enabled at pre-compile time)
- > Modify flow control parameters of existing Rx N-SDUs (STmin, Block Size, WFTmax)
- > Change number of channels (dynamic channel assignment must have been enabled at pre-compile time, see 3.1.2.5)
- Add new N-SDUs

Existing references to N-PDUs can't be changed at post-build time. However, when adding new N-SDUs, N-PDUs configured at pre-compile time can be referenced.



6.3 Additional Configuration Hints

6.3.1 CanIf Tx Buffering

The CanTp does not implement a retry mechanism in case the CanIf is not able to transmit a TP message. If a call to CanIf_Transmit failed, the connection is terminated.

To avoid unpredictable interruption of active CanTp connections, the Tx buffering feature must be enabled in the CanIf for systems where high bus load and failed transmissions are expected.

6.3.2 ISO Performance Requirements

ISO15765-2 defines performance requirements for N_Br and N_Cs (see also 3.9.1), which frequently leads to confusion. The reason for this is that there is usually no clear distinction between **configured timeouts** and the **actual timing** observed on the bus.

For example, a typical OEM specification may look like that:

Timing Parameter	Value
N_As	1000ms
N_Ar	1000ms
N_Bs	1000ms
N_Br	$(N_Br + N_Ar) < (0.9*N_Bs)$
N_Cs	$(N_Cs + N_As) < (0.9*N_Cr)$
N_Cr	1000ms

Table 6-1 Example for typical timing parameter specification

Interpreting all timings as configurable parameters would mean, that only a negative value can fulfill the specified equation for N Br and N Cs.

However, the intent of the requirement is not to specify a concrete value, but to provide a test criterion for a black box test where e.g. N_Br and N_Ar can't be measured separately. So it should be interpreted as follows:

(actual measured time for N_Br + N_Ar) < (0,9 * configured N_Bs timeout)



FAQ: Which values should be used for the config parameters N_Cs and N_Br?

The CanTp tries to send out frames as fast as possible. N_Cs and N_Br are mainly used to abort/complete an operation before it is obvious that the performance time can no longer be fulfilled (see also 3.9.2.2 for N_Cs and 3.9.2.3 for N_Br).

So assuming a typical bus delay far below 100ms, for the example above a good choice for N_Cs and N_Br would be around 800ms.



7 Glossary and Abbreviations

7.1 Glossary

Term	Description
Buffer	A buffer in a memory area normally in the RAM. It is an area that the application has reserved for data storage.
Callback function	This is a function provided by an application. E.g. the CAN Driver calls a callback function to allow the application to control some action, to make decisions at runtime and to influence the work of the driver.
CAN Driver	The CAN Driver encapsulates a specific CAN controller handling. It consists of algorithms for hardware initialization, CAN message transmission and reception. The application interface supports both event and polling notification and WR/RD access to the message buffers.
CAN message	Frame which is composed of the start-of-frame, arbitration, control, data, CRC, acknowledge and end-of-frame bit fields.
Channel	A channel defines the assignment (1:1) between a physical communication interface and a physical layer on which different modules are connected to (either CAN or LIN). 1 channel consists of 1 X network(s).
Communication stack	The communication stack consists of the communication configuration and the communication kernel, a number of adaptive software components that cover the basic communication requirements in distributed automotive applications.
Component	CAN Driver, Network Management are software COMPONENTS in contrast to the expression module, which describes an ECU.
Confirmation	A service primitive defined in the ISO/OSI Reference Model (ISO 7498). With the service primitive 'confirmation' a service provider informs a service user about the result of a preceding service request of the service user. Notification by the CAN Driver on asynchronous successful transmission of a CAN message.
Critical section	A critical section is a sequence of instructions where mutual exclusion must be ensured. Such a section is called 'critical' because shared data is modified within it.
Data consistency	Data consistency means that the content of a given application message correlates unambiguously to the operation performed onto the message by the application. This means that no unforeseen sequence of operations may alter the content of a message hence rendering a message inconsistent with respect to its allowed and expected value.
Data link layer	The communication layer which provides services for the transfer of data link messages. The data link layer consists of the communication hardware and the communication driver software.
DaVinci Configurator Pro 5	Configuration and code generation tool for MICROSAR components
Deadlock	A state in which tasks block one another so that further processing of the tasks concerned is no longer possible. A deadlock between two tasks occurs, e.g. if both tasks wait for the reception of a message which is to be

55



	sent by the other task before sending its own message.
Electronic Control Unit	Also known as ECU. Small embedded computer system consisting of at least one CPU and corresponding periphery which is placed in one housing.
Event	An exclusive signal which is assigned to a certain extended task. An event can be used to send binary information to an extended task. The meaning of events is defined by the application. Any task can set an event for an extended task. The event can only be cleared by the task which is assigned to the event.
Gateway	A gateway is designed to enable communication between different bus systems, e.g. from CAN to LIN.
Indication	A service primitive defined in the ISO/OSI Reference Model (ISO 7498). With the service primitive 'indication' a service provider informs a service user about the occurrence of either an internal event or a service request issued by another service user. Notification of application in case of events in the Vector software components, e.g. an asynchronous reception of a CAN message.
Interrupt	Processor-specific event which can interrupt the execution of a current program section.
Interrupt level	Processing level provided for time-critical activities. To keep the interrupt latency brief, only absolutely indispensable actions should be effected in the interrupt service routine, which ensures reception of the interrupt and trigger its (post) processing within a task. Other processing levels are: Operating system level and task level.
Network	A network defines the assignment (1:N) between a logical communication grouping and a physical layer on which different modules are connected to (either CAN or LIN). One network consists of one channel, Y networks consists of 1 Z channel(s). We say network if we talk about more than one bus.
Physical layer	An electrical circuit that connects an ECU to a communication media.
Platform	The sum of micro controller derivative, communication controller implementation and compiler is called platform.
Post-build	This type of configuration is possible after building the software module or the ECU software. The software may either receive parameters of its configuration during the download of the complete ECU software resulting from the linkage of the code, or it may receive its configuration file that can be downloaded to the ECU separately, avoiding a re-compilation and rebuild of the ECU software modules. In order to make the post-build time reconfiguration possible, the re-configurable parameters shall be stored at a known memory location of ECU storage area.
Segmented data transfer	See segmented communication
Software architecture	A software architecture is the structure or structures of a system, which comprises software components, the external visible properties of these components and the relationships among them.
Transport Protocol	Some information that must be transferred over the CAN/LIN bus does not fit into individual message frames because the data length exceeds the maximum of 8 bytes. In this case, the sender must divide up the data into a number of messages. Additional information is necessary for the receiver



to put the data together again.
, ,

Table 7-1 Glossary

7.2 Abbreviations

Abbreviation	Description
AE	Address Extension
API	Application Programming Interface
AR	AUTOSAR
AUTOSAR	Automotive Open System Architecture
BS	Block Size
BSW	Basis Software
BSWMD	Basic Software Module Description
CAN	Controller Area Network protocol
CAN-FD	CAN with Flexible Data Rate
CANTP	CAN Transport Layer
CF	Consecutive Frame
COM	Communication
CTS	Clear To Send
DCM	Diagnostic Communication Manager
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DL	Data Length
DLC	Data Length Code, Number of data bytes of a CAN message
ECU	Electronic Control Unit
FC	Flow Control
FF	First Frame
FS	Flow Status Control
HIS	Hersteller Initiative Software
ID	Identifier
ISO	International Standardization Organization
LFF	Long First Frame (extended first frame with escape sequence)
LSF	Long Single Frame (extended single frame with escape sequence)
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
N	Network Layer (used as prefix; e.g. N-PDU or N-SDU)
OBD	Undefined
OEM	Original Equipment Manufacturer
OS	Operating System
OVFLW	Overflow



РВ	Post-Build
PDU	Protocol Data Unit
PDUR	PDU Router
ROM	Read-Only Memory
RFC	Request For Comment
RTE	Runtime Environment
SA	Source Address
SDU	Service Data Unit
SF	Single Frame
SN	Sequence Number
SRS	Software Requirement Specification
ST	Separation Time
SWC	Software Component
SWS	Software Specification
TA	Target Address
TP	Transport Protocol
TPCI	Transport Protocol Control Information
WT	Wait

Table 7-2 Abbreviations



8 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com