

MICROSAR FEE

Technical Reference

Version 8.01.00

Authors Christian Kaiser

Status Released



Document Information

History

Author	Date	Version	Remarks
Christian Kaiser	2012-06-26	8.00.00	 Removed revision history entries, due to major changes in component. Removed all references to Fee30Inst2 Added Ch. 2.4.2 "Partitions", Added Ch. 4.3.2 "Fee_InitEx", updated Ch. 4.3.1 Reworked Ch. 2.3, Ch. 2.6, Ch. 2.10, Ch. 3.1.1, 4.4.1, Ch. 5 Changes throughout the document: introduction of partitions Added Ch. 6.3.4 Added Ch. 2.4.3.1
Christian Kaiser	2012-09-20	8.00.01	Minor editorial changes in Ch. 5Added Ch. 5.2.1
Christian Kaiser	2013-03-05	8.00.02	Ch. 1: AUTOSAR version(s)Ch. 6.3.1: maximum number of Partitions
Christian Kaiser	2014-03-11	8.00.03	 Editorial changes (rework of review findings) Ch. 5.1.5.5: corrected description of "Suspend Long" Ch. 3.5: Critical Section description Ch. 1.1 – updated figure, added notes.
Claudia Mausz	2015-02-13	8.01.00	- Add new chapter: 2.12 Fee_MainFunction Triggering

Reference Documents

No.	Title	Version
[1]	AUTOSAR_SWS_Flash_EEPROM_Emulation.pdf	
[2]	AUTOSAR_SWS_DET.pdf	V2.2.1
[3]	AUTOSAR_BasicSoftwareModules.pdf	V1.3.0



Please note

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Contents

1	Introd	uction			9
	1.1	Archite	cture Overvi	ew	10
2	Funct	ional Des	scription		12
	2.1	Feature	es		12
	2.2	Initializa	ation		13
	2.3	States .			13
		2.3.1	Module S	itates	13
		2.3.2	Job State	s/Results	16
	2.4	Flash o	rganization		17
		2.4.1	Block Ha	ndling	17
			2.4.1.1	Block Chunks	17
			2.4.1.2	Block Search	18
		2.4.2	Partitions		18
		2.4.3	Logical S	ectors	19
	2.5	Proces	sing		20
			2.5.1.1	Initial processing	20
			2.5.1.2	Processing of Read Job	21
			2.5.1.3	Processing of Write Job	21
			2.5.1.4	Processing of InvalidateBlock Job	21
			2.5.1.5	Processing of EraseImmediateBlock Job	22
			2.5.1.6	Processing of GetEraseCycle Job	22
			2.5.1.7	Processing of GetWriteCycle Job	22
	2.6	Error H	andling		22
		2.6.1	Developn	nent Error Reporting	23
			2.6.1.1	Parameter Checking	24
		2.6.2	Productio	n Code Error Reporting	25
		2.6.3	Error noti	fication	25
	2.7	Sector	Switch		26
		2.7.1	Backgrou	nd Sector Switch (BSS)	26
		2.7.2	Foregrou	nd Sector Switch (FSS)	26
		2.7.3	Sector O	verflow	27
		2.7.4	Sector sw	vitch reserves and thresholds	27
		2.7.5	Backgrou	nd Sector Switch Reserve/Threshold	28
		2.7.6	Foregrou	nd Sector Switch/Threshold	29
	2.8	Data C	onversion		29
	2.9	Flash F	age Size im	pacts	30
	2.10	Service	s for handlin	ng under-voltage situations	30



	2.11	Critical I	Data Blocks		32
	2.12	Fee_Ma	inFunction	Triggering	33
3	Integr	ation			34
	3.1	Scope c	of Delivery		34
		3.1.1	Static File	es	34
		3.1.2	Dynamic	Files	34
	3.2	Compile	er Abstractio	n and Memory Mapping	35
	3.3	Depend	encies on S	W Modules	36
		3.3.1	OSEK/AL	JTOSAR OS	36
		3.3.2	Module S	SchM	37
		3.3.3	Module D	9et	37
		3.3.4	Module F	ls	37
		3.3.5	Callback	Functions	38
			3.3.5.1	Lower layer interaction	38
			3.3.5.2	Upper layer interaction	38
			3.3.5.3	User Error Callback	39
	3.4	Depend	encies on H	IW modules	40
	3.5	Critical S	Sections		40
4	API D	escription	1		41
	4.1	-		<i>I</i>	
	4.2	Type De	efinitions		41
		4.2.1	Fee_Sec	torSwitchStatusType	41
		4.2.2		torErrorType	
	4.3	Services	s provided b	oy FEE	42
		4.3.1	Fee_Init		42
		4.3.2	Fee_InitE	x	43
		4.3.3	Fee_SetN	Mode	44
		4.3.4	Fee_Rea	d	45
		4.3.5	Fee_Writ	e	46
		4.3.6	Fee Can	cel	47
		4.3.7	Fee_Get	Status	48
		4.3.8	Fee Get	JobResult	49
		4.3.9	Fee_Inva	lidateBlock	50
		4.3.10	Fee_Get\	VersionInfo	51
		4.3.11	_	selmmediateBlock	
		4.3.12	_	nFunction	
		4.3.13	_	EraseCycle	
		4.3.14	Fee_Get\	WriteCycle	54
		4.3.15	_	SectorSwitchStatus	



		4.3.16	Fee_Ford	ceSectorSwitch	56
		4.3.17	Fee_Con	vertBlockConfig	57
		4.3.18	Fee_Sus	pendWrites	59
		4.3.19	Fee_Res	umeWrites	59
		4.3.20	Fee_Disa	ableFss	60
		4.3.21	Fee_Ena	bleFss	61
	4.4	Services	s used by F	EE	61
		4.4.1	Data Cor	nversion Callback	62
	4.5	Callback	k Functions		63
		4.5.1	Fee_Job	EndNotification	63
		4.5.2	Fee_Job	ErrorNotification	63
	4.6	Configu	rable Interfa	aces	64
5	Confi	guration			65
	5.1	Configu	ration with I	DaVinci Configurator	65
		5.1.1	Start con	figuration of the FEE	65
		5.1.2	Useful Cl	hunk-Sizes (instance counts)	65
		5.1.3	Update o	f block configuration	67
		5.1.4	FEE Con	figuration tab	67
		5.1.5	General	Settings tab	71
			5.1.5.1	Error Detection – Development Mode	71
			5.1.5.2	Area "Error Callback"	72
			5.1.5.3	Area Buffer	73
			5.1.5.4	Area "Upper Layer"	73
			5.1.5.5	Area "Critical Section Handling"	74
		5.1.6	Partitions	3	74
			5.1.6.1	Area "Management"	76
			5.1.6.2	Area "Lower Layer"	76
		5.1.7	Module A	PI tab	77
			5.1.7.1	API Configuration	77
			5.1.7.2	Provided API	78
	5.2	Configu	ration Para	meters only visible in GCE	78
		5.2.1	FIs API d	eviating from AUTOSAR naming convention	78
6	AUTO	SAR Star	ndard Com	pliance	80
	6.1	Deviatio	ns		80
		6.1.1	Maximun	n Blocking Time	80
	6.2	Addition	s/ Extensio	ns	80
		6.2.1	Paramete	er Checking	80
		6.2.2	Fee_InitE	Ex	80
		6.2.3	GetErase	eCvcle	80



		6.2.4	GetWriteCycle	80
		6.2.5	GetSectorSwitchStatus	80
		6.2.6	ForceSectorSwitch	80
		6.2.7	Fee_ConvertBlockConfig	80
		6.2.8	Fee_SuspendWrites / Fee_ResumeWrites	80
		6.2.9	Fee_EnableFss / Fee_DisableFss	80
	6.3	Limitati	ions	80
		6.3.1	Partitions	80
		6.3.2	Flash Usage	81
		6.3.3	Performance	81
		6.3.4	Aborts/Resets	81
		6.3.5	Write Cycle and Erase Cycle Counters	82
7	Gloss	sary and A	Abbreviations	83
	7.1	Glossa	ry	83
	7.2	Abbrev	riations	83
^	0 1	4		0.5

Version: 8.01.00



Illustrations

Figure 1-1	AUTOSAR architecture	10
Figure 1-2	FEE in a typical (AUTOSAR) SW architecture	11
Figure 2-1 FEE	Module States	
	n User Blocks to Flash Sectors	
J		
Tables		
Table 2-1	Supported SWS features	12
Table 2-2	Not supported SWS features	
Table 2-3	Module states	
Table 2-4	Job states	
Table 2-5	Mapping of service IDs to services	
Table 2-6	Errors reported to DET	
Table 2-7	Development Error detection: Assignment of checks to services	
Table 2-8	Det_ReportError	
Table 3-1	Static files	
Table 3-2	Generated files	
Table 3-3	Compiler abstraction and memory mapping	
Table 3-4	Error Codes and FEE's default behavior	
Table 4-1	Fee_SectorSwitchStatusType	
Table 4-2	Fee SectorError Type	
Table 4-3	Fee Init	
Table 4-4	Fee InitEx	
Table 4-5	Fee SetMode	
Table 4-6	Fee_Read	
Table 4-7	Fee_Write	
Table 4-8	Fee_Cancel	
Table 4-9	Fee_GetStatus	49
Table 4-10	Fee_GetJobResult	
Table 4-11	Fee_InvalidateBlock	
Table 4-12	Fee_GetVersionInfo	
Table 4-13	Fee_EraseImmediateBlock	
Table 4-14	Fee_MainFunction	53
Table 4-15	Fee_GetEraseCycle	
Table 4-16	Fee_GetWriteCycle	
Table 4-17	Fee_GetSectorSwitchStatus	
Table 4-18	Fee_ForceSectorSwitch	
Table 4-19	Fee_ConvertBlockConfig	
Table 4-20	Fee_SuspendWrites	
Table 4-21	Fee_ResumeWrites	
Table 4-22	Fee_DisableFss	
Table 4-23	Fee_EnableFss	
Table 4-24	Services used by the FEE	62
Table 4-25	User defined conversion callback	
Table 4-26	Fee_JobEndNotification	
Table 4-27	Fee_JobErrorNotification	
Table 4-28	Configurable interfaces	
Table 5-1	Fee configuration	
Table 5-2	Error Detection – Development Mode	
Table 5-3	Error Callback	
Table 5-4	Upper Layer	74

Version: 8.01.00



Table 5-5	Critical Section Services	74
Table 5-6	Lower Layer	75
Table 5-7	sector switch reserve	76
Table 5-8	Lower Layer	76
Table 5-9	API Configuration	77
Table 5-10	Provided API	78
Table 5-11	Parameters only visible in GCE view	78
Table 7-1	Glossary	83
	Abbreviations	



1 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module FEE as specified in [1].

Supported AUTOSAR Release*:	*: 3 and 4		
Supported Configuration Variants:	link-time with AUTOSAR 3 pre-compile with AUTOSAR 4		
Vendor ID:	FEE_VENDOR_ID	30 decimal	
		(= Vector-Informatik, according to HIS)	
Module ID:	FEE_MODULE_ID	21 decimal	
		(according to ref. [3])	

^{*} For the precise AUTOSAR Release please see the release specific documentation.

The FEE enables you to access a dedicated flash area for storing data persistently. It is intended to be used exclusively either by the NVRAM Manager or on SW instance within a Flash-Boot-Loader in the Boot-Loader mode.

Further on, the module depends on some other modules, like DET for error handling, the underlying Flash driver for hardware access and the MEMIF for consistent types.



1.1 Architecture Overview

The following figure shows where the FEE is located in the AUTOSAR architecture.

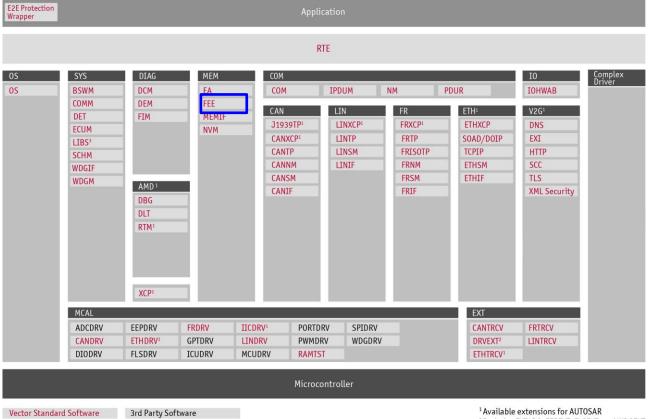


Figure 1-1 AUTOSAR architecture

² Includes EXTADC, EEPEXT, FLSEXT, and WDGEXT



The following figure shows the FEE and its relationship to other modules.

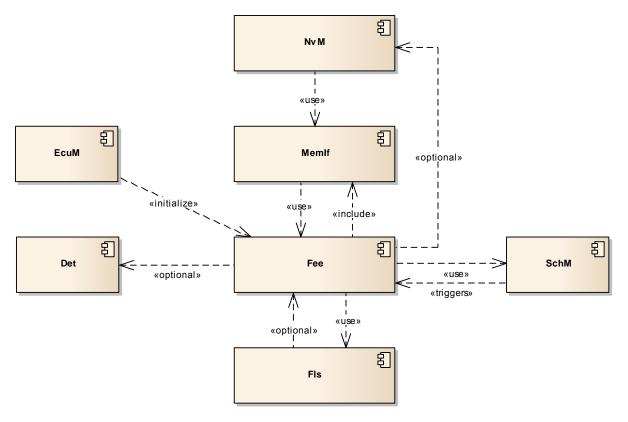


Figure 1-2 FEE in a typical (AUTOSAR) SW architecture



Note

Figure 1-2 shows the normal case. In general FEE does not depend on who actually uses it, and who provides required services. E.g. it does not matter who provides mechanisms to synchronize access to critical sections (chapter 3.5), or who actually calls Fee_MainFunction. It also doesn't matter whether callbacks (FIs to FEE, FEE to NvM) are directly called as depicted in the figure, or whether they are "intercepted" by someone.



Caution

FEE assumes exclusive usage of Fls. Allowing other components to use Fls's services results in synchronization issues, which are hard to solve. Hence this shall be avoided.



2 Functional Description

2.1 Features

The features listed in this chapter cover the complete functionality specified in [1].

The "supported" and "not supported" features are presented in the following two tables. For further information of not supported features also see chapter 6.

The following features described in [1] are supported:

Feature

The module operates on blocks provided by the NVRAM Manager. Read accesses to blocks are handled byte-wise.

Hardware restrictions like erase cycles or sector sizes are abstracted and not visible for the upper layer.

Incomplete writes (e.g. due to reset) are detected.

The virtual sectors use a wrap-around concept with backup of the most recent data blocks.

Possibility to retrieve the number of erase cycles of a logical sector (done via the API service $Fee_GetEraseCycle()$). This feature is an add-on to the AUTOSAR standard.

Possibility to retrieve the number of write cycles of a block (done via the API service Fee_GetWriteCycle()). This feature is an add-on to the AUTOSAR standard.

Possibility to force sector switches (done via the API service

Fee ForceSectorSwitch()). This feature is an add-on to the AUTOSAR standard.

API to perform data conversion after configuration update i.e. blocks whose payload has changed may be converted according to new configuration without data-loss. This feature is an add-on to the AUTOSAR standard.



Info

This feature is optional, i.e. it has to be ordered explicitly.

Fee supports Flash Address Spaces (provided by Fls) of up to 2GBytes, i.e. Sectors to be used by FEE may resist in range 0×00000000 to 0×7 FFFFFFF

Fee_MainFunction Triggering: Possibility to call the Fee_MainFunction in a cyclic task or in a background task.

Table 2-1 Supported SWS features

The following features described in [1] are not supported:

Feature

The MAXIMUM_BLOCK_TIME is not supported by the FEE, because no time reference is provided to the FEE.

Table 2-2 Not supported SWS features



2.2 Initialization

The FEE is initialized and operational after Fee Init() has been called.



Caution

The FEE is driven asynchronously, i.e. jobs are requested via dedicated API, and they are processed by calling Fee_MainFunction().

Initialization just prepares FEE to accept and process requests. Initialization of sectors (checking their headers and determining new/old one) is deferred until first request is being started on a partition.

Additionally after initialization, any sector switch processing is disabled:

- > Sector Switch Processing in Background (see 2.7.1) can be enabled by Fee SetMode (MEMIF MODE SLOW).
- Depending on "FSS Control API" (see Ch. 5.1.7.1) they can only be enabled by:
- > Fee_EnableFss(), if "FSS Control API" was enabled. In that case write requests beyond Foreground Sector Switch Threshold are disabled; refer to chapter 2.10.
- > Fee_Write() / Fee_InvalidateBlock() / Fee_EraseImmediateBlock(),
 otherwise.

These implicit defaults help to ensure that FEE does not perform any write, or even erase operations during ECU start-up, unless explicitly requested by user.



Caution

It is not recommended to use any of the mentioned services during ECU's start-up phase. Special care needs to be taken about write requests: Proper initialization (order) of application software is important to prevent from too early write accesses to NV memory.

2.3 States

2.3.1 Module States

Point in Time	Module State
After Reset, before Fee_Init was called	MEMIF_UNINIT
When Fee_Init() returns	MEMIF_ BUSY_INTERNAL
When accepting a job request.	MEMIF_BUSY
If rejecting a job request.	No change.
Upon completing a job (including returning from Fee_SetMode())	MEMIF_BUSY_INTERNAL
Pending internal operations (while no user job is pending)	MEMIF_BUSY_INTERNAL
Not even an internal job is pending	MEMIF_IDLE



Table 2-3 Module states



Note

State MEMIF_UNINIT can only be delivered after reset, if start-up code was executed, and section <code>FEE_START_SEC_VAR_INIT_UNSPECIFIED</code> was mapped to an appropriate section, being initialized by startup code. See also: chapter 3.2





Note

Normally (unless Fee_Cancel was called) FEE_IDLE state can only be entered via FEE_BUSY_INTERNAL.

Whenever FEE leaves MEMIF_BUSY_STATE due to job completion it asynchronously checks all partitions for their fill levels, and the necessity of sector switch. Therefore, even if no sector switch is necessary or allowed, it takes few Fee_MainFunction cycles to finally become (and report) IDLE

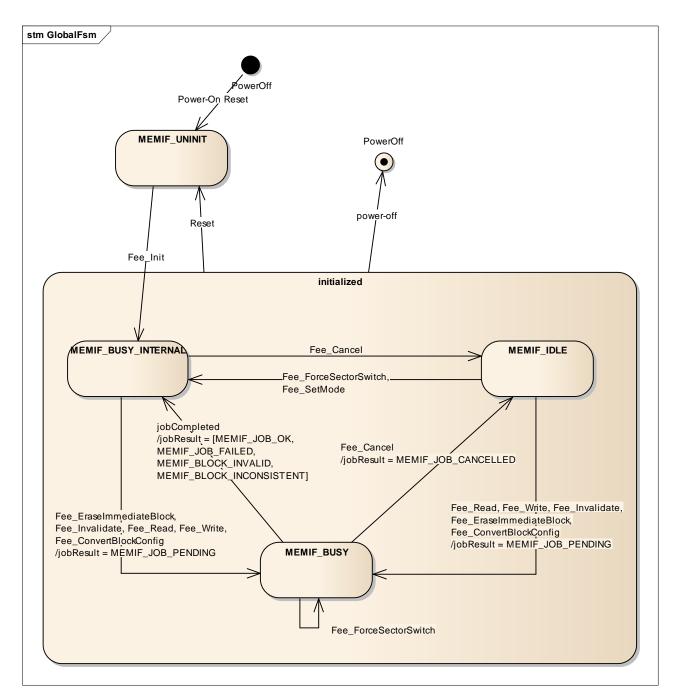


Figure 2-1 FEE Module States



2.3.2 Job States/Results

Point in Time	Job State
After successfully finished job	MEMIF_JOB_OK
After a job has been accepted	MEMIF_JOB_PENDING
After Fee_Cancel()	MEMIF_JOB_CANCELLED
After a read job has been finished and an invalidated block was found	MEMIF_BLOCK_INVALID
After a block is read which has not been written successfully before.	MEMIF_BLOCK_INCONSISTENT
After a job has been finished and retrieving data (independent from management information of payload data) from the Flash failed	MEMIF_JOB_FAILED

Table 2-4 Job states



2.4 Flash organization

Figure 2-2 gives an overview of how FEE organizes flash memory, and how FEE's three main concepts – (User) Blocks, Partitions and Logical Sectors – are related.

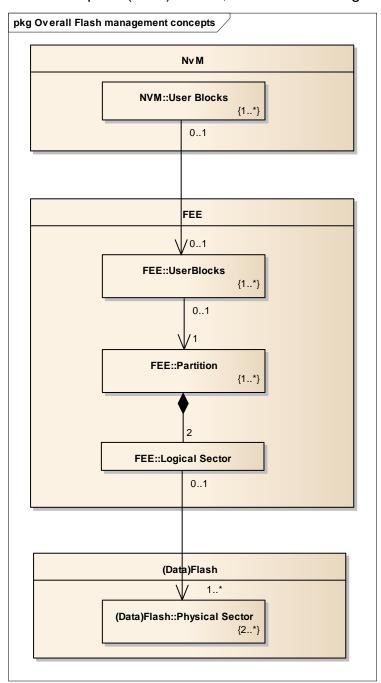


Figure 2-2 From User Blocks to Flash Sectors

2.4.1 Block Handling

2.4.1.1 Block Chunks

Block chunks are the smallest entities the FEE can allocate dynamically in Flash. A chunk allocation reserves space for a configurable number (refer to chapter 5.1.4) of versions of the associated block. FEE continues writing new versions (aka instances) of this block into its most recent chunk, until it's full. Writing the next instance requires allocation of a new



chunk. Each block's chunks build up a linked list in flash: each chunk points to its successor.

2.4.1.2 Block Search

A requested block is searched by following the links provided by the block chunks. The start point is the default area of the block. If the chunk link is not valid the search is continued within the current chunk using a binary search algorithm.

The search concept provides fast access to every block as only the needed block chunks are accessed.

2.4.2 Partitions

FEE employs a concept of partitions. A partition can be thought of an emulation space that is managed separately from other ones:

- > Errors in one partition do not affect data in other ones
- > Error states (e.g. Read-Only Mode) are local to a single partition.
- > Job processing in one partition does (almost) not depend on sector switch processing (chapter 2.7) in other partitions.

However, compared to two FEEs operating on two different flash devices, partitions still require synchronization:

- > FEE is still restricted to use one single flash driver.
- > According to AUTOSAR, FEE is still limited to one pending user request.
- > Only one partition can perform a sector switch at a time
- > Sector switch processing can only be interrupted when processing a block completed.

Each partition consists of two logical sectors, which in turn are mapped to physical flash sectors.

During configuration, each logical block must be assigned to a partition.



Note

FEE configurations for FBL and Application do not need to share all partitions. E.g. a partition containing only application data may remain unknown to the FBL. However, shared partitions must refer to identical Fls configurations (FlsConfigSet container), and they must match in address and size, as well as in alignment settings.





Example

Most typical as well as most recommended use case for partitions is the physical separation of frequently and infrequently written data. Such a separation reduces sector switch efforts, because a whole partition would be infrequently updated. Therefore, separation also increases availability data. However, it may increase number of flash's erase cycles over life-time, because frequently written data will usually (it depends on actual amounts) be spread over less flash memory.

2.4.3 Logical Sectors

The FEE divides the physical flash assigned to a partition in two parts, called logical sectors. Each logical sector must be mapped to one or more continuous physical Flash sectors. Logical sectors do not need to be aligned on physical sector boundaries, i.e. they may start and/or end within physical sectors. However, start and end addresses must adhere to the configured address alignment.



Note

The mapping of logical to physical sectors is mutual exclusive, i.e. physical sectors may not be shared between logical sectors.

It results in a minimum number of physical sectors that must be available to define (additional) partitions: Per partition, two physical sectors must be provided by HW (and Fls).



Caution

Unused flash space within a physical sector must not be used (neither read nor write) by other software. It should be assumed to be erased, because FEE does never write it, but it will be erased, too, with each sector erase triggered by FEE.

Besides the lower logical sector must be located at a smaller address than the upper one, both sectors may be located anywhere within the flash space provided by the underlying driver (considering restrictions imposed by hardware or the driver, of course), i.e. there may be a gap between them.

Furthermore, the two logical sectors must be erasable independently from each other, i.e. they must be mapped to distinctive physical sectors.

The size of the smaller logical sector defines the maximal number of blocks that can be handled by the FEE.



Info

Within AUTOSAR specification logical sectors are called virtual sectors.



2.5 Processing

All jobs (Read, Write, InvalidateBlock, EraseImmediateBlock, GetWriteCycle, GetEraseCycle, ForceSectorSwitch) will be executed asynchronously with the help of a job state machine.



Caution

The FEE must be initialized before the services are called.



Caution

Only one job can be accepted at a time. Hence, it is not allowed to request an asynchronous job to the FEE as long as the currently pending job has not been completed.

While internal operations are performed (current status is equal to MEMIF_BUSY_INTERNAL) a job can be accepted, but actual processing may be deferred due to sector switch handling (see chapter 2.7 for more details).

2.5.1.1 Initial processing

In order to become able to process a request, FEE has to determine both logical sectors' states, i.e. whether they are usable at all, and which one contains most recent data. Once FEE determined these states, it maintains them in RAM.

Since a request is always associated with a partition, FEE performs this initialization step at beginning of normal job processing.





Expert Knowledge

FEE attempts to read both sector headers, i.e. the first 8 bytes in each logical sector. This processing takes at least 3 cycles (from initial job request to start of actual job processing), assuming FEE does not have to wait for FIs, i.e. FIs_Read processing completes between two Fee MainFunction calls.



Info

If one of both Fee sector headers is erased or corrupted, and the other one is ok, FEE tries to use the valid sector; erasing the other one will be done either when necessary, or when no user jobs are pending (see also chapter 2.7)

If both sector headers are erased, FEE behaves as if flash is nearly full (see also 2.7.2): It will erase one logical sector and write its header, as part of first write class job's processing.

If both sector headers are corrupted or one header is corrupted and the other is erased, FEE calls the user error callback function, if configured. Refer to chapter 3.3.5.3

2.5.1.2 Processing of Read Job

The FEE provides the service Fee_Read() for reading a block. This service reads the data of the block which has been most recently written.

This asynchronous job is initiated with the API function Fee_Read() and is processed by subsequent calls of Fee MainFunction() (see also chapter 2.3).

2.5.1.3 Processing of Write Job

To write the current block content to flash memory the API function Fee_Write() is used. FEE searches the next free position in the most recent block chunk to write block's new instance to.

This asynchronous job is initiated with the API function Fee_Write() and is processed by subsequent calls of Fee MainFunction() (see also chapter 2.3).

2.5.1.4 Processing of InvalidateBlock Job

To invalidate the block content in flash memory the API function Fee_InvalidateBlock() is used. The FEE component marks the block as invalid; upon success, subsequent read attempts report MEMIF BLOCK INVALID.



Expert Knowledge

Block Invalidation is very similar to Block Write, as it also creates a new instance, i.e. it consumes flash memory.

This asynchronous job is initiated with the API function Fee_InvalidateBlock() and is processed by subsequent calls of Fee_MainFunction() (see also chapter 2.3).



2.5.1.5 Processing of EraselmmediateBlock Job

Immediate data is data of a block which should be written with a higher priority than the other blocks.

To mark an immediate block as erased the API function <code>Fee_EraseImmediateBlock()</code> is used. As the FEE component can't erase the corresponding block it writes invalid information for the block to the flash memory.



Expert Knowledge

FEE processes EraseImmediateBlock jobs identically to InvalidateBlock jobs.

This asynchronous job is initiated with the API function Fee_EraseImmediateBlock() and is processed by subsequent calls of Fee MainFunction() (see also chapter 2.3).

2.5.1.6 Processing of GetEraseCycle Job

The erase cycle counter is increased during every erase of a certain logical sector and consequently counts the erase cycles of the flash.

To get the erase cycle counter of a specified logical sector, the API function $Fee_GetEraseCycle()$ is used. The availability of this service is configurable at precompile time which can be done via the configuration tool.

This asynchronous job is initiated with the API function Fee_GetEraseCycle() and is processed by subsequent calls of Fee MainFunction() (see also chapter 2.3).

2.5.1.7 Processing of GetWriteCycle Job

The write cycle counter counts the write cycles of each block.

To get the write cycle counter of a specified block, the API function Fee_GetWriteCycle() is used. The availability of this service is configurable at precompile time which can be done via the configuration tool.

This asynchronous job is initiated with the API function Fee_GetWriteCycle() and is processed by subsequent calls of Fee MainFunction() (see also chapter 2.3).

2.6 Error Handling

The module offers detection of errors.

Errors are classified in development and production errors.

Development errors should be detected and fixed during development/integration phase. Those errors are caused by faulty configuration or incorrect usage of the module's API.

Production errors are hardware errors and software exceptions that cannot be avoided and are also expected to occur in production code. FEE has no case to report a production error.



2.6.1 Development Error Reporting

Development errors are reported to DET using the service $Det_ReportError()$ as specified in [2], if development error detection and reporting, are enabled (see chapter 5.1.5.1).

If another module than DET is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service <code>Det ReportError()</code> (see chapter 2.6.3).

The reported FEE ID can be found in chapter 1.

The reported service IDs identify the services which are described in 4.3. The following table presents the service IDs and the related services:

Service ID	Service
0x00u	Fee_Init() / Fee_InitEx()
0x01u	Fee_SetMode()
0x02u	Fee_Read()
0x03u	Fee_Write()
0x04u	Fee_Cancel()
0x05u	Fee_GetStatus()
0x06u	Fee_GetJobResult()
0x07u	Fee_InvalidateBlock()
0x08u	Fee_GetVersionInfo()
0x09u	Fee_EraseImmediateBlock()
0x10u	Fee_JobEndNotification()
0x11u	Fee_JobErrorNotification()
0x12u	Fee_MainFunction()
0x20u	Fee_GetEraseCycle()
0x21u	Fee_GetWriteCycle()
0x22u	Fee_GetSectorSwitchStatus()
0x23u	Fee_ForceSectorSwitch()
0x24u	Fee_ConvertBlockConfig()

Table 2-5 Mapping of service IDs to services

The errors reported to DET are described in the following table:

Error Code		Description
0x02	FEE_E_INVALID_BLOCK_NO	This error code is reported if an API service is called with invalid block number.
0x10	FEE_E_PARAM_DATABUFFERPTR	It is reported if a pointer parameter of an API service is called with the <code>NULL_PTR</code> value.
0x11	FEE_E_PARAM_SECTOR_NUMBER	It is reported if the Fee_GetEraseCycle() API service is called with an invalid logical sector number.
0x12	FEE_E_PARAM_LENGTH_OFFSET	It is reported if the Fee_Read() API service is called with



Error Code		Description							
		invalid BlockOffset and Length values.							
0x13	FEE_E_BUSY	It is reported if one of the asynchronous API services has been called in parallel.							
0x14	FEE_E_NO_INIT	It is reported if one of the API services has been called without an initialized FEE.							
0x15	FEE_E_PARAM_MODE	Neither MEMIF_MODE_SLOW nor MEMIF_MODE_FAST has been passed to Fee_SetMode()							

Table 2-6 Errors reported to DET



Expert Knowledge

All error codes starting from 0x10 are defined in addition to [1].

2.6.1.1 Parameter Checking

AUTOSAR requires that API functions check the validity of their parameters. The checks listed in Table 2-7 are internal parameter checks of the API functions. These checks are intended for development error detection and can be en-/disabled separately; it is described in chapter 5.1.5.

Capability of controlling execution of single checks is an addition to AUTOSAR which just requires to en-/disable the complete parameter checking via the parameter FEE_DEV_ERROR_DETECT.

The following table shows which parameter checks are performed on which services:

Service	FEE_E_INVALID_BLOCK_NO	FEE_E_PARAM_DATABUFFERPTR	FEE_ E_PARAM_SECTOR_NUMBER	FEE_ E_PARAM_LENGTH_OFFSET	FEE_ E_PARAM_MODE	FEE_ E_BUSY	FEE_E_NO_INIT
Fee_Init()							
Fee_SetMode()					=	=	=
Fee_Read()		=		=		=	=
Fee_Write()						-	-
Fee_Cancel()							-
Fee_GetStatus()							
Fee_GetJobResult()							

©2015, Vector Informatik GmbH Version: 8.01.00 24 / 85



Check	FEE_E_INVALID_BLOCK_NO	FEE_E_PARAM_DATABUFFERPTR	FEE_ PARAM_SECTOR_NUMBER	FEE_ E_PARAM_LENGTH_OFFSET	FEE_E_PARAM_MODE	FEE_E_BUSY	FEE_E_NO_INIT
Fee_InvalidateBlock()	-					-	-
Fee_GetVersionInfo()		-					
Fee_EraseImmediateBlock()							=
<pre>Fee_JobEndNotification()</pre>							=
<pre>Fee_JobErrorNotification()</pre>							=
Fee_MainFunction()							=
<pre>Fee_GetEraseCycle()</pre>							=
<pre>Fee_GetWriteCycle()</pre>							=
<pre>Fee_GetSectorSwitchStatus()</pre>							
<pre>Fee_ForceSectorSwitch()</pre>							=
<pre>Fee_ConvertBlockConfig()</pre>		-					=

Table 2-7 Development Error detection: Assignment of checks to services

2.6.2 Production Code Error Reporting

FEE does not report any production related error to an error/event manager like DEM.

2.6.3 Error notification

All detected errors in development mode are by default reported to the Development Error Tracer (DET), but can be configured regarding called function and include file.

The error declaration must have following syntax:

Prototype						
Prototype syntax described in chapter 8.2.2 Det_ReportError of [2].						
Parameter						
Moduleld	Specifies the identifier of the module causing the error. The module Id of FEE can be found in chapter 1.					
InstanceId	The identifier of the index based instance of a module, starting from 0. Thus the FEE is a single instance module it will pass 0 as InstanceId.					
Apild	The identifier of the API function, which caused the error.					
ErrorCode The number of the specific error.						



Return code						
void						
Functional Description						
User function for the Fee_E	rrorhook, which specifies development errors.					
Particularities and Limitations						
This service is synchronous.This service is non re-entrant.						
> This service is always available.						
Expected Caller Context						
> called in application context						

Table 2-8 Det_ReportError

2.7 Sector Switch

The sector switch is responsible to gather most recent instances data of all blocks/datasets from one logical sector (= source sector) and write them to the other one (= target sector). After this procedure has been finished, the source sector can be erased to prepare it for storing data again.



Expert Knowledge

Under certain conditions, no copy is necessary at all. However, finally FEE has to erase a sector to reclaim free flash space.

There are different reasons to perform a sector switch

- Threshold exceeded (see below)
- User Request (Fee ForceSectorSwitch)
- Critical Block Handling (refer to ch. 2.11)

2.7.1 Background Sector Switch (BSS)

Sector Switches will be processed in background, unless FEE was set to "Fast Mode" (refer to ch. 4.3.3). This means that processing occurs only if no user job is pending.

Sector Switch processing is interruptible by user jobs after a block has been processed (copied, or decision to skip copying was taken).

2.7.2 Foreground Sector Switch (FSS)

A Sector Switch being processed in Foreground defers a write job. That means a job cannot be processed before a sector switch has been completed.

Such a sector switch is not interruptible by any other job.





Expert Knowledge

The actual reason is the pending job that was deferred. At most one job may be pending at any time.

FSS processing is always initiated to a pending write job for a particular block. This block is associated with a specific partition; thus a FSS will be performed on that partition only.

2.7.3 Sector Overflow

A sector overflow occurs, if FEE failed to complete data copy, because both logical sectors ran out of space. Since in that case both sectors contain most recent data instances (of different blocks), FEE is unable to continue with erase operation without losing most recent data.

Such an event is caused by several consecutive aborted write attempts.



Caution

Such aborts should be avoided wherever possible, i.e. they shall be considerable being exceptional (thus rare) events. Especially a SW reset shall be performed only if FEE is IDLE.

A sector overflow is local to one particular partition, i.e. other partitions are not affected. Probability of an overflow depends on different parameters:

- > Probability of resets, of course
- > Partition's write load, which can be defined as number of bytes over time.
- > (Foreground) Sector Switch in relation to blocks' sizes.

To minimize effects caused by under-voltage situations FEE provides additional services; see chapter 2.10.

Accepting loss of most recent data instances, FEE may be instructed to perform a sector erase in order to restore write ability; see chapter 3.3.5.3. Additionally the risk of losing data can be restricted to certain "uncritical" blocks at configuration time. For details refer to chapter 2.11.

2.7.4 Sector switch reserves and thresholds

The FEE determines the necessity of a sector switch based upon exceeding a related threshold value. This value is always an offset relative to the start address of the currently "newer" sector.





Basic Knowledge

A threshold is considered to have been exceeded, if one sector (the older one) **is** full and the other one (newer sector) is filled up to (or exceeding) this certain level.



Note

To assure that a sector switch in FBL mode can copy FBL's data and an unknown amount of application data, sector switch has to start as early as possible. Therefore in FBL mode a sector switch starts once the newer logical sector is used. This might degrade efficiency of flash usage, but since it would happen in FBL mode only, effects are negligible.

In configuration "reserve values", rather than the thresholds, need to be specified by user. During generation the thresholds to be used by FEE are calculated based on these values and block configuration. "Reserve" is meant as follows: How much space the FEE shall reserve <u>additionally</u> to the space complete block configuration would consume in flash (that is the amount of flash space that would be consumed, when every block was written exactly once).

Thus a reserve value of 0 means: For every configured block, one chunk is reserved; FEE shall start sector switch once less than one chunk per block fits into flash.

A reserve greater than 0 adds additional space resulting in more possible aborts until the flash runs full (sector overflow).

The worst case number of additional resets the FEE can deal with is the FSS reserve divided by the size of the largest chunk.

There is no standard recommendation how to configure this threshold, because this value depends on the individual environment of the ECU and the configuration of the memory stack, like:

- total available flash memory
- number of blocks/datasets
- size of the blocks/datasets
- page size of the flash hardware
- general handling of blocks, i.e. when blocks/datasets are written down to the nonvolatile memory

2.7.5 Background Sector Switch Reserve/Threshold

A sector switch in background mode (BSS) is the type of sector switch that should normally occur. In flash, both sectors are currently in use, but there is quite much space available.

Exceeding BSS threshold causes FEE to start BSS processing, as described above.



2.7.6 Foreground Sector Switch/Threshold

If flash/partition fill level exceeds FSS threshold, it is quite full. It can be seen as "last chance processing". Therefore, a write job directed to that partition will be deferred in order to complete FSS first.

FSS threshold also indicates most critical fill-level: once it is exceeded, a call to $Fee_DisableFss()$ becomes effective, i.e. in that case FEE terminates write requests delivering error result.

Since BSS is defined to start earlier than FSS, its threshold is smaller. This also means that an FSS implies BSS, i.e. processing is done in Background, as described above.



Expert Knowledge

FEE keeps track of logical sector's state. Once copying most recent data completed, it internally marks the "older" sector as out-dated. This results in reducing criticality: Flash is still almost full, but we just need to erase a sector. An FSS becomes rather a BSS; after completing the copy process, a pending write job gets the chance to be processed before sector format is being started. If Flash is too full, the job will be deferred again; it has to wait for completion of sector format.

2.8 Data Conversion



Info

This feature is optional, i.e. it has to be ordered explicitly.

Standard FEE implementation allows to update the block configuration, and to modify block lengths with one restriction: Existing data of blocks, whose payload (length) was changed, will be lost. Trying to read such a block will lead to job result MEMIF_BLOCK_INVALID, until the block has been re-written according to new configuration.

Data Conversion provides a "framework" enabling the SW to keep even those blocks: The FEE scans Dataflash content. For each block (in detail: each block's most recent instance) it finds, a callback function will be invoked. This function gets following arguments:

- Unique block identifier (each dataset is treated separately)
- > (pointer to) most recent data
- old length (as found in flash)
- new length (according to current configuration), if block is still configured.

Within the callback the user may decide what the FEE shall do with this block:

- > skip it (it will be lost after finalization of Conversion)
- > write it according to old length
- > write it according to new length



The data passed to the callback may be modified; the FEE will write them, if desired. This is the actual conversion. Since the FEE is not able to detect internal configuration changes, the callback will also be invoked for blocks whose length did not change.



Info

The callback might need to implement some code to make correct decisions, e.g. if different blocks need to be treated differently, additionally depending on old configuration (from which version the update to current version has been performed)

If a block does not contain any data, i.e. it was never (successfully) written, it had been invalidated, or it became corrupted by other means, the callback will not be invoked; there is no data to be converted.



Caution

Conversion must be triggered immediately after start-up, using Fee_ConvertBlockConfig (refer to 4.3.17), before upper layers get running, and before a sector switch (with complete configuration) has been performed. Therefore it must happen before the first write request (including invalidate and erase) was issued to the FEE, and before an explicit Fee_ForceSectorSwitch has been requested. Otherwise the sector switch would remove all out-dated (removed or payload changed)

2.9 Flash Page Size impacts

data blocks

The smallest writeable entity, called page size, differs for example from 2 byte on the S12XDP512 up to 128 byte on the TC1796. The size of every kind of data to be written must be rounded up to a multiple flash device's page size. Therefore padding is added, if the data doesn't fit a multiple of the page size.

For example, if you want to write 13 byte (incl. management information) into the flash of a TC1796, the padding which is needed is 115 byte to reach a multiple of the page size 128 byte. But if you want to write 13 byte (incl. management information) into the flash of a S12XDP512, the padding which is needed is only 1 byte to reach a multiple of the page size 2 byte.

This example shows, that the flash could be used much more efficient, if data which should be written matches the page size or is only a little smaller. That is to say, that it is possible to write more instances of a block/dataset of the same type into a smaller flash with small page size than into a larger flash where plenty of padding has to be added.

2.10 Services for handling under-voltage situations

The FEE provides two sets of functions enabling you to handle under-voltage situations properly.

Both sets focus on different use cases:

Fee_SuspendWrites() is intended to react on actual under-voltage situation detected via dedicated monitoring circuitry. Usually there is some amount of time (few milliseconds)



to react on such conditions until a low voltage reset occurs. Its counterpart, Fee_ResumeWrites(), was introduced in order to prevent from stalling, if voltage reaches normal range, without any reset.

The other set, namely <code>Fee_EnableFss()</code> and <code>Fee_DisableFss()</code>, respectively, is intended to signal the increased or decreased risk of resets to the FEE. For instance, usually engine start (cranking) might be a situation of higher risk, while a running engine might be a much safer situation. Since this function set deals with risks, they will only have a noticeable effect if the flash becomes too full, i.e. if Foreground Sector Switch Threshold exceeded. As long as flash is not at a critical fill level (denoted by Foreground Sector Switch Threshold), the write operations and (background) sector switch are permitted. On the other hand, execution of FSS may be disabled. In this case, write requests are forbidden, once FSS became necessary; they will fail with error result.



Caution

If this set of functions is enabled in configuration, FEE does not automatically enable FSS, i.e. execution of Foreground Sector Switches is disabled per default (after Fee_Init()). In order to enable execution of FSS, you will have to call Fee_EnableFss() once ECU start-up completed, and operating conditions are stable (esp. normal voltage).



Basic Knowledge

Execution of Sector switch ("garbage collection") is essential to keep FEE writable. In case of exceeded Foreground Sector Switch Thresholds the flash is at a critical fill level, i.e. cleaning up has become urgently necessary. Writing new data in this situation might consume additional flash space; it would become insufficient to complete the sector switch afterwards.



Caution

It should be ensured Fee_EnableFss() will be called after start-up, at least under normal conditions. Otherwise FSS's intention of "last-chance processing" would be foiled; exceeding FSS threshold would cause entering read only mode. This in turn should be exceptional behaviour.



Expert Knowledge

As stated in chapter 2.7.6, criticality reduces once block copy has been completed. Thus, if $Fee_DisableFss$ () was recently called, FEE remains writable, once block copy completed, and only sector erase is outstanding.



2.11 Critical Data Blocks

In order to keep FEE writable in case of sector overflows (chapter 2.7.3), it has to erase one logical sector. Though this event is an exception, occurring really rarely, the erase causes loss of recent data instances.

While such a loss would be uncritical to some data blocks, losing some other blocks' recent instances might cause the whole ECU to cease working. Such data blocks are essential to ECUs operability; losing them is critical (as would result in "defective ECU" requiring service). FEE configuration provides the possibility to mark these blocks.



Basic Knowledge

Typically data block's "criticality" rises with decreasing write frequency. The more infrequently a block will be written the less number of older instances exist, and the larger their semantic difference would be, disqualifying them for usage as fall-back data.

As a result FEE ensures that any write access keeps all "critical" Data Blocks' most recent instances within one logical sector. Thus there is always one logical sector that might be erased (in case of error) without losing such "critical" data.

Keeping critical data together requires conditional execution of sector switch. If necessary, i.e. if a critical block cannot be written into the same logical sector containing all other critical blocks, FEE performs a Foreground Sector Switch.

Since each block configured to be critical may cause an additional sector switch before writing a new instance, flash usage over life-time increases due to additional block copies.



Note

Due to independency of partitions, the differentiation between critical and "not as critical" data blocks is also local to a partition. On one hand FEE only has to care about all critical blocks in a particular partition. On the other hand, resolving a sector overflow (by formatting a sector) may cause loss of recent uncritical data in only that partition.



Basic Knowledge

By marking all Blocks assigned to one partition as "critical", that partition can be configured to operate with so called "single sector usage", that is, FEE ensures that <u>all</u> data blocks' recent instances are located within a single logical sector. Before switching to the other one, <u>all</u> recent instances will be copied. This results in most robust operations (concerning aborts). However, there are penalties in performance, especially because no BSS can actually be performed, as well as in flash usage, because always <u>all</u> recent data instances will be copied.





Expert Knowledge

Even though the FEE in FBL does not know anything about Application's, critical blocks can be handled safely, unless added to FBL configuration and set to "uncritical" (thus configured inconsistently).



Caution

If Data Flash is being shared between Application and FBL, it is highly recommended to configure all FBL blocks being "critical". Typically there are some blocks, containing information about Application's validity and information whether to start Application or FBL. These blocks are critical to an ECU!



Note

It is not recommended to mark blocks as "critical" and "immediate". Requirements on both types contradict: while "immediate" data are required to be written fast, "critical" data are required to be written very safely, implying additional operations, which slow down write performance.

2.12 Fee_MainFunction Triggering

In AUTOSAR release 4.x an additional option is introduced, to be able to call the Fee MainFunction in a cyclic task or in a background task.

The cyclic task (default configuration) is used when the main function shall be triggered periodically. Typically the cycle time needs to be defined, for example 10ms.

If the Fee_MainFunction shall be accessed quicker, the function shall be called in a background task. The background task runs when the system has nothing to do further. The Fee MainFunction is called as often as the available CPU load allow.



Caution

If the system is overloaded, it may happen that the background task is no longer called.



Note

The Fee_MainFunction should not be triggered faster than Fls_MainFunction, because the FEE must wait for the FLS.



3 Integration

This chapter gives necessary information for the integration of the MICROSAR FEE into an application environment of an ECU.

3.1 Scope of Delivery

The delivery of the FEE contains the files which are described in the chapters 3.1.1 and 3.1.2.

3.1.1 Static Files

File Name	Description						
Fee.h	Defines the public interface of MICROSAR FEE module.						
Fee_Types.h	Defines public types of FEE.						
Fee.c	Implements the MICROSAR FEE module. Contains the API part of the implementation, as well as the state machine.						
Fee_IntBase.h	Defines basic internal type definitions						
Fee_Int.h	Defines the internal interface for all module internal source files, as well as the container for all RAM variables which are used by the FEE.						
Fee_Partition.h	Provide internal services to manage partitions						
Fee_Partition.c							
Fee_Sector.h	Internal services abstracting access to logical sectors						
Fee_Sector.c							
Fee_ChunkInfo.h	Internal services providing access to Chunks and instances contained						
Fee_ChunkInfo.c	within.						
Fee_Cbk.h	Defines the callback interface for the lower layer.						
Fee_bswmd.arxml	Contains the formal notation of all information, which belongs to the FEE.						
Identifier.xml	Defines all configuration parameters.						
Fee.xml	Defines the GUI which represents this module.						
If_AsrIfFee.jar	Generator plug-in for DaVinci Configurator 5						

Table 3-1 Static files

Only Fee.h shall be included directly by other components.

3.1.2 Dynamic Files

The dynamic files are generated by the configuration tool DaVinci Configurator.

File Name	Description
Fee_Cfg.h	Contains the static configuration part of this module.
Fee_Lcfg.c	Contains the link-time part of configuration.
Fee_PrivateCfg.h	Contains the static configuration part, which is only included of this module.

Table 3-2 Generated files



3.2 Compiler Abstraction and Memory Mapping

The objects (e.g. variables, functions, constants) are declared by compiler independent definitions – the compiler abstraction definitions. Each compiler abstraction definition is assigned to a memory section.

The following table contains the memory section names and the compiler abstraction definitions defined for the FEE and illustrate their assignment among each other.

Compiler Abstraction Definitions										
Memory Mapping Sections	FEE_API_CODE	FEE_APPL_CODE	FEE_APPL_CONFIG	FEE_APPL_DATA	FEE_CONST	FEE_PRIVATE_CODE	FEE_PRIVATE_CONST	FEE_PRIVATE_DATA	FEE_VAR	FEE_VAR_NOINIT
FEE_START_SEC_CODE										
FEE_START_SEC_CONST_UNSPECIFIED										
FEE_START_SEC_APPL_CONFIG_UNSPECIFIED			•							
FEE_START_SEC_VAR_NOINIT_UNSPECIFIED										-
FEE_START_SEC_VAR_INIT_UNSPECIFIED										

Table 3-3 Compiler abstraction and memory mapping

- FEE START SEC CODE / FEE STOP SEC CODE
 - Placement of all API functions
 - FEE_API_CODE
 Calling convention for all API functions
 Note that these functions are called from different modules, suitable convention depends on global section mapping.
 - FEE_PRIVATE_CODE
 Calling convention all internal functions
 It is recommended to locate all FEE code sections into one single output section and to make the internal function calls as "near" as possible.
- FEE_START_SEC_APPL_CONFIG_UNSPECIFIED / FEE_STOP_SEC_APPL_CONFIG_UNSPECIFIED
 - FEE_APPL_CONFIG
 Configurable constants allocated in Fee Lcfg.c
- FEE_START_SEC_CONST_UNSPECIFIED / FEE_STOP_SEC_CONST_UNSPECIFIED



- FEE_PRIVATE_CONST
 Internal constants, to be accessed only from within FEE.
- FEE_CONST
 All module constants, to be accessed from outside the FEE



Expert Knowledge

At least on 16bit platforms it is recommended to locate code and constants into same memory area, in order to get most efficient access ("near").

- FEE_START_SEC_VAR_NOINIT_UNSPECIFIED / FEE STOP SEC VAR NOINIT UNSPECIFIED
 - FEE_VAR_NOINIT
 Module variables which do not need to be initialized (not even zeroed out)
 There are not intended to be accessed outside FEE.
- FEE_START_SEC_VAR_INIT_UNSPECIFIED / FEE STOP SEC VAR INIT UNSPECIFIED
 - FEE_VAR
 Internal global variables of the module which must be initialized by start-up code and which are not fixed to one type



Note

Currently Fee_ModuleStatus_t is the only variable that needs to be initialized, in order to get the "(Un)Init Development Check" working.

If this check was disabled at pre-compile time, FEE does not have any initialized variables.

FEE APPL DATA is used to reference to buffers provided by client software.



Caution

The distance of FEE_APPL_DATA must be the same or bigger than the distance of FEE_VAR_NOINIT.

3.3 Dependencies on SW Modules

3.3.1 OSEK/AUTOSAR OS

This operating system is used for task scheduling, interrupt handling, global suspend and restore of interrupts and creating of the Interrupt Vector Table. Resources like shared variables can be protected by the usage of OS services.





Note

FEE does not directly depend on OS. Rather, dependency is actually created by integrator when configuring OS services and assigning Fee_MainFunction to an OS task

3.3.2 Module SchM

In an AUTOSAR environment, protection of "critical sections" is encapsulated by the Scheduling Manager, SchM.

Integrator has to ensure, SchM maps critical section functions to appropriate services. Therefore SchM just encapsulates dependency to OS.



Note

Dependency on SchM can be globally disabled in DaVinci Configurator. Then the (probable) more direct dependency to OS would be used.

3.3.3 Module Det

This module is the Development Error Tracer. It is optional and records all development errors for diagnostic purposes.

Its usage can be enabled and disabled by the switch <code>FEE_DEV_ERROR_DETECT</code>.

If another module is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service <code>Det ReportError()</code> (see chapter 2.6.3).

3.3.4 Module Fls

The Fls driver provides the access to the underlying hardware. The specific properties of the flash hardware influence the configuration of the FEE component.

Its services are called to request a special job to the driver.



3.3.5 Callback Functions

3.3.5.1 Lower layer interaction

The FEE offers the usage of callback notification functions for the underlying driver to inform the FEE that a job has finished successfully or not. The Fee_JobEndNotification() is called when a job is completed with a positive result and the Fee_JobErrorNotification() is called when a job is cancelled, aborted or failed.



Note

The interaction between FEE and the underlying driver does not need to be performed via a notification mechanism. Also polling mode can be chosen if desired.

3.3.5.2 Upper layer interaction

The NVM offers the usage of callback notification functions for the FEE, to get informed that a job has finished successfully or not. The <code>Nvm_JobEndNotification()</code> is called when a job is completed with a positive result and the <code>Nvm_JobErrorNotification()</code> is called when a job is cancelled, aborted or failed.



Note

The interaction between NVM and FEE does not need to be performed via a notification mechanism. Also polling mode can be chosen if desired.



User Error Callback 3.3.5.3

-1	0 0	I A Y	MAY	AYA)
ш	roi	34	-B'/I	

uint8 Appl CriticalErrorCallback (uint8 partitionId, Fee SectorError

errCode)		
Parameter		
partitionId	ID of partition the error occurred. Note that FEE publishes symbolic names (macros) as chosen in configuration.	
errCode	See chapter 4.2.2	
Return code		
FEE_ERRCBK_REJECT_WRITE	FEE's partition shall enter "read only mode" currently pending and all subsequent write requests will be completed with result MEMIF_JOB_FAILED	
FEE_ERRCBK_REJECT_ALL	FEE' partition shall enter "reject all mode" all subsequent requests, including currently pending one, will be completed with result MEMIF_JOB_FAILED	
FEE_ERRCBK_RESOLVE_AUTOMATICALLY	Try to resolve error automatically. This might result in loss of most recent data instances.	

Functional Description

This function may be implemented by environment software, if special handling for serious errors is necessary. For instance, FEE's default behavior might not be feasible, or additional handling, such as reporting an event to the DEM is required.



Info

FEE's default behavior is to keep itself running and writable. This means, per default the FEE tries to resolve the problem automatically, unless the error code is FEE SECTOR FORMAT FAILED, where it would enter read-only mode.

Additionally, if development mode is configured, checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- This service is synchronous.
- This service is non re-entrant.
- This service is always available.

Expected Caller Context

■ This routine might be called on interrupt level, depending on the calling function.

Each error results in a specific default behavior, which becomes effective if User Error Callback was disabled in configuration. This default behavior can also be requested from User Error Callback by using FEE ERRCBK RESOLVE AUTOMATICALLY.



Error Code	Default behavior
FEE_SECTORS_CORRUPTED	Try to erase/re-init logical sectors.
FEE_SECTOR_OVERFLOW	Erase the newer logical sector.
FEE_SECTOR_FORMAT_FAILED	Enter read only mode. Return value FEE_ERRCBK_RESOLVE_AUTOMATICALLY may be used by user-implemented error callback. It results in retrying logical sector format. Since it might fail with same error, retries should be limited within error callback.
FEE_SECTOR_CRITICAL_FILL_LEVEL	Just continue, i.e. perform foreground sector switch, if it is enabled.

Table 3-4 Error Codes and FEE's default behavior

3.4 Dependencies on HW modules

The FEE is principally hardware independent. Nevertheless, the FIs driver has to provide some parameters (defined in the BSWMD file) the FEE relies on, e.g. the page size or sector sizes.

3.5 Critical Sections

In general Fee_MainFunction and FEE's job API may concurrently access variables; they need to be synchronized. FEE defines one critical section, FEE_EXCLUSIVE_AREA_0. Sections of code to be synchronized are very short; they contain only few instructions, and their run times do not depend on configuration. Therefore, a simple global interrupt lock may be used, though not necessary.

If Fee_MainFunction (the OS task(s) it is running in) cannot be preempted by callers of FEE API (especially NvM_MainFunction) and vice versa, no synchronization mechanism is necessary, at all.



Changes

A second type of critical section, FEE_EXCLUSIVE_AREA_1, became obsolete. It should not be used. Rather, it should just map to "nothing". As specified by AUTOSAR MainFunctions are not re-entrant.

If Fee_MainFunction may be called from different (task) contexts, which may preempt each other, a synchronization mechanism (e.g. an OS Resource) should be locked and released outside.

Usually other Main Function calls, in particular $NvM_MainFunction$ and/or $Fls_MainFunction$ would require synchronization as well. Thus, an externally defined mechanism could be better adapted to specific needs.



4 API Description

4.1 Interfaces Overview

For an interfaces overview please see Figure 1-2.

4.2 Type Definitions

4.2.1 Fee_SectorSwitchStatusType

Description		
This type specifies the possible status values of the sector switch.		
Range		
FEE_SECTOR_SWITCH_IDLE	The sector switch is currently not running.	
FEE_SECTOR_SWITCH_BLOCK_COPY	The sector switch is currently busy with copying blocks/datasets in a partition from the logical source sector to the logical target sector.	
FEE_SECTOR_SWITCH_ERASE	The sector switch is currently busy formatting the previous source sector in a partition.	
FEE_SECTOR_SWITCH_UNINIT	The FEE is not initialized. Currently, this value is not used.	

Table 4-1 Fee_SectorSwitchStatusType



Info

This is an addition to AUTOSAR.

4.2.2 Fee_SectorErrorType

This type specifies the possible errors which shall describe erroneous situations the FEE can reach. Range FEE_SECTORS_CORRUPTED The sector headers respectively the sector ID of both logical sectors could not be read. Hence, the most recent sector could not be determined. FEE_SECTOR_OVERFLOW Both logical sectors are completely filled and it is not possible to write any data. Nevertheless, it is still possible to read data from the Flash memory. FEE_SECTOR_FORMAT_FAILED One logical sector could not be allocated correctly, e.g. sector header is not valid.

©2015, Vector Informatik GmbH Version: 8.01.00 41 / 85



FEE_SECTOR_CRITICAL_FILL_LEVEL

Foreground Sector Switch Threshold exceeded, and both logical sectors are currently in use. This means that the flash is nearly full. If FSS was disabled, this error code also denotes a temporary read only condition, since FEE won't write to flash unless Fee_EnableFss was called.



Note

This code actually does not denote an error. Rather it denotes a "risky" situation; an error (sector overflow) might follow.

Table 4-2 Fee_SectorError Type



Info

This is an addition to AUTOSAR.

4.3 Services provided by FEE

The FEE API consists of services, which are realized by function calls.



Info

Most of the following API functions report development errors as listed in chapter 2.6.1. If an error is detected the concerning API function will be left without any further actions.

4.3.1 Fee_Init

Prototype		
<pre>void Fee_Init(void)</pre>		
Parameter		
Return code		
void		

©2015, Vector Informatik GmbH Version: 8.01.00 42 / 85



This service initializes the FEE module and all needed internal variables.

The FEE module doesn't support any runtime configuration. Hence, a pointer to the configuration structure is not needed by this service.

The FEE does not initialize the underlying Flash driver, but this shall be done by the ECUM module. (This is no AUTOSAR deviation.)

This function is specified in [1], and it should be used unless, a different configuration shall be used by FEE.



Info

This service calls Fee_InitEx (see clause 4.3.2), passing pointer to generated Fee_Config structure.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.
- > This service shall not be called during a pending job.

Expected Caller Context

> Expected to be called in application context.

Table 4-3 Fee_Init

4.3.2 Fee InitEx

Prototype

void Fee InitEx(Fee ConfigType* config)

Parameter

config

Pointer to FEE's Block configuration, which is always named Fee_Config; it is defined in Fee_Lcfg.c, and its declaration is available via Fee.h.



Expert Knowledge

This parameter enables sharing FEE code between a Flash Bootloader and application, while both use different Block configurations.

Return code

void

--

Functional Description

This is an alternative/extended service to initialize the FEE module and all needed internal variables.

The FEE does not initialize the underlying Flash driver, but this shall be done by the ECUM module. (this is no AUTOSAR deviation)



Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.
- > This service shall not be called during a pending job.

Expected Caller Context

> Expected to be called in application context.

Table 4-4 Fee_InitEx

4.3.3 Fee_SetMode

Prototype		
<pre>void Fee_SetMode(MemIf_ModeType Mode)</pre>		
Parameter		
Mode	MEMIF_MODE_SLOW: Enable processing of Background Sector Switches	
	MEMIF_MODE_FAST: Disable processing of Background Sector Switches	
Return code		
void		

©2015, Vector Informatik GmbH Version: 8.01.00 44 / 85





Expert Knowledge

Deviating from [1], this function does not call underlying Flash driver's related function, $Fls\ SetMode()$.



Info

This service is a synchronous call and does not need to be processed by the Fee MainFunction().

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).



Caution

Calling Fee_SetMode() has significant impact on FEE's behavior. After startup of the ECU (ReadAll-process by the NVM has finished), the FEE is set to MEMIF_MODE_SLOW, which is initiated by the NVM, if configured accordingly. This is an indicator to the FEE, which enables processing relative time consuming sector switch in background, i.e. while no user jobs are pending. Refer to chapter 2.7 for details on sector switches.

On the other hand, during shut-down, performing sector switches in background may be inhibited by setting FEE to MEMIF MODE FAST.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-5 Fee_SetMode

4.3.4 Fee_Read

Prototype

```
Std_ReturnType Fee_Read
(
  uint16 BlockNumber,
  uint16 BlockOffset,
  uint8 *DataBufferPtr,
  uint16 Length
)
```

©2015, Vector Informatik GmbH Version: 8.01.00 45 / 85



Parameter		
BlockNumber	Handle of a block (depending on block configuration)	
BlockOffset	Read address offset inside the block	
DataBufferPtr	Number of bytes to read	
Length	Pointer to data buffer	
Return code		
E_OK	Read job has been accepted.	
E_NOT_OK	Read job has not been accepted.	

This function starts the read processing for the specified block.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling $Fee_GetJobResult()$.

When the current block is found, the parameters BlockOffset and Length are used to call the Read function of the underlying Fls driver to read out the content of the flash memory to the provided DataBufferPtr.

As the processing is asynchronous the return value of the FIs Read function can only be returned indirectly via the job result.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-6 Fee_Read

4.3.5 Fee Write

Prototype Std_ReturnType Fee_Write (uint16 BlockNumber, uint8 *DataBufferPtr)

raidilletei	
BlockNumber	Handle of the block (depending on block configuration)
DataBufferPtr	Pointer to data buffer



Return code	
E_OK	Write job has been accepted
E_NOT_OK	Write job has not been accepted.

This function starts the write processing for the specified block.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling Fee GetJobResult().

When the next free area for the block was found, the content of the provided DataBufferPtr is written to the flash memory.

Additionally, management information is stored to identify the block.

The real count of bytes which must be written depends on the hardware specific page alignment and the size of the management information.

As the processing is asynchronous the return value of the Fls write function can only be returned indirectly via the job result.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-7 Fee Write

4.3.6 Fee_Cancel

Prototype		
void Fee_Cancel(void)		
Parameter		
Return code		
void		

©2015, Vector Informatik GmbH Version: 8.01.00 47 / 85



This service cancels a currently pending job.

The state of the FEE will be set to MEMIF IDLE.

If the FEE is currently IDLE, calling this service is without any effect.



Expert Knowledge

Additional actions, especially unwinding internal state machine stack and cancelling a pending Fls job, will be done asynchronously, before a starting a subsequent write job.

A read request, immediately following Fee_Cancel(), would be deferred in order to avoid cancelling sector switch processing in a destructive manner.



Caution

A running sector switch (on any partition) will not be cancelled in destructive manner, if FSS threshold was exceeded. Therefore a subsequent write job will be deferred, until a running copy process (for one single block) has been finished.

Additionally, a subsequent write request would be deferred due to performing complete FSS, if FSS threshold was exceeded in requested block's partition.

Fee_DisableFss() may be used to shorten response times, especially the latter case. Copy would not be started and write requests would fail, rather than waiting for FSS completion (see chapter 2.10).

Additionally, if development mode is configured, checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-8 Fee Cancel

4.3.7 Fee GetStatus

Prototype		
MemIf_StatusType Fee_GetStatus(void)		
Parameter		

©2015, Vector Informatik GmbH Version: 8.01.00 48 / 85



Return code	
MEMIF_UNINIT	The FEE is currently not initialized -> Fee_Init() must be called to use the functionality of the FEE.
MEMIF_IDLE	The FEE is currently idle -> no asynchronous job available
MEMIF_BUSY	The FEE is currently busy-> a asynchronous job is currently processed by the FEE
MEMIF_BUSY_INTERNAL	The FEE has to process internal operations to ensure further write and/or invalidate jobs.

This service returns the FEE's current module state synchronously. Refer to chapter 2.3.1 for more details.

Particularities and Limitations

- > This service is synchronous.
- > This service is re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-9 Fee_GetStatus

4.3.8 Fee_GetJobResult

41010 1 00_00100b1100a11	
Prototype	
MemIf_JobResultType Fee_GetJobResult(void)	
Parameter	
Return code	
MEMIF_JOB_OK	The last job has been finished successfully.
MEMIF_JOB_PENDING	The last job is waiting for execution or currently being executed.
MEMIF_JOB_CANCELLED	The last job has been cancelled by the Fee_Cancel() service.
MEMIF_JOB_FAILED	The Flash driver reported an error or the FEE could not achieve the requested job due to hardware errors (e.g. memory cell defects).
MEMIF_BLOCK_INCONSISTENT	The data of requested block could not be read, because the data are corrupt.
MEMIF_BLOCK_INVALID	The requested block has been invalidated previously by the service Fee_InvalidateBlock() or reading from an erased block is achieved (independent from called Fee_EraseImmediateBlock() or a never written block).
Functional Description	
This service returns the result of the last job executed. Refer to chapter 2.6.1 for more details.	



Particularities and Limitations

- > This service is synchronous.
- > This service is re-entrant.
- > This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-10 Fee_GetJobResult

4.3.9 Fee InvalidateBlock

Prototype

Std ReturnType Fee InvalidateBlock(uint16 BlockNumber)

Parameter		
BlockNumber Number of the block (depending on block configuration).		
Return code		
E_OK	Invalidate job has been accepted.	
E_NOT_OK	Invalidate job has not been accepted.	

Functional Description

This service invokes the invalidation procedure for the selected block. If the service succeeds the most recent data block is marked as INVALID.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling Fee GetJobResult().

When the last/current block was found the next free area will be written with special invalidate information. As this information is saved in flash memory it is resistant against resets.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- This service is always available.

Expected Caller Context

> Expected to be called in application context.

Table 4-11 Fee_InvalidateBlock



4.3.10 Fee GetVersionInfo

Prototype		
<pre>void Fee_GetVersionInfo(Std_VersionInfoType *VersionInfoPtr)</pre>		
Parameter		
VersionInfoPtr	Pointer to where to store the version information of this module.	
Return code		
void		

Functional Description

This service returns the version information of this module. The version information includes:

- > Module ID
- > Vendor ID
- > Instance ID
- > Vendor specific version numbers.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 0). The function does not perform any action in case of a failure.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is available, depending on pre-compile configuration checkbox 'Enable Fee_GetVersionInfo API' which is configured within the configuration tool.

Expected Caller Context

> Expected to be called in application context.

Table 4-12 Fee_GetVersionInfo

4.3.11 Fee EraselmmediateBlock

Prototype		
Std_ReturnType Fee_	_EraseImmediateBlock(uint16 BlockNumber)	
Parameter		
BlockNumber	Number of the block (depending on block configuration).	
Return code		
E_OK	Erase job has been accepted.	
E_NOT_OK	Erase job has not been accepted.	



This function doesn't erase flash memory.

The addressed block is marked as invalid, thus a subsequent read request on the invalidated block completes with MEMIF BLOCK INVALID.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling Fee GetJobResult().

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is always available.
- > This service shall only be called by e.g. diagnostic or similar system service to pre-erase the area for immediate data if necessary.

Expected Caller Context

> Expected to be called in application context.

Table 4-13 Fee_EraseImmediateBlock

4.3.12 Fee MainFunction

Prototype		
void Fee_MainFunction(void)		
Parameter		
Return code		
void		
Frankland Branklan		

Functional Description

This service triggers the processing of the internal state machine and handles the asynchronous job and management operations.

The complete handling of the job and the detection of invalidated or inconsistent blocks will be done in the internal job state machine.

Additionally, if development mode is configured, checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- This service is always available.

Expected Caller Context



> Expected to be called in application context.

Table 4-14 Fee MainFunction

4.3.13 Fee_GetEraseCycle

Prototype

```
Std_ReturnType Fee_GetEraseCycle(
  uint8 SectorNumber,
  uint32 *DataPtr
)
```

Parameter

SectorNumber	Identifies partition and logical sector whose erase cycle counter shall be retrieved:
	The least significant bit chooses the sector (0 or 1, meaning lower sector or upper sector, respectively); higher bits identify the partition. Partitions' symbolic names may be used, but values must be adapted (doubled).
DataPtr	Pointer to data buffer.

Return code		
E_OK	Job has been accepted.	
E_NOT_OK	Job has not been accepted.	

Functional Description

This service retrieves the erase cycle counter of the specified logical sector in the provided buffer. The user can determine how often the specific sector has been erased.



Info

This API service is not used by the NVM. It is just a feature to retrieve the number of erase cycle of a specific logical sector.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling Fee GetJobResult().

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).



Info

This is an addition to AUTOSAR.

©2015, Vector Informatik GmbH Version: 8.01.00 53 / 85



Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is available, depending on pre-compile configuration checkbox 'Enable Fee GetEraseCycle API' which is configured within the configuration tool.

Expected Caller Context

> Expected to be called in application context.

Table 4-15 Fee_GetEraseCycle

4.3.14 Fee_GetWriteCycle

Prototype Std_ReturnType Fee_GetWriteCycle (uint16 BlockNumber, uint32 *DataPtr

Parameter		
BlockNumber	Number of the block, provided by the FEE.	
DataPtr	Pointer to data buffer.	
Return code		
E_OK	Job has been accepted.	
E_NOT_OK	Job has not been accepted.	

Functional Description

This service retrieves the write cycle counter of a specified block and saves in the provided buffer.



Info

This API service is not used by the NVM. It is just a feature to retrieve the number of write cycles of a specific block.



Info

The job processing is asynchronous. The result of the finished job can be polled by calling $Fee_GetJobResult()$.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).



Info

This is an addition to AUTOSAR.



Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is available, depending on pre-compile configuration checkbox 'Enable Fee GetWriteCycle API' which is configured within the configuration tool.

Expected Caller Context

> Expected to be called in application context.

Table 4-16 Fee_GetWriteCycle

4.3.15 Fee GetSectorSwitchStatus

Prototype

Fee SectorSwitchStatusType Fee GetSectorSwitchStatus(void)

Parameter

.

Return code

Fee_SectorSwitchStatusType | see chapter 4.2.1

Functional Description

This function returns the current status of the sector switch. See chapter 4.2.1 for the specific return values. For more information about the sector switch see chapter 2.7.



Info

This service determines FEE's **current** sector switch processing state. Necessity of a sector switch does not imply this service to return a value different <code>FEE_SECTOR_SWITCH_IDLE</code>. For example, FEE will also report <code>FEE_SECTOR_SWITCH_IDLE</code> when copying a block completed, until it starts the next one.



Info

This is an addition to AUTOSAR.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

Expected to be called in application context.

Table 4-17 Fee_GetSectorSwitchStatus



4.3.16 Fee ForceSectorSwitch

Prototype

Std_ReturnType Fee_ForceSectorSwitch(void)		
Parameter		
Return code		
E_OK	Job has been accepted.	
E_NOT_OK	Job has not been accepted.	

Functional Description

This service forces a sector switch to be performed on all configured partitions in "Foreground Mode", i.e. the FEE will defer next incoming job until switch has been completed.

Purpose of this API is to compact partitions' flash usages to one logical sector each.



Caution

Fee must be initialized and idle before calling Fee ForceSectorSwitch().



Note

This API service is not used by the NVM.



Note

The processing state can be queried using Fee_GetStatus. It switches to MEMIF IDLE once all partitions have been processed.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).



Note

This service is an addition to AUTOSAR.

Particularities and Limitations

- > This service is asynchronous.
- > This service is non re-entrant.
- > This service is available, depending on pre-compile configuration checkbox 'Enable Fee_ForceSectorSwitch API' which is configured within the configuration tool.

Expected Caller Context

> Expected to be called in application context.

Table 4-18 Fee_ForceSectorSwitch



4.3.17 Fee_ConvertBlockConfig

E_NOT_OK

```
Prototype
Std ReturnType Fee ConvertBlockConfig
  const Fee ConversionOptionsType* options
Parameter
Options
                          Pointer to structure of type Fee ConversionOptionsType, containing the
                          pointer to the user buffer and to the callback to be invoked for each block:
                          userBuffer
                                             Pointer to user buffer to hold block data. Note that the
                                             area pointed to must be large enough to hold largest
                                             possible block's (across all configurations) data.
                          notificationPtr
                                             Pointer to callback function.
Return code
E_OK
                          Job has been accepted.
```

Job has not been accepted.



This service requests conversion of block configuration, as described in 2.7.5.

FEE uses the buffer passed in <code>options->userBuffer</code> to read block data from data flash and to pass them to the user callback <code>options->notificationPtr</code> for each block it finds in data flash (having a VALID instance).



Caution

Fee must have been initialized and it must be idle before calling **Fee ConvertBlockConfig**().

Additionally, the upper SW layers (NvM) shall be stalled, i.e. it must be prevented from issuing requests to the FEE.



Basic Knowledge

Block conversion affects all partitions, i.e. FEE will iterate over all partitions. Don't expect any specific order; decisions should be based on parameters passed to "Data Conversion Callback" (chapter 4.3.17).



Info

This API service is not used by the NVM.



Info

Job completion may be polled by calling $Fee_GetStatus()$; Job result may be determined using $Fee_GetJobResult()$.

Additionally, if development mode is configured, parameter checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 2.6.1).



Info

This service is an addition to AUTOSAR.

Particularities and Limitations

- This service is asynchronous.
- > This service is non re-entrant.
- > This service is available, depending on pre-compile configuration checkbox 'Enable Fee_ConvertDataBlocks API' which is configured within the configuration tool.

Expected Caller Context



> Expected to be called in application context.

Table 4-19 Fee_ConvertBlockConfig

4.3.18 Fee_SuspendWrites

Prototype		
<pre>void Fee_SuspendWrites(void)</pre>		
Parameter		
-	-	
Return code		
void		

Functional Description

This service instructs Fee to block all write class jobs (writing, invalidating and erasing a block).

Pending jobs will be blocked, i.e. they won't be finished. Next Fee_MainFunction calls cause FEE to enter a safe state (by means of Flash content). Once such state was reached, FEE does not issue new write requests to Fls.

Multiple subsequent calls to this service don't have additional effects, i.e. to re-enable write accesses only one call to Fee ResumeWrites is necessary.



Info

As long as write class jobs are suspended no sector switch will be executed!

For more information, refer to chapter 2.10.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

May be called at interrupt level.

Table 4-20 Fee_SuspendWrites

4.3.19 Fee_ResumeWrites

Prototype		
<pre>void Fee_ResumeWrites(void)</pre>		
Parameter		
-	-	
Return code		
void		

©2015, Vector Informatik GmbH Version: 8.01.00 59 / 85



This service instructs Fee to allow all write class jobs (writing, invalidating and erasing a block), including sector switch processing, again which have been suspended using Fee SuspendWrites().

Multiple calls to this service enable write processing once, i.e. to disable it again there is still one call to Fee_SuspendWrites necessary.

For more information, refer to chapter 2.10.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> May be called at interrupt level.

Table 4-21 Fee_ResumeWrites

4.3.20 Fee DisableFss

Proto	type	
void	Fee	DisableFss (void)

Parameter	
-	-
Poturn codo	

L	tui i	1 606	16

Void -

Functional Description

This function disables execution of foreground sector switch when threshold is reached. A typical situation using this function is start of engine.



Info

When foreground sector switch threshold is reached and a write class job (writing, erasing or invalidating a block) shall be processed, this job ends with result MEMIF_JOB_FAILED.

For more information, refer to chapter 2.10.

Particularities and Limitations

- > This service is synchronous.
- This service is non re-entrant.
- > Availability depends on setting of "Enable API to allow/prohibit FSS" (see ch. 5.1.7.1)

Expected Caller Context

> Expected to be called in application context.

Table 4-22 Fee_DisableFss



4.3.21 Fee_EnableFss

Prototype				
void Fee_EnableFss(void)				
Parameter				
Return code				
void	-			

Functional Description

This function enables execution of foreground sector switch when threshold is reached.

For more information, refer to chapter 2.10.

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > Availability depends on setting of "Enable API to allow/prohibit FSS" (see ch. 5.1.7.1)

Expected Caller Context

> Expected to be called in application context.

Table 4-23 Fee_EnableFss

4.4 Services used by FEE

In the following table services provided by other components, which are used by the FEE are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
DET	Det_ReportError (optionally)
FLS	FIs_Read FIs_Write FIs_Erase FIs_GetStatus (if polling mode deactivated) FIs_GetJobResult (if polling mode deactivated) FIs_SetMode FIs_Cancel
NVM	NvM_JobEndNotification (optionally) NvM_JobErrorNotification (optionally)
OS	Interrupt locking/unlocking functions (optionally)



Table 4-24 Services used by the FEE

4.4.1 Data Conversion Callback

This user-implemented callback is related to the Feature "Data Conversion" (refer to 2.7.5); a pointer to such a function shall be passed to Fee_ConvertBlockConfig (see 4.3.17).

Prototype Single Channel uint8 <Function_Name> (uint8* userBuffer, uint32 blockId, uint16 oldLength, uint16 newLength)

Parameter	
userBuffer	Pointer to user data buffer, containing block's most recent data read from flash. Content may be modified. Points to the userBuffer originally passed to Fee_ConvertBlockConfig
blockId	Unique 28bit block identifier, consisting of 4bit Partition Index (bits 27:24) 16bit "Block Tag" (bits 2316) and 8bit data index (bits 70) ¹
oldLength	Old data length, as found in flash; the user buffer will contain exactly oldLength data bytes
newLength	New data length as given in current configuration, the FEE has been initialized with.

Return code	
FEE_CONVERSION_WRITE _OLD_LENGTH	Instruct the FEE to keep data (user buffer's content) according to old length. Data to be written will not be readable using the Fee_Read (if the both lengths actually differ), but they will be kept in flash, after Fee_ConvertBlockConfig processing completes. It is useful if several subsequent runs of Fee_ConvertBlockConfig are necessary to perform update with multiple stages.
FEE_CONVERSION_WRITE _NEW_LENGTH	Instruct the FEE to write data (user buffer's content) according to new length.
FEE_CONVERSION_SKIP	Instruct the FEE to skip this block. It will write nothing. Block data will actually get lost when Fee_ConvertBlockConfig processing completes.

Functional Description

This callback has to be implemented by user. It should synchronously perform any action that is necessary to convert block data from old format to new format (e.g. lengths).

Particularities and Limitations

> Since the FEE is busy with Fee_ConvertBlockConfig processing, it is not allowed to issue any other request to it.

©2015, Vector Informatik GmbH Version: 8.01.00 62 / 85

¹ Bit 0 is defined to be the least significant bit, regardless of used platform.



Call context

> Called from context of Fee MainFunction

Table 4-25 User defined conversion callback

4.5 Callback Functions

This chapter describes the callback functions that are implemented by the FEE and can be invoked by other modules. The prototypes of the callback functions are provided in the header file Fee Cbk.h by the FEE.

4.5.1 Fee_JobEndNotification

Prototype				
void Fee_JobEndNotification(void)				
Parameter				
Return code				
void				

Functional Description

This routine shall be called by the underlying flash driver to report the successful end of an asynchronous operation.



Info

This function is configurable at pre-compile time using the parameter FEE POLLING MODE.

Additionally, if development mode is configured, checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 0).

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> This routine might be called on interrupt level, depending on the calling function.

Table 4-26 Fee_JobEndNotification

4.5.2 Fee_JobErrorNotification

Prototype			
void Fee_JobErrorNotification(void)			
Parameter			



Return code

void

Functional Description

This routine shall be called by the underlying flash driver to report the failure of an asynchronous operation.



Info

This function is configurable at pre-compile time using the parameter ${\tt FEE_POLLING_MODE}.$

Additionally, if development mode is configured, checks are done and in case of failure they are reported to the DET by default with the according service ID and the reason of occurrence (refer to chapter 0).

Particularities and Limitations

- > This service is synchronous.
- > This service is non re-entrant.
- > This service is always available.

Expected Caller Context

> This routine might be called on interrupt level, depending on the calling function.

Table 4-27 Fee_JobErrorNotification

4.6 Configurable Interfaces

API	Description
<pre>Function Fee_GetVersionInfo()</pre>	This function can be enabled/disabled by the configuration switch 'Enable Fee_GetVersionInfo API'. Refer to chapter 5.1.7.
<pre>Function Fee_GetEraseCycle()</pre>	This function can be enabled/disabled by the configuration switch 'Enable Fee_GetEraseCycle API'. Refer to chapter 5.1.7.
<pre>Function Fee_GetWriteCycle()</pre>	This function can be enabled/disabled by the configuration switch 'Enable Fee_GetWriteCycle API'. Refer to chapter 5.1.7.
Function Fee_ForceSectorSwitch()	This function can be enabled/disabled by the configuration switch 'Enable Fee_ForceSectorSwitch API'. Refer to chapter 5.1.7.
<pre>Functions Fee_JobEndNotification() Fee_JobErrorNotification()</pre>	The functions can be enabled/disabled by the configuration switch 'Poll Flash driver'. Refer to chapter 5.1.6.2.
Functions Fee_EnableFss() Fee_DisableFss()	The functions can be enabled/disabled by the configuration switch 'Enable API to allow/prohibit FSS'. Refer to chapter 5.1.7.
Function Fee_ConvertBlockConfig()	The functions can be enabled/disabled by the configuration switch 'Enable Data Conversion API'. Refer to chapter 5.1.7.

Table 4-28 Configurable interfaces



5 Configuration

FEE can be configured using following tools:

- DaVinci Configurator 5, domain "Memory" (AUTOSAR 4 packages only).
 Parameters are explained within the tool; parameters described in this chapter might not directly correspond to parameters visible in Configurator 5's GUI.
- DaVinci Configurator 4 (AUTOSAR 3 packages only; for a detailed description see this chapter)
- Using a generic configuration editor (GCE)

5.1 Configuration with DaVinci Configurator

5.1.1 Start configuration of the FEE

The component name of the Flash-EEPROM-Emulation in DaVinci Configurator is "FEE". In the "Architecture view" (initial page) of the DaVinci Configurator, the FEE can be opened by its context menu to start its configuration. Optionally, the FEE can be opened for configuration with the component list under the "Memory" tab located at the left side of the DaVinci Configurator.

5.1.2 Useful Chunk-Sizes (instance counts)

Carefully chosen chunk-sizes may significantly improve FEE's performance as well as robustness.



Note

Chunk sizes' effects are basically local to a single partition, i.e. a partition's performance and robustness is affected. Another partition might be affected indirectly by sector switch processing (which is not immediately interruptible).

Therefore, when changing a block's settings, other blocks in same partition must be considered.

Though it is not necessary (usually it is not even possible) to estimate optimum chunksizes, they should be configured to reasonable values. Therefore their effects are summarized first:

Basically a block's instance count depends on the estimated number of write cycles, relative to other blocks' write cycles, as well as on its size, in relation to logical sector size. A "(too) small" / "(too) large" chunk is meant to be related with "write cycle" and/or "block's size".

Small chunks:

In general small chunks are suited for large and/or infrequently written blocks. Allocating a small chunk results in less flash-space being reserved for related block (instances).



- Smaller chunks result in less space wasted by aborts (resets), and more retries being possible in a sector in case of resets.
- > They result in more overhead in flash. This becomes significant with small blocks (little payload), large page size, and number of write cycles.
- > Decreased efficiency of flash usage, i.e. more erase cycles over life-time
- Result in increased average search efforts. Since FEE does not hold position information in RAM (neither Look-up tables, nor any caching mechanisms), searching must be done for each asynchronous block operation. Since one block's chunks (within one logical sector) build up a linked list; this list becomes longer. Each list node (chunk) requires one additional flash request, requiring additional Fee_MainFunction and FIs MainFunction cycles.

Large chunks:

- > Frequently written, small blocks usually benefit from larger chunks.
- Overhead in flash is reduced
- Decreased average search efforts, for two reasons:
- > Skipping an obsolete chunk means skipping more obsolete instances; the linked list becomes shorter.
- > Searching within a chunk is implemented to have logarithmic effort.
- Allocating a large chunk results in more flash space (for more instances) being reserved. If chunk is too large, it would never be used, because writing other blocks already caused a sector switch.
- > Increased flash usage also may increase vulnerability to aborts, because space for other blocks shrinks. Usually each block requires at least one chunk per logical sector (to hold at least data copied during sector switch).

The larger a block's payload is, the smaller the instance count should be. It becomes less and less possible that such a chunk could be too small, because there is an absolute upper limit, how often a chunk fits into logical sector.

It is highly not recommended to try "optimizing" a block configuration in order to get only one chunk per block, resulting in nearly completely filled logical sector. Rather the chunk sizes should be set in a way that some reserve remains to be used dynamically. It is advisable to use approximately 50% of smaller logical sector. However it is more important to keep enough space to write even the largest blocks several times (regardless of actual write cycles → due to aborts). On the other hand reserves might also be lower, if a partition will be written (very) infrequently, and if written to, the situation is known to be stable (very low risk of aborted writes).

Based on estimated number of write cycles, it is sufficient to care about chunk sizes of most frequently written blocks only (additionally considering their sizes). In typical



configurations the write cycles differ by magnitudes (1 ... 1'000'000) – only the largest ones (e.g. more than 100'000 cycles, then more than 10'000 cycles) need to be considered. Blocks being written less than one hundredth of most frequently written one, may usually be considered to be constant; their instance count should be 1. If one or more large blocks are frequently written, check their maximum possible number writes per sector. This can be used as threshold to consider blocks being constant.

5.1.3 Update of block configuration

It is possible to update the block configuration (size, datasets,...) of each block. Every block which should be readable after the block configuration update must get the same BlockID as before (preconditioned that the size of this block has not changed). The BlockID could be set manually if the "BlockID fixed" is checked.



Note

It is not possible to "move" a block from one partition to another with an update, while keeping its data.

After flashing the new block configuration it is possible, but not actually necessary, to use <code>Fee_ForceSectorSwitch()</code> in order to clean up flash contents, causing flash layout to be prepared. In order to perform a complete update of flash layout — i.e. to clean up / update all logical sectors, across all partitions —, a second subsequent run of <code>Fee ForceSectorSwitch()</code> may be used .

Writing updated blocks will be possible independent of usage of Fee_ForceSectorSwitch().

5.1.4 FEE Configuration tab

Attribute Name	Value Type	Values The default value	Description
		is written in bold	
Block Config	uration		
FBL Configuration		ON OFF	This checkbox must be checked, if the current block configuration is the flash boot loader configuration. Otherwise it must not be checked.
Insert Block			This button inserts a FEE block into the table. This is only necessary if additional blocks are needed. All NVM blocks are inserted automatically.
Delete Block			This button deletes the selected block from the table. Only blocks which where inserted with the "Insert Block" button should be deleted with this button. NVM blocks should be deleted in the NVM configuration. They are deleted automatically in the FEE block table.
Move Up			This button moves a selected block one row above. The order of the block in the table influences the physical default position within the Flash.



Attribute Name	Value Type	Values The default value is written in bold	Description
Move Down			This button moves a selected block in the table one row below. The order of the block in the table influences the physical default position within the Flash.
Calculate			This button calculates the FEE block numbers, as well as BlockIDs, unless set to "fixed". Caution This button must be pressed before generation process is started.
BlockID	uint16	no default 065535	The BlockID will be set automatically by clicking the "Calculate"-button. The BlockID could also be set manually (see BlockID fixed). The BlockID must be unique within a partition, i.e. amongst all blocks assigned to same partition. In order to save flash space it is recommended to start numbering with 0 for each partition. Caution If the block configuration shall be updated, each block which should be readable after the block
			configuration update must get the same BlockID as before.
NVM Blockname			This field shows the name of the corresponding NVM block entered within the NVM and is forwarded to the FEE. For user added blocks (within the FEE) this field is empty. Info The NVM Blockname can not be modified at all. It provides the information to the user to associate the FEE block configuration to the corresponding NVM block.

©2015, Vector Informatik GmbH Version: 8.01.00 68 / 85



Attribute Name	Value Type	Values The default value is written in bold	Description
Fee Blockname	C- identifier	Valid C identifier, default: Fee_User Block <n></n>	This field shows the name of the configured FEE block. In the AUTOSAR ECUC file, it becomes the name of the Block Configuration container. Info As required by AUTOSAR, the linkage between block name and its numeric handle ("Block Num") will be generated. Depending on global tool settings, the prefix "Fee_" will be added, or omitted.
Block Num	uint16	265534, no default	The even number of the FEE block. These not modifiable values will be calculated by pressing the button "Calculate". The dataset selection bits are used to calculate the block number. Caution The BlockNum should not be used directly. Instead use the symbolic block names, defined in Fee_Cfg.h (see chapter 3.1.2).
Datasets		1 1255	This field determines the number of datasets configured for a dedicated block. Info The number of datasets can not be modified if the block is configured within and forwarded from the NVM. If the block is created within the FEE, the datasets can be adjusted for corresponding block.
Size	uint16	1 165535	The natural size (in bytes) of the block (payload). Info The size can not be modified if the block is configured within and forwarded from the NVM, because these blocks provide their size on their own.

©2015, Vector Informatik GmbH Version: 8.01.00 69 / 85



Attribute Name	Value Type	Values The default value is written in bold	Description
Chunk block count		1, 3, 7, 15, 31, 63, 127, 255, 511, 1023, 2047, 4095, 8191, 16383, 32767	This field determines the number of blocks which can be stored within one block chunk. For blocks which are written often the number should be larger and vice versa. Caution This value must always be adjusted within the FEE and is never forwarded from the upper layer, because this value is responsible to abstract hardware constraints to the upper layer.
Partition	Ref.		Reference to a defined partition container.
Write Cycles		1 10000 10000000	The estimated/desired number of write cycles which are required for the block. According to this value, the number of blocks within a chunk shall be influenced, but which is not done automatically and is left to the user.
			Info Currently, the adjustment of this value has no effect. Instead the number of blocks within a chunk (Chunk block count) influences the distribution of the data/blocks on the Flash memory.
High Prio		ON OFF	This field denotes that the block contains high priority data. If it is 'ON' the block/dataset can be erased and contains high priority data. If it is 'OFF' the block/dataset cannot be erased and contains "normal" data. For example, high priority data can be supposed as crash data.
			Info The marker for high priority data can not be modified if the block is configured within and forwarded from the NVM. If the block is created within the FEE, the datasets can be adjusted for corresponding block.
			Caution A block can only be erased by the API function Fee_EraseImmediateBlock() if the appropriate block is set to contain high priority data.
Critical Data		ON OFF	Marks a block to be critical, i.e. essential, for ECU operation. Refer to chapter 2.11.
BlockID fixed		ON OFF	This checkbox must be checked, to be able to set the BlockID manually.

©2015, Vector Informatik GmbH Version: 8.01.00 70 / 85



Table 5-1 Fee configuration

5.1.5 General Settings tab

5.1.5.1 Error Detection – Development Mode

Attribute Name	Value Type	Values The default value is written in bold	Description
Check Parameter Block Number		ON OFF	<pre>Preprocessor switch for enabling/disabling checking the block number, whether it is in allowed range. Affected API functions: > Fee_Read() > Fee_Write() > Fee_InvalidateBlock() > Fee_EraseImmediateBlock() > Fee_GetWriteCycle()</pre>
Enable Development Error Detection		ON OFF	Preprocessor switch to enable/disable development error detection and reporting. It is the main switch over following items: Check Uninitialized Module Check Parameter (except parameter Block Number) Errorhook Include File In production mode, this switch should be disabled to save ROM/RAM and to speed up the module.
Check Uninitialized Module		ON OFF	Preprocessor switch to enable/disable the check of an initialized module before any API service of the FEE (expect Fee_Init() and Fee_GetVersionInfo()) is used.
Check Busy Module		ON OFF	If this check is enabled, it will be checked if an asynchronous job is currently running and another shall be started.
Check Immediate Data		ON OFF	If this check is activated, it will be checked if a block is configured to hold high priority data and shall be erased via the service Fee_EraseImmediateBlock.
Check Parameter		ON OFF	Preprocessor switch for enabling/disabling parameter checking of API services at all. It is the main switch over following items: Check Parameter Block Number Check Sector Number Check Parameter Length and Offset Check Parameter DataBufferPtr for Null Pointer Check Parameter Mode



Attribute Name	Value Type	Values The default value is written in bold	Description
Check Parameter Sector Number		ON OFF	Preprocessor switch for enabling/disabling checking the sector number, whether it is in allowed range. Affected API function: Fee_GetEraseCycle()
Check Parameter Length and Offset		ON OFF	Preprocessor switch for enabling/disabling checking the length and offset values, whether they are in allowed range. Affected API function: Fee_Read()
Check Parameter for Null Pointer		ON OFF	Preprocessor switch for enabling/disabling checking, whether the pointer parameter are different from a null pointer. Affected API functions: > Fee_Read() > Fee_Write() > Fee_GetEraseCycle() > Fee_GetWriteCycle() > Fee_GetVersionInfo()
Check Parameter Mode		ON OFF	Preprocessor switch for enabling/disabling checking the mode values, whether it is in allowed range. > Fee_SetMode()
Development Error Reporting		ON OFF	Preprocessor switch for enabling/disabling the Development Error Reporting.
Errorhook	C-function identifier	Valid C- function identifier, default: Det_ Report Error	Specifies the function that shall be called if a development error has occurred. (see chapter 2.6.3 for function signature)
Include File	header file	Valid header file, default: Det.h	Specifies the file that shall be included if development error reporting shall be used. The API used by the FEE must be specified within this file.

Table 5-2 Error Detection – Development Mode

5.1.5.2 Area "Error Callback"

Attribute Name	Value Type	Values The default value is written in bold	Description
Use Error Callback		ON, OFF	Defines whether the Error Callback notification mechanism shall be used to inform the application about a serious condition the Fee had detected.



Attribute Name	Value Type	Values The default value is written in bold	Description
Callback Function	C-function identifier	Valid C-function identifier, default: Appl_CriticalError Callback	Defines the function of the application that will be called if a critical condition has been entered by the Fee. It is expected, that the application is responsible to react on this situation according to the parameter value which has been passed. Refer to chapter 3.3.5.3
Include File	header file	Valid header file, default: Appl_Include.h	Defines the header file containing the Error Callback function.

Table 5-3 Error Callback

5.1.5.3 Area Buffer

Attribute Name	Value Type	Values The default value is written in bold	Description
Internal Buffer Size	uint16	64 , 128, 256, 512, 1024	Size of internal buffer to be used for instance allocation during write job processing and for instance copy during sector switch. Must be an integral power of two. Must be larger than largest "Write Alignment" setting. Info The number of Fls_Read – Fls_Write request pairs necessary to copy a whole block depends on its size and Internal Buffer size.

5.1.5.4 Area "Upper Layer"

Following controls are visible only, if an NvM is enabled (part of configuration) and its parameter "Use Polling Mode" (NvmPollingMode) is unchecked (set to False). A hint about NVM's current polling mode setting (including availability at all) will be additionally shown.

FEE should be used in polling mode, if NVM is disabled.

Attribute Name	Value Type	Values The default value is written in bold	Description
Job End Notification	C-function identifier	Valid C-function identifier, default:	The name of the job end callback function shall be inserted to this field.
		NvM_JobEnd Notification	It is called to report to the upper layer that the job processing was finished successfully.
			Usually this function is provided by the NVM.
Job Error Notification	C-function identifier	Valid C-function identifier, default:	The name of the job error callback function shall be inserted to this field.



Attribute Name	Value Type	Values The default value is written in bold	Description
		NvM_JobError Notification	It is called to report to the upper layer that the job processing was finished with failure. Usually this function is provided by the NVM.
Include File for Callbacks	header file	Valid header file, default: NvM_Cbk.h	In this field it can be inserted the name of the include file that holds the callback declarations of the upper layer.

Table 5-4 Upper Layer

5.1.5.5 Area "Critical Section Handling"



Changes

Fee 8.xx.xx only supports Critical Section services provided by an AUTOSAR Basic Software Scheduler (SchM). It ignores manual settings made, if "Use BSW Scheduler (SchM)" was disabled in "Board Setting / OS Sevices"

Attribute Name	Value Type	Values The default value is written in bold	Description
Short-Lasting Actions		Use Suspend Functions UseOS Functions UseEnable Functions	Defines the function set that will be called when short-lasting critical sections are entered or left. Refer to chapter 3.5.
Long-Lasting Actions		Use Suspend Functions UseOS Functions UseEnable Functions	Defines the function set that will be called when long-lasting critical sections are entered or left. Long-lasting actions are Fee_MainFunction as a whole. Refer to chapter 3.5.

Table 5-5 Critical Section Services



Note

Both dropdown lists are invisible, if the BSW Scheduler is enabled within the OS configuration tab of the ECU configuration.

5.1.6 Partitions

The left panel of partitions shows a tree-like overview of currently configured partitions. In this panel partitions can be added, deleted and renamed, as well.



Attribute Name	Value Type	Values The default value is written in bold	Description
Partition Device	Ref.		Choose a flash configuration. All partitions in one single flash device must refer to the same Flash Configuration (of type /AUTOSAR/Fls/FlsConfigSet) Currently, FEE is restricted to use one Flash Driver only, i.e. all
			partitions must point the same configuration.
Lower Sector Start Address			In this combo box the start address of the lower logical sector shall be selected. The values of the list are just typical values. A custom value may be entered; it must adhere to the "Fls address alignment" (see below).
Lower Sector Size		1024	Choose lower logical sector's size in bytes. The combo box suggests some typical values; a custom size may be entered. The size must also adhere to "FIs address alignment" (see below).
Upper Sector Start Address			In this combo box the start address of the upper logical sector shall be selected. The values of the list are suggestions, derived from the chosen Fls driver (which depends on the used controller). A custom value may be entered; it must adhere to the "Fls address alignment" (see below).
			The upper sector's start address must be located in a distinct physical sector, with higher address, than the last address of the lower sector.
Upper Sector Size		1024	Choose upper logical sector's size in bytes. The combo box suggests some typical values; a custom size may be entered.
			The size must also adhere to "FIs address alignment" (see below).
Fls address alignment		8, 64, 128, 256, 512, 1024	In this drop down list the virtual page size in bytes will be set. This must be a power of two and be equal to or larger than the "Flash page size for write jobs". This value will be used to check logical sectors' alignment, to align of block instances as well as Fee management information.
Fls Page Size for write jobs		8, 64, 128, 256, 512, 1024	In this drop down list the FIs page size for write jobs in bytes will be set. This must be an integral multiple of the hardware specific flash page size. This value will be used for the write alignment, instead of the FIs page size of the hardware.

Table 5-6 Lower Layer



5.1.6.1 Area "Management"

Attribute Name	Value Type	Values The default value is written in bold	Description
Background Reserve	uint32		If there is less free space by writing data continuously to the Fee, the sector switch in background mode will be started. Info See chapter 2.7 for more details.
Foreground Reserve	uint32		If there is less free space by writing data continuously to the Fee, the sector switch in foreground mode will be started. Info See chapter 2.7 for more details.

Table 5-7 sector switch reserve

5.1.6.2 Area "Lower Layer"

This panel is independent from partitions; its setting has global meaning.

Attribute Name	Value Type	Values The default value is written in bold	Description
Poll Flash Driver		ON OFF	Enables/disables polling of the underlying Flash driver. If polling is disabled, make sure, that the callbacks Fee_JobEndNotification() and Fee_JobErrorNotification(), respectively, have been configured in the Flash driver. Info If polling is enabled the callback functions are not available, because there is no needed to. An additional hint will be visible in that case.

Table 5-8 Lower Layer

©2015, Vector Informatik GmbH Version: 8.01.00 76 / 85



5.1.7 Module API tab

5.1.7.1 API Configuration

Attribute Name	Value Type	Values The default value is written in bold	Description
Enable Fee_GetVersionInfo API		ON OFF	Preprocessor switch to enable/disable the existence of the API service Fee_GetVersionInfo(). Info If this checkbox is switched off, the corresponding parameter check ("Check Parameter VersionInfo") within the "General Settings" tab is deselected and disabled.
Enable Fee_GetEraseCycle API		ON OFF	Preprocessor switch to enable/disable the existence of the API service Fee_GetEraseCycle(). Info If this checkbox is switched off, the corresponding parameter check ("Check Parameter Sector Number") within the "General Settings" tab is deselected and disabled.
Enable Fee_GetWriteCycle API		ON OFF	Preprocessor switch to enable/disable the existence of the API service Fee_GetWriteCycle().
Enable Fee_ForceSectorSwitch API		ON OFF	Preprocessor switch to enable/disable the existence of the API service Fee_ForceSectorSwitch().
Enable Data Conversion API		ON OFF	Preprocessor switch to enable/disable the existence of Fee_ConvertDataBlocks. Info If this feature was disabled at delivery time, this switch is still available, but it is disabled. It cannot be used to enable the feature "Data Conversion".
Enable API to allow/prohibit FSS		ON OFF	Preprocessor switch to enable/disable function set Fee_EnableFss()/Fee_DisableFss() Refer to chapter 2.10.

Table 5-9 API Configuration



5.1.7.2 Provided API

Attribute Name	Value Type	Values The default value is written in bold	Description
Provided API			This group shows the API services which are currently provided by the FEE depending on its configuration.

Table 5-10 Provided API

5.2 Configuration Parameters only visible in GCE

There are parameters that cannot be configured using the comfort view of DaVinci Configurator. These parameters should only be modified, if really necessary, and if the user knows about their effects. These parameters' default values are usable in very most cases.

To meet platform specific requirements and/or restrictions, they may also be preconfigured during integration/delivery, i.e. they might not be changeable at all.

Attribute Name	Value Type	Values The default value is written in bold	Description
FeeMaxLinkTableSize (Maximum Number of LinkTable Entries)	Integer	0 4095	Defines the maximum size of the Link Table. The link table itself improves performance of FEE, but it reduces space available for user data. Thus it might be desirable to limit its size. Especially on devices with very limited flash space and/or considerably large pages (e.g. TriCore TC179x) the performance penalty resulting from reducing the link table size (or disabling it completely, i.e. by setting size to 0), would be feasible.

Table 5-11 Parameters only visible in GCE view.

5.2.1 Fls API deviating from AUTOSAR naming convention

FEE is able to use any AUTOSAR compliant FIs "out of the box", i.e. associating a partition with a driver, its API is defined and FEE can be generated. This is the case for all internal device drivers whose API shall exactly match the naming given in Flash Driver SWS. It is also true for an external device driver, which shall include Vendor ID and a so-called "API infix"; both shall be published in its module description file.

However, sometimes an FIs doesn't fully comply, or there might be technical reasons to deviate from AUTOSAR.



Example

Due to address space limitiation mentioned in chapter 2.1, it is necessary to use some "proxy Fls", if FEE (a partition) shall address an Fls's sectors beyond 2GB limit (≥ 0x80000000). Using this Feature of FEE, its function names do not need to comply with AUTOSAR.

In such a case FEE would not compile (or not link) because used function names do not match Fls's provided ones. This can be solved as follows:



- 1. Add container FeeFlsApi to container FeeGeneral.
- 2. New Container may be renamed
- 3. Enter name of Fls's include file
- 4. Change function names according to your needs. Parameter names are self-explaining; they map from SWS function names (e.g. Fls_Read) to actually implemented names (e.g. MyVeryOwn ReadFunction).
- 5. Associate this container with an existing Fls configuration (FeeFlsDeviceIndex is a reference to a container of type Fls/FlsGeneral).



Expert Knowledge

Container FeeFlsApi has a multiplicity of 0..*, i.e. you may create an arbitrary number of Flses. Generator matches references to Fls drivers with partitions' references to Fls (runtime) configurations to generate necessary information of drivers which are actually used. Of course, each Fls driver instance must be referenced at most once.

©2015, Vector Informatik GmbH Version: 8.01.00 79 / 85



6 AUTOSAR Standard Compliance

6.1 Deviations

6.1.1 Maximum Blocking Time

The parameter FEE_MAXIMUM_BLOCK_TIME is not supported by the current version of the FEE, because a time reference is missing to support this requirement.

6.2 Additions/ Extensions

6.2.1 Parameter Checking

The internal parameter checks of the API functions can be en-/disabled separately. The AUTOSAR standard requires en-/disabling of the complete parameter checking only. For details see chapter 2.6.1.

6.2.2 Fee InitEx

See chapter 4.3.2 for further information.

6.2.3 GetEraseCycle

See chapter 2.5.1.6 and 4.3.13 for further information.

6.2.4 GetWriteCycle

See chapter 2.5.1.7 and 4.3.14 for further information.

6.2.5 GetSectorSwitchStatus

See chapter 4.3.15 for further information.

6.2.6 ForceSectorSwitch

See chapter 4.3.16 for further information.

6.2.7 Fee ConvertBlockConfig

This Service, and all related types, settings, etc. add the capability of performing data conversion after a configuration update. Note that this extension is optional; it must be ordered explicitly.

For more information refer to chapter 2.8.

6.2.8 Fee_SuspendWrites / Fee_ResumeWrites

See chapters 2.10, 4.3.18 and 4.3.19 for further information.

6.2.9 Fee EnableFss / Fee DisableFss

See chapters 2.10, 4.3.20 and 4.3.21 for further information.

6.3 Limitations

AUTOSAR does not specify how a FEE implementation shall organize flash memory. Additionally there are no requirements on performance or robustness. Following restrictions result from postulating and implementing such requirements.

6.3.1 Partitions

Current implementation limits the maximum number of partitions to 4.



6.3.2 Flash Usage

Fee cannot provide whole configured flash memory for user data storage.

Net payload to be stored in flash memory is roundabout 25% of assigned flash memory, or more precisely, 50% of the smaller logical sector's size.

In addition to memory overhead caused by internal management information to be stored along with user data, and to overhead caused by flash space to be reserved for dynamic allocation (in order to process write requests), the FEE must adhere to HW's alignment requirements. Usually this alignment is determined by flash's smallest writable entity, i.e. the flash page size. However, on some platforms, alignment must be even more stringent, because read and write accesses must be secured, so that they don't endanger already stored information.

This means: it might be possible to add stuffing bytes carrying no information. Depending on flash device and related alignment requirements, this overhead might become significant, additionally reducing the total amount of user data that may be stored in flash.

6.3.3 Performance

Due to dynamic flash allocation, dependent on configuration and actual write accesses, the performance, by means of request processing time (i.e. number of Fee_MainFunction call cycles), fluctuates. Starting with an empty flash, job processing time increases over time up to a maximum search effort (one logical sector is completely filled). When the other sector is initially used, search efforts reduce again.

Additionally worst case blocking times are mostly affected by clean-up operation (copy recent data instances) and sector erase. Latter one is determined by HW; usually erase timings are at scales of hundreds of milliseconds per 16kBytes. Their frequency highly depends on flash usage (data amount as well as write frequency).



Expert Knowledge

The worst case – a complete sector switch that includes copying <u>all</u> data and erase the logical sector – is a very exceptional case, as it would mean that nothing was successfully copied so far, but flash is full, i.e. erase is necessary in order to remain writeable.

6.3.4 Aborts/Resets

Aborts/resets during write operations result in artifacts in flash memory, increasing flash usage. Frequent resets may prevent FEE from completing a clean-up operation (Sector Switch), but cause much wasted space due to the artifacts.

Finally the partition may overflow. There is no space left to copy data from one logical sector to the other one, which is the precondition to perform a sector erase without any recent data instance. This overflow may be reported by FEE, and an erase may be executed, accepting the risk of data loss. For more information, refer to chapter 3.3.5.3.



Additionally the FEE allows marking data blocks as essential for ECU's operation; they must never be lost (chapter 2.11).

Finally, FEE provides services for handling under-voltage situations in safer ways; see chapter 2.10.

6.3.5 Write Cycle and Erase Cycle Counters

Blocks' Write Cycle and Sectors' Erase Counters allow monitoring flash usage over time. Especially, they allow re-evaluating initial estimations of blocks write cycles.

Erase cycle counters can be used to estimate total flash usage over ECU's life-time. A key parameter is the number of erase cycles per physical sector, which is limited on Flash EEPROM devices.

Precisions of both kinds of cycle counters are limited. Especially interrupted accesses and/or resets reduce precision, for certain reasons.



Caution

Blocks' Write Cycle and Sectors' Erase Cycle counters shall be used for statistical purposes only. Especially, they shall not be used to affect code execution in any way.

©2015, Vector Informatik GmbH Version: 8.01.00 82 / 85



7 Glossary and Abbreviations

7.1 Glossary

Term	Description
DaVinci Configurator	Tool to create a consistent and optimized ECU configuration. Generation and validation tool for MICROSAR components.
Block Tag	Identifies a block in data flash. See also: Block Id
Block Id	Identifier used to uniquely identify blocks in a partition. Stored in data flash, it consists of Block Tag and Data Index.
	In conjunction with partition ID, every block in FEE can be uniquely identified.
	The Block Id abstracts from 16Bit Block Number passed via API; it depends on current configuration, in particular on Dataset Selection Bits.
	The block tag is one cornerstone in FEE's update capability: As long as a Block Id does not change across configuration updates, it can be found in data flash, data may be kept, if block length also remained unchanged.

Table 7-1 Glossary

7.2 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
DEM	Diagnostic Event Manager
DET	Development Error Tracer
ECU	Electronic Control Unit
ECUM	ECU Manager
EEPROM	Electrically Erasable Programmable Read Only Memory
FBL	Flash Bootloader
FEE	Flash EEPROM Emulation Module
FLS	Flash Driver
HIS	Hersteller Initiative Software
MEMIF	Memory Abstraction Interface Module
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
NVM	NVRAM Manager
NVRAM	Non Volatile Random Access Memory
SchM	(AUTOSAR) Scheduling Manager

Technical Reference MICROSAR FEE



SRS	Software Requirement Specification
SWC	Software Component
SWS	Software Specification

Table 7-2 Abbreviations



8 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector-informatik.com