

# **Interaction Layer for General Motors**

**Technical Reference** 

II\_Vector\_Gm with GENy Version 2.01.02

Authors Ralf Fritz, Gunnar Meiss, Heiko Hübler
Status Released



### 1 Document Information

This document may be revised and appear in several versions. The document will be classified to permit identification of updates and versions.

This user manual is related to the source code version (II\_Vector\_Gm) 1.01.00 or higher.

# 1.1 History

Author	Date	Version	Remarks
Ralf Fritz	2003-08-05	1.00	creation
Ralf Fritz	2004-07-02	1.01	Changed description for ILSetTxMessageEnable
Ralf Fritz	2004-07-16	1.02	Sample corrected. Restriction added.
Ralf Fritz	2005-04-27	1.03	Timeout and Source Learning description extended.  New Layout.
Ralf Fritz	2005-08-01	1.04	Adaptation of return values of several functions.
Ralf Fritz	2007-03-29	1.05	Corrected chapter 3.1.2.2 and 3.1.2.3
Ralf Fritz	2007-05-01	1.06	Switch to new documentation template.
Gunnar Meiss	2008-01-17	2.00	Added GENy Support
Heiko Hübler	2012-10-18	2.01.00	Added Robustness Changes
			Added Clearing Flags on Deactivate VN (ESCAN00061059)
Heiko Hübler	2012-10-26	2.01.01	Changed description of Clearing Flags on Deactivate VN
Heiko Hübler	2013-01-31	2.01.02	Updated GMLAN version (ESCAN00064595) improved the description of Source Address Timeout
			Supervision (ESCAN00064519)

Table 1-1 History of the Document

### 1.2 Reference Documents

No.	Source	Title	Version
[1]	Vector	Technical Reference of Vector's CAN driver (TechnicalReference_CANDriver.pdf).	2.23.00
[2]	Vector	Vector Interaction Layer Technical Reference for GENy. (TechnicalReference_GENy_InteractionLayer.pdf).	2.08.00
[3]	Vector	Technical Reference of Vector's GMLAN Network Management (TechnicalReference_GMLAN_NM.pdf).	1.07.00
[4]	OSEK/VDX	OSEK/VDX Communication Specification 3.0.3.	3.0.3

Table 1-2 Reference Documents

# Technical Reference Interaction Layer for General Motors





#### Please note

We have configured the programs in accordance with your specifications in the

questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



### Contents

1	Docu	ment Info	ormation	2	
	1.1	History		2	
	1.2	•	nce Documents		
2	Comp	Component History			
	2.1	II_Vecto	or_Gm Version 1.00.00	8	
		2.1.1	What is new?	8	
		2.1.2	What has changed?	8	
	2.2	II_Vecto	or_Gm Version 1.01.00	8	
		2.2.1	What is new?	8	
		2.2.2	What has changed?	8	
3	Func	tional Des	scription	9	
	3.1	Data Tr	ransmission	9	
		3.1.1	Cyclic Transmission		
		3.1.2	Event Based Transmission	10	
		3.1.3	Mixed Transmission	13	
	3.2	Signal /	Access	14	
	3.3	Extende	ed CAN Identifiers	15	
		3.3.1	Source Learning	15	
		3.3.2	Source Address Timeout Supervision	16	
	3.4	Applica	ation Controlled Message Filter	17	
	3.5	Clearing	g Flags on Deactivate VN	17	
4	Integ	ration		18	
	4.1	Include	structure	18	
	4.2	Initializa	ation	18	
	4.3		function		
5	Confi	iguration.		21	
	5.1	Databa	se Attributes	21	
		5.1.1	Send Type	21	
		5.1.2	Default Values	21	
		5.1.3	Tx NCA Message	22	
		5.1.4	Timeout Supervision	23	
6	API D	escriptio	on	25	
	6.1	Adminis	strative functions	25	

Version: 2.01.02



			6.1.1.1	IIInitPowerOn	25
			6.1.1.2	IIInit	25
			6.1.1.3	IIRxTask	26
			6.1.1.4	IITxTask	26
			6.1.1.5	IIRxStateTask	27
			6.1.1.6	IITxStateTask	28
			6.1.1.7	IISetOwnNodeAddress	28
	6.2	Service	functions		29
			6.2.1.1	llSetEvent	29
			6.2.1.2	IIGetNodeCommActiveState	29
			6.2.1.3	IISetRxMessageSourceAddress	30
			6.2.1.4	IIGetRxMessageSourceAddress	30
			6.2.1.5	IISetRxMessageEnable	31
			6.2.1.6	llSetTxMessageEnable	31
			6.2.1.7	IIGetTransmitMessageStatus	32
	6.3	Callbact	k functions .		32
		6.3.1	ApplIISou	urceAddressLearned	33
		6.3.2	AppIIIRx <b>i</b>	VlsgSrcAddressLearned	33
		6.3.3	ApplIINod	deCommActiveRecovery	34
		6.3.4	ApplIINo	deCommActiveFailed	34
7	Abbre	viations.			36
8	Apper	ndix			37
	8.1	Nm_Gm	nlan_Gm Int	erface	37
		8.1.1	IIRxStart.		37
		8.1.2	IITxStart.		37
		8.1.3	IIRxStop.		38
		8.1.4	IITxStop.		39
		8.1.5	IIRxWait.		39
		8.1.6	IITxWait.		40
		8.1.7	IIRxRelea	ase	40
		8.1.8	IITxRelea	ase	41
		8.1.9	<b>IIRxActiva</b>	ateVnMsg	41
		8.1.10	<b>IIRxDeac</b>	tivateVnMsg	42
		8.1.11		ateVnMsg	43
		0.1.11	IITxActiva	ate vilivby	<del>.</del> 0
		8.1.12		tivateVnMsgtivateVnMsg	
		_	IITxDeac	3	43
		8.1.12	IITxDeac	tivateVnMsg	43 44
		8.1.12 8.1.13	IITxDeac IIRxStart\ IIRxDeac	tivateVnMsg VnMsgSupervision	43 44 45
		8.1.12 8.1.13 8.1.14	IITxDeac IIRxStart\ IIRxDeac IIResetRx	tivateVnMsg VnMsgSupervision tivateVnMsgSupervision	43 44 45

# Technical Reference Interaction Layer for General Motors



9	Conta	act	48
	8.2	Interaction Layer Internal Interfaces	47

# Technical Reference Interaction Layer for General Motors



### Illustrations

Figure 3-1	Sequence Diagram of Cyclic Transmission	
Figure 3-2 Figure 3-3	Sequence Diagram of Event based Transmission  Sequence Diagram of Event based Transmission with Delay	
Figure 3-4	Sequence Diagram of Cyclic and Event based Transmission in combination	
Figure 4-1	Including II_Vector_Gm	
Figure 4-2	Call of the II_Vector cyclic function	20
Tables		
Table 1-1	History of the Document	2
Table 1-2	Reference Documents	
Table 3-1	Validity Bit Value Interpretation	14
Table 3-2	VDA Bit Value Interpretation	
Table 3-3	Extended CAN Identifier fields	



# 2 Component History

This chapter describes the implementation of the Vector Interaction Layer for General Motors in GENy.

### 2.1 II\_Vector\_Gm Version 1.00.00

#### 2.1.1 What is new?

- > The Interaction Layer is configured with GENy.
- > API to handle signal groups.
- > Mask bit support.

### 2.1.2 What has changed?

- > The Validity bit API is the same API as for Mask bits or signal groups.
- > Reduction of the code size.

### 2.2 II\_Vector\_Gm Version 1.01.00

#### 2.2.1 What is new?

> IIRxDeactivateVnMsg clears now the flags of deactivated messages (see 3.5).

### 2.2.2 What has changed?

> The Rx timeout table(IRxTimeoutTbI) was moved to gmlcal.c and can now be calibrated (post build).



# 3 Functional Description

#### 3.1 Data Transmission

This chapter describes the data transmission concept of II\_Vector\_Gm.



### Caution


The data transmission differs to the II\_Vector data transmission described in [2].

### 3.1.1 Cyclic Transmission

The cyclic transmission is configured in the network database with the attributes GenMsgSendType and GenSigSendType (See in chapter 5.1.1 Send Type). If either the message or a signal of the message is configured as cyclic, the message is transmitted periodically. The period of the message is defined with the dbc attribute GenMsgCycleTime (See in [2]).

The cyclic transmission of a message starts automatically, if the II\_Vector\_Gm is initialized and the transition IITxStart is performed for the channel and a VN is active which is related to a signal within a message.

The following sequence diagram describes the cyclic transmission of a message.

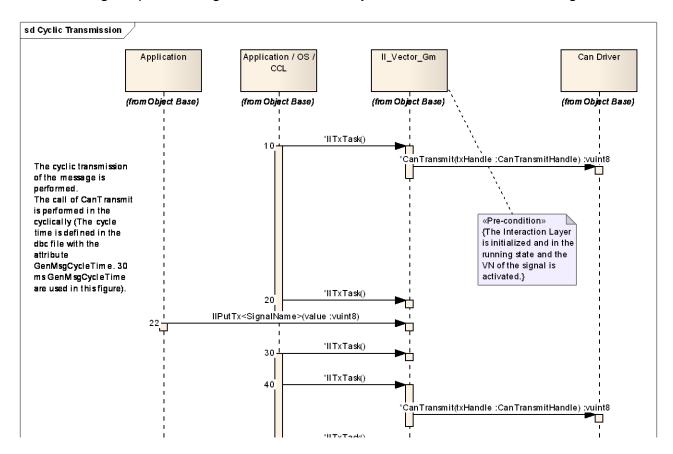

©2013, Vector Informatik GmbH Version: 2.01.02 9 / 48



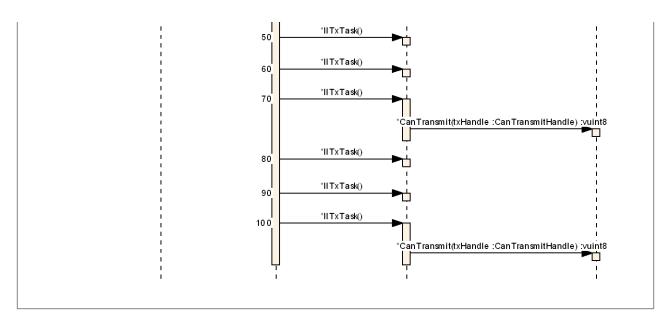


Figure 3-1 Sequence Diagram of Cyclic Transmission

#### 3.1.2 Event Based Transmission

If the GenSigSendType OnAnyChange, OnChangelfActive, OnDelta is defined in the network database for signals, the application has to take care of the transmission event and triggers the transmission of signals.



#### Caution

If the application does not trigger the transmission, data can get lost.

To implement this functionality, the II\_Vector\_Gm provides to the application StateOn Flags per signal and the IISetEvent API (See in chapter 6.2.1.1 IISetEvent). The following sequence diagram shows the event based transmission in detail. The application checks the VN activity of the signal and if a related VN is active, the application calls IISetEvent to set a transmission request. The transmission takes place either within the next call of the IITxTask (See Figure 3-2 Sequence Diagram of Event based Transmission), or the transmission is delayed, until the message delay time is elapsed (See Figure 3-3 Sequence Diagram of Event based Transmission with Delay and the description of the

Sequence Diagram of Event based Transmission with Delay and the description of the GenMsgDelayTime in [2]).



#### Example

The following code is an example of a event based transmission.

```
/* Write the value to the data buffer for the signal
"EngOilTemp" */
IlPutTxEngOilTemp(5);
/* Check, that the signal is in an active VN */
if (IlGetTxEngOilTempStateOn())
```

©2013, Vector Informatik GmbH Version: 2.01.02 10 / 48



```
/* Perform the transmission request and
  use the generated signal handle from il_par.h as parameter */
  IlSetEvent(IlTxSigEngOilTemp);
}
```

The message transmission results of the implemented signal transmission modes. More than one transmission type can be implemented in one message.

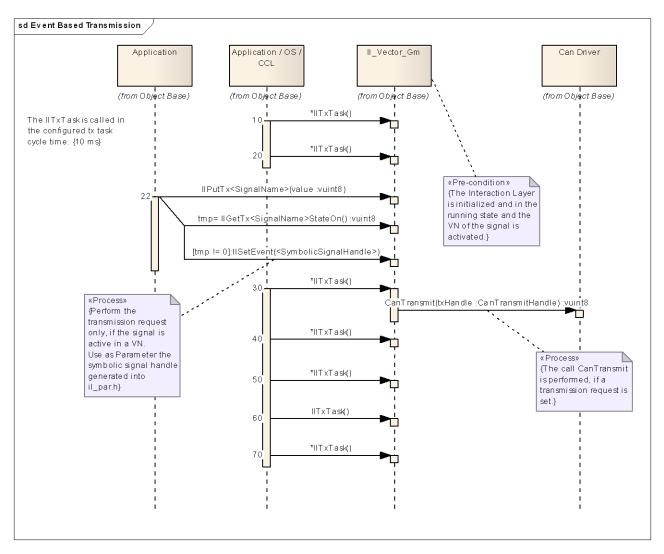


Figure 3-2 Sequence Diagram of Event based Transmission

©2013, Vector Informatik GmbH Version: 2.01.02 11 / 48



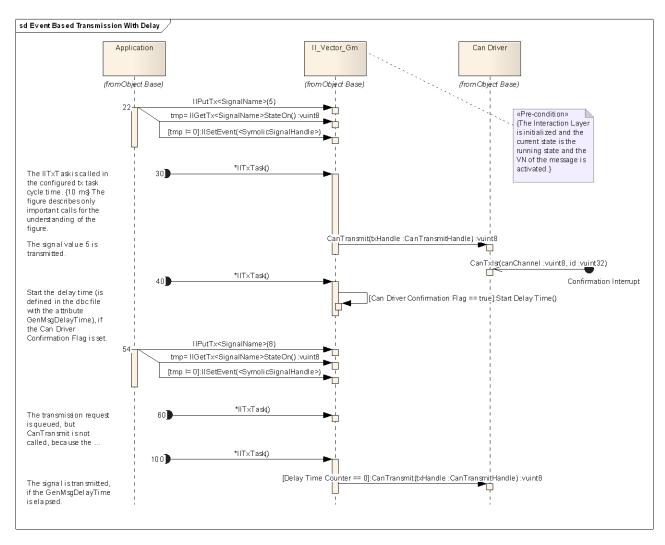


Figure 3-3 Sequence Diagram of Event based Transmission with Delay

©2013, Vector Informatik GmbH Version: 2.01.02 12 / 48



#### 3.1.3 Mixed Transmission

The implementation of event based transmission modes for signals can be combined with cyclic transmission. The event based transmission does not influence the periodic transmission event. If the event transmission request is set in the same timeslot as the periodic transmission event, the transmission request is merged.

If the GenSigSendType OnWrite, OnAnyChange, OnChangelfActive, OnDelta is defined in the network database for signals, the application has to take care of the transmission event and triggers the transmission of signals.



#### Caution

If the application does not trigger the transmission, data can get lost.

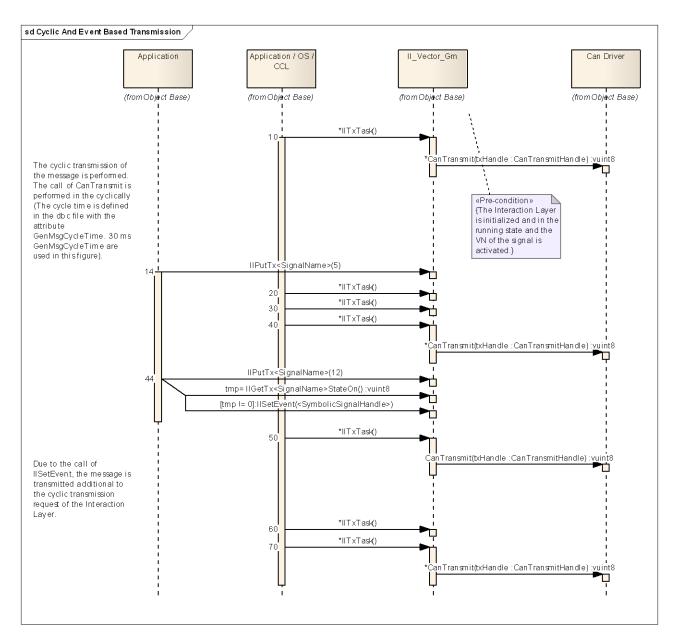


Figure 3-4 Sequence Diagram of Cyclic and Event based Transmission in combination

©2013, Vector Informatik GmbH Version: 2.01.02 13 / 48



### 3.2 Signal Access

The signal API for normal signals is performed as described in [2]. If GENy detects, that the message contains a signal with a related validity, mask or VDA (Virtual Device Availability) bit, the signals are merged into a new created signal group, to access the signals consistently.



#### **Example**

The following code is an example for a Signal "EngOilTemp" with validity bit EngOilTempV which is grouped into the signal group EngOilTempGroup. A indication flag has been configured for the signal "EngOilTemp". The shadow buffer for the signal group is provided by the Interaction Layer.

```
vuint8 data = 0;
/* Check, that the signal is received */
if (IlGetRxEngOilTempIndication())
 /* Clear the indication flag */
 IlClrRxEngOilTempIndication();
 /* Check, that the signal is in an active VN */
 if (IlGetRxEngOilTempStateOn())
 {
   /* Read the complete signal group to a temporary buffer */
   IlGetRxEngOilTempStateOnGroup();
   /* Check the validity bit */
   if(IlGetRxEngOilTempV() == 0)
    /* Read the signal value and continue data processing */
    data = IlGetRxEngOilTemp();
   }
 }
```

Validity Bit Value	Description
0	The signal value is valid.
1	The signal value is NOT valid.

Table 3-1 Validity Bit Value Interpretation



VDA Bit Value	Description
0	The virtual device is NOT available.
1	The virtual device is available.

Table 3-2 VDA Bit Value Interpretation



#### Caution

Due to historical compatibility reasons, the interpretation of validity and VDA bit value is different.

### 3.3 Extended CAN Identifiers

GMLAN V3.1 is intended to be used with standard and extended CAN identifiers.

This extended CAN Identifiers are introduced to provide the so called Source Learning with Supervision mechanism. This is an extension to the already provided timeout and fault recovery functions.

### 3.3.1 Source Learning

The 29-bit header of an extended CAN Identifier is separated into different fields:

Priority Field	Bit 28-26	3 bit field used to adjust a message's importance when the transmitter arbitrates for the bus.  The value is specified in the network database and cannot be changed at runtime.
Parameter Field	Bit 25-13	13 bit field used to identify the parameter(s) contained within the data field of the message. The parameter(s) will be assigned as ID as they are added to the network database.
		The value is specified in the network database and cannot be changed at runtime.
Reserved	Bit 12-8	All remaining bits within the 29 bit header shall be reserved for future use. All reserved bits are set to zero by the CAN Driver.
Source Address Field	Bit 7-0	8 bit field used to identify the module which transmitted the message.
		The source address of an ECU is set by the application in the startup code at runtime via the API IISetOwnNodeAddress (See in chapter 6.1.1.7 IISetOwnNodeAddress).

Table 3-3 Extended CAN Identifier fields

If an extended CAN Identifier is received by an ECU, the priority and source address are filtered by the use of masks generated by the generation tool. The filter for CAN identifier of the CAN controller ignores the parameter values and reserved bits when the message is



received. This enables the system to learn the source address for a specific message. I.e. the source address can be set dynamically.

The application is notified by the call of AppllSourceAddressLearned (See in chapter 6.3.1 AppllSourceAddressLearned), if a new source address has been learned by the ECU.

If the source address of message changes or the message is received the first time the callback function ApplllRxMsgSrcAddressLearned (See in chapter 6.3.2 ApplllRxMsgSrcAddressLearned) is called additional to indicate the relationship between the message and the current ECU, which transmits the message.

No source address is learned at the first ECU start up. The source addresses of all RX messages are set by default to either 254 or 255. A message with a source address of 254 is not mandatory. Messages with a source address of 255 will be mandatory. The source address can be read by the function <code>IIGetRxMessageSourceAddress</code> (See in chapter 6.2.1.4 <code>IIGetRxMessageSourceAddress</code>).

If the application needs to identify the current communication state of a learned node the function IIGetNodeCommActiveState (See in chapter 6.2.1.2 IIGetNodeCommActiveState) is provided by the Interaction Layer.

During the reception of messages the Interaction Layer learns and stores the source address of each received message. The application has to store the source addresses in a permanent memory location to avoid a new learning phase of the system. If the system is powered up again, the application has to program the previously learned Source addresses via IISetRxMessageSourceAddress (See in chapter 6.2.1.3 IISetRxMessageSourceAddress). An example of the relearning is provided in chapter 4.2 Initialization.

# 3.3.2 Source Address Timeout Supervision

The Node Communication Active message (NCA message) is transmitted by each ECU in the network, if the communication is active for a VN (Except VN 0, this one is reserved for diagnosis). With this message it is possible to learn the source address of an ECU, even if no other extended Identifier message is transmitted.

The node timeout supervision starts with the reception of the first extened id message that is no NCA message. If no extended Identifier message with the already learned source address is received, a timeout occurs. The timeout is notified to the application by the call of ApplllNodeCommActiveFailed (See in chapter 6.3.4 ApplllNodeCommActiveFailed) with the missing source address. The timeout supervision is performed even for messages, which are not learned by the ECU. If mandatory messages are missing, the source address 255 is passed and 254 for optional messages. If the timeout of a source address is detected, it can be assumed, that all signals related to that source address are in timeout. Additional timeout notifications for extended Identifier messages (message timeout function, signal timeout flags or timeout function) are called or set and timeout default values are set if they are configured.

If an extended Identifier message with the already learned source address is received again (e.g. the NCA message), the application is notified with the call of AppllINodeCommActiveRecovery (See in chapter 6.3.3 ApplIINodeCommActiveRecovery).



### 3.4 Application Controlled Message Filter

The application can enable and disable the transmission and the reception of messages, which affects all signals included in that messages. See in chapter 6.2.1.5 IISetRxMessageEnable and chapter 6.2.1.6 IISetTxMessageEnable.



### **Example**

Here is an example implementation of the message filter that has been prepared for you.

```
void ApplIlInit(void)
{
   /* Disable the reception of the message RPM_F */
   vError = IlSetRxMessageEnable(IlRxMsgRPM_F,
   kIlMessageDisabled);

   /* Disable the transmission of the message Vspeed */
   vError = IlSetTxMessageEnable(IlTxMsgVSpeed,
   kIlMessageDisabled);
}
```

### 3.5 Clearing Flags on Deactivate VN

The switch "Enable Clearing Flags on Deactivate VN", in the GENy GUI, enables clearing flags if the function IIRxDeactivateVnMsg is called. This function is called by the NM to deactivate a VN.

These flags are cleared: first value flags, timeout flags, node timeout flags and indication flags.

Only flags of messages which have been deactivated in IIRxDeactivateVnMsg are cleared. A message gets deactivated if all VNs a message is in are deactivated.



#### Info

If you have an old project and activate this feature you may have to adapt your application.



#### Info

The flags for a signal are cleared when all VNs associated to any signal of the message are deactivated



# 4 Integration

This chapter includes an example for the integration of the Interaction Layer. Most configurations depend on the customer's environment. Therefore, we can only describe a single simple configuration just to show how it could look like. We use pseudo code for our example. It won't be possible to compile this code.

### 4.1 Include structure

To use the Vector Interaction Layer for GMLAN, only the file il\_inc.h must be included in all application components that want to use Interaction Layer functionality. The file can\_inc.h (which provides the CAN Driver interface and data buffers) must not be included separately, it is automatically included by il inc.h.

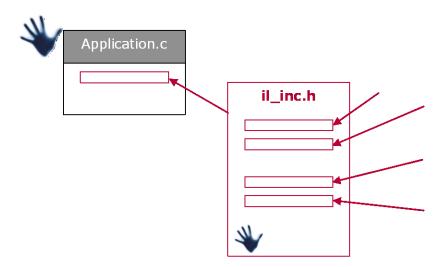


Figure 4-1 Including II\_Vector\_Gm

### 4.2 Initialization

If the CCL is not used in the software stack, the application has to initialize the components.

### **Example**

Here is an example, if the initialization has to be implemented by the application.

```
/* Disable interrupts during the initialization of the
Components */
DisableInterrupts();

/* Initialize all components */
CanInitPowerOn();
IlInitPowerOn();
TpInitPowerOn();
```



```
DiagInit();

IlSetOwnNodeAddress(srcAddress);
/* Enabling Interrupts is no longer critical, but not recommended. */

/* Relearn already learned source addresses from the EPROM */
for (Hnd = 0; Hnd < iNrOfEPROMElements; Hnd++ )
{
    IlSetRxMessageSourceAddress(ReadRxHandleFromEPROM(Hnd), ReadSrcAdressFromEPROM(Hnd));
}

/* Enable interrupts */
EnableInterrupts();</pre>
```

### 4.3 Cyclic function

The IIRxTask and IITxTask must be called cyclically as configured in GENy by the Application, OS or CCL.



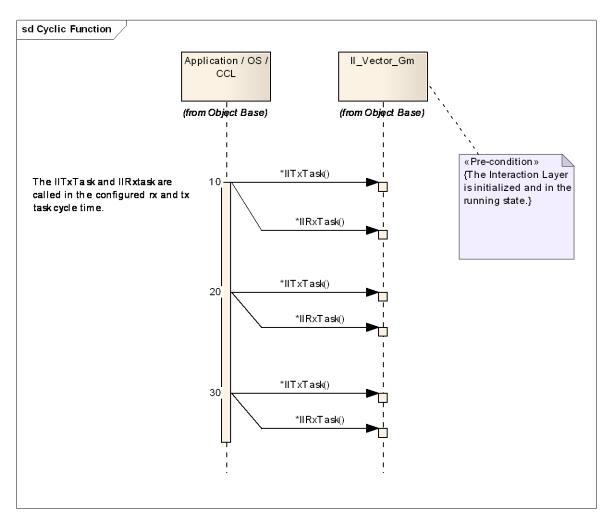


Figure 4-2 Call of the II\_Vector cyclic function



### Example

Here is an example, if the task calls have to be implemented by the application.

```
for(;;)
{
   /* periodic call of IlRxTask() and IlTxTask() */
   if (flag_10ms)
   {
      IlRxTask();
      IlTxTask();
      flag_10ms = 0; /* clear flag which was set by a timer
   */
   }
}
```



# 5 Configuration

#### 5.1 Database Attributes

This chapter describes the dbc network database attributes, which can be used with II\_Vector\_Gm.



#### Info

The strings used for the enumerated database attributes are often OEM-specific and can differ here from general descriptions. Do not change the order of string values in enumerated database attributes. The code generator evaluates always the numerical indexe of the string list.



#### Caution

Don't mix up the order of enumeration values. Not the value of the attribute is interpreted, the position of the selected value.

### 5.1.1 Send Type

Name	GenMsgSendType
Description	Message related transmission mode.
Type Of Object	Message
Value Type	Enumeration
Default	CyclicX
Values	CyclicX, SpontanX, NotUsed, No

Name	GenSigSendType
Description	Signal related transmission mode.
Type Of Object	Signal
Value Type	Enumeration
Default	NoSigSendType
Values	Periodic, NotUsed, NotUsed, NotUsed, NotUsed, NotUsed, NoSigSendType, NotUsed, NotUsed, OnAnyChange, OnChangelfActive, OnDelta

### 5.1.2 Default Values



#### Caution

Please note, the attribute GenSigStartValue sets the Default value at initialization time, not if IIRxStart or IITxStart is called. Due to historical and compatibility reasons, this



confusing definition cannot be changed any more.

Name	GenSigStartValue	
Description	This value is the default value for the signal, if IllnitPowerOn is called.	
	The string value type can represent hexadecimal and integer values.	
Type Of Object	Signal	
Value Type	String, Integer*, Float*	
Default	0x0	
Minimum	0x0	
Maximum	Oxffffffffff	

# 5.1.3 Tx NCA Message

Name	NodeStatusMsgID
Description	This value is the Extended CAN identifier of the Tx "Node Communication Active" message.
Type Of Object	Network
Value Type	Hex
Default	0xFFF800
Minimum	0x1FFFFFF
Maximum	0xffffffffff

Name	NodeStatusMsgCycleTime
Description	This value is the cycle time of the Tx "Node Communication Avtive" message. The message is transmitted, if a virtual network is active.
Type Of Object	Network
Value Type	Integer
Default	1200
Minimum	0
Maximum	65535



Name	NodeStatusMsgTimeoutTime
Description	This value is the timeout time supervision of the Rx Node Communication Active message.
Type Of Object	Network
Value Type	Integer
Default	3000
Minimum	0
Maximum	65535

# 5.1.4 Timeout Supervision

Name	GenMsgMandatoryToSupervision
Description	This value represents the initial source address, which will be indicated to the application via AppllINodeCommActiveFailed, if no other source address has been learned. If No is set, the source address is set to 254, else 255 is set.
Type Of Object	Message
Value Type	Enumeration
Default	No
Values	No, Yes

Name	GenSigSendOnInit
Description	If a signal of a message has this value set to Handler, the SendOnInit property of the message is activated and preconfigurated.
	The message is transmitted, if IISendOnInitMsg() or IIQueueVnMsg() is called (Called if an initial active VN is activated) or the virtual network is activated (a VN can start locally or remotely if a VNMF message is received).
Type Of Object	Signal
Value Type	Enumeration
Default	NotInitialized
Values	NotInitialized, Application, Handler



Name	GenSigSuprvResp
Description	This value preconfigurates the timeout flag and timeout default value.
	0 : Preconfigure nothing
	1 : A timeout flag is configured for the signal
	2 : A timeout default value is configured for the signal
	3 : A timeout flag and timeout default value is configured for the signal
Type Of Object	Node – Mapped Rx Signal
Value Type	Enumeration
Default	None
Values	None, Notify, Substitute, NotifySubstitute

Name	GenSigSuprvRespSubValue
Description	This Value is the timeout default value for the signal, if a timeout occurs.
	The integer value allows the definition of timeout values for signals with a maximum Length of 4 Bytes.
Type Of Object	Node – Mapped Rx Signal
Value Type	Integer
Default	0x0
Minimum	0x0
Maximum	4294967296



# 6 API Description

The following chapter extends or replaces API function descriptions provided in the Technical Reference of the Interaction Layer [2].

### 6.1 Administrative functions

### 6.1.1.1 IllnitPowerOn

**IIInitPowerOn** 

Prototype		
void IlInitPowerOn	(void)	
Parameter		
void	none	
Return code		
void	none	
Functional Description		
This method initializes the II_Vector on all channels.		
Illnit is called for every channel.		
Particularities and Limitations		
The function is called by the Application or Ccl (Communication Control Layer).		
Call context		
The function must be called with disabled interrupts.		
The function must not interrupt IIRxTask, IIRxStateTask, IITxTask, IITxStateTask, IIInit, IIRxStart, IITxStart, IIRxStop, IITxStop.		

### 6.1.1.2 Illnit

Illnit

Prototype	
Single Channel	
Single Receive Channel	void IlInit (void)
Multi Channel	
Indexed (MRC)	void IlInit (CanChannelHandle channel)
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
Return code	
void	none



### **Functional Description**

This method initializes the II Vector on a channel.

Rx and Tx data buffers and flags are set to the initial state. If no default value for a message is defined, the data buffer is set to 0x00. IINwmInit of Nm\_Gmlan\_Gm is called if the initialization is performed.

### **Particularities and Limitations**

The function is called by the Application, CcI (Communication Control Layer) or IllnitPowerOn.

#### Call context

The function must be called with disabled interrupts.

The function must not interrupt IIRxTask, IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIRxStart, IITxStart, IIRxStop, IITxStop.

#### 6.1.1.3 IIRxTask

**IIRxTask** 

Prototype	
Single Channel	
Single Receive Channel	void IlRxTask (void)
Multi Channel	
Indexed (MRC)	void IlRxTask (CanChannelHandle channel)
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
Return code	
void	none

### **Functional Description**

This method must be called periodically in the Rx task cycle time configured in the generation tool. The IIRxTimerTask and IIRxStateTask are called by this method.

#### **Particularities and Limitations**

The function is called by the Application or Ccl (Communication Control Layer).

#### Call context

The function must be called on task level.

The function must not interrupt IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IIRxStart, IITxStart, IIRxStop, IITxStop

### 6.1.1.4 IITxTask

**IITxTask** 

Prototype	
Single Channel	
Single Receive Channel	void IlTxTask (void)
Multi Channel	



Indexed (MRC)	void IlTxTask (CanChannelHandle channel)
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
Return code	
void	none

#### Functional Description

This method must be called periodically in the Tx task cycle time configured in the generation tool. The IITxTimerTask and IITxStateTask are called by this method.

#### **Particularities and Limitations**

The function is called by the Application or CcI (Communication Control Layer).

#### Call context

The function must be called on task level.

The function must not interrupt IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IIRxStart, IITxStart, IIRxStop, IITxStop

### 6.1.1.5 IIRxStateTask

**IIRxStateTask** 

Prototype		
Single Channel		
Single Receive Channel	void IlRxStateTask (void)	
Multi Channel		
Indexed (MRC)	void IlRxStateTask (CanChannelHandle channel)	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	

#### Functional Description

This method is called periodically by the IIRxTask. The function can be called in a faster rate than the IIRxTask to check additionally for polled indication events. The usage of the IIRxTask shall be preferred.

- The source addresses queued for the source address learning are learned.
- The timeout counter for the source address is started, if the source address is not already known.

### Particularities and Limitations

The function is called by the Application or IIRxTask.

#### Call context

The function must be called on task level.

The function must not interrupt IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IIRxStart, IITxStart, IIRxStop, IITxStop



### 6.1.1.6 IITxStateTask

**IITxStateTask** 

Prototype			
Single Channel	Single Channel		
Single Receive Channel	void IlTxStateTask (void)		
Multi Channel			
Indexed (MRC)	void IlTxStateTask (CanChannelHandle channel)		
Parameter			
channel (Indexed)	Handle of the logical CAN Driver channel.		
Return code			
void	none		

### Functional Description

This method is called periodically by the IITxTask. The function can be called in a faster rate, than the IITxTask, to check additionally for polled confirmation events. The usage of the IITxTask shall be preferred.

### **Particularities and Limitations**

The function is called by the Application or IITxTask.

#### Call context

The function must be called on task level.

The function must not interrupt IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IIRxStart, IITxStart, IIRxStop, IITxStop

### 6.1.1.7 IISetOwnNodeAddress

**IISetOwnNodeAddress** 

Prototype		
Single Channel		
Single Receive Channel	Il_Status IlSetOwnNodeAddress (vuint8 srcAddress)	
Multi Channel		
Indexed (MRC)	<pre>Il_Status IlSetOwnNodeAddress (CanChannelHandle channel, vuint8 srcAddress)</pre>	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
srcAddress	Source address of this ECU, which will be added to the low byte of each extended ID transmitted by the CAN driver.	
Return code		
II_Status	IL_OK : the node address has been set.	
	IL_ERROR : the node is not configured for the usage of GMLAN extended identifiers and the source address is not accepted.	
Functional Description		
This method sets the source	This method sets the source address for this ECU.	



# **Particularities and Limitations**

none

### Call context

The function must be called on task level after CanInitPowerOn is called AND before interrupts are activated.

### 6.2 Service functions

### 6.2.1.1 IISetEvent

**IISetEvent** 

Prototype		
void IlSetEvent (IlTransmitHandle ilTxHnd)		
Parameter		
ilTxHnd	Handle of the Tx message.	
Return code		
void	none	
Functional Description		
This method serves to set a transmission request for a message.		
Particularities and Limitations		
The function is called by the Application or by IIPutTx method.		
Call context		
The function can be called on task and interrupt level.		

### 6.2.1.2 IIGetNodeCommActiveState

### **IIGetNodeCommActiveState**

Prototype			
Single Channel	Single Channel		
Single Receive Channel	vuint8 IlGetNodeCommActiveState	(vuint8 srcAddress)	
Multi Channel	Multi Channel		
Indexed (MRC)	<pre>vuint8 IlGetNodeCommActiveState channel, vuint8 srcAddress)</pre>	(CanChannelHandle	
Parameter			
channel (Indexed)	(Indexed) Handle of the logical CAN Driver channel.		
srcAddress	Source address of an ECU.		



Return code		
wint8	kllNodeUnknown: The given node address has not been learnt.	
	kllNodeFailed: This node is in timeout state.	
	kllNodeActive: Node is sending messages (at least one NCA).	
	kllNodeldle: Node address is in the list, but is currently inactive.	
Functional Description		
This method returns the state of an ECU in the network. The II searches for the srcAddress and returns the status.		

Particularities and Limitations

none

Call context

The function must be called on task level.

# 6.2.1.3 IISetRxMessageSourceAddress

**IISetRxMessageSourceAddress** 

			•
Prototype			
<pre>Il_Status IlSetRxMessageSourceAddress (IlReceiveHandle ilRxHnd, vuint8 srcAddress)</pre>		ilRxHnd, vuint8	
Parameter			
ilRxHnd	Handle of the Rx message.		
srcAddress	Source address of an ECU	for this message.	
Return code			
II_Status	IL_OK : the source address	is now configured for the	Rx message
	IL_ERROR : ilRxHnd is invainconsistent	alid or iIRxExtIdHnd is inc	onsistent or channel is
Functional Description			
This method sets the source	This method sets the source address as learned for a Rx message.		
Particularities and Limitations			
The function is only available if Extended-Identifiers are used.			
Call context			
The function must be called on task level.			

# 6.2.1.4 IIGetRxMessageSourceAddress

**IIGetRxMessageSourceAddress** 

Prototype	
<pre>Il_Status IlGetRxMessageSourceAddress</pre>	(IlReceiveHandle ilRxHnd, vuint8
*pSrcAddress)	



Parameter	
ilRxHnd	Handle of the Rx message.
pSrcAddress	Pointer to where the source address of a message has to be stored.
Return code	
II_Status	IL_OK : the source address is now returned for the Rx message
	IL_ERROR: ilRxHnd is invalid or ilRxExtIdHnd is inconsistent or channel is inconsistent
Functional Description	
This method returns the source address a Rx message learnt in the last session.	
Particularities and Limitations	
The function is only available if Extended-Identifiers are used.	
Call context	
The function must be called on task level.	

# 6.2.1.5 IISetRxMessageEnable

**IISetRxMessageEnable** 

Prototype			
<pre>Il_Status IlSetRxMessageEnable (IlReceiveHandle ilRxHnd, vuint8 type)</pre>			
Parameter	Parameter		
ilRxHnd	Handle of the Rx message. Use the message handle generated in il_par.h!		
type	kllMsgEnabled or kllMsgDisabled		
Return code			
II_Status	IL_OK : the Rx messages handle has been activated or deactivated		
	IL_ERROR: the Rx messages handle is out of range		
Functional Description			
This method activates or deactivates the reception of a message.			
Particularities and Limitations			
Only messages which are handled by the Interaction Layer can be enabled or disabled. TP and NM messages are not affected (NCA, HLVW, VNMF, USDT and UUDT messages).			
Call context			
The function must be called in the context of AplIIIInit().			

# 6.2.1.6 IISetTxMessageEnable

**IISetTxMessageEnable** 

P	rototype				
I	l_Status	IlSetTxMessageEnable	(IlTransmitHandle ilTxHnd,	vuint8 type)	



Parameter			
ilTxHnd	Handle of the Tx message. Use the message handle generated in il_par.h!		
type	kllMsgEnabled or kllMsgDisabled		
Return code			
II_Status	IL_OK : the Tx messages handle has been activated or deactivated		
	IL_ERROR: the Tx messages handle is out of range		
Functional Description	Functional Description		
This method activates or de	activates the transmission of a message.		
Particularities and Limit	Particularities and Limitations		
Only messages which are handled by the Interaction Layer can be enabled or disabled. TP and NM messages are not affected (NCA, HLVW, VNMF, USDT and UUDT messages).			
Call context			
The function must be called in the context of AplIIIInit().			

# 6.2.1.7 IIGetTransmitMessageStatus

### **IIGetTransmitMessageStatus**

Prototype	
vuint8 <b>IlGetTra</b>	ansmitMessageStatus (IlTransmitHandle ilTxHnd)
Parameter	
ilTxHnd	Handle of the Tx message. Do not use the generated signal handles for the message indirection!
Return code	
wint8	(wint8) 0 : the message is idle and no transmission is expected from the II kllTxMsgQueued : the transmission is requested to the CAN Driver and wait for confirmation
	kllTxMsgPending: the message is pending for queuing in the II.
Functional Descrip	otion
The function provides the status of the message.	
Particularities and Limitations	
The function is called by the Application.	
Call context	
The function can be called on task and interrupt level.	

### 6.3 Callback functions

The following functions have to be implemented by the application if the configuration in GENy activates the callback function.



# 6.3.1 ApplllSourceAddressLearned

### **ApplIISource Address Learned**

Prototype		
Single Channel		
Single Receive Channel	void ApplIlSourceAddressLearned	(vuint8 srcAddress)
Multi Channel		
Indexed (MRC)	<pre>void ApplIlSourceAddressLearned channel, vuint8 srcAddress)</pre>	(CanChannelHandle
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
srcAddress	Source address that has been learned.	
Return code		
void	none	
Functional Description		

# **Functional Description**

This method is called to indicate, that a new source address had been detected and learned from a node on the network. This method can be influenced by the call of IISetRxMessageSourceAddress. If a node transmits the NCA message and other extended Ids are not used, ApplIIRxMsgSrcAddressLearned will never be called, but this one will be called.

### **Particularities and Limitations**

The function is only available if Extended-Identifiers are used.

### Call context

The function is called in the context the IIRxStateTask or IISetRxMessageSourceAddress.

### 6.3.2 AppllIRxMsgSrcAddressLearned

### **AppIIIRxMsgSrcAddressLearned**

Prototype	
Single Channel	
Single Receive Channel	<pre>void ApplIlRxMsgSrcAddressLearned (IlReceiveHandle ilRxHnd, vuint8 srcAddress)</pre>
Multi Channel	
Indexed (MRC)	<pre>void ApplIlRxMsgSrcAddressLearned (CanChannelHandle channel, IlReceiveHandle ilRxHnd, vuint8 srcAddress)</pre>
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
ilRxHnd	Handle of the II Rx message, where the source address has been learnt from.
srcAddress	Source address that has been learned.
Return code	
void	none



### **Functional Description**

This method is called to indicate, that a new source address had been detected and learned from a node on the network from a specific message. This method is not influenced by the call of IISetRxMessageSourceAddress. The function shall be used, to store the learned value and reset it during start-up via IISetRxMessageSourceAddress where the iIRxHnd is needed.

#### **Particularities and Limitations**

The function is only available if Extended-Identifiers are used.

Call context

The function is called by the IIRxStateTask.

### 6.3.3 ApplIINodeCommActiveRecovery

#### **ApplIINodeCommActiveRecovery**

Prototype		
Single Channel		
Single Receive Channel	<pre>void ApplIlNodeCommActiveRecovery srcAddress)</pre>	(vuint8
Multi Channel		
Indexed (MRC)	<pre>void ApplIlNodeCommActiveRecovery channel, vuint8 srcAddress)</pre>	(CanChannelHandle
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
srcAddress	Source address of an ECU.	
Return code		
void	none	
F 41 15 141		

#### Functional Description

This method is called to indicate, that an extended Identifier from the source address has been received again after a communication failure had been detected.

#### **Particularities and Limitations**

The function is only available if Extended-Identifiers are used.

Call context

The function is called in the context the IIRxStateTask or IISetRxMessageSourceAddress.

### 6.3.4 ApplIINodeCommActiveFailed

### **ApplIINodeCommActiveFailed**

Prototype			
Single Channel			
Single Receive Channel	void ApplIlNodeCommActiveFailed	(vuint8	srcAddress)
Multi Channel			

# Technical Reference Interaction Layer for General Motors



Indexed (MRC)	<pre>void ApplIlNodeCommActiveFailed channel, vuint8 srcAddress)</pre>	(CanChannelHandle
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
srcAddress	Source address of an ECU.	
Return code		
void	none	

### **Functional Description**

This method is called to indicate, that timeout supervision of the Node Communication Active message of a source address has been failed.

### **Particularities and Limitations**

The function is only available if Extended-Identifiers are used.

### Call context

The function is called by the IIRxTimerTask.



# 7 Abbreviations

Abbreviation	Description
API	Application Programming Interface
CAN	Controller Area Network
CCL	Communication Control Layer
ECU	Electronic Control Unit
HLVW	High Voltage Wake Up
MRC	Multiple Receive Channel
NCA	Node Communication Active
NM	Network Management
OS	Operating System
USDT	Unacknowledged and Segmented Data Transfer
UUDT	Unacknowledged and Unsegmented Data Transfer
VDA	Virtual Device Availability
VN	Virtual Network
VNMF	Virtual Network Management Frame



# 8 Appendix

## 8.1 Nm\_Gmlan\_Gm Interface

The following methods are interface functions provided by the Interaction Layer for the Gmlan Network Management.



#### Caution

Do not use this functions from within the application unless not explicitly required.

#### 8.1.1 IIRxStart

**IIRxStart** 

Prototype		
Single Channel		
Single Receive Channel	void IlRxStart (void)	
Multi Channel		
Indexed (MRC)	void IlRxStart (CanChannelHandle channel)	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	

#### Functional Description

This method enables the reception of messages. The transition "start" of the Rx state machine is performed.

- The flags used to indicate virtual network activity are cleared.
- Suspend the timeout counter for source address 255 and 254.
- Suspend the timeout counter for learned source addresses by clearing the number of active Rx messages per source address.

#### **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

#### Call context

The function must be called on task level.

The function must not interrupt IIRxTask, IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IITxStart, IIRxStop, IITxStop.

#### 8.1.2 IITxStart

**IITxStart** 



Prototype		
Single Channel		
Single Receive Channel	void IlTxStart (void)	
Multi Channel		
Indexed (MRC)	void IlTxStart (CanChannelHandle channel)	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	

This method enables the transmission of messages and starts the transmission of periodic messages. The transition "start" of the Tx state machine is performed.

- The flags used to indicate virtual network activity are cleared.
- Requests are queued to be transmitted by the call of IISendOnInitMsg.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

#### Call context

The function must be called on task level.

The function must not interrupt IIRxTask, IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IITxStart, IIRxStop, IITxStop.

## 8.1.3 IIRxStop

**IIRxStop** 

Prototype		
Single Channel		
Single Receive Channel	void IlRxStop (void)	
Multi Channel		
Indexed (MRC)	void IlRxStop (CanChannelHandle channel)	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	
Functional Description		

## **Functional Description**

This method disables the reception of messages. The transition "stop" of the Rx state machine is performed. The method is used for example to enter the Sleep Mode of an ECU.

- The timeout flags for the application are cleared.
- All Rx virtual networks must be deactivated to call IIRxStop().



# **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

#### Call context

The function must be called on task level.

The function must not interrupt IIRxTask, IIRxStateTask, IITxTask, IITxStateTask, IIInitPowerOn, IIInit, IITxStart, IIRxStop, IITxStop.

# 8.1.4 IITxStop

**IITxStop** 

Prototype		
Single Channel		
Single Receive Channel	void IlTxStop (void)	
Multi Channel		
Indexed (MRC)	void <b>IlTxStop</b> (CanChannelHandle channel)	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	

## **Functional Description**

This method disables the transmission of messages (Sleep Mode). The transition "stop" of the Tx state machine is performed. The method is used for example to enter the Sleep Mode of an ECU.

- All Tx virtual networks must be deactivated to call IITxStop.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

#### Call context

The function must be called on task level.

The function must not interrupt IllnitPowerOn, Illnit, IIRxTask, IIRxStateTask, IIRxTimerTask, IITxTask, IITxStateTask, IITxTimerTask, IIRxStart, IITxStart, IIRxStop

## 8.1.5 IIRxWait

**IIRxWait** 

Prototype	
Single Channel	
Single Receive Channel	void IlRxWait (void)
Multi Channel	
Indexed (MRC)	void IlRxWait (CanChannelHandle channel)
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.



## Return code

void none

# **Functional Description**

This method halts the reception of messages. The transition "wait" of the Rx state machine is performed. The method is used for example when the bus-off mode of an ECU was entered.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

Call context

The function can be called on task and interrupt level.

#### 8.1.6 IITxWait

**IITxWait** 

Prototype	
Single Channel	
Single Receive Channel	void IlTxWait (void)
Multi Channel	
Indexed (MRC)	void IlTxWait (CanChannelHandle channel)
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
Return code	
void	none

## Functional Description

This method halts the transmission of messages. The transition "wait" of the Tx state machine is performed. The method is used for example when the bus-off mode of an ECU was entered.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

Call context

The function can be called on task and interrupt level.

## 8.1.7 IIRxRelease

**IIRxRelease** 

Prototype		
Single Channel		
Single Receive Channel	void IlRxRelease	(void)
Multi Channel		
Indexed (MRC)	void IlRxRelease	(CanChannelHandle channel)



Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
Return code	
void	none
Trunctional Decembrian	

This method restarts the reception of messages from the "Waiting" state. The transition "release" of the Rx state machine is performed.

- The timeout counters for all source addresses are restarted.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

Call context

The function can be called on task and interrupt level.

### 8.1.8 IITxRelease

**IITxRelease** 

Prototype		
Single Channel		
Single Receive Channel	void IlTxRelease	(void)
Multi Channel		
Indexed (MRC)	void IlTxRelease	(CanChannelHandle channel)
Parameter		
channel (Indexed)	Handle of the logical CAN	Driver channel.
Return code		
void	none	

# **Functional Description**

This method resumes the transmission of messages from the "Waiting" state. The transition "release" of the Tx state machine is performed.

## **Particularities and Limitations**

The function is called by the Application or NM (Network Management).

Call context

The function can be called on task and interrupt level.

# 8.1.9 IIRxActivateVnMsg

**IIRxActivateVnMsg** 

# **Prototype**

# Single Channel



Single Receive Channel	Il_Status IlRxActivateVnMsg (vuint8 ilVnHnd)
Multi Channel	
Indexed (MRC)	<pre>Il_Status IlRxActivateVnMsg (CanChannelHandle channel, vuint8 ilVnHnd)</pre>
Parameter	
channel (Indexed)	Handle of the logical CAN Driver channel.
ilVnHnd	II_Vector_Gm internal VN handle.
Return code	
II_Status	IL_ERROR: a parameter check has failed OR the Rx state machine of the channel is not in the running state
	IL_VN_ALREADY_ACTIVE : an already activated VN has been requested for activation
	IL_VN_ACTIVATED : the VN is now activated
Functional Description	
This method starts all Rx messages of a VN.	
Particularities and Limitations	
The function is called by Nm_Gmlan_Gm.	
Call context	
The function must be called on task level and if the Rx state machine of the dependent channel is in the running state.	

# 8.1.10 IIRxDeactivateVnMsg

# IIRxDeactivateVnMsg

Prototype		
Single Channel		
Single Receive Channel	Il_Status IlRxDeactivateVnMsg (vuint8 ilVnHnd)	
Multi Channel		
Indexed (MRC)	<pre>Il_Status IlRxDeactivateVnMsg (CanChannelHandle channel, vuint8 ilVnHnd)</pre>	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
ilVnHnd	II_Vector_Gm internal VN handle.	
Return code		
II_Status	IL_ERROR: a parameter check has failed OR the Rx state machine of the channel is not in the running state	
	an already deactivated VN has been requested for deactivation	
	IL_VN_DEACTIVATED : the VN is now deactivated.	



This method stops all Rx messages of a VN. If enabled, the flags of the deactivated messages are cleared (see 3.5).

## **Particularities and Limitations**

The function is called by Nm\_Gmlan\_Gm.

#### Call context

The function must be called on task level and if the Rx state machine of the dependent channel is in the running state.

# 8.1.11 IITxActivateVnMsg

**IITxActivateVnMsg** 

Prototype		
Single Channel		
Single Receive Channel	Il_Status IlTxActivateVnMsg (vuint8 ilVnHnd)	
Multi Channel		
Indexed (MRC)	<pre>Il_Status IlTxActivateVnMsg (CanChannelHandle channel, vuint8 ilVnHnd)</pre>	
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
ilVnHnd	II_Vector_Gm internal VN handle.	
Return code		
II_Status IL_ERROR: a parameter check has failed OR the Tx state machine channel is not in the running state		
	IL_VN_ALREADY_ACTIVE: an already activated VN has been requested for activation	
	IL_VN_ACTIVATED : the VN is now activated	
Functional Description		
This method starts all Tx messages of a VN.		
Particularities and Limitations		
The function is called by Nm_Gmlan_Gm.		
Call context		
The function must be called on task level and if the Tx state machine of the dependent channel is in the running state.		

# 8.1.12 IITxDeactivateVnMsg

**IITxDeactivateVnMsg** 

Prototype				
Single Channel				
Single Receive Channel	Il_Status	IlTxDeactivateVnMsg	(vuint8	ilVnHnd)



Multi Channel		
Indexed (MRC)	<pre>Il_Status IlTxDeactivateVnMsg channel, vuint8 ilVnHnd)</pre>	(CanChannelHandle
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
ilVnHnd	Il_Vector_Gm internal VN handle.	
Return code		
II_Status	IL_ERROR: a parameter check has failed OR the Tx state machine of the channel is not in the running state OR an already deactivated VN has been requested for deactivation	
	IL_VN_DEACTIVATED : the VN is now deact	tivated.
<b>Functional Description</b>		
This method stops all Tx m	essages of a VN.	
Particularities and Limitations		
The function is called by Nm_Gmlan_Gm.		
Call context		
The function must be called on task level and if the Tx state machine of the dependent channel is in the		

# 8.1.13 IIRxStartVnMsgSupervision

running state.

# **IIRxStartVnMsgSupervision**

		3-1
Prototype		
Single Channel		
Single Receive Channel	<pre>void IlRxStartVnMsgSupervision</pre>	(vuint8 ilVnHnd)
Multi Channel		
Indexed (MRC)	<pre>void IlRxStartVnMsgSupervision channel, vuint8 ilVnHnd)</pre>	(CanChannelHandle
Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
ilVnHnd	II_Vector_Gm internal VN handle.	
Return code		
void	none	
Functional Description		
This method starts the Rx extended id timeout supervision for all Rx messages of a VN, if		

This method starts the KX extended in timeout supervision for all KX messages of a VN,

- The arguments are valid.
- The Rx state machine is in the running state.
- The Rx VN is active.
- The Rx extended id timeout supervision is not already started.



# **Particularities and Limitations**

The function is called by Nm\_Gmlan\_Gm.

## Call context

The function must be called on task level and if the Rx state machine of the dependent channel is in the running state.

# 8.1.14 IIRxDeactivateVnMsgSupervision

**IIRxDeactivateVnMsgSupervision** 

	5 1		
Prototype			
Single Channel			
Single Receive Channel	<pre>Il_Status IlRxDeactivateVnMsgSupervision (vuint8 ilVnHnd)</pre>		
Multi Channel	Multi Channel		
Indexed (MRC)	<pre>Il_Status IlRxDeactivateVnMsgSupervision (CanChannelHandle channel, vuint8 ilVnHnd)</pre>		
Parameter			
channel (Indexed)	Handle of the logical CAN Driver channel.		
ilVnHnd	II_Vector_Gm internal VN handle.		
Return code			
II_Status	IL_ERROR: a parameter check has failed OR the Rx VN is not running OR the Rx state machine of the channel is not in the running state an already supervision deactivated VN has been requested for deactivation		
	IL_VN_DEACTIVATED: the timeout supervision of the VN is now deactivated.		
Functional Description			
This method stops the Rx timeout supervision for all Rx messages of a VN.			
Particularities and Limitations			
The function is called by Nm_Gmlan_Gm.			
Call context			
The function must be called on task level and if the Rx state machine of the dependent channel is in the running state.			

# 8.1.15 IIResetRxTimeoutFlags

**IIResetRxTimeoutFlags** 

Prototype		
Single Channel		
Single Receive Channel	<pre>void IlResetRxTimeoutFlags</pre>	(void)
Multi Channel		
Indexed (MRC)	<pre>void IlResetRxTimeoutFlags channel)</pre>	(CanChannelHandle



Parameter		
channel (Indexed)	Handle of the logical CAN Driver channel.	
Return code		
void	none	

This method clears Rx timeout flags of the Application and internal ilNodeCommActiveTimeoutFlags.

- The flags used internal to indicate NCA timeout are cleared.

## **Particularities and Limitations**

The function is called by the Application.



#### Caution

Do not call this II internal API from the application!

#### Call context

The function can be called on task and interrupt level.

# 8.1.16 IIRequeueTransmitMessages

### **IIRequeueTransmitMessages**

Prototype			
Single Channel			
Single Receive Channel	void IlRequeueTransmitMessages	(void)	
Multi Channel			
Indexed (MRC)	<pre>void IlRequeueTransmitMessages channel)</pre>	(CanChannelHandle	
Parameter			
channel (Indexed)	Handle of the logical CAN Driver channel.		
Return code			
void	none		

## Functional Description

This method queues again all pending Tx messages and set a transmission request for these Tx messages.

## **Particularities and Limitations**

The function is called by Nm\_Gmlan\_Gm during a Busoff to queue again all Tx messages that are pended for transmission to the CAN Driver. The transmit queue is cleared of the CAN Driver id cleared during a bus-off. Therefore all issued messages must be retransmitted by the II.

#### Call context

The function must be called on task level.



# 8.2 Interaction Layer Internal Interfaces

APIs which are not explicitly described in this or any other documentation for the usage shall not be called from the application.



#### Caution

Do not use internal functions from within the application unless not explicitly required.



# 9 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector-informatik.com