

MICROSAR DCM

Technical Reference

BMW

Version 8.6

A	Authors	Mishel Shishmanyan, Patrick Rieder, Vitalij Krieger, Thomas Dedler, Alexander Ditte, Savas Ates, Steffen Köhler, Simon Wolf, Amr Elazhary
5	Status	Released



Document Information

History

Author	Date	Version	Remarks
Thomas Dedler, Mishel Shishmanyan	2012-08-15	1.00.00	Initial version
Mishel Shishmanyan	2012-09-21	1.01.00	Added: 5.19 ReadDataByPeriodicIdentifier (\$2A) 5.22 InputOutputControlByIdentifier (\$2F) 6.5.2.7 ReturnControlToECU() 6.5.2.8 ResetToDefault() 6.5.2.9 FreezeCurrentState() 6.5.2.10 ShortTermAdjustment() 9.8 How to Jump into the FBL from Service DiagnosticSessionControl (\$10) 9.10 How to Put DCM in a Non-Default Session at ECU Power-On Modified: Table 6-94 DataServices_ <dataname> Table 3-4 DET Service IDs</dataname>
Mishel Shishmanyan	2012-12-12	1.02.00	Added: 5.15 ReadMemoryByAddress (\$23) 5.20 DynamicallyDefineDataIdentifier (\$2C) 5.24 WriteMemoryByAddress (\$3D) Table 6-55 Dcm_ReadMemory() Table 6-56 Dcm_WriteMemory() Modified: Table 6-62 ConditionCheckRead(), Table 6-65 ReadDataLength(), Table 6-66 WriteData() (dynamic length), Table 6-67 WriteData() (static length), Table 6-68 ReturnControlToECU(), Table 6-69 ResetToDefault(), Table 6-70 FreezeCurrentState(), Table 6-71 ShortTermAdjustment() -"OpStatus"-parameter availability limitation Table 6-48 <module>_<diagnosticservice>() Table 6-51 <module>_<diagnosticservice>_<subservice>() Table 5-54 Service \$86: Supported subservices</subservice></diagnosticservice></module></diagnosticservice></module>
Mishel Shishmanyan	2013-04-17	1.03.00	No changes
Mishel Shishmanyan	2013-04-17	1.04.00	Added:
who is on one of the state of t	2010-00-20	1.07.00	MANUE



	1	_	
			Chapters for OBD service 0x01- 0x0A.
			6.6.1.2.7 DtrServices
			6.6.1.2.8 RequestControlServices_ <tidname></tidname>
			6.6.1.2.9 InfotypeServices_ <vehinfodata></vehinfodata>
			9.11 How to Support Calibrateable Configuration
			Parameters
			Modified:
			Table 3-2 Not supported AUTOSAR standard conform features
			 Removed not supported OBD.
			T. / / 0.0 / : '' / / / / / / / / / / / / / / / /
			Table 8-3 Limitations to AUTOSAR
			 Removed not supported OBD.
Mishel Shishmanyan	2013-08-20	1.05.00	Added:
			6.6.1.2.10 CallbackDCMRequestServices <swc></swc>
			, –
			9.12 How and When to Configure Multiple Protocols
			2.12 From and Timon to Comigaro manapie i reteccie
			8.1 Deviations
			Added deviation to Callbook DCM/Darwage Samileas (SM/C)
			CallbackDCMRequestServices_ <swc></swc>
			service port.
			Table 0.2 Limitations to ALITOCAD
			Table 8-3 Limitations to AUTOSAR
			 Added maximum number of supported
			protocols.
			 Added maximum number of concurrent client
			diagnostic connections.
			Modified:
			5.14 ReadDataByIdentifier (\$22)
			5.22 InputOutputControlByIdentifier (\$2F)
			 Modified configuration and implementation
			aspects.
			Table 6-100
			DtrServices_ <midname>_<tidname></tidname></midname>
			Table 6-101 RequestControlServices_ <tidname></tidname>
			 Changed port names according to AR DCM
			SWS.
			Table 6-102 InfotypeServices_ <vehinfodata></vehinfodata>
			Editorial change.
			Lanconal onango.
			Table 8-3 Limitations to AUTOSAR
			Removed not supported multi-protocol.
			 Removed not supported multiple buffers.



Thomas Dedler,	2013-09-17	2.00.00	
Mishel Shishmanyan			
			Modified:
			8.1 Deviations
			 Removed deviations for DID and RID signals.
			3.1 Features
			Removed not supported multi-protocol. Paragual and supported multiple buffers.
			 Removed not supported multiple buffers.
			6.5.2.12 Start(), 6.5.2.13 Stop(), 6.5.2.14 RequestResults()
			 Changed function signatures and descriptions
			5.22 InputOutputControlByIdentifier (\$2F)
			 More details on how optional CEM is supported by DCM.
			6.5.2.10 ShortTermAdjustment()
			Removed statement that CEM is included in
			the controlOptionRecord.
Mishel Shishmanyan	2014-01-14	2.01.00	Added:
			9.13 How to Select DEM-DCM Interface Version
			9.14 How to Support OBD and UDS over a Single Client Connection
			9.15 How to Use a User Configuration File
			9.16 How to Know When the Security Access Level
			Changes
			Modified:
			3.4.1 Split Task Functions
			 Added configuration aspects.
			Table 4-3 Compiler abstraction and memory mapping
			 Added calibration parameter memory
			sections.
			5.11 EcuReset (\$11)
			 Added clarification for request rejection while waiting for reset execution.
			5.13 ReadDiagnosticInformation (\$19)
			 Added support of new sub-functions 0x17- 0x19.
			5.19 ReadDataByPeriodicIdentifier (\$2A)
			 Added feature stop periodic reading on changed state.
			5.20 DynamicallyDefineDataIdentifier (\$2C)
			 Added feature clear DDID on changed state.
			Added realtife deal DDID on changed state.



Mishel Shishmanyan,	2014-04-14	2.02.00	Added:
Patrick Rieder	2014-04-14	2.02.00	9.17 How to Deal with the PduR AR version
1 atriox recoor			3.17 How to Deal with the Funt Art version
			Modified:
			Figure 2-2 Interfaces to adjacent modules of the DCM
			NvM added to figure3.4.1 Split Task Functions
			Reworked chapter
			 Added support by configuration tool
			5.14.4 Configuration Aspects
			 Added information about NvRam signal
			configuration
			5.21.4 Configuration Aspects
			 Added information about NvRam signal configuration
			5.27.4 Configuration Aspects
			 Added information about default NvM block name
			6.3 Services used by DCM
			 Added NvM services used by the DCM
			6.4.3.2.1 Dcm_StartOfReception(), 6.4.3.2.3
			Dcm_TpRxIndication(), 6.4.3.2.5
			Dcm_TpTxConfirmation()
			 New version of the APIs for AR 4.1.2 PduR added
			8.3 Limitations
			 Shared signals between DIDs not supported
Mishel Shishmanyan	2014-10-08	3.00.00	Added:
			5.16 ReadScalingDataByIdentifier (\$24)
			6.5.2.11 GetScalingInformation()
			6.6.2 Managed Mode Declaration Groups
			9.18 Post-build Support
			10 Troubleshooting
			Modified:
			4.1.2 Dynamic Files
			 Added post-build data files
			 Added SWC template file
			Table 4-3 Compiler abstraction and memory mapping
			 Added post-build data memory mapping
			Figure 4-1 Include structure
			 Added post-build configuration and other BSW headers files
			5.11 EcuReset (\$11)
			Sub-functions are now allowed to be user
			סמא־ומווסמוסחים מוב ווטיש מווטישבע נט אב עייבו



		1	
			defined. 5.13 ReadDiagnosticInformation (\$19) — Added new implementation aspect. 6.6.1.2.1 DataServices_ <dataname> — Added new port operation GetScalingInformation() 8.3 Limitations — Added limitation for support of DIDranges 6.2.1.1 Dcm_Init() 7.1 Configuration Variants — Added new post-build variants 9.16 How to Know When the Security Access Level Changes — Added link to the corresponding mode declaration group.</dataname>
Mishel Shishmanyan, Vitalij Krieger, Thomas Dedler	2015-01-13	3.01.00	Added: 6.6.2.7 DcmResponseOnEvent_ <eventid> 9.20 DCM AR Version Specific Features</eventid>
			6.5.2.25 IsDidAvailable() 6.5.2.26 ReadDidData() 6.5.2.27 WriteDidData() 9.19 Handling with DID Ranges 9.21 How to Support DID 0xF186 Modified: 5.14.4, 5.23 — Removed WWH-OBD only DIDs/RIDs from examples. 6.3 Services used by DCM — AR3 support added 6.4.2 ComM, 6.4.3 PduR — AR3 support added 8.3 Limitations — Removed limitation for not supported DID ranges. — Added limitation for DidRanges. 9.17 How to Deal with the PduR AR version — Added AR 3.x compliance aspect Table 8-2 Additions/ Extensions to AUTOSAR — Added AR 3.x integration
Vitalij Krieger, Mishel Shishmanyan	2015-02-06	4.00.00	Added: 6.2.1.6 Dcm_InitMemory() 6.2.3.1 Dcm_GetTesterSourceAddress() 6.4.4 CanTp 6.5.1.8 <diagnostic callback="" change="" notification="" session=""></diagnostic>

7



		1	6 5 1 0 Cooughy Access Change Natification
			6.5.1.9 <security access="" callback="" change="" notification=""></security>
			9.22 How to Suppress Responses to Functional Addressed Requests
			9.23 How to Support Interruption on Requests with Foreign N_TA
			9.24 How to Know When the Diagnostic Session
			Changes
			Modified:
			Minor editorial changes
			Table 4-3 Compiler abstraction and memory mapping
			 Added DCM_VAR_INIT memory section.
			9.17 How to Deal with the PduR AR version
			PduR 4.0.1 added
			5.27.4 Configuration Aspects
			 Renamed symbols from "Svc86" to "ExtSvc86".
			6.2.1.5 Dcm_GetVersionInfo()
			 Specified the digit format of the module's version information.
			Figure 4-1 Include structure
			 New include structure
			4.1.1 Static Files
			 New files introduced
			4.2 Include Structure
			New include structure
			5.17.4 Configuration Aspects
			 Added support for single/multiple instace attempt counter, delay timer.
			9.16 How to Know When the Security Access Level Changes
			 Added new notification type
Alexander Ditte,	2015-05-04	4.01.00	Added:
Mishel Shishmanyan			6.2.2.6 Dcm_GetSecurityLevelFixedBytes()
			6.4.3.1.1 Dcm_TriggerTransmit()
			6.4.3.2.6 Dcm_TxConfirmation()
			6.5.2.28 GetSecurityAttemptCounter()
			6.5.2.29 SetSecurityAttemptCounter()
			9.25 How to Save RAM using Paged-Buffer for Large DIDs
			9.26 How to Get Security-Access Level Specific Fixed Byte Values
			9.27 How to Extend the Diag Keep Alive Time during Diagnostics
			9.28 How to Recover DCM State Context on ECU Reset/ Power On
	<u> </u>	1	



			Modified:
			Global minor editorial changes
			Table 5-26 Service \$19: Supported subservices
			- Added sub-function 0x42
			5.10.4 Configuration Aspects
			Added session specific timings aspect Added session specific timings aspect
			5.11 EcuReset (\$11)
			 Added note for resetting to default session if needed.
			5.17 SecurityAccess (\$27)
			 Additions for the new features listed related to this service
			5.18.4 Configuration Aspects;
			5.13.4 Configuration Aspects
			 Added a hint for external sub-function implementation.
			5.22.4 Configuration Aspects
			 Removed limitation to static length IO DID for service 0x2F.
			5.26.4 Configuration Aspects
			 Added missing related configuration
			parameters
			Table 6-93 DCMServices
			 Added new operation
			Table 3-4 DET Service IDs
			Completed API list
			 Names converted to hyperlinks for convenience
Mishel Shishmanyan	2015-11-12	5.00.00	Added:
			6.2.3.2 Dcm_ProcessVirtualRequest()
			6.2.3.3 Dcm_SetSecurityLevel()
			6.2.2.7 Dcm_SetActiveDiagnostic()
			6.5.1.11 Dcm_FilterDidLookUpResult
			6.5.1.12 Dcm_FilterRidLookUpResult
			9.29 How to Define a Diagnostic Connection without USDT Responses
			9.30 How to Handle Multiple Diagnostic Service
			Variants
			Modified:
			Minor editorial changes
			5 Diagnostic Service Implementation
			Modified introduction on how to read each diagnostic continuous sub-shorter.
			diagnostic service sub-chapter.
			 Added information for the supported types of diagnostic service processor



			implementations for all positions
			implementations for all services. 5.17 SecurityAccess (\$27)
			 Added external service implementation aspect.
			5.27 ResponseOnEvent (\$86)
			 Added external service implementation aspect.
			9.11.1 OBD Calibration
			 Added information about feature configuration.
			5.22 InputOutputControlByIdentifier (\$2F)
			 More events monitored for automatic IO DID resetting.
			Table 3-4 DET Service IDs
			 Added missing DET SIDs
			6.5.2.25 IsDidAvailable()
			 Removed limitation of synchronous usage.
			Table 4-3 Compiler abstraction and memory mapping
			Added DCM_VAR_INIT memory section for
			32bit data.
Mishel Shishmanyan	2016-03-01	5.01.00	Added:
			6.2.2.8 Dcm_GetRequestKind()
			Modified:
			Minor editorial changes.
			Table 9-10
			 Added details for "RID operation".
			Table 6-93 DCMServices
			 Corrected supported return error codes
			 Added new operations
			5.22 InputOutputControlByIdentifier (\$2F)
			6.5.2.7 ReturnControlToECU()
			6.5.2.8 ResetToDefault() 6.5.2.9 FreezeCurrentState()
			6.5.2.10 ShortTermAdjustment()
			 Reworked for support of bitmapped IO DIDs.
			Table 3-4 DET Service IDs
			 Added new services
			8.2 Additions/ Extensions
			 Added multi byte external CEMR handling 8.3 Limitations
			X X I IMITATIONS
Mishel Shishmanyan	2016-04-29	5 02 00	Removed limitation for API IsDidAvailable()
Mishel Shishmanyan	2016-04-29	5.02.00	
Mishel Shishmanyan Mishel Shishmanyan	2016-04-29	5.02.00	Removed limitation for API <i>IsDidAvailable()</i>Modified:



			DCM and DEM
			9.32 How to Enable Support of OBD VIDs with
			Dynamic Length
			10.2 Code Generation Time Messages
			Modified:
			Minor editorial changes.
			5.8.4 Configuration Aspects
			Reordered FAQ and added variable data
			size specific hints.
			Table 6-30 Services used by the DCM
			 Updated used DEM API.
			5.14.4 Configuration Aspects
			 Added configuration aspects for OBD MID DIDs.
			5.18.4 Configuration Aspects
			 Added FAQ for "AllNetworks" parameter.
			5.27 ResponseOnEvent (\$86)
			 Improved configuration aspects.
			6.5.2.23 GetInfotypeValueData()
			 Added AR4.2.2 compatibility.
			9.18.1.2 Diagnostic Services Part
			 Enabled PBS for diagnostic service.
			Table 10-1 Compile time error messages
			- Added new messages.
			Table 8-1 Deviations to AUTOSAR
			 Removed deviation to AR for suppression of NRC 0x7E and 0x7F, since AR 4.2.2 now
			does require this behavior.
Mishel Shishmanyan	2016-09-22	7.01.00	Added:
			9.33 How to setup DCM for Sender-Receiver Communication
			9.34 How to Support Routine Info Byte with UDS
			Modified:
			Replaced all used DCM_E_OK / DCM_E_NOT_OK
			to E_OK resp. E_NOT_OK as per [1].
			Note: This is not an API change, since the
			DCM_E_* symbols have identical values with the standard E_*. You can still use the
			DCM_E_* ones in your application, if
			preffered.
			9.1 How to Reduce RAM Usage
			 Added information regarding DCM buffer
			size recommendations integrated in the
			Configuration 5 tool.
			6.5.2.23 GetInfotypeValueData() — Corrected OnStatus parameter description
			 Corrected OpStatus parameter description.



			11.2 Abbreviations
			Added "C/S" and "S/R".
\ \(\text{1" 17 }	0047.00.00	7.00.00	
Vitalij Krieger,	2017-03-20	7.02.00	Added:
Savas Ates,			6.1.3 Dcm_VsgldentifierType
Steffen Köhler			6.1.4 Dcm_VsgStateType
			6.2.2.9 Dcm_VsgSetSingle()
			6.2.2.10 Dcm_VsgSetMultiple()
			6.2.2.11 Dcm_VsgIsActive()
			6.2.2.12 Dcm_VsgIsActiveAnyOf()
			9.13.1 Setting the ClientId for DEM AR 4.3.0 API
			9.22 How to Suppress Responses to Functional
			Addressed Requests
			9.23 How to Support Interruption on Requests with Foreign N_TA
			9.26.3 Security Level Fixed Bytes variant handling
			with VSGs
			9.35 Vehicle System Group Support
			Modified:
			6 API Description
			 Corrected Particularities and Limitations.
			6.1.2 Dcm_RecoveryInfoType
			 Added active protocol member.
			6.3 Services used by DCM
			 Added Dem [Dcm]ClearDTC.
			 Added new DEM AR 4.3.0 APIs.
			6.6.1.1.2 DCMServices
			Added VSG services.
			9.11.1.2 Calibration of Supported OBD Parameter
			Identifier
			Corrected calibrateable configuration
			symbols.
			9.13 How to Select DEM-DCM Interface Version
			Also mention DEM AR 4.3.0 APIs.
Mishel Shishmanyan,	2017-05-16	8.00.00	Added:
Vitalij Krieger			Table 6-48 <module>_<diagnosticservice>() (AR</diagnosticservice></module>
			version >= 4.2.2)
			Table 6-50
			<module>_<diagnosticservice>_<subservice>()</subservice></diagnosticservice></module>
			(AR version >= 4.2.2)
			Modified:
			6.5.1.1 <module>_<diagnosticservice>()</diagnosticservice></module>
			 Restructured chapters to describe API variation depending on licensed DCM AR
			version.
			6.5.1.2



			<module>_<diagnosticservice>_<subservice>()</subservice></diagnosticservice></module>
			Restructured chapters to describe API variation depending on licensed DCM AR version.
			Table 6-49 <module>_<diagnosticservice>() (AR version < 4.2.2)</diagnosticservice></module>
			 Added information for pMsgContext and job finishing activities.
			Table 6-51 <pre><module>_<diagnosticservice>_<subservice>() (AR version < 4.2.2)</subservice></diagnosticservice></module></pre>
			 Added information for pMsgContext and job finishing activities.
			Table 3-5 Errors reported to DET - Added DCM_E_CRITICAL_ERROR.
Simon Wolf, Amr Elazhary, Vitalij Krieger	2017-06-06	8.02.00	Added: 6.6.3 Sender-Receiver Interface
vitalij raiogei			Modified:
			9.33.1 Implementation Limitations
			 Added new data types for Sender-Receiver communication.
			4.3 Compiler Abstraction and Memory MappingUpdated to ASR 4.0.3 naming convention.
Steffen Köhler,	2017-06-13	8.03.00	Modified:
Simon Wolf,			6.3 Services used by DCM
Amr Elazhary			 BswM_Dcm_ApplicationUpdated is not only available in AUTOSAR 4.x but also AUTOSAR 3.x.
			9.33.1 Implementation Limitations
			 Added Boolean data type.
			6.6.3 Sender-Receiver Interface
			5.23.3 Implementation Aspects
			 Added information for routine management on session transition.
01.6617.11.1			
Steffen Köhler,	2017-06-30	8.04.00	Added:
Steffen Köhler, Amr Elazhary	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType 6.1.7 Dcm_IOOperationRequest_<
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType 6.1.7 Dcm_IOOperationRequest_< DidName/DidDataName >type
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType 6.1.7 Dcm_IOOperationRequest_< DidName/DidDataName >type Modified: 5.19.1 Functionality - Added UUDT DelayTimer
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType 6.1.7 Dcm_IOOperationRequest_< DidName/DidDataName >type Modified: 5.19.1 Functionality - Added UUDT DelayTimer 5.19.3 Implementation Aspects
·	2017-06-30	8.04.00	6.1.5 Dcm_InputOutputControlParameterType 6.1.6 Dcm_IOOperationResponseType 6.1.7 Dcm_IOOperationRequest_< DidName/DidDataName >type Modified: 5.19.1 Functionality - Added UUDT DelayTimer



			- Added UUDT DelayTimer
Simon Wolf	2017-08-02	8.05.00	Modified:
			Minor improvements.
			Table 1-1 Component history
			 Maintained component history.
			5.17.3 Implementation Aspects
			 Updated implementation aspects regarding external sub-services.
Simon Wolf	2017-09-18	8.06.00	Added:
			9.36 Usage Hints for Operation with SilentBSW
Vitalij Krieger	2017-12-11	8.06.01	Modified:
			9.1 How to Reduce RAM Usage
			- Paged-Buffer for DID
			9.25 How to Save RAM using Paged-Buffer for Large DIDs
			- Dedicated Paged-Buffer configuration



Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_SWS_DiagnosticCommunicationManager.pdf	V4.2.2
[2]	AUTOSAR	AUTOSAR_SWS_DevelopmentErrorTracer.pdf	V3.2.0
[3]	AUTOSAR	AUTOSAR_SWS_DiagnosticEventManager.pdf	V4.2.0
[4]	AUTOSAR	AUTOSAR_BasicSoftwareModules.pdf	V1.0.0
[5]	ISO	ISO 14229-1 UDS	2013
[6]	ISO	ISO 15031-5 OBD	2004
[7]	ISO	ISO 27145-2 WWH-OBD CDD Emissions	2009
[8]	ISO	ISO 27145-3 WWH-OBD CMD	2009
[9]	Vector	TechnicalReference_PostBuildSelectable.pdf	See delivery
[10]	Vector	TechnicalReference_IdentityManager.pdf	See delivery
[11]	Vector	TechnicalReference_Dem.pdf	See delivery



Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Contents

1	Com	ponent Hi	story		31	
2	Intro	Introduction				
	2.1	How to	Read This D	ocument	34	
		2.1.1	DCM Integ	gration and Basic Operation	34	
		2.1.2	Diagnostic	Service Documentation	34	
		2.1.3	API Defini	tions	34	
		2.1.4	DCM Con	figuration Parameter Descriptions	35	
	2.2	Archited	cture Overvie	ew	35	
3	Func	tional Des	scription		37	
	3.1	Feature	es		37	
	3.2	Initializa	ation		38	
	3.3	States .			38	
	3.4	Main Fเ	unctions		38	
		3.4.1	Split Task	Functions	38	
			3.4.1.1	Functionality	38	
			3.4.1.2	Configuration Aspects	39	
			3.4.1.3	Integration Aspects	39	
	3.5	Error H	andling		39	
		3.5.1	Developm	ent Error Reporting	39	
		3.5.2	Production	n Code Error Reporting	41	
4	Integ	ration			42	
	4.1					
		4.1.1	Static File	S	42	
		4.1.2	Dynamic I	Files	43	
	4.2	Include	Structure		44	
	4.3	Compile	er Abstraction	n and Memory Mapping	44	
	4.4	Critical	Sections		46	
	4.5	Conside	erations Usin	g Request- and ResponseData Pointers in a Call-back	46	
5	Diagr	nostic Ser	vice Implem	nentation	47	
	5.1	Reques	stCurrentPow	vertrainDiagnosticData (\$01)	48	
		5.1.1		lity		
		5.1.2	Required	Interfaces	48	
		5.1.3	Implemen	tation Aspects	48	
		5.1.4	Configura	tion Aspects	48	



5.2	Reques	stPowertrainFreezeFrameData (\$02)	50
	5.2.1	Functionality	50
	5.2.2	Required Interfaces	50
	5.2.3	Implementation Aspects	50
	5.2.4	Configuration Aspects	50
5.3	Reques	stEmissionRelatedDTC (\$03)	52
	5.3.1	Functionality	52
	5.3.2	Required Interfaces	52
	5.3.3	Implementation Aspects	52
	5.3.4	Configuration Aspects	52
5.4	ClearEr	missionRelatedDTC (\$04)	53
	5.4.1	Functionality	53
	5.4.2	Required Interfaces	53
	5.4.3	Implementation Aspects	53
	5.4.4	Configuration Aspects	53
5.5	Reques	stOnBoardMonitorTestResults (\$06)	54
	5.5.1	Functionality	54
	5.5.2	Required Interfaces	54
	5.5.3	Implementation Aspects	54
	5.5.4	Configuration Aspects	55
5.6		stEmissionRelatedDTCsDetectedDuringCurrentOrLastDrivingCycle	56
	5.6.1	Functionality	56
	5.6.2	Required Interfaces	56
	5.6.3	Implementation Aspects	56
	5.6.4	Configuration Aspects	56
5.7	Reques	stControlOfOnBoardSystemTestOrComponent (\$08)	57
	5.7.1	Functionality	57
	5.7.2	Required Interfaces	57
	5.7.3	Implementation Aspects	57
	5.7.4	Configuration Aspects	57
5.8	Reques	stVehicleInformation (\$09)	59
	5.8.1	Functionality	59
	5.8.2	Required Interfaces	59
	5.8.3	Implementation Aspects	59
	5.8.4	Configuration Aspects	59
5.9	Reques	stEmissionRelatedDTCsWithPermanentStatus (\$0A)	61
	5.9.1	Functionality	
	5.9.2	Required Interfaces	61
	5.9.3	Implementation Aspects	61



5.10	Diagnos	sticSessionControl (\$10)	62
	5.10.1	Functionality	62
	5.10.2	Required Interfaces	62
	5.10.3	Implementation Aspects	62
	5.10.4	Configuration Aspects	62
5.11	EcuRes	et (\$11)	64
	5.11.1	Functionality	64
	5.11.2	Required Interfaces	64
	5.11.3	Implementation Aspects	64
	5.11.4	Configuration Aspects	65
5.12	ClearDia	agnosticInformation (\$14)	66
	5.12.1	Functionality	66
	5.12.2	Required Interfaces	66
	5.12.3	Implementation Aspects	66
	5.12.4	Configuration Aspects	66
5.13	ReadDia	agnosticInformation (\$19)	67
	5.13.1	Functionality	67
	5.13.2	Required Interfaces	67
	5.13.3	Implementation Aspects	67
		5.13.3.1 Reporting Stored DTC Environment Data	68
	5.13.4	Configuration Aspects	68
5.14	ReadDa	ataByldentifier (\$22)	70
	5.14.1	Functionality	70
	5.14.2	Required Interfaces	70
	5.14.3	Implementation Aspects	70
	5.14.4	Configuration Aspects	71
5.15	ReadMe	emoryByAddress (\$23)	73
	5.15.1	Functionality	73
	5.15.2	Required Interfaces	73
	5.15.3	Implementation Aspects	73
	5.15.4	Configuration Aspects	74
5.16	ReadSc	alingDataByldentifier (\$24)	74
	5.16.1	Functionality	74
	5.16.2	Required Interfaces	74
	5.16.3	Implementation Aspects	74
	5.16.4	Configuration Aspects	75
5.17	Security	/Access (\$27)	76
	5.17.1	Functionality	76
	5.17.2	Required Interfaces	76
	5.17.3	Implementation Aspects	76
	5.17.4	Configuration Aspects	77



5.18	Commu	nicationControl (\$28)	79
	5.18.1	Functionality	79
	5.18.2	Required Interfaces	79
	5.18.3	Implementation Aspects	79
	5.18.4	Configuration Aspects	80
5.19	ReadDa	taByPeriodicIdentifier (\$2A)	81
	5.19.1	Functionality	81
	5.19.2	Required Interfaces	81
	5.19.3	Implementation Aspects	81
	5.19.4	Configuration Aspects	82
5.20	Dynamic	callyDefineDataIdentifier (\$2C)	84
	5.20.1	Functionality	84
	5.20.2	Required Interfaces	84
	5.20.3	Implementation Aspects	84
	5.20.4	Configuration Aspects	85
5.21	WriteDa	taByldentifier (\$2E)	87
	5.21.1	Functionality	87
	5.21.2	Required Interfaces	87
	5.21.3	Implementation Aspects	87
	5.21.4	Configuration Aspects	88
5.22	InputOut	tputControlByIdentifier (\$2F)	89
	5.22.1	Functionality	89
	5.22.2	Required Interfaces	89
	5.22.3	Implementation Aspects	89
	5.22.4	Configuration Aspects	91
5.23	Routine	Control (\$31)	93
	5.23.1	Functionality	93
	5.23.2	Required Interfaces	93
	5.23.3	Implementation Aspects	93
	5.23.4	Configuration Aspects	94
5.24	WriteMe	moryByAddress (\$3D)	95
	5.24.1	Functionality	95
	5.24.2	Required Interfaces	95
	5.24.3	Implementation Aspects	95
	5.24.4	Configuration Aspects	96
5.25	TesterPr	resent (\$3E)	97
	5.25.1	Functionality	97
	5.25.2	Required Interfaces	97
	5.25.3	Implementation Aspects	97
	5.25.4	Configuration Aspects	98
5.26	ControlE	OTCSetting (\$85)	99



		5.26.1	Functiona	ality	99
		5.26.2	Required	Interfaces	99
		5.26.3	Implemer	ntation Aspects	99
		5.26.4	Configura	ition Aspects	99
	5.27	Respons	seOnEvent	(\$86)	101
		5.27.1	Functiona	ality	101
		5.27.2	Required	Interfaces	101
		5.27.3	Implemer	ntation Aspects	101
		5.27.4	Configura	ition Aspects	101
6	API D	escriptior	١		103
	6.1	Type De	finitions		103
		6.1.1	Dcm_Pro	tocolType	103
		6.1.2	Dcm_Red	coveryInfoType	103
		6.1.3	Dcm_Vsg	IdentifierType	105
		6.1.4	Dcm_Vsg	StateType	105
		6.1.5	Dcm_Inpo	utOutputControlParameterType	105
		6.1.6	Dcm_IOC	perationResponseType	106
		6.1.7	Dcm_IOC	perationRequest_< DidName/DidDataName >type	106
	6.2	Services	s provided b	y DCM	107
		6.2.1	Administr	ative	107
			6.2.1.1	Dcm_Init()	107
			6.2.1.2	Dcm_MainFunction()	107
			6.2.1.3	Dcm_MainFunctionTimer()	108
			6.2.1.4	Dcm_MainFunctionWorker()	109
			6.2.1.5	Dcm_GetVersionInfo()	109
			6.2.1.6	Dcm_InitMemory()	110
			6.2.1.7	Dcm_ProvideRecoveryStates()	111
		6.2.2	SWC		111
			6.2.2.1	Dcm_GetActiveProtocol()	111
			6.2.2.2	Dcm_GetSecurityLevel()	112
			6.2.2.3	Dcm_GetSesCtrlType()	113
			6.2.2.4	Dcm_ResetToDefaultSession()	113
			6.2.2.5	Dcm_TriggerOnEvent()	114
			6.2.2.6	Dcm_GetSecurityLevelFixedBytes()	115
			6.2.2.7	Dcm_SetActiveDiagnostic()	116
			6.2.2.8	Dcm_GetRequestKind()	117
			6.2.2.9	Dcm_VsgSetSingle()	118
			6.2.2.10	Dcm_VsgSetMultiple()	118
			6.2.2.11	Dcm_VsgIsActive()	119
			6.2.2.12	Dcm_VsgIsActiveAnyOf()	119



	6.2.3	General F	Purpose		120			
		6.2.3.1	Dcm_GetT	esterSourceAddress()	120			
		6.2.3.2	Dcm_Proc	essVirtualRequest()	121			
		6.2.3.3	Dcm_SetS	ecurityLevel()	122			
6.3	Service	s used by D	CM		123			
6.4	Callbac	k Functions.	Functions					
	6.4.1	<module></module>	>		124			
		6.4.1.1	Dcm_Exte	rnalProcessingDone()	125			
		6.4.1.2	Dcm_Exte	rnalSetNegResponse()	125			
	6.4.2	ComM			126			
		6.4.2.1	Dcm_Com	M_NoComModeEntered()	126			
		6.4.2.2	Dcm_Com	M_SilentComModeEntered()	126			
		6.4.2.3	Dcm_Com	M_FullComModeEntered()	127			
	6.4.3	PduR			128			
		6.4.3.1	All AUTOS	AR Versions	128			
			6.4.3.1.1	Dcm_TriggerTransmit()	128			
		6.4.3.2	AUTOSAR	AUTOSAR 4				
			6.4.3.2.1	Dcm_StartOfReception()	128			
			6.4.3.2.2	Dcm_CopyRxData()	129			
			6.4.3.2.3	Dcm_TpRxIndication()	131			
			6.4.3.2.4	Dcm_CopyTxData()	132			
			6.4.3.2.5	Dcm_TpTxConfirmation()	133			
			6.4.3.2.6	Dcm_TxConfirmation()	134			
		6.4.3.3	AUTOSAR	3	135			
			6.4.3.3.1	Dcm_ProvideRxBuffer()	135			
			6.4.3.3.2	Dcm_RxIndication()	136			
			6.4.3.3.3	Dcm_ProvideTxBuffer()	137			
			6.4.3.3.4	Dcm_TxConfirmation()	138			
	6.4.4	CanTp			139			
		6.4.4.1	Dcm_OnR	equestDetection()	139			
6.5	Configu	rable Interfa	ices		139			
	6.5.1	Callout F	unctions		139			
		6.5.1.1	<module>_</module>	_ <diagnosticservice>()</diagnosticservice>	140			
			6.5.1.1.1	DCM AUTOSAR Version Equal or Newer Than 4.2.2	140			
			6.5.1.1.2	DCM AUTOSAR Version Older Than 4.2.2	141			
		6.5.1.2	<module></module>	_ <diagnosticservice>_<subservice>()</subservice></diagnosticservice>	142			
			6.5.1.2.1	DCM AUTOSAR Version Equal or Newer Than 4.2.2				
			6.5.1.2.2					



	6.5.1.3	Dcm_SetProgConditions()	143
	6.5.1.4	Dcm_GetProgConditions()	144
	6.5.1.5	Dcm_Confirmation()	145
	6.5.1.6	Dcm_ReadMemory()	146
	6.5.1.7	Dcm_WriteMemory()	147
	6.5.1.8	<diagnostic callback="" change="" notification="" session=""></diagnostic>	148
	6.5.1.9	Security Access Change Notification Callback>	149
	6.5.1.10	Dcm_GetRecoveryStates()	150
	6.5.1.11	Dcm_FilterDidLookUpResult	151
	6.5.1.12	Dcm_FilterRidLookUpResult	152
6.5.2	Required	Port Operation Functions	153
	6.5.2.1	ConditionCheckRead()	153
	6.5.2.2	ReadData() (asynchronous)	154
	6.5.2.3	ReadData() (synchronous)	154
	6.5.2.4	ReadDataLength()	155
	6.5.2.5	WriteData() (dynamic length)	156
	6.5.2.6	WriteData() (static length)	157
	6.5.2.7	ReturnControlToECU()	158
	6.5.2.8	ResetToDefault()	159
	6.5.2.9	FreezeCurrentState()	160
	6.5.2.10	ShortTermAdjustment()	161
	6.5.2.11	GetScalingInformation()	162
	6.5.2.12	Start()	163
	6.5.2.13	Stop()	164
	6.5.2.14	RequestResults()	165
	6.5.2.15	GetSeed() (with SADR)	166
	6.5.2.16	GetSeed() (without SADR)	167
	6.5.2.17	CompareKey()	168
	6.5.2.18	Indication()	169
	6.5.2.19	Confirmation()	170
	6.5.2.20	ActivateEvent()	171
	6.5.2.21	GetDTRValue()	172
	6.5.2.22	RequestControl()	173
	6.5.2.23	GetInfotypeValueData()	174
	6.5.2.24	StartProtocol()	175
	6.5.2.25	IsDidAvailable()	176
	6.5.2.26	ReadDidData()	177
	6.5.2.27	WriteDidData()	
	6.5.2.28	GetSecurityAttemptCounter()	
	6.5.2.29	SetSecurityAttemptCounter()	
	6.5.2.30	ReadData() (paged-data-reading)	181



6.6	Service	Ports			181	
	6.6.1	Client-Se	Client-Server Interface			
		6.6.1.1	Provide Po	rts on DCM Side	181	
			6.6.1.1.1	DCM_Roe	182	
			6.6.1.1.2	DCMServices	182	
		6.6.1.2	Require Po	orts on DCM Side	183	
			6.6.1.2.1	DataServices_ <dataname></dataname>	183	
			6.6.1.2.2	RoutineServices_ <routinename></routinename>	183	
			6.6.1.2.3	ROEServices	184	
			6.6.1.2.4	SecurityAccess_ <securitylevelname< td=""><td>> 184</td></securitylevelname<>	> 184	
			6.6.1.2.5			
				ServiceRequestManufacturerNotificat	ion_ <swc> 184</swc>	
			6.6.1.2.6	Sandaa Daguaat Suppliar Natification	~CMC> 101	
			6.6.1.2.7	<pre>.ServiceRequestSupplierNotification_ DtrServices_<midname>_<tidname< pre=""></tidname<></midname></pre>	_	
			6.6.1.2.8	RequestControlServices <tidname></tidname>		
			6.6.1.2.9	InfotypeServices <vehinfodata></vehinfodata>		
			6.6.1.2.10	CallbackDCMRequestServices_ <sw< td=""><td></td></sw<>		
			6.6.1.2.11	OdilbackDolvii (cquestoci vices_ 1000	O 100	
			0.0.1.2.11	DataServices_DIDRange_ <rang< td=""><td>eName> 185</td></rang<>	eName> 185	
	6.6.2	Manageo	d Mode Declar	ration Groups	185	
		6.6.2.1	DcmDiagno	osticSessionControl	186	
		6.6.2.2	DcmComm	nunicationControl_ <comm_channel_< td=""><td>SNV>187</td></comm_channel_<>	SNV>187	
		6.6.2.3	DcmEcuRe	eset	188	
		6.6.2.4	DcmModeF	RapidPowerShutDown	188	
		6.6.2.5	DcmContro	DIDTCSetting	189	
		6.6.2.6	DcmSecuri	tyAccess	189	
		6.6.2.7	DcmRespo	nseOnEvent_ <eventid></eventid>	190	
	6.6.3	Sender-F	Receiver Interf	ace	191	
		6.6.3.1	DataServic	es_{DidName/DidDataName}	191	
		6.6.3.2	IOControlR	Request_{DidName/DidDataName}	191	
		6.6.3.3	IOControlR	Response	191	
0 5					100	
	•					
7.1	•					
7.2	Configu	irabie Attribi	ites		193	
AUTO	OSAR Stai	ndard Com	pliance		194	
8.1			-			
8.2						
8.3						

7

8



•	Using	the DCM				197
	9.1	How to F	Reduce RAN	/I Usage		197
		9.1.1	Reading fa	ault memory	data	199
		9.1.2	Reading n	nultiple DIDs	in a single request	199
		9.1.3	Exchangir	ng data betwe	een OS tasks	200
	9.2	How to F	Reduce DCN	/ Main-Funct	ion Run Time Usage	200
	9.3	How to F	Force DCM t	to not Respor	nd on Requests with Response SIDs	201
	9.4	How to H	Handle Multi	ple Diagnosti	c Clients Simultaneously	201
	9.5	How to F	Restrict a Dia	agnostic Serv	vice Execution by a Condition	202
	9.6	How to 0	Get Notified	on a Diagnos	stic Service Execution Start and End	202
	9.7	How to L	imit the Dia	gnostic Servi	ce Processing Time	203
	9.8	How to J	lump into the	e FBL from S	ervice DiagnosticSessionControl (\$10)	204
	9.9	The HIS	Compliant .	Jump into FB	L	204
		9.9.1	The HIS A	Iternative Jur	mp into FBL	204
	9.10	How to F	Put DCM in a	a Non-Defaul	t Session at ECU Power-On	204
	9.11	How to S	Support Cali	brateable Co	nfiguration Parameters	205
		9.11.1	OBD Calib	oration		205
			9.11.1.1	Calibration	of Supported OBD Services	206
			9.11.1.2	Calibration	of Supported OBD Parameter Identifier	206
	9.12	How and	When to C	onfigure Mult	iple Protocols	209
		9.12.1	Diagnostic	Client(s) Pro	ocessing Prioritization	210
		9.12.2	Client Spe	cific Diagnos	stic Application Timings	213
		9.12.3	Diagnostic	Service Fire	wall	213
	9.13	How to S	Select DEM-	DCM Interfac	ce Version	214
		9.13.1	Setting the	e ClientId for	DEM AR 4.3.0 API	214
	9.14	How to S	Support OBI	and UDS o	ver a Single Client Connection	214
	9.15	How to U	Jse a User (Configuration	File	215
	9.16	How to k	Know When	the Security	Access Level Changes	215
		9.16.1	Invoking a	Mode Switch	h	216
		9.16.2	Calling a F	Function Impl	emented Within a CDD Module	216
	9.17	How to [Deal with the	PduR AR ve	ersion	217
		9.17.1	AUTOSAF	R 3 Environm	ent	217
		9.17.2	AUTOSAF	R 4 Environm	ent	217
	9.18	Post-bui	ld Support			217
		9.18.1	Post-build	Variance Lev	vel	218
			9.18.1.1	Communica	ation Part	218
			9.18.1.2	Diagnostic	Services Part	218
				9.18.1.2.1	Handling of State Execution Preconditions of Variant Diagnostic Entities	221
		0 18 2	Initializatio	nn	Littuco	221



		9.18.2.1	Error Detection and Handling	223
	9.18.3	Post-build	Variants	224
		9.18.3.1	Post-build selectable	224
		9.18.3.2	Post-build loadable	224
		9.18.3.3	Post-build loadable selectable	224
		9.18.3.4	Post-build deleteable	225
9.19	Handling	g with DID R	anges	225
	9.19.1	Introduction	on	225
	9.19.2	Implemen	tation Limitations	225
	9.19.3	Configura	tion Aspects	226
9.20	DCM AF	R Version Sp	ecific Features	226
	9.20.1	Response	OnEvent Specifics	226
9.21	How to \$	Support DID	0xF186	227
9.22	How to \$	Suppress Re	esponses to Functional Addressed Requests	227
9.23	How to \$	Support Inte	rruption on Requests with Foreign N_TA	228
9.24	How to I	Know When	the Diagnostic Session Changes	228
9.25	How to \$	Save RAM u	sing Paged-Buffer for Large DIDs	229
	9.25.1	Introduction	on	229
	9.25.2	Functiona	lity	229
	9.25.3	Implemen	tation Limitations	230
	9.25.4	Usage		231
		9.25.4.1	Straightforward DID Paged-Data Reading	232
		9.25.4.2	Error Handling During DID Paged-Data Reading	232
	9.25.5	Configura	tion Aspects	236
9.26	How to 0	Get Security	-Access Level Specific Fixed Byte Values	238
	9.26.1	Introduction	on	238
	9.26.2	Usage		238
	9.26.3	Security L	evel Fixed Bytes variant handling with VSGs	238
	9.26.4	Configura	tion Aspects	238
9.27	How to I	Extend the D	Diag Keep Alive Time during Diagnostics	239
	9.27.1	Problem [Description	239
	9.27.2	Configura	tion Aspects	239
9.28	How to I	Recover DC	M State Context on ECU Reset/ Power On	240
	9.28.1	Introduction	on	240
	9.28.2	Functiona	lity	240
	9.28.3	Configura	tion Aspect	241
9.29	How to I	Define a Dia	gnostic Connection without USDT Responses	241
9.30	How to I	Handle Multi	ple Diagnostic Service Variants	241
	9.30.1	Introduction	on	241
	9.30.2	Filtering L	evel Availability and the Corresponding Filtering Tools	241
	9.30.3	Filtering C	DBD Objects	243



			9.30.3.1	Suggested Preparation Methodology for Filtering Process of OBD Objects	244
	9.31	How to \$	Switch Betwe	een OBD DTR Support by DCM and DEM	244
		9.31.1	Implement	ation Particularities and Limitations	244
		9.31.2	Configurat	ion Aspect	245
	9.32	How to I	Enable Supp	ort of OBD VIDs with Dynamic Length	245
		9.32.1	Implement	ation Limitations	245
	9.33	How to s	setup DCM fo	or Sender-Receiver Communication	246
		9.33.1	Implement	ation Limitations	246
		9.33.2	Application	n usage Scenario	247
		9.33.3	Configurat	ion Aspects	249
	9.34	How to \$	Support Rou	tine Info Byte with UDS RIDs	249
		9.34.1	Introductio	n	249
		9.34.2	Configurat	ion Aspects	249
	9.35	Vehicle	System Grou	ıp Support	250
		9.35.1	Introductio	n	250
		9.35.2	Functional	ity	250
		9.35.3	VSG opera	ations	250
		9.35.4	Configurat	ion Aspects	250
	9.36	Usage F	Hints for Ope	ration with SilentBSW	252
		9.36.1	Introductio	n	252
		9.36.2	Configurat	ion Aspects	252
		9.36.3	Automatic	ally Disabled Features	252
10	Troub	leshootin	g		253
	10.1	Compile	Error Messa	ages	253
	10.2	Code G	eneration Tin	ne Messages	254
11	Gloss	ary and A	bbreviation	s	257
	11.1	Glossar	y		257
	11.2	Abbrevia	ations		257
12	Conta	ct			259



Illustrations

Figure 2-1	AUTOSAR 4.2 Architecture Overview	
Figure 2-2	Interfaces to adjacent modules of the DCM	36
Figure 4-1	Include structure	
Figure 9-1	Straightforward DID paged-data reading	232
Figure 9-2	DID paged-data reading cancelled due to TP layer transmission	abortion234
Figure 9-3	Protocol preemption during DID paged-data access	235
Figure 9-4	RCR-RP limit reached during DID paged-data access	236
Tables		
Table 1-1	Component history	33
Table 3-1	Supported AUTOSAR standard conform features	
Table 3-1	Not supported AUTOSAR standard conform features	
Table 3-3	Features provided beyond the AUTOSAR standard	
Table 3-4	DET Service IDs	
Table 3-5	Errors reported to DET	
Table 4-1	Static files	
Table 4-2	Generated files	
Table 4-3	Compiler abstraction and memory mapping	
Table 5-1	Service \$01: Implementation types	
Table 5-2	Service \$01: Supported subservices	
Table 5-3	Service \$02: Implementation types	
Table 5-4	Service \$02: Supported subservices	
Table 5-5	Service \$03: Implementation types	
Table 5-6	Service \$03: Supported subservices	
Table 5-7	Service \$04: Implementation types	
Table 5-8	Service \$04: Supported subservices	
Table 5-9	Service \$06: Implementation types	54
Table 5-10	Service \$06: Supported subservices	54
Table 5-11	Service \$07: Implementation types	56
Table 5-12	Service \$07: Supported subservices	56
Table 5-13	Service \$08: Implementation types	57
Table 5-14	Service \$08: Supported subservices	
Table 5-15	Service \$09: Implementation types	
Table 5-16	Service \$09: Supported subservices	
Table 5-17	Service \$0A: Implementation types	
Table 5-18	Service \$0A: Supported subservices	
Table 5-19	Service \$10: Implementation types	
Table 5-20	Service \$10: Supported subservices	
Table 5-21	Service \$11: Implementation types	
Table 5-22	Service \$11: Supported subservices	
Table 5-23	Service \$14: Implementation types	
Table 5-24	Service \$14: Supported subservices	
Table 5-25	Service \$19: Implementation types	
Table 5-26	Service \$19: Supported subservices	
Table 5-27	Service \$22: Implementation types	
Table 5-28	Service \$22: Supported subservices	
Table 5-29	Service \$23: Implementation types	
Table 5-30	Service \$23: Supported subservices	
Table 5-31	Service \$24: Implementation types	
Table 5-32	Service \$24: Supported subservices	/4



Table 5-33	Service \$27: Implementation types	. 76
Table 5-34	Service \$27: Supported subservices	. 76
Table 5-35	Service \$28: Implementation types	. 79
Table 5-36	Service \$28: Supported subservices	. 79
Table 5-37	Service \$2A: Implementation types	. 81
Table 5-38	Service \$2A: Supported subservices	. 82
Table 5-39	Service \$2C: Implementation types	. 84
Table 5-40	Service \$2C: Supported subservices	
Table 5-41	Service \$2E: Implementation types	
Table 5-42	Service \$2E: Supported subservices	
Table 5-43	Service \$2F: Implementation types	
Table 5-44	Service \$2F: Supported subservices	
Table 5-45	Service \$31: Implementation types	
Table 5-46	Service \$31: Supported subservices	
Table 5-47	Service \$3D: Implementation types	
Table 5-48	Service \$3D: Supported subservices	
Table 5-49	Service \$3E: Implementation types	
Table 5-50	Service \$3E: Supported subservices	
Table 5-51	Service \$85: Implementation types	
Table 5-52	Service \$85: Supported subservices	
Table 5-53	Service \$86: Implementation types	
Table 5-54	Service \$86: Supported subservices	
Table 6-1	Dcm ProtocolType	
Table 6-2	Dcm RecoveryInfoType	
Table 6-3	Dcm VsgldentifierType	
Table 6-4	Dcm VsgStateType	
Table 6-5	Dcm_inputOutputControlParameterType	
Table 6-6	Dcm_IOOperationResponseType	
Table 6-7	Dcm_IOOperationRequest_< DidName/DidDataName >type	106
Table 6-8	Dcm_Init()	
Table 6-9	Dcm_MainFunction()	
Table 6-10	Dcm_MainFunctionTimer()	
Table 6-11	Dcm MainFunctionWorker()	
Table 6-12	Dcm GetVersionInfo()	
Table 6-13	Dcm InitMemory()	
Table 6-14	, , ,	111
Table 6-15	Dcm_GetActiveProtocol()	
Table 6-16	Dcm_GetSecurityLevel()	
Table 6-17	Dcm_GetSesCtrlType()	
Table 6-17	Dcm_ResetToDefaultSession()	
Table 6-19	Dcm_TriggerOnEvent()	
Table 6-20	Dcm_GetSecurityLevelFixedBytes()	115
Table 6-20	Dcm_SetActiveDiagnostic()	
Table 6-21	Dcm_GetRequestKind()	
Table 6-22	Dcm_VsgSetSingle()	
Table 6-25	Dcm_VsgSetMultiple()	
Table 6-25	Dcm_VsglsActive()	
Table 6-25	Dcm_VsgIsActive()	
Table 6-20 Table 6-27	Dcm_GetTesterSourceAddress()	
Table 6-27	Dcm_ProcessVirtualRequest()	
Table 6-29	Dcm_SetSecurityLevel()	
Table 6-29	Services used by the DCM	
Table 6-30 Table 6-31	Dcm_ExternalProcessingDone()	
Table 6-31	Dcm_ExternalSetNegResponse()	
19016 0-25	Don_ExternalOctiveShouse()	120



Table 6-33	Dcm_ComM_NoComModeEntered()	
Table 6-34	Dcm_ComM_SilentComModeEntered()	126
Table 6-35	Dcm_ComM_FullComModeEntered()	127
Table 6-36	Dcm_TriggerTransmit ()	128
Table 6-37	Dcm_StartOfReception()	129
Table 6-38	Dcm CopyRxData()	130
Table 6-39	Dcm TpRxIndication()	
Table 6-40	Dcm CopyTxData()	
Table 6-41	Dcm_TpTxConfirmation()	
Table 6-42	Dcm TxConfirmation()	
Table 6-43	Dcm_ProvideRxBuffer ()	
Table 6-44	Dcm_RxIndication()	
Table 6-45	Dcm ProvideTxBuffer ()	
Table 6-46	Dcm_TxConfirmation()	
Table 6-47	Dcm OnRequestDetection()	
Table 6-48	<module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>	
Table 6-49	<module> <diagnosticservice>() (AR version < 4.2.2)</diagnosticservice></module>	
Table 6-50	<module>_<diagnosticservice> () (AR version >= 4.2.2)</diagnosticservice></module>	
Table 6-51	<pre></pre> <pre><pre><pre><pre></pre></pre></pre></pre>	
Table 6-52	Dcm SetProgConditions()	
Table 6-53	Dcm GetProgConditions()	
Table 6-54	Dcm Confirmation()	
Table 6-55	Dcm ReadMemory()	
Table 6-56	Dcm WriteMemory()	
Table 6-57	 Diagnostic Session Change Notification Callback > 	
Table 6-58	<security access="" callback="" change="" notification=""></security>	
Table 6-59	Dcm_GetRecoveryStates()	
Table 6-60	Dcm_FilterDidLookUpResult	
Table 6-61	Dcm_FilterRidLookUpResult	
Table 6-62	ConditionCheckRead()	
Table 6-63	ReadData() (asynchronous)	
Table 6-64	ReadData() (synchronous)	
Table 6-65	ReadDataLength()	
Table 6-66	WriteData() (dynamic length)	
Table 6-67	WriteData() (static length)	
Table 6-68	V	158
Table 6-69	ResetToDefault()	
Table 6-70	FreezeCurrentState()	
Table 6-71	ShortTermAdjustment()	
Table 6-72	GetScalingInformation()	
Table 6-73	Start()	
Table 6-74	Stop()	
Table 6-75	RequestResults()	
Table 6-76	GetSeed() (with SADR)	
Table 6-77	GetSeed() (without SADR)	
Table 6-78	CompareKey()	
Table 6-79	Indication()	
Table 6-80	Confirmation()	
Table 6-81	ActivateEvent()	
Table 6-82	GetDTRValue()	
Table 6-83	RequestControl()	
Table 6-84	GetInfotypeValueData()	174
Table 6-85	StartProtocol()	175
Table 6-86	IsDidAvailable ()	176



Table 6-87	ReadDidData()	. 177
Table 6-88	WriteDidData()	. 178
Table 6-89	GetSecurityAttemptCounter ()	
Table 6-90	SetSecurityAttemptCounter ()	. 180
Table 6-91	ReadData() (paged-data-reading)	
Table 6-92	DCM_Roe	
Table 6-93	DCMServices	
Table 6-94	DataServices_ <dataname></dataname>	
Table 6-95	RoutineServices_ <routinename></routinename>	
Table 6-96	ROEServices	
Table 6-97	SecurityAccess_ <securitylevelname></securitylevelname>	. 184
Table 6-98	ServiceRequestManufacturerNotification_ <swc></swc>	. 184
Table 6-99	ServiceRequestSupplierNotification_ <swc></swc>	. 184
Table 6-100	DtrServices_ <midname>_<tidname></tidname></midname>	
Table 6-101	RequestControlServices <tidname></tidname>	
Table 6-102	InfotypeServices_ <vehinfodata></vehinfodata>	
Table 6-103	CallbackDCMRequestServices_ <swc></swc>	
Table 6-104	DataServices_DIDRange_ <rangename></rangename>	
Table 6-105	ModeDeclarationGroups managed by DCM	
Table 6-106	DcmDiagnosticSessionControl callouts	
Table 6-107	DcmDiagnosticSessionControl modes	
Table 6-108	DcmCommunicationControl <comm channel="" snv=""> callouts</comm>	
Table 6-109	DcmCommunicationControl_ <comm_channel_snv> modes</comm_channel_snv>	
Table 6-110	DcmEcuReset callouts	
Table 6-111	DcmEcuReset modes	
Table 6-112	DcmModeRapidPowerShutDown callouts	
Table 6-113	DcmModeRapidPowerShutDown modes	
Table 6-114	DcmControlDTCSetting callouts	
Table 6-115	DcmControlDTCSetting modes	
Table 6-116	DcmSecurityAccess callouts	
Table 6-117	DcmSecurityAccess modes	
Table 6-118	DcmResponseOnEvent <eventid> callouts</eventid>	
Table 6-119	DcmResponseOnEvent <eventid> modes</eventid>	
Table 6-120	Sender-receiver interface of type DataServices	
Table 6-121	Sender-receiver interface of type IOControlRequest	
Table 6-122	Sender-receiver interface of type IOControlResponse	. 192
Table 8-1	Deviations to AUTOSAR	
Table 8-2	Additions/ Extensions to AUTOSAR	. 195
Table 8-3	Limitations to AUTOSAR	
Table 9-1	Diagnostic services with non-trivial DCM Buffer size estimation	
	calculation method	. 198
Table 9-2	Initialization of the Dcm_ProgConditionsType for non-default session	
	activation at ECU power-on	. 205
Table 9-3	Calibrateable OBD "availability parameter identifier" values	. 207
Table 9-4	Color legend to the protocol prioritization matrixes	. 211
Table 9-5	Protocol prioritization during default session	
Table 9-6	Protocol prioritization during non-default session	. 212
Table 9-7	Post-build configuration rules on invariant DCM parameters	. 221
Table 9-8	Error Codes possible during Post-Build initialization failure	
Table 9-9	Filtering level availability	
Table 9-10	Filter diagnostic objects and the corresponding filtering APIs / Callback	
Table 9-11	Sender-Receiver DID: Supported data types	
Table 9-12	Automatically Disabled Features with SilentBSW	
Table 10-1	Compile time error messages	
	-	



Table 10-2	Code Generation Time Messages	256
	Glossary	
Table 11-2	Abbreviations	



1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.0.0	Initial Version
1.1.0	Added support for diagnostic services: ReadDataByPeriodicIdentifier (\$2A) InputOutputControlByIdentifier (\$2F)
1.2.0	Added support for diagnostic service: DynamicallyDefineDataIdentifier (\$2C) Changed DataServices_ <dataname> to have either all synchronous or asynchronous operations.</dataname>
1.3.0	Minor improvements
1.4.0	Support for OBD2 protocol diagnostic services
1.5.0	Support for multi-protocol use cases and protocol prioritization Support resetting of IO control operation at session change/protocol preemption. Support for IO control actual data reporting in the positive response of SID 0x2F. Support for optional <i>ConditionCheckRead()</i> DataServices operation
2.0.0	Support for signal interfaces (C/S) for DIDs and RIDs. Extended run time limitation (How to Reduce DCM Main-Function Run Time Usage).
2.1.0	Support for DEM AR 4.1.2 API Automatic clear of DDID definition on DCM session/security level change Automatic stop of PDID reading on DCM session/security level change Optional SWC notification on security access level change
2.2.0	Support NvRam signal access for DIDs Support for PduR AR4.1.2 API
3.0.0	Support for diagnostic service <i>ReadScalingDataByIdentifier</i> (\$24) Support for post-build selectable, loadable, selectable-loadable, deletable for the communication part of DCM.
3.1.0	Support of DID ranges Support for AR3 interfaces (PduR, ComM etc.)
4.0.0	Support of response suppression on functional addressed requests Support of interruption by service request with foreign N_TA New include structure and module refactoring Additional notification on diagnostic session and security access level state transitions.
4.1.0	Support of session specific P2/P2Star timings (5.10.4 Configuration Aspects). Non-volatile storage of security access failed attempts (SecurityAccess



Component Version	New Features
	(\$27)).
	Configurable security level specific fixed bytes to support application seed/key calculation (see 9.26 How to Get Security-Access Level Specific Fixed Byte Values).
	Support for paged-buffer reading of DIDs over service ReadDataByIdentifier (\$22).
	Selectable C/S or direct function-calls for service 0x27 application callbacks.
	Extensible Keep-Alive time period (see 9.27 How to Extend the Diag Keep Alive Time during Diagnostics)
	DCM state recovery on reset /power on (9.28 How to Recover DCM State Context on ECU Reset/ Power)
5.0.0	Service InputOutputControlByIdentifier (\$2F) has now improved autoresetting functionality on any diagnostic state change. Service TesterPresent (\$3E) can be handled within the application. Refer to its chapter to get information on any limitations. Support of diagnostic connections without response (see 9.29 How to Define a Diagnostic Connection without USDT Responses) Support of diagnostic service variant-handling using application help (see 9.30 How to Handle Multiple Diagnostic Service Variants)
5.1.0	The request status/kind of a DCM diagnostic client can be acquired at any time, using new provided service API <code>Dcm_GetRequestKind()</code> . Support for bitmapped IO DIDs with CEMR in service <code>InputOutputControlByIdentifier (\$2F)</code>
5.2.0	Minor improvements
7.0.0	Variant handling for the DCM <i>Diagnostic Services Part</i> Support for Sender-Receiver DIDs Improved AR 4.2.2 compatibility regarding: - How to Switch Between OBD DTR Support by DCM and DEM - How to Enable Support of OBD VIDs with Dynamic Length - API Dcm_ReadMemory() resp. Dcm_WriteMemory()
7.1.0	Automatic reporting of RoutineInfoByte parameter in UDS RIDs (see 9.34 How to Support Routine Info Byte with UDS RIDs) Support for Sender-Receiver IODIDs (see 9.33 How to setup DCM for Sender-Receiver Communication)
7.2.0	Support for DEM AR 4.3.0 API 9.13 How to Select DEM-DCM Interface Version VSG support DCM 9.35 Vehicle System Group Support Support for CanTP Mixed11 addressing prioritization
8.0.0	Unification of pMsgContext parameter values for <module>_<diagnosticservice>() and <module>_<diagnosticservice>_<subservice>() Support of AR 4.2.2 customer (sub-)service processor API: <module>_<diagnosticservice>() (AR version >= 4.2.2) <module>_<diagnosticservice>_<subservice>() (AR version >= 4.2.2)</subservice></diagnosticservice></module></diagnosticservice></module></subservice></diagnosticservice></module></diagnosticservice></module>



Component Version	New Features
8.3.0	Support for Sender-Receiver Boolean data type
8.4.0	Support for UUDT DelayTimer

Table 1-1 Component history



2 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module DCM as specified in [1].

Supported AUTOSAR Release*:	4	
Supported Configuration Variants:	pre-compile, post-build loadable, post-build selectable	
Vendor ID:	DCM_VENDOR_ID	30 decimal (= Vector-Informatik, according to HIS)
Module ID:	DCM_MODULE_ID	53 decimal (according to ref. [4])

^{*} For the precise AUTOSAR Release 4.x please see the release specific documentation.

The Autosar DCM is a software component that

- handles the diagnostic communication between the tester and the ECUs application;
- analyzes and interprets the diagnostic communication protocol UDS based on ISO 14229 ([5]);
- implements the handling of all UDS services, providing abstract interface to the application by hiding all protocol specifics;
- provides a built in handling of the fault memory manager (DEM) data acquisition;
- provides service execution precondition validation and state management such as
 - o diagnostic sessions and security access verification;
 - o custom ECU mode condition verification (e.g. vehicle speed, etc.).

2.1 How to Read This Document

Here are defined some general rules on how to read this document.

2.1.1 DCM Integration and Basic Operation

We recommend starting with the chapter 4 Integration. It will help you to bind the DCM component into your project and to learn about its integration specific requirements. Once the code binding is finished in your project, please go on with the Functional Description chapter to learn about how to operate the DCM.

2.1.2 Diagnostic Service Documentation

Once the DCM is integrated into your project, you will need to know how each diagnostic service, your ECU has to support, is to be configured, implemented and handled by DCM and your application. For learning that, please refer to chapter 5 Diagnostic Service Implementation.

2.1.3 API Definitions

You can any time directly refer to a DCM provided/required service or callout description once you have started the DCM application implementation, by searching for the function



name in this document. But the usual way is to start with the usage context of the concrete function you are looking for:

- The diagnostic service it is bound to (look into the corresponding *Diagnostic Service Implementation* sub-chapter).
- A special feature it serves (look into the corresponding *Using the DCM* "how to..." subchapter).

DCM Configuration Parameter Descriptions 2.1.4

This document contains many references to DCM configuration parameters. The goal of this document is not to describe the parameters in detail, but to show you which parameters are bound to which diagnostic services or features. All those parameter references are given as full path links within the DCM Configurator 5 GCE for faster location of the concrete parameter. Once you have followed such a link in the Configurator 5 tool, please read the description information bound to the parameter. Follow any dependency links from this description to learn more about what additionally shall be configured in order to get a fully functioning configuration.

2.2 Architecture Overview

The following figure shows where the DCM is located in the AUTOSAR architecture.

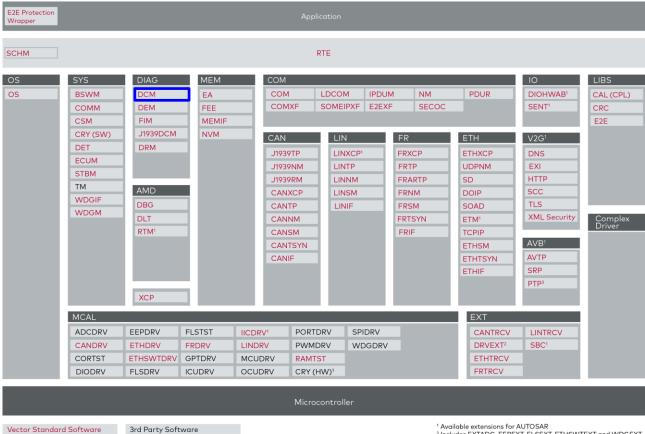


Figure 2-1 AUTOSAR 4.2 Architecture Overview

¹ Available extensions for AUTOSAR ² Includes EXTADC, EEPEXT, FLSEXT, ETHSWTEXT and WDGEXT ³ Functionality represented in ETHTSYN and STBM



The next figure shows the interfaces to adjacent modules of the DCM. These interfaces are described in chapter 5.

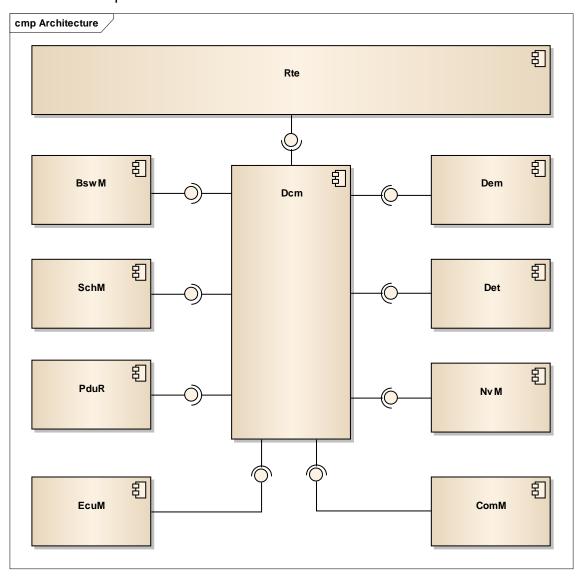


Figure 2-2 Interfaces to adjacent modules of the DCM

Applications do not access the services of the BSW modules directly. They use the service ports provided by the BSW modules via the RTE. The service ports provided by the DCM are listed in chapter 6.5.2.1 based on their definition in [1]. In some cases where the DCM requires a call out extension, the DCM calls a CDD module directly through the Dcm_Cdd interface.



3 Functional Description

3.1 Features

The features listed in the following tables cover the complete functionality specified for the DCM.

The AUTOSAR standard functionality is specified in [1], the corresponding features are listed in the tables

- Table 3-1 Supported AUTOSAR standard conform features
- Table 3-2 Not supported AUTOSAR standard conform features

For further information of not supported features see also chapter 8.

Vector Informatik provides further DCM functionality beyond the AUTOSAR standard. The corresponding features are listed in the table

Table 3-3 Features provided beyond the AUTOSAR standard

The following features specified in [1] are supported:

Supported AUTOSAR Standard Conform Features

MICROSAR Identity Manager using Post-Build Selectable

All features not listed in *Table 3-2 Not supported AUTOSAR standard conform features* are to be considered as supported.

Table 3-1 Supported AUTOSAR standard conform features

The following features specified in [1] are not supported:

Not Supported AUTOSAR Standard Conform Features

No link time configuration support.

No post-build support on diagnostic services (only communication). Though an alternative solution is provided (see 9.30)

Table 3-2 Not supported AUTOSAR standard conform features

The following features are provided beyond the AUTOSAR standard:

Features Provided Beyond The AUTOSAR Standard

Possibility to avoid high CPU load peaks:

How to Reduce DCM Main-Function Run Time Usage

Optimized multi-client communication support:

How to Handle Multiple Diagnostic Clients Simultaneously

Run time optimized DCM DEM interface for low CPU load.

Native AR 4.0.3 and AR 4.1.2 DEM API version support.

Support for sub-functions 0x17, 0x18 and 0x19 of service *ReadDiagnosticInformation* (\$19) according to [5].



Features Provided Beyond The AUTOSAR Standard

Optional notification on security access level change

Extensible keep-alive time period: How to Extend the Diag Keep Alive Time during Diagnostics Recovery of DCM states over reset /power down: How to Recover DCM State Context on ECU Reset/ Power

Table 3-3 Features provided beyond the AUTOSAR standard

3.2 Initialization

At ECU power-on boot (or any reset situation) DCM must be initialized by calling the API Dcm_Init().

3.3 States

DCM manages currently the following state machines:

- Diagnostic session states (managed by service *DiagnosticSessionControl* (\$10))
- Security access states (managed by service SecurityAccess (\$27))
- ECU Communication activity (managed by the ComM)
- DTC setting allowance (managed by the Dem)

3.4 Main Functions

In order to function properly, the *Dcm_MainFunction()* must be called periodically in the configured time period.

To specify the DCM task cycle time, set up the configuration parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmTaskTime

3.4.1 Split Task Functions

3.4.1.1 Functionality

Dcm_MainFunction() is only a container function that calls the two functions Dcm_MainFunctionTimer() and Dcm_MainFunctionWorker(). Of these two, only the Dcm_MainFunctionTimer() depends on a stable cycle time. If you find it difficult to run the Dcm_MainFunction() on a high priority task to ensure the timing behavior, you can optionally call these two functions instead of Dcm MainFunction().

This allows you to run the *Dcm_MainFunctionTimer()* on a higher priority task to guarantee the UDS timing requirements e.g. sending of NRC 'RequestCorrectlyRecieved-ResponsePending'.

Please note, both the *Dcm_MainFunctionWorker()* and *Dcm_MainFunctionTimer()* are optimized for short run time, so this option is usually not necessary.



3.4.1.2 Configuration Aspects

Per default DCM has only one *Dcm_MainFunction()* i.e. has no split tasks as specified in [1]. In order to enable split task usage in DCM, you have to set up DCM in the configuration tool as follows:

- Activate main-function task splitting via parameter: /Dcm/DcmConfigSet/DcmGeneral/DcmSplitTasksEnabled
- Both Dcm_MainFunctionTimer() and Dcm_MainFunctionWorker() will be scheduled for the time period specified by: /Dcm/DcmConfigSet/DcmGeneral/DcmTaskTime
- Optionally you can specify different scheduling time for the Dcm_MainFunctionWorker() using parameter: /Dcm/DcmConfigSet/DcmGeneral/DcmMainFunctionWorkerTaskTime

3.4.1.3 Integration Aspects

Both main-functions are automatically registered for scheduling in SchM component via SWC-template, but still they have no assigned task priority relation. As the <code>Dcm_MainFunctionTimer()</code> handles the real-time aspect of the DCM component, it must be running under high OS task priority. The <code>Dcm_MainFunctionWorker()</code> shall be assigned to an OS task that has a lower or equal priority compared to the <code>Dcm_MainFunctionTimer()</code>'s task.



Caution

- > Do **not** assign the *Dcm_MainFunctionWorker()* on a higher priority task than the *Dcm_MainFunctionTimer()*, especially not if your OS supports task preemption.
- > You need **both** *Dcm_MainFunctionWorker()* and *Dcm_MainFunctionTimer()* (unless you use the *Dcm_MainFunction()*).

3.5 Error Handling

3.5.1 Development Error Reporting

By default, development errors are reported to the DET using the service Det_ReportError() as specified in [2], if development error reporting is enabled (i.e. pre-compile parameter DCM DEV ERROR DETECT==STD ON).

If another module is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service <code>Det ReportError()</code>.

The reported DCM ID is 53.



The reported service IDs identify the services which are described in 6.1.5. The following table presents the service IDs and the related services:

Service
Dcm_StartOfReception()
Dcm_Init()
Dcm_CopyRxData() (AR4) / Dcm_ProvideRxBuffer() (AR3)
Dcm_TpRxIndication() (AR4) / Dcm_RxIndication() (AR3)
Dcm_CopyTxData() (AR4) / Dcm_ProvideTxBuffer() (AR3)
Dcm_TpTxConfirmation() (AR4) / Dcm_TxConfirmation() (AR3)
Dcm_GetSesCtrlType()
Dcm_GetSecurityLevel()
Dcm_GetActiveProtocol()
Dcm_ComM_NoComModeEntered()
Dcm_ComM_SilentComModeEntered()
Dcm_ComM_FullComModeEntered()
Dcm_GetVersionInfo()
Dcm_MainFunction()
Dcm_ResetToDefaultSession()
Dcm_TriggerOnEvent()
Dcm_ExternalSetNegResponse()
Dcm_ExternalProcessingDone()
<module>_<diagnosticservice>()</diagnosticservice></module>
ReadData() (synchronous)
ReadData() (asynchronous)
IsDidAvailable()
ReadDidData()
WriteDidData()
GetSeed() (with SADR)
GetSeed() (without SADR)
CompareKey()
Dcm_SetActiveDiagnostic()
GetSecurityAttemptCounter()
SetSecurityAttemptCounter()
GetInfotypeValueData()
Deprecated from DCM 5.00.00 and mapped to "DCM internal function". DCM internal diagnostic service processor
Dcm_TxConfirmation()
Dcm_TriggerTransmit()
Dcm ProvideRecoveryStates()



Service ID	Service
0xA4	Dcm_OnRequestDetection()
0xA6	Dcm_GetTesterSourceAddress()
0xA7	Dcm_GetSecurityLevelFixedBytes()
0xA8	Dcm_ProcessVirtualRequest()
0xA9	Dcm_SetSecurityLevel()
0xAA	ReadData() (paged-data-reading)
0xAB	Dcm_GetRequestKind()
0xAC	Dcm_VsgSetSingle
0xAD	Dcm_VsglsActive
0xAE	Dcm_VsgSetMultiple
0xAF	Dcm_VsglsActiveAnyOf
0xF0	DCM internal function

Table 3-4 DET Service IDs

The errors reported to DET are described in the following table:

Error	Code	Description
0x01	DCM_E_INTERFACE_TIMEOUT	A timeout during interaction with other module occurs.
0x02	DCM_E_INTERFACE_RETURN_VALUE	The return value of called API is out of range.
0x03	DCM_E_INTERFACE_BUFFER_OVERFLOW	The boundary check of provided buffers fails.
0x05	DCM_E_UNINIT	Executing program code before the DCM is initialized.
0x06	DCM_E_PARAM	An API call with invalid parameter value.
0x07	DCM_E_PARAM_POINTER	An API call with invalid/null pointer parameter.
0x40	DCM_E_ILLEGAL_STATE	An internal DCM error, reaching an unexpected state.
0x41	DCM_E_INVALID_CONFIG	Marks an inconsistent configuration.
0x42	DCM_E_CRITICAL_ERROR	An invalid configuration detected at runtime. After this error code is reported, the DCM will deactivate itself and will not respond to any new diagnostic request.

Table 3-5 Errors reported to DET

3.5.2 Production Code Error Reporting

Production code related errors are not supported by DCM.



4 Integration

This chapter gives necessary information for the integration of the MICROSAR DCM into an application environment of an ECU.

4.1 Scope of Delivery

The delivery of the DCM contains the files which are described in the chapters 4.1.1 and 4.1.2:

4.1.1 Static Files

File Name	Source Code Delivery	Object Code Delivery	Description
Dcm.c	•		This is the implementation source file of the DCM (delivered only for the "pre-compile" variant).
Dcm_Ext.c			This is the implementation source file of the DCM with Autosar extensions (delivered only for the "precompile" variant).
Dcm.h			This is the header file containing the APIs of DCM. This is the only file that has to be included by the application if an interaction with DCM is needed.
Dcm_Int.h			This is the header file containing internal APIs of DCM between the core- and extension parts. This file must not be included by any other source file except of the DCM own ones.
Dcm_Cbk.h			This file contains all function prototypes of APIs called by other BSW-C (i.e. Pdu-R, ComM, etc.).
Dcm_Types.h			This file contains all data types that shall be visible to the other components interacting with DCM.
Dcm_Core.h Dcm_CoreInt.h Dcm_CoreCbk.h Dcm_CoreTypes.h			All these files belong to the DCM core part. None of these files must be included by an external source code.
Dcm_Ext.h Dcm_ExtInt.h Dcm_ExtCbk.h Dcm_ExtTypes.h			All these files belong to the DCM extension part. None of these files must be included by an external source code.
Dcm_bswmd.arxml			This file contains all DCM configuration parameters' definitions.

Table 4-1 Static files



Dynamic Files 4.1.2

The dynamic files are generated by the Configurator 5 generation tool.

File Name	Description
Dcm_Cfg.h	This file contains all pre-compile configuration settings of DCM (e.g. switches, constants, etc.).
Dcm_Lcfg.c	This file contains the link-time parameterization of DCM.
Dcm_Lcfg.h	This file contains all link-time parameters declarations and type definitions.
Dcm_PBcfg.c	This file contains all post-build loadable parameterization of DCM.
Dcm_PBcfg.h	This file contains all post-build loadable parameters declarations and type definitions.
Rte_Dcm.h	This file will be generated by the RTE.
Rte_Dcm_Type.h	This file will be generated by the RTE.
Dcm_swc.arxml	This AUTOSAR xml file is used for the configuration of the Rte. It contains the information to get prototypes of callback functions offered by other components.

Table 4-2 Generated files



4.2 Include Structure

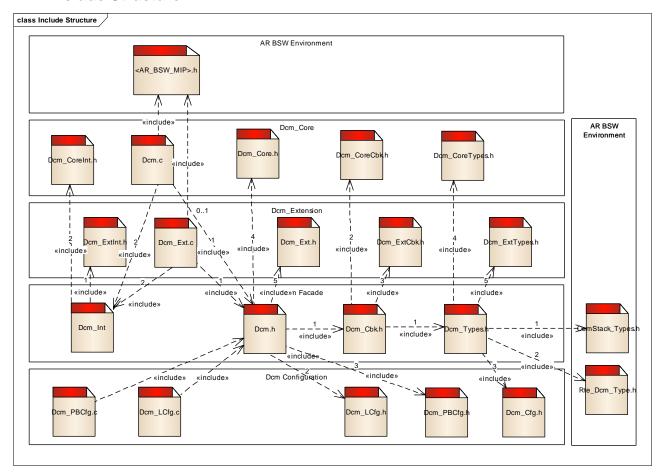


Figure 4-1 Include structure

4.3 Compiler Abstraction and Memory Mapping

The objects (e.g. variables, functions, constants, calibrate-able memory section) are declared by compiler independent definitions – the compiler abstraction definitions. Each compiler abstraction definition is assigned to a memory section.

The following table contains the memory section names and the compiler abstraction definitions of the DCM and illustrates their assignment among each other.

Compiler Abstraction Definitions Memory Mapping Sections	DCM_CONST	DCM_CAL_PRM	DCM_CODE	DCM_VAR_NOINIT	DCM_VAR_INIT	DCM_APPL_CODE	DCM_APPL_DATA	DCM_CALLOUT_CODE	DCM_APPL_CONST	DCM_VAR_PBCFG	DCM_PBCFG
DCM_START_SEC_CONST_8 DCM_STOP_SEC_CONST_8	-										



DCM_START_SEC_CONST_16 DCM_STOP_SEC_CONST_16	•								
DCM_START_SEC_CONST_32 DCM_STOP_SEC_CONST_32									
DCM_START_SEC_CONST_UNSPECIFIED DCM_STOP_SEC_CONST_UNSPECIFIED	•								
DCM_START_SEC_CALIB_8 DCM_STOP_SEC_CALIB_8									
DCM_START_SEC_CALIB_16 DCM_STOP_SEC_CALIB_16		•							
DCM_START_SEC_CALIB_32 DCM_STOP_SEC_CALIB_32									
DCM_START_SEC_CALIB_UNSPECIFIED DCM_STOP_SEC_CALIB_UNSPECIFIED		-							
DCM_START_SEC_VAR_INIT_8 DCM_STOP_SEC_VAR_INIT_8					-				
DCM_START_SEC_VAR_NO_INIT_8 DCM_STOP_SEC_VAR_NO_INIT_8				-					
DCM_START_SEC_VAR_NO_INIT_16 DCM_STOP_SEC_VAR_NO_INIT_16				-					
DCM_START_SEC_VAR_INIT_32 DCM_STOP_SEC_VAR_INIT_32					-				
DCM_START_SEC_VAR_NO_INIT_32 DCM_STOP_SEC_VAR_NO_INIT_32				-					
DCM_START_SEC_VAR_NO_INIT_UNSPECIFIED DCM_STOP_SEC_VAR_NO_INIT_UNSPECIFIED				-					
DCM_START_SEC_CODE DCM_STOP_SEC_CODE			•						
DCM_START_SEC_CALLOUT_CODE DCM_STOP_SEC_CALLOUT_CODE							•		
DCM_START_SEC_APPL_CODE DCM_STOP_SEC_APPL_CODE									
DCM_START_SEC_VAR_PBCFG DCM_STOP_SEC_VAR_PBCFG									
DCM_START_SEC_PBCFG DCM_STOP_SEC_PBCFG									-

Table 4-3 Compiler abstraction and memory mapping

The compiler abstraction definitions of DCM_APPL_DATA and DCM_APPL_CONST refer to any RAM resp. ROM section defined by any external to DCM software module. This can be either BSW component or application data storage.



The DCM_APPL_CODE and DCM_CALLOUT_CODE definitions also refer to an external code section relative to DCM. These are memory locations, where the application code is placed. The difference between these two sections is that an application code in CALLOUT section is a DCM functionality extension (e.g. a complex device driver) and not a component in the matter of providing server application specific data or functionality (i.e. via RTE).

4.4 Critical Sections

To protect internal data structures against modifications that will lead to data corruption, the DCM uses "Critical Sections" for blocking concurrent access, such as from lower transport layer and from the *Dcm_MainFunction()*.

The only method that DCM uses to handle the critical sections is:

► AUTOSAR Schedule Manager (SchM Dcm.h is included)



Caution

You must take special care that the SchM implementing the critical section is already started before the DCM is run.

You have to map the DCM critical sections to the appropriate resource locking method. DCM supports only the DCM_EXCLUSIVE_AREA_0 and it shall be always mapped to **global interrupt disabling**, since DCM has always very short time critical sections. The real critical section duration depends on the performance of the controller used in your system, but the DCM critical section design restricts the code within to very few instructions and in very rear cases contains (internal) function calls, which usually are inlined.

4.5 Considerations Using Request- and ResponseData Pointers in a Call-back

DCM is a half-duplex communication module and for memory usage optimization a single buffer is used for both request and response data. Therefore if a call-back function contains both "ResponseData" and "RequestData" pointers, they may point to different addresses, but these are still memory locations within the same diagnostic buffer. So if you start writing the response data, you probably will overwrite the request data. If the request data is still needed, while writing the response data, you will have to store it into temporary RAM location in your application software, before starting the write process.



5 Diagnostic Service Implementation

The main goal of the DCM is to handle the diagnostic protocol services, defined by [5]. The only task the application has is to provide the required data, to write new data into its memory, access IO ports, etc. All these application tasks are ECU specific and have no dependency to the used diagnostic protocol.

The following chapters describe each diagnostic service that the DCM handles, including implementation and configuration aspects.

Each chapter provides tables that give an overview over the following information:

- Which implementation types of that diagnostic service are supported;
- ▶ If the service is internally handled, which subservices are supported and how they are or can be implemented.

For each of the about classifications the following implementation types are used:

- Internal only = by DCM;
- External only = by application;
- Internal or external = implemented by DCM, but can be overridden by application;
- Not allowed = cannot be configured at all.



FAQ

If you miss a diagnostic service in the following chapter, it does only mean that the DCM does not provide any predefined implementation for it, but you can define it in Configurator 5 and handle it within your application. If you try to specify an invalid service identifier, the Configurator 5 will notify you about that and will deny the service definition.



FAQ

If not other stated every service that can be overridden by an application service handler may not have configured sub-services, but actually the application implementation of these services still can handle any by itself.



5.1 RequestCurrentPowertrainDiagnosticData (\$01)

5.1.1 Functionality

This is a legislated OBD service that delivers some current values of ECU parameters.

5.1.2 Required Interfaces

- If service handled by DCM:
- > DataServices_<DataName>
- If service handled by the application:
- > <Module> <DiagnosticService>()

5.1.3 Implementation Aspects



Table 5-1 Service \$01: Implementation types



Table 5-2 Service \$01: Supported subservices

This service is fully implemented by DCM.

5.1.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container:
- All to be supported PIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspPid
- For each PID to be supported by this service, the following parameter has to be set to either SERVICE_01 or SERVICE 01_02: /Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService



- The data content of a PID shall be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData
- > The access type to the data content of a PID can be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01



FAQ

There shall be no "availability ID" (i.e. 0x00, 0x20, 0x40 ..., 0xE0) explicitly defined in the DCM configuration! All these IDs will be automatically calculated during the code generation process and supported by the DCM code.



FAQ

If any of the service's PIDs shall be also readable by the corresponding UDS service (i.e. *ReadDataByIdentifier* (\$22) DIDs 0xF400 – 0xF4FF), the corresponding DIDs, **including the "availability DIDs"** shall be explicitly defined within the DCM configuration. This is required in order to support the optional read access condition checks on a DID operation.

Refer to *ReadDataByIdentifier* (\$22) for more details about OBD DID configuration particularities.



Note

For all PIDs implemented by the DEM, the according DEM APIs (e.g. Dem_DcmReadDataOfPID01) must be entered for the configuration parameter

Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService 01/DcmDspPidDataReadFnc



5.2 RequestPowertrainFreezeFrameData (\$02)

5.2.1 Functionality

This is a legislated OBD service that delivers the contents of the OBD Freeze Frame, which consists of ECU parameter values stored by the fault memory module.

5.2.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module> <DiagnosticService>()

5.2.3 Implementation Aspects



Table 5-3 Service \$02: Implementation types



Table 5-4 Service \$02: Supported subservices

This service is fully implemented by DCM.

5.2.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported PIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspPid
- For each PID to be supported by this service, the following parameter has to be set to either SERVICE_02 or SERVICE 01_02:

/Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService





FAQ

There shall be no "availability ID" (i.e. 0x00, 0x20, 0x40 ..., 0xE0) explicitly defined in the DCM configuration! All these IDs will be automatically calculated during the code generation process and supported by the DCM code.



5.3 RequestEmissionRelatedDTC (\$03)

5.3.1 Functionality

This is a legislated OBD service that delivers all DTCs with status "confirmed".

5.3.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.3.3 Implementation Aspects

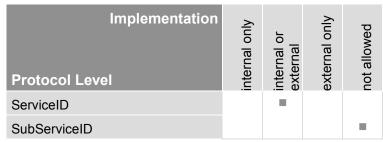


Table 5-5 Service \$03: Implementation types



Table 5-6 Service \$03: Supported subservices

This service is fully implemented by DCM.

5.3.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;



5.4 ClearEmissionRelatedDTC (\$04)

5.4.1 Functionality

This is a legislated OBD service that clears all emission related DTCs.

5.4.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.4.3 Implementation Aspects



Table 5-7 Service \$04: Implementation types



Table 5-8 Service \$04: Supported subservices

This service is fully implemented by DCM.

5.4.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;



5.5 RequestOnBoardMonitorTestResults (\$06)

5.5.1 Functionality

This is a legislated OBD service that delivers monitor specific test results.

5.5.2 Required Interfaces

- If service handled by DCM:
- > DtrServices (if no OBD DTR support by DEM)
- > Refer to chapter 6.3 Services used by DCM for the DEM component (if OBD DTR is supported by DEM).
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.5.3 Implementation Aspects



Table 5-9 Service \$06: Implementation types



Table 5-10 Service \$06: Supported subservices

This service is fully implemented by DCM.



Caution

Depending on the DEM SWS AR version and setup, the OBDMID configuration and data handling is either implemented by DCM or DEM.

Please refer to the configuration aspects in the following chapters for more details:

- > 5.5.4 Configuration Aspects
- > 9.31 How to Switch Between OBD DTR Support by DCM and DEM



5.5.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- If the OBDMID configuration and data handling is to be supported by DEM, the following parameters will not be required, resp. will be ignored during the DCM configuration code generation.
- All to be supported MIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspTestResultByObdmid/DcmDspTestResultObd midTid
- For each MID to be supported by this service, the corresponding TIDs shall be associated: /Dcm/DcmConfigSet/DcmDsp/DcmDspTestResultByObdmid/DcmDspTestResultObd
- The access type to the data content of a MIDTID can be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspTestResultByObdmid/DcmDspTestResultObdmidTid/DcmDspTestResultObdmidTidUsePort



FAQ

midTid/DcmDspTestResultObdmidTids

There shall be no "availability ID" (i.e. 0x00, 0x20, 0x40 ..., 0xE0) explicitly defined in the DCM configuration! All these IDs will be automatically calculated during the code generation process and supported by the DCM code.



FAQ

If any of the service's MIDs shall be also readable by the corresponding UDS service (i.e. *ReadDataByIdentifier* (\$22) DIDs 0xF600 – 0xF6FF), the corresponding DIDs, **including the "availability DIDs"** shall be explicitly defined within the DCM configuration. This is required in order to support the optional read access condition checks on a DID operation.

Refer to *ReadDataByIdentifier* (\$22) for more details about OBD DID configuration particularities.



5.6 RequestEmissionRelatedDTCsDetectedDuringCurrentOrLastDrivingCycle (\$07)

5.6.1 Functionality

This is a legislated OBD service that delivers all DTCs with status "pending".

5.6.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module> <DiagnosticService>()

5.6.3 Implementation Aspects



Table 5-11 Service \$07: Implementation types



Table 5-12 Service \$07: Supported subservices

This service is fully implemented by DCM.

5.6.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- No sub-functions shall be defined within the above defined service container;



5.7 RequestControlOfOnBoardSystemTestOrComponent (\$08)

5.7.1 Functionality

This is a legislated OBD service that starts a routine within the ECU.

5.7.2 Required Interfaces

- If service handled by DCM:
- > RequestControlServices <TIDName>
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.7.3 Implementation Aspects



Table 5-13 Service \$08: Implementation types



Table 5-14 Service \$08: Supported subservices

This service is fully implemented by DCM.

5.7.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- Each to be supported TIDs shall be defined in a container: /Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl
- The request data content size of a TID shall be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl/DcmDspRequestControlInBuff erSize



- The response data content size of a TID shall be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl/DcmDspRequestControlOutBuf ferSize
- The access type to the data content of a PID can be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl/DcmDspRequestControlUsePort



FAQ

There shall be no "availability ID" (i.e. 0x00, 0x20, 0x40 ..., 0xE0) explicitly defined in the DCM configuration! All these IDs will be automatically calculated during the code generation process and supported by the DCM code.



FAQ

If any of the service's PIDs shall be also readable by the corresponding UDS service (i.e. *RoutineControl* (\$31) DIDs 0xE000 – 0xE0FF), the corresponding RIDs, **including the "availability RIDs"** shall be explicitly defined within the DCM configuration. This is required in order to support the optional control access condition checks on a RID. Refer to *RoutineControl* (\$31) for more details about OBD RID configuration particularities.



5.8 RequestVehicleInformation (\$09)

5.8.1 Functionality

This is a legislated OBD service that delivers some vehicle identification information.

5.8.2 Required Interfaces

- If service handled by DCM:
- > InfotypeServices_<VEHINFODATA>
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.8.3 Implementation Aspects



Table 5-15 Service \$09: Implementation types



Table 5-16 Service \$09: Supported subservices

This service is fully implemented by DCM.

5.8.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- Each to be supported VID shall be defined in a container: /Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo





FAQ

There shall be no "availability ID" (i.e. 0x00, 0x20, 0x40 ..., 0xE0) explicitly defined in the DCM configuration! All these IDs will be automatically calculated during the code generation process and supported by the DCM code.



FAQ

If any of the service's MIDs shall be also readable by the corresponding UDS service (i.e. *ReadDataByIdentifier* (\$22) DIDs 0xF800 – 0xF8FF), the corresponding DIDs, **including the "availability DIDs"** shall be explicitly defined within the DCM configuration. This is required in order to support the optional read access condition checks on a DID operation.

Refer to *ReadDataByIdentifier* (\$22) for more details about OBD DID configuration particularities.

The data content of a VID shall be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData



FAQ

In case the OBD VID data length shall be variable, the configuration parameter /Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData/DcmDspVehInfoD ataSize will specify the maximum data size of the VID. This value will be passed as an input to the API GetInfotypeValueData().

The access type to the data content of a VID can be defined in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData/DcmDspVehInfoData/DcmDspVehInfoDataUsePort



5.9 RequestEmissionRelatedDTCsWithPermanentStatus (\$0A)

5.9.1 Functionality

This is a legislated OBD service that delivers all DTCs with status "permanent".

5.9.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.9.3 Implementation Aspects



Table 5-17 Service \$0A: Implementation types



Table 5-18 Service \$0A: Supported subservices

This service is fully implemented by DCM.

5.9.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;



5.10 DiagnosticSessionControl (\$10)

5.10.1 Functionality

This service manages the diagnostic session state in the ECU.

5.10.2 Required Interfaces

> DcmDiagnosticSessionControl

5.10.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-19 Service \$10: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x00				
0x01	-			
0x02	-			
0x03				
0x04 0x7E				
0x7F 0xFF				

Table 5-20 Service \$10: Supported subservices

This service is fully implemented by DCM.

5.10.4 Configuration Aspects

This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService





Caution

This service is mandatory and therefore may not be missing in the configuration and cannot be overridden by an application implementation.

- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- For each defined sub-function there shall be a corresponding session level defined: /Dcm/DcmConfigSet/DcmDsp/DcmDspSession

For each session, there must be also defined the P2/P2Start timings:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionP2ServerMax and

/Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionP2StarServerMax



FAQ

The P2/P2Start timings above will be reported to the diagnostic client within the positive response of this service. These timings will apply as long as the DCM is in the corresponding session. DCM is designed to send the RCR-RP not later than the configured P2/P2Star time. Depending on the project integration specifics and mainfunctions scheduling of the communication stack (interfaces, transport layers, etc.) it may lead to a delayed RCR-RP responses and failing compliance tests. Still, you have to opportunity to adjust the DCM internal timer values by specifying a diagnostic protocol specific (i.e. UDS and OBD may have different adjustments) timing corrections. Please refer to the following parameters in the DCM configuration: \(\Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmTimStrP2Serv erAdjust and

/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmTimStrP2Star ServerAdjust



5.11 EcuReset (\$11)

5.11.1 Functionality

This service implementation provides the reset functionality within the ECU.



Note

Once one of the following reset modes: HardReset, SoftReset and KeyOnOffReset is being requested, after sending the positive response resp. finishing service processing without positive response, DCM will not accept any further diagnostic request until the ECU is reset or *Dcm_ResetToDefaultSession()* is called. The communication reaction (reject or ignore new request) is dependent on the DCM configuration (see below).



FAQ

In some cases it is required not to perform a real reset of the ECU, but only to switch into the default session and reset all active diagnostic jobs. If this kind of reset implementation is required, then the application shall just call the <code>Dcm_ResetToDefaultSession()</code> provided port operation once the Mode_Switch operation for the <code>DcmEcuReset</code> mode declaration group is triggered.

5.11.2 Required Interfaces

- If service handled by DCM:
- > DcmEcuReset
- > DcmModeRapidPowerShutDown
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.11.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-21 Service \$11: Implementation types



Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x00				-
0x01		•		
0x02		•		
0x03		•		
0x04		-		
0x05		-		
0x06 0x7E			-	
0x7F 0xFF				-

Table 5-22 Service \$11: Supported subservices

All in *Table 5-22 Service \$11: Supported subservices* sub-functions marked as internally handled by DCM are fully implemented and no application interaction is necessary.



Caution

If any of the service's sub-functions 0x01-0x05 are implemented externally (user defined implementation), the corresponding mode switches (if required) shall be triggered by the user implementation.

The mode declaration groups (*DcmEcuReset* and *DcmModeRapidPowerShutDown*) will exist only if at least one of the corresponding sub-functions is still handled by DCM.

5.11.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- If sub-function 0x04 is to be supported, additionally the following parameter shall be configured: /Dcm/DcmConfigSet/DcmDsp/DcmDspPowerDownTime
- If one of the following sub-functions: 0x01-0x03 is to be supported, the DCM will either reject by NRC 0x21 or ignore any request received while waiting for the reset execution accomplishment. The concrete reaction depends on the setting: /Dcm/DcmConfigSet/DcmDsl/DcmDslDiagResp/DcmDslDiagRespOnSecondDeclined Request (refer also to 9.4 How to Handle Multiple Diagnostic Clients Simultaneously).



5.12 ClearDiagnosticInformation (\$14)

5.12.1 Functionality

This service clears the stored fault memory content.

5.12.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- ▶ If service handled by the application:
- > <Module>_<DiagnosticService>()

5.12.3 Implementation Aspects



Table 5-23 Service \$14: Implementation types



Table 5-24 Service \$14: Supported subservices

This service is fully implemented by DCM.

5.12.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container.



5.13 ReadDiagnosticInformation (\$19)

5.13.1 Functionality

This service reads the stored fault memory information using the DEM data access API.

5.13.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- ▶ If service handled by the application:
- > <Module>_<DiagnosticService>()

5.13.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-25 Service \$19: Implementation types

Implementation	nternal only	internal or external	external only	not allowed
Subservice ID	in the	in te	ext	not
0x00				
0x01 0x15		-		
0x16			-	
0x17 0x19		-		
0x1A 0x41				
0x42		-		
0x43 0x7E				
0x7F 0xFF				

Table 5-26 Service \$19: Supported subservices

All above sub-functions marked as internally handled by DCM are fully implemented and no application interaction is necessary.





FAQ

All WWH-OBD only related sub-functions (e.g. 0x42) will be internally handled in DCM only with a valid WWH-OBD license. Otherwise must be implemented within an external CDD module.

5.13.3.1 Reporting Stored DTC Environment Data

For all snapshot and extended data record sub-functions, DCM module requires additional input from the ECU configuration. In order to be able to report properly all related record numbers when the records masks 0xFF or 0xFE are requested, the DCM configuration has been extended by a new parameter hierarchy:

/Dcm/DcmConfigSet/DcmDsp/DcmDspFaultMemory/DcmDspFaultMemoryRecords.

These new parameters allow DEM configuration independent parameterization of DCM.

More details about them follow in next chapter and in the online help of each parameter under this container.



Note

If you use this DCM module together with the MICROSAR DEM, it is not necessary to use or change this configuration. DCM will automatically take the DEM settings regarding the supported record numbers.

5.13.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > All to be supported sub-functions shall be defined within the above defined service container as sub-service containers:

/Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService



FAC

For all user defined sub-functions (marked as "external only" in *Table 5-26 Service* \$19: Supported subservices) the sub-function specific request length check shall be performed by the corresponding sub-function processor implementation. This may lead to a deviation of the defined in [5] NRC prioritization on a double error (i.e. wrong security access level and invalid sub-function length). Currently this is unavoidable since [1] does not provide a request length configuration option on sub-service level.



- If one of the sub-functions 0x17-0x19 shall be supported, a Memoryldentifier is optionally possible to be specified: /Dcm/DcmConfigSet/DcmDsp/DcmDspFaultMemory/DcmDspFaultMemoryUserMemoryldInfo/DcmDspFaultMemoryUserMemoryld. For more details please refer to the parameter's online help within the configuration tool.
- If a non-MICROSAR DEM is used together with DCM and one of the stored DTC environment data reporting sub-functions of this diagnostic service is to be supported, all related record ranges shall be specified in the ECUC under the following container:

/Dcm/DcmConfigSet/DcmDsp/DcmDspFaultMemory/DcmDspFaultMemoryRecords



5.14 ReadDataByldentifier (\$22)

5.14.1 Functionality

This service provides read access to data structures within the ECU, marked by an identifier (DID).

The tester may simultaneously access multiple DIDs in a single request. The maximum allowed DID list length is configurable (refer to 5.14.4 Configuration Aspects for more details).

5.14.2 Required Interfaces

- If service handled by DCM:
- DataServices_<DataName>
- > DataServices_DIDRange_<RangeName>
- DataServices
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.14.3 Implementation Aspects



Table 5-27 Service \$22: Implementation types



Table 5-28 Service \$22: Supported subservices

The protocol handling of this service is fully implemented by DCM. The data reported by each DID will be provided by the application via service calls or call outs.





Caution

If you intend using DID ranges, please read carefully chapter 9.19 Handling with DID Ranges to learn important particularities.



FAQ

In case very large DID data has to be carried out from the application an optimized data reading process can be used to save RAM. For details please refer to 9.25 How to Save RAM using Paged-Buffer for Large DIDs.

5.14.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container:
- All to be supported readable DIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid
- The read operation over a DID is defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidRead
- The maximum number of simultaneously requested DIDs shall be defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspMaxDidToRead
- For each DID data signal the corresponding container shall be configured: /Dcm/DcmConfigSet/DcmDsp/DcmDspData
- The check condition read operation is optional and if not used can be deactivated via: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataConditionCheckReadFncUs ed
- For NvRam signal access select the value USE_BLOCK_ID in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
- A NvRam block Id has to be referenced: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataBlockIdRef





FAQ

Particularities for OBD DIDs (i.e. all within [0xF400-0xF8FF]):

- If DEM handles DTR values, please consider also chapter 9.31 How to Switch Between OBD DTR Support by DCM and DEM for information on the DIDs.
- Any OBD availability DID (e.g. 0xF400, 0xF420, 0xF600, 0xF620, 0xF880, 0xF8E0, etc.) will always be implemented by DCM. They will return the corresponding DID availability mask value as described in [6].
- Every DID in the OBD range that covers a corresponding OBD PID, MID or VID, shall not contain any data definition. The concrete data will be read out by DCM directly using the corresponding OBD service data access method. For such DIDs, there also will be no RTE DataServices port or callback generated.
- Any OBD DID, that neither is an availability DID, nor covers any existing OBD PID, MID or VID, will be handled as a generic DID and shall be configured regularly.



5.15 ReadMemoryByAddress (\$23)

5.15.1 Functionality

This service provides direct read access to the physical memory of the ECU. All readable memory areas and their access preconditions are to be configured as documented in 5.15.4 Configuration Aspects.

5.15.2 Required Interfaces

- If service handled by DCM:
- > Dcm_ReadMemory()
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.15.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID		-		
SubServiceID				-

Table 5-29 Service \$23: Implementation types



Table 5-30 Service \$23: Supported subservices

The protocol handling of this service is fully implemented by DCM. This includes:

- Validating and evaluating the ALFID byte;
- Parsing the requested memory address and size parameters;
- > Validating the requested memory block against the DCM memory configuration:
 - Supported requested memory area by the ECU;
 - > Memory area access preconditions (e.g. security access, mode rules).

The memory access will then be provided by the application via a call out.





All readable memory ranges will be considered during the definition of a DDID with *DynamicallyDefineDataIdentifier* (\$2C).

5.15.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported readable memory ranges shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspMemory

5.16 ReadScalingDataByldentifier (\$24)

5.16.1 Functionality

This service provides read access to scaling information of each data within a DID.

5.16.2 Required Interfaces

- If service handled by DCM:
- > DataServices_<DataName>
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.16.3 Implementation Aspects



Table 5-31 Service \$24: Implementation types



Table 5-32 Service \$24: Supported subservices



The protocol handling of this service is fully implemented by DCM. The data reported by each DID will be provided by the application via service calls or call outs.



FAQ

AUTOSAR does not provide a means for specifying session, security or mode rule restrictions on scaling information operation per DID. Thus the only way to limit the access to the scaling data is by limiting the access to the whole service \$24 under the corresponding parameter (e.g. DcmDsdSidTabSecurityLevelRef) in /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService

5.16.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported scaling DIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid
- For each DID data signal the corresponding container shall be configured: /Dcm/DcmConfigSet/DcmDsp/DcmDspData
- For each DID data signal the corresponding container shall be configured in its scaling size: /Dcm/DcmConfigSet/DcmDsp/DcmDspDataInfo/DcmDspDataScalingInfoSize



5.17 SecurityAccess (\$27)

5.17.1 Functionality

This service manages the security level of the ECU used to constrain the diagnostic access to critical services like writing data in restricted areas.

5.17.2 Required Interfaces

The following interfaces must be available when service \$27 is used:

- If service handled by DCM:
- > SecurityAccess_<SecurityLevelName>
- If service handled by the application:
- > <Module>_<DiagnosticService>()
- > Dcm_SetSecurityLevel()

5.17.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-33 Service \$27: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x00				-
0x01 0x7D	-			
0x7E 0xFF				-

Table 5-34 Service \$27: Supported subservices

By default this service is fully implemented by DCM. If the internal implementation is used, the following specifics have to be considered:

If the ECU shall support "failed attempt monitoring", it can be chosen between two strategies on how to avoid brute-force-attack bypass via ECU reset.

> Dynamic power-on delay time management:



The attempt counter shall be stored by the application (e.g. into a NvM block), so at next ECU power on/reset event its value can be recovered.

> Static power-on delay management:

The attempt counter will not be stored into the NvM (by the application), but instead DCM will use the "delay time on boot" setting to insert a penalty time at each power on cycle, regardless of the last attempt counter state. This means that even if during the last power-on cycle there was no failed attempt, the ECU will not accept any request for service 0x27 for that level, having set up "delay time on power on".

Please, refer the configuration related chapter below to find the corresponding DCM settings that affect the brute-force-attack bypass strategy.

MICROSAR DCM provides an optional extension of the security access level configuration if some fixed bytes for the seed/key value calculation are needed. For details, please refer to chapter 9.26 How to Get Security-Access Level Specific Fixed Byte Values.

5.17.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- > There shall always be a pair of sub-functions per security level (e.g. 0x01 for "get seed" and 0x02 for the corresponding "send key" sub-function).
- > For each pair there shall always be a corresponding security level defined: /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow
- If a notification on a security access level state change is required, the option described in 9.16 How to Know When the Security Access Level Changes shall be enabled.
- Specify whether a single (shared among all security levels) or multiple (per security level) instances of the attempt counter shall be supported: /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecuritySingleInstanceAttemptMonitor
- Specify whether a single (shared among all security levels) or multiple (per security level) instances of the delay timer shall be supported: /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecuritySingleInstanceDelayTimer
- Specify whether a non-volatile storage of the attempt counter is required for a certain level:
 - /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurity AttemptCounterEnabled



Specify whether an unconditional delay timer start is required for a certain level: /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurity DelayTimeOnBoot



FΔO

You can only choose to have either DcmDspSecurityAttemptCounterEnabled or DcmDspSecurityDelayTimeOnBoot. Both settings cannot be combined.

- The access type to the security level specific operations can be defined using the following parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurity UsePort
- > Specify the attempt counter/timer recovery replacement strategy, in case the last stored attempt counter value is no more readable:
 - /Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSec



5.18 CommunicationControl (\$28)

5.18.1 Functionality

This service manages the communication state of both reception and transmission path of the ECU.

5.18.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the BswM component.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.18.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-35 Service \$28: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x00 0x03				
0x04 0x05				
0x06 0x3F				-
0x40 0x7E				
0x7F 0xFF				

Table 5-36 Service \$28: Supported subservices

This service is fully implemented by DCM with the following limitations:

For the sub-network id parameter only the values "CurrentSubNetwork" and "AllSubNetworks" are supported. The third type: "SpecificSubNetworkId" is currently not supported.



5.18.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers:
 \(\text{Dem/Dem/ConfigSet/Dem/Ded/Dem/Ded/Service/Table/Dem/Ded/Service/Dem/Ded/Service/Table/Dem/Ded/Service/Table/Dem/Ded/Service/Table/

/Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService



FAQ

For all user defined sub-functions (marked as "external only" in *Table 5-36 Service* \$28: Supported subservices) the sub-function specific request length check shall be performed by the corresponding sub-function processor implementation. This may lead to a deviation of the defined in [5] NRC prioritization on a double error (i.e. wrong security access level and invalid sub-function length). Currently this is unavoidable since [1] does not provide a request length configuration option on sub-service level.

All other for this service relevant properties shall be configured under: /Dcm/DcmConfigSet/DcmDsp/DcmDspComControl



FAQ

It is important that if UDS parameter "CommunicationType" 0x0X (AllNetworks) shall be supported by DCM, that the corresponding channels are configured appropriately under the following configuration containers:

/Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlAllChannel

In case DCM shall monitor any critical condition under which this service shall no longer be active, put a reference to that condition using parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSetting/DcmD spComControlCommunicationReEnableModeRuleRef



5.19 ReadDataByPeriodicIdentifier (\$2A)

5.19.1 Functionality

This service provides read access to data structures within the ECU, marked by a periodic identifier (PDID). These are all DIDs in range [\$F200 – \$F2FF].

The tester may schedule multiple PDIDs in a single request. The maximum allowed PDID list length is configurable (refer to 5.19.4 Configuration Aspects).

Optionally, DCM is able to stop automatically the periodic transmission of any scheduled PDID that cannot be accessed any more, after a diagnostic session/security access level changes. Refer to *5.19.4 Configuration Aspects* for details about this setting.

DCM is also able to induce a delay between periodic messages to reduce bus load. Refer to 5.19.3 Implementation Aspects and 5.19.4 Configuration Aspects for further details.



FAQ

Only periodic responses of type 2 (UUDT) are supported, as the latest versions of [5] require.

5.19.2 Required Interfaces

- If service handled by DCM:
- > DataServices <DataName>
- DataServices_DIDRange_<RangeName>
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.19.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-37 Service \$2A: Implementation types





Table 5-38 Service \$2A: Supported subservices

The protocol handling and the PDID read job scheduling of this service is fully implemented by DCM. The data reported by each DID will be provided by the application via service calls or call outs.

To reduce bus load, a delay can be induced between consecutive periodic messages. More specifically, a time after sending a periodic message can be configured in which at most one other periodic message may be sent. This effectively limits the number of periodic messages sent within this configured time to two messages. The time can be configured for each scheduling rate individually. Refer to 5.19.4 Configuration Aspects for details on how this can be configured. In case multiple periodic requests with different scheduling rates are active simultaneously, the fastest one determines the delay time.



Caution

If you intend using DID ranges, please read carefully chapter 9.19 Handling with DID Ranges to learn important particularities.

5.19.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- No sub-functions shall be defined within the above defined service container. The scheduling rates to be supported are specified by the corresponding rate time configuration parameter. Example for "SlowRate": /Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission/DcmDspPeriodicTransmissionSlowRate
- > The time window in which at most two messages are allowed to be sent can be configured for each scheduling rate individually. Example for "SlowRate": /Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission/DcmDspPeriodicTransmissionSlowRateDelayTimer
- All to be supported readable PDIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid. The only allowed DID numbers are within the range [\$F200-\$F2FF].
- > The read operation over a PDID is defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidRead



- The maximum number of simultaneously requested PDIDs shall be defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspMaxDidToRead
- The maximum number of simultaneously schedulable PDIDs shall be defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicDidTransmission/DcmDspMaxPeriodic DidScheduler
- > There shall be at least one DCM periodic connection (at least once client supports periodic responses), referred by a corresponding tester main connection. For that purpose configure:
- Define the clients periodic connection with one or multiple PDUs of the UUDT messages to be sent within the protocol container: /Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslPeriodicTransmission
- Refer the above created connection from the clients main connection located in the same protocol container: /Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslPeriodicTranmissionConRef
- > If it is required that DCM shall stop automatically any PDID which is no more supported in the active diagnostic session/security level the following parameter shall be enabled:
 - /Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicDidTransmission/DcmDspPeriodicDidStopOnStateChange



5.20 DynamicallyDefineDataIdentifier (\$2C)

5.20.1 Functionality

This service is used to define new abstract data structures (DIDs) that refer to other statically configured DIDs or memory areas. The newly defined data structures are accessible for reading only through their assigned DDID (DynamicDID).

Optionally, DCM is able to clear automatically any already defined DDID that cannot be accessed any more, after a diagnostic session/security access level changes. This also implies that a periodic DDID will be also removed from the periodic scheduler (ReadDataByPeriodicIdentifier (\$2A)). Refer to 5.20.4 Configuration Aspects for details about this setting.

5.20.2 Required Interfaces

- If service handled by DCM:
- No additional interfaces are required for this service, since it is completely handled within the DCM.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.20.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID	•			

Table 5-39 Service \$2C: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x01	-			
0x02	-			
0x03	-			
0x04 0xFF				-

Table 5-40 Service \$2C: Supported subservices

This service is fully implemented by DCM corresponding to the [5].





Caution

If you intend using DID ranges, please read carefully chapter 9.19 Handling with DID Ranges to learn important particularities.

5.20.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- If this service is to be used, there shall be at least one DID in the DCM configuration, determined as a DDID by the parameter:
 /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidDynamicallyDefined
- If the objects (DIDs or memory areas) referenced by a DDID shall be validated against session, security and mode-rule preconditions each time the DDID is to be read: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidDynamicallyDefined
- DCM verifies always the session, security and mode-rule preconditions of a DDID when it is requested by a diagnostic client. You can configure DCM additionally to check also the objects (DIDs or memory areas) referenced by a DDID against their preconditions by parameter: //Dcm/DcmConfigSet/DcmDsp/DcmDspDDDidCheckPerSourceDid
- You can configure DCM to execute all in a DDID contained DID's ConditionCheckRead() operations when the DDID is requested by diagnostic client: /Dcm/DcmConfigSet/DcmDsp/DcmDspDDDidCheckConditionReadPerSourceDid
- > If it is required DCM to clear automatically any no more supported in the active diagnostic session/security level DDID (and stop it from periodic reading), the parameter shall be enabled:
 - /Dcm/DcmConfigSet/DcmDsp/DcmDspDDDidClearOnStateChange





Enabling DcmDspDDDidClearOnStateChange does imply that any DDID access precondition evaluation for reading it once (ReadDataByIdentifier (\$22)) or periodically (ReadDataByPeriodicIdentifier (\$2A)) will not be performed. The reason is that once there is a change of the current diagnostic session/security access level, the DDID will no more exist and the ECU will reject any read request for it by NRC 0x31 (RequestOutOfRange). Combining this feature together with DcmDspDDDidCheckPerSourceDid increases the overall run time usage but also the access precondition dependent level safety.



5.21 WriteDataByldentifier (\$2E)

5.21.1 Functionality

This service provides write access to predefined and marked by identifier data structures within the ECU.

5.21.2 Required Interfaces

- If service handled by DCM:
- > DataServices_<DataName>
- > DataServices DIDRange <RangeName>
- > DataServices
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.21.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-41 Service \$2E: Implementation types



Table 5-42 Service \$2E: Supported subservices

The protocol handling of this service is fully implemented by DCM. The functionality for writing the data of each DID will be provided by the application via service calls or call outs.





Caution

If you intend using DID ranges, please read carefully chapter 9.19 Handling with DID Ranges to learn important particularities.

5.21.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported writeable DIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid
- > The write operation over a DID is defined by: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidWrite
- For each DID data signal the corresponding container shall be configured: /Dcm/DcmConfigSet/DcmDsp/DcmDspData
- For NvRam signal access select the value USE_BLOCK_ID in the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
- A NvRam block Id has to be referenced: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataBlockIdRef



5.22 InputOutputControlByldentifier (\$2F)

5.22.1 Functionality

This service provides IO control access to predefined and marked by identifier IO structures (ports) within the ECU.

5.22.2 Required Interfaces

- If service handled by DCM:
- > DataServices_<DataName>
- > DataServices
- > IOControlRequest
- > IOControlResponse
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.22.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-43 Service \$2F: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
all				-

Table 5-44 Service \$2F: Supported subservices

The protocol handling of this service is fully implemented by DCM. The control functionality over the corresponding IO port will be performed by the application via service calls or call outs.

DCM monitors all IO DIDs put under control, once a requested IO control operation other than *ReturnControlToECU()* was successfully executed. This allows DCM to automatically reset the IO DID operations, calling their the *ReturnControlToECU()* operations once one of the following events occurs:



- A state transition to the Default diagnostic session;
- A state transition to any diagnostic session, where the monitored IO DID is not supported;
- > A state transition to any security level, where the monitored IO DID is not supported;



If an IO DID is configured not to support operation *ReturnControlToECU()*, the automatic resetting of this IO DID is not supported. The application shall catch the mode switch for *DcmDiagnosticSessionControl* and reset this IO DID by itself.



Caution

Although it is allowed to have an asynchronous IO DID "DataServices_<DataName>" service port, it is not allowed to implement the "ReturnControlToECU()" operation of this port as asynchronous. This is because the transition to the default session is a synchronous operation and cannot be delayed.

If the DET support in DCM is enabled and you have implemented the "ReturnControlToECU()" operation to return DCM_E_PENDING, then this will cause a DET report.

IO DID Data Handling in DCM and Application

According to [5] there are two types of IO DIDs: packeted and bitmapped. The difference is the size of the IO signals addressed by an IO DID:

- Packeted: Each data element within the IO DID can be of any size.
- > Bitmapped: Each data element within the IO DID has a size of a single bit.

For C/S DID data access, DCM is able to address only at least a whole byte element. So there are two scenarios in using IO DIDs in DCM also regarding the CEMR:

- Packeted IO DID with all signals which have a size of a multiple of eight bits
- > Bitmapped IO DID or IO DID where the signal size is not a multiple of eight bits

These two scenarios are described in details in the next paragraphs.

Packeted IO DID with all signals which have a size of a multiple of eight bits

If the IO DID has multiple data signals, the DCM can automatically derive an appropriate CEMR for this DID as specified in [5]. Then at run time during processing a valid request of this service, the DCM will call only the service ports of the IO DID that are enabled in the requested CEMR. To learn about how the automatic CEMR derivation can be enabled resp. disabled, please refer to 5.22.4 Configuration Aspects and the detailed parameter description in the configuration tool.





The CEM has only effect on the requested IO control operation. The returned data in the positive response will contain all IO DID data independently of the CEM value.

Bitmapped IO DID or IO DID where the signal size is not a multiple of eight bits

If the IO DID shall contain only single bit information or in general any data element of size not filling a complete byte, word etc., then such an IO DID must be represented by a single data object, which combines all the IO signals, including any reserved gaps in between or at the end of the DID.

If this DID shall support in addition also the CEMR, then it shall be specified to support the CEMR as a one handled by the application. To learn about how to specify an externally handled CEMR, please refer to 5.22.4 Configuration Aspects and the detailed parameter description in the configuration tool.

5.22.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported writeable DIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid
- Which IO operation is supported by the IO DID is defined within the container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidControl. There you have to create the operation corresponding sub-containers like: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidControl/DcmDspDidShortTermAdjustment
- For each DID data signal the corresponding container shall be configured: /Dcm/DcmConfigSet/DcmDsp/DcmDspData
- Whether the IO DID shall support CEMR and which kind of CEMR (internal/external) handling is required, can be specified using parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidControl/DcmDspDidControlMask
- > If a CEMR handled by the application shall be supported, its size shall be specified by the parameter:
 - /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidIoEnableMaskSize





Particularities of an IO DID configuration:

- > If the IO DID has read operation (i.e. accessible via *ReadDataByIdentifier* (\$22)) the positive response to this service will return the actual IO data immediately after the request IO control operation was successfully applied. Otherwise no response data will be returned.
- > An IO DID with read operation shall never has "ConditionCheckRead()" operation. For details, please refer to 5.14.4 Configuration Aspects of service ReadDataByIdentifier (\$22). The reason for that requirement is that the read operation is executed always after the IO control operation is applied. Once it is applied, the read operation must succeed and return the actual data. Otherwise the IO control operation has to be undone and the response will be a negative one, which contradicts the IO control definition.
- > If an IO DID has more than one data signal, DCM will automatically enable the "enable mask record" support for this DID (AR 4.0.3 requirement). But if you have configured only one signal for an IO DID and that signal actually represents all IO signals that the concrete IO DID indeed represents (e.g. for optimization purposes combined into one byte stream), then you have to use the 'Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidControl/DcmDspDidControlMask and 'Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidIoEnableMaskSize parameter in order to configured appropriate enable mask records size.
- An externally handled CEMR is passed to the application (refer to the corresponding operations of *DataServices_<DataName>* C/S interface) in exactly the same form as it was located in the request message: Always aligned with the MSB of the function argument:
 - > For 8, 16 and 32bit CEMRs, the corresponding uint8/16/32 data type will be used as <ControlMaskType> to transfer the value to the application. It represents directly the CEMR from the request, starting with the MSB for the very first data element in the IO DID.
 - > For a 24bit CEMR, DCM transfers the CEMR to the application using the uint32 data type for the <ControlMaskType>. In this case, in order to keep the bit scanning algorithm in the application consistent (i.e. shift left and extract bit) once again the MSB (and not bit 23 of the function argument value represents the very first data element).
 - > For CEMRs with more than 32bits, the ControlMask function argument points to the first byte (MSB) of the requested CEMR using a uint8 data pointer (uint8*) as <ControlMaskType>.



5.23 RoutineControl (\$31)

5.23.1 Functionality

This service provides direct access to routines within the ECUs (e.g. self-test, control of peripheries, etc.).

5.23.2 Required Interfaces

- If service handled by DCM:
- > RoutineServices_<RoutineName>
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.23.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				-

Table 5-45 Service \$31: Implementation types



Table 5-46 Service \$31: Supported subservices

The protocol handling of this service is fully implemented by DCM, except the sub-function execution sequence validation (e.g. prior executing "stop" or "request results" there shall be send a "start" command).

Those sequence rules may not apply to all routines. Instead the application can implement an own state machine to model the running state of each routine. If the service execution order is not correct, the appropriate NRC (i.e. 0x24) can be returned back from the corresponding service port, implemented by the application.

DCM does not support the automatic stop of all active routines on session transition. The application can catch the mode switch for DcmDiagnosticSessionControl and stop the routines by itself.



5.23.4 Configuration Aspects

The following configuration parameter shall be considered for the proper DCM function on this service.

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- No sub-functions shall be defined under the service container:
- All to be supported RIDs shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine
- The sub-function to be supported by a RID is to be specified within the concrete RID container (sub-function "start" is always available): //Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine



FAQ

Particularities for OBD RIDs (i.e. all within [0xE000-0xE1FF]):

- Any OBD availability RID (e.g. 0xE000, 0xE020, 0xE100, 0xE1A0, etc.) will always be implemented by DCM. They will return the corresponding RID availability mask value as described in [6].
- Every RID in the OBD range that covers a corresponding OBD TID, shall not contain any data definition. The concrete data will be processed out by DCM directly using the corresponding OBD TID service data access method. For such RIDs, there also will be no RTE RoutineServices port or callback generated.
- Only "StartRoutine" operation is to be used on OBD RIDs, since [6] does not define any other operation over a RID.
- Any OBD RID, that neither is an availability RID, nor covers any existing OBD TID, will be handled as a generic RID and shall be configured regularly.



5.24 WriteMemoryByAddress (\$3D)

5.24.1 Functionality

This service provides direct write access to the physical memory of the ECU. All writeable memory areas and their access preconditions are to be configured as documented in 5.15.4 Configuration Aspects.

5.24.2 Required Interfaces

- If service handled by DCM:
- > Dcm WriteMemory()
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.24.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID		-		
SubServiceID				-

Table 5-47 Service \$3D: Implementation types



Table 5-48 Service \$3D: Supported subservices

The protocol handling of this service is fully implemented by DCM. This includes:

- Validating and evaluating the ALFID byte;
- Parsing the requested memory address and size parameters;
- > Validating the requested memory block against the DCM memory configuration:
- > Supported requested memory area by the ECU;
- > Memory area access preconditions (e.g. security access, mode rules).

The memory access will then be provided by the application via a call out.



5.24.4 Configuration Aspects

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- > No sub-functions shall be defined within the above defined service container;
- All to be supported writeable memory ranges shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspMemory



5.25 TesterPresent (\$3E)

5.25.1 Functionality

This service is only used for keeping the current diagnostic state in the ECU active. Otherwise on lack of diagnostic communication, the ECU will reset all temporary activated states and functionalities (e.g. diagnostic session, security access, routine execution, etc.)

5.25.2 Required Interfaces

- If service handled by DCM:
- > No interfaces required for this services.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.25.3 Implementation Aspects

Implementation Protocol Level ServiceID	internal only	internal or external	external only	not allowed
SubServiceID	=			

Table 5-49 Service \$3E: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x00	-			
0x01 0xFF				

Table 5-50 Service \$3E: Supported subservices

This service is fully implemented by DCM, but can be also handled by the application.



Caution

If you intend to handle this service within your application, please be aware that the application callback will be called for any request for this service except the "functionally requested 0x3E 0x80"! The latter is always handled within DCM.



5.25.4 Configuration Aspects

The following configuration parameter shall be considered for the proper DCM function on this service.

- This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService
- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubSer



vice

Caution

This service is mandatory and therefore may not be missing in the configuration and cannot be overridden by an application implementation.



5.26 ControlDTCSetting (\$85)

5.26.1 Functionality

This service manipulates the setting of the DTC in the ECU to avoid unnecessary fault memory entries (i.e. while the communication is disabled).

5.26.2 Required Interfaces

- If service handled by DCM:
- > Refer to chapter 6.3 Services used by DCM for the DEM component.
- If service handled by the application:
- > <Module>_<DiagnosticService>()

5.26.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID				
SubServiceID				

Table 5-51 Service \$85: Implementation types



Table 5-52 Service \$85: Supported subservices

This service is completely implemented by DCM.

5.26.4 Configuration Aspects

The following configuration parameter shall be considered for the proper DCM function on this service.

This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService



- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- If DCM shall accept also a DTC group as a request parameter for this service, please enable the following option: /Dcm/DcmConfigSet/DcmDsp/DcmDspControlDTCSetting/DcmSupportDTCSettingControlOptionRecord
- In case DCM shall monitor any critical condition under which this service shall no longer be active, put a reference to that condition using parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspControlDTCSetting/DcmDspControlDTCSetting ReEnableModeRuleRef



5.27 ResponseOnEvent (\$86)

5.27.1 Functionality

This service is used to control the DARH component, which monitors DEM events and on certain event occurrence triggers a response through the DCM.

5.27.2 Required Interfaces

The following interfaces must be available when service \$86 is used:

- If service handled by DCM:
- > ROEServices
- If service handled by the application:
- > <Module>_<DiagnosticService>()
- > Dcm_ProcessVirtualRequest()

5.27.3 Implementation Aspects

Implementation Protocol Level	internal only	internal or external	external only	not allowed
ServiceID		-		
SubServiceID				

Table 5-53 Service \$86: Implementation types

Implementation Subservice ID	internal only	internal or external	external only	not allowed
0x04, 0x40, 0x43, 0x45				
All other				-

Table 5-54 Service \$86: Supported subservices

The internally handled sub-functions completely cover the service handling.

5.27.4 Configuration Aspects

The following configuration parameter shall be considered for the proper DCM function on this service.

> This service shall be defined in the configuration tool: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService



- All to be supported sub-functions shall be defined within the above defined service container as sub-service containers: /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
- Depending on the DCM AR SWS version to be supported, the following parameters will be from importance:
 - AR 4.0.3:
 - The corresponding DID, used for RoE, shall be configured accordingly via its container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidExtRoe
 - AR 4.1.2 and later:
 - A single container of the following type shall be defined and configured accordingly: /Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent
- In order to be able to store the requested event setup and the diagnostic client addressing info, the DCM needs to be configured with a RoE NvM block reference by parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeBlockIdRef

For the NvM RoE storage the DCM defines the following data type:

Dcm ExtSvc86NvMDataType

Use this data type for the NvM block size calculation.

The default block content that NvM shall use if stored data cannot be recalled is located in a constant object: dcmExtSvc86DefaultNvMData.



Note

For projects that have used older DCM version (pre 4.00.00) the backward compatibility is still supported. Still, the old symbols from version 4.00.00 are deprecated and shall not be used any more.



6 API Description

For an interfaces overview please see Figure 2-2.

6.1 Type Definitions

All types not described here are defined by the DCM as described in [1].

6.1.1 Dcm_ProtocolType

Type Name	C-Type	Description	Value Range	
Dcm_ProtocolType	c-type	Specifies the currently	[0x00-0x0B]U[0xF0-0xFE]	
	active protocol in	DCM .	•	These values are defined in [1].
			DCM_NO_ACTIVE_PROTOCOL (0x0C)	
			No protocol has been activated yet.	

Table 6-1 Dcm_ProtocolType

6.1.2 Dcm_RecoveryInfoType

Struct Element Name	C-Type	Description	Value Range
CommControlState	uint8 [M] (typically)	related (internal handle, no ComM SNV representation)	DCM_ENABLE_RX_TX_NORM_NM - DCM will not perform any CommunicationControl operation.
		the corresponding enumeration type. Exist-Condition: CommunicationControl (\$28) is supported in DCM.	Any other- DCM will perform the corresponding CommunicationControl operation on the corresponding channel.
ComMChannelState	Boolean [N]	List of all DCM related (internal handle, no ComM SNV representation)	[X] = FALSE - DCM will leave the ComM channel in its default state.
		channels. If a non-default session shall be started, this list has to exist in order to start up all affected ComM channels.	[X] = TRUE - DCM will activate the ComM on that channel.
ControlDTCSettingDT CGroup	uint32	Optional parameter in case service <i>ControlDTCSetting</i> (\$85) is enabled in DCM and supports DTC group parameter.	<pre><dtcgroup> - The DTC group that shall be used for the ControlDTCSetting API in DEM.</dtcgroup></pre>
ControlDTCSettingDis abled	boolean	The new ControlDTCSetting state.	FALSE - DCM will not call the ControlDTCSetting DEM API.
		Exist-Condition:	TRUE -



Struct Element Name	C-Type	Description	Value Range
		ControlDTCSetting (\$85) is enabled in DCM	DCM will perform a ControlDTCSetting operation for "disabling DTC" as for an external diagnostic request for <i>ControlDTCSetting</i> (\$85).
SessionLevel	uint8 (typically)	New diagnostic session.	0 - DCM will stay in the default session.
		Note: This is not the session level as defined by AR. It is DCM internal value.	Any other valid value DCM will perform a session transition as if the corresponding request has been received.
SecurityLevel	uint8 (typically)	New security level.	0 - DCM will stay in the locked state.
		Note: This is not the security level as defined by AR. It is DCM internal value. Exist-Condition: If SecurityAccess (\$27) is supported in DCM.	Any other valid value DCM will perform a security level transition as if the corresponding request has been received.
SessionConnection	uint8 (typically)	Transfers the client connection ID (internal DCM value) that has started the non-default session. Exist-Condition: Only if non-default session protection against other clients is required.	Any value - Proper connection ID on the last client started the non-default session.
ActiveProtocol	uint8	New active protocol. Note: This is not the protocol ID as defined by AR. It is DCM internal value. Exist-Condition: If multiple protocols are supported in DCM.	Any value - Proper protocol ID of the last started protocol.
Signature	uint32	Magic number for data consistency check between stored and to be recovered data block.	A configuration dependent value.

Table 6-2 Dcm_RecoveryInfoType



6.1.3 Dcm_VsgldentifierType

Type Name	C-Type	Description	Value Range
Dcm_VsgIdentifierType	uint8/ uint16	Unique Identifier of a Vehicle System Group (VSG).	[1-65535]
		Note: C-Type depends on the total number of VSGs. If number of VSGs is more than 255 the C-Type is uint16, otherwise it is uint8.	

Table 6-3 Dcm_VsgldentifierType



Caution

Changing the configured number of VSGs can change the C-Type of Dcm_VsgIdentifierType. Already mapped SWC ports will be disconnected if the C-Type changes (see 6.6.1.1).

6.1.4 Dcm_VsgStateType

Type Name	C-Type	Description	Value Range
Dcm_VsgStateType	uint8	Allowed states of a Vehicle	DCM_VSG_ENABLED
		System Group (VSG).	VSG is enabled or shall be enabled.
			DCM_VSG_DISABLED
			VSG is disabled or shall be disabled.

Table 6-4 Dcm_VsgStateType

6.1.5 Dcm_InputOutputControlParameterType

C-Type	Description	Value Range
uint8 First byte of controlOptionRecord in the request of service 0x2F.	DCM_RETURN_CONTROL_TO_ECU Indicates to the server that the client does no longer have control on signals.	
		DCM_RESET_TO_DEFAULT Inidcates to the server that it is requested to reset signals.
		DCM_FREEZE_CURRENTLY_STATE Indicates to the server that it is requested to freeze current state of signals.
		DCM_SHORT_TERM_ADJUSTMENT Indicates to the server that it is requested to adjust signals.



DCM_IDLE
Indicates that server is Idle, no request in processing (initial value).

Table 6-5 Dcm_inputOutputControlParameterType

6.1.6 Dcm_IOOperationResponseType

C-Type	Description	Value Range
uint8	Positive and negative response codes for sevice 0x2F.	DCM_POSITIVE_RESPONSE
		Inidcates postive response.
		DCM_GENERAL_REJECT
		Indicates NRC general reject.
		DCM_BUSY_REPEAT_REQUEST
		Indicates NRC busy repeat request.
		DCM_CONDITIONS_NOT_CORRECT
		Indicates NRC conditions not correct.
		DCM_FAILURE_PREVENTS_EXECUTION
		Indicates NRC failure prevents execution of requested action.
		DCM_REQUEST_OUT_OF_RANGE
		Indicates NRC request out of range.
		DCM_RESPONSE_PENDING
		Indicates response pending (similar to DCM_E_PENDING).
		Indicates that server is Idle, no request in processing (initial value).

Table 6-6 Dcm_IOOperationResponseType

6.1.7 Dcm_IOOperationRequest_< DidName/DidDataName >type

Type Name	C-Type	Description	Value Range
Dcm_InputOutputControlParameterType			
	Refer to Table 6-5		
Dcm_ControlMask_ <xx>Type</xx>	uint8/ uint16/ uint32	c-type depneds on xx. xx has a value of 8, 16, or 32.	Configuration dependent.

Table 6-7 Dcm_IOOperationRequest_< DidName/DidDataName >type



6.2 Services provided by DCM

6.2.1 Administrative

6.2.1.1 Dcm_Init()

Prototype

void Dcm Init (Dcm ConfigType * ConfigPtr)

Parameter

ConfigPtr

The parameter specifies the configuration root the DCM shall use for this power on cycle.

In case of pre-compile configuration – this parameter shall be NULL_PTR. If any other address is used, it will have no effect.

In case of post-build selectable:

- More than one variant is configured the pointer shall be the address of one of the generated variant structures in Dcm Lcfg.c.
- Only one variant is available DCM is technically put into pre-compile mode (see above).

In case of post-build loadable always a valid pointer to the root DCM structure shall be passed.

In case of post-build selectable loadable always a valid pointer to the variant root structure shall be passed.

Return code

void

N/A

Functional Description

Service for basic initialization of DCM module.

In all cases where this API does expect a non-null pointer argument, a validation of the passed argument is performed. For details on that topic, please refere to 9.18.2.1 Error Detection and Handling.

Particularities and Limitations

- > ServiceID = 0x01
- > This function is not reentrant.
- > This function is synchronous.

Table 6-8 Dcm_Init()

6.2.1.2 Dcm_MainFunction()

Prototype

void Dcm MainFunction (void)



Parameter			
N/A	N/A		
Return code			
void	N/A		
Functional Description			
This service is used for processing the tasks of the main loop.			
Particularities and Limitations			
> ServiceID = 37			
> This function is not reentrant.			
> This function is synchronous.			

Table 6-9 Dcm_MainFunction()

6.2.1.3 Dcm_MainFunctionTimer()

Prototype			
void Dcm_MainFunctionTimer (void)			
Parameter			
N/A	N/A		
Return code			
void	N/A		
Functional Description			
This service is used for time critical tasks (high priority task).			
Particularities and Limitations			
> ServiceID = 37			
> This function is not reentrant.			
> This function is synchronous.			

Table 6-10 Dcm_MainFunctionTimer()

© 2017 Vector Informatik GmbH Version 8.6 108



Dcm_MainFunctionWorker() 6.2.1.4

Prototype		
void Dcm_MainFunctionWorker (void)		
Parameter		
N/A	N/A	
Return code		
void	N/A	

Functional Description

This service is used for diagnostic service processing (low priority task).

Note: All application call outs the DCM executes are performed only from within this task.

Particularities and Limitations

- > ServiceID = 37
- > This function is not reentrant.
- > This function is synchronous.

Table 6-11 Dcm_MainFunctionWorker()

6.2.1.5 Dcm_GetVersionInfo()

Prototype		
<pre>void Dcm_GetVersionInfo (Std_VersionInfoType* versionInfo)</pre>		
Parameter		
versionInfo	Pointer to where to store the version information of this module.	
Return code		
void	N/A	
Functional Description		

Returns the version information of the used DCM implementation.

Note:

Starting with DCM 4.00.00, the version information is decimal coded.

Particularities and Limitations

- > ServiceID = 0x24
- > This function is reentrant.
- > This function is synchronous.

Table 6-12 Dcm_GetVersionInfo()



6.2.1.6 Dcm_InitMemory()

Prototype		
void Dcm_InitMemory (void)		
Parameter		
-	-	
Return code		
void	N/A	
Functional Description		

Functional Description

Service to initialize module global variables at power up. This function initializes the variables in DCM_VAR_INIT_* (refer to 4.3 Compiler Abstraction and Memory Mapping).

Sections and shall be used in case they are not initialized by the startup code.

Particularities and Limitations

- > This function must be called prior to Dcm_Init().
- > This function is not reentrant.
- > This function is synchronous.

Table 6-13 Dcm_InitMemory()



6.2.1.7 Dcm_ProvideRecoveryStates()

Prototype	
Std_ReturnType Dcm_Pr	rovideRecoveryStates (Dcm_RecoveryInfoType* RecoveryInfo)
Parameter	
RecoveryInfo	Contains all the information that has to be stored for later recovery.
Return code	
Std_ReturnType	E_OK: Recovery info could be retrieved and now can be stored. E_NOT_OK: Some error occurred during state retrieval. Provided data is invalid and shall not be stored.

Functional Description

This API shall be called by the DCM application right before performing the reset operation.

For details on the usage of this API, please refer chapter 9.28 How to Recover DCM State Context on ECU Reset/ Power On.

Note:

- Once this API is called, the states may change due to external events (e.g. session timeout). Therefore always perform this call right before executing the reset or within the context of a diagnostic service processing (i.e. before the final response is sent).

For details on the recovered information, please refer the data type definition: Dcm_RecoveryInfoType.

Particularities and Limitations

- > ServiceID = 0xA3
- > This function is not reentrant.
- > This function is synchronous.

Table 6-14 Dcm_ProvideRecoveryStates()

6.2.2 SWC

6.2.2.1 Dcm_GetActiveProtocol()

Prototype		
Std_ReturnType Dcm_GetActiveProtocol (Dcm_ProtocolType* ActiveProtocol)		
Parameter		
ActiveProtocol	Currently active protocol type.	
Return code		
Std_ReturnType	E_OK: This value is always returned.	
Functional Description		
This function returns the active protocol Id.		



Particularities and Limitations

- > ServiceID = 0x0F
- > This function is reentrant.
- > This function is synchronous.

Table 6-15 Dcm_GetActiveProtocol()

6.2.2.2 Dcm_GetSecurityLevel()

Prototype		
<pre>Std_ReturnType Dcm_GetSecurityLevel (Dcm_SecLevelType* SecLevel)</pre>		
Parameter		
SecLevel	Active Security Level (see definition of Dcm_SecLevelType for values).	
Return code		
Std_ReturnType	E_OK: This value is always returned.	
Functional Description		

This function provides the active security level value.

Particularities and Limitations

- > ServiceID = 0x0D
- > This function is reentrant.
- > This function is synchronous.

Table 6-16 Dcm_GetSecurityLevel()



6.2.2.3 Dcm GetSesCtrlType()

Prototype		
Std_ReturnType Dcm_GetSesCtrlType (Dcm_SesCtrlType* SesCtrlType)		
Parameter		
SesCtrlType	Active Session Control Type (see definition of Dcm_SesCtrlType for values).	
Return code		
Std_ReturnType	E_OK: This value is always returned.	
Functional Description		

This function provides the active session control type value.

Particularities and Limitations

- > ServiceID = 0x06
- > This function is reentrant.
- > This function is synchronous.

Table 6-17 Dcm_GetSesCtrlType()

6.2.2.4 Dcm_ResetToDefaultSession()

Prototype			
Std_ReturnType Dcm_Re	setToDefaultSession (void)		
Parameter			
N/A	N/A		
Return code	Return code		
Std_ReturnType	E_OK: This value is always returned.		
Functional Description			

The call to this function allows the application to reset the current session to Default session.

Example: Automatic termination of an extended diagnostic session upon exceeding of a speed limit.

Note: The time between the function call and the termination of the session depends on the current DCM state. The minimum time to be expected is one DCM task cycle. If this service is called while the DCM is processing a diagnostic request, the session termination will be postponed till the end of this service processing, to avoid unpredictable behavior.

Particularities and Limitations

- > ServiceID = 0x2A
- > This function is reentrant.
- > This function is synchronous.

Table 6-18 Dcm_ResetToDefaultSession()



6.2.2.5 Dcm_TriggerOnEvent()

Prototype	
ggerOnEvent (uint8 RoeEventId)	
dentifier of the event that is triggered.	
E_OK: RoeEventId value is valid	
E_NOT_OK: RoeEventId value is not valid or the DCM is currently processing another request.	

Functional Description

The call to this function allows triggering an event linked to a ResponseOnEvent request.

On the function call, the DCM will execute the associated service.

This function shall be called only if the associated event has been activated through a Xxx_ActivateEvent() call.

Particularities and Limitations

- > ServiceID = 0x2D
- > This function is reentrant.
- > This function is synchronous.

Table 6-19 Dcm_TriggerOnEvent()



6.2.2.6 Dcm_GetSecurityLevelFixedBytes()

Prototype

Std_ReturnType Dcm_GetSecurityLevelFixedBytes (Dcm_SecLevelType secLevel, uint8* fixedBytes, uint8* bufferSize)

1 - 1 - 1	
Parameter	
secLevel	The security parameter, which fixed bytes are requested.
fixedBytes	Pointer to the buffer where the fixed bytes will be copied to.
bufferSize	IN: Specifies the available size of the provided buffer.
	OUT: Returns the number of copied fixed bytes, resp. number of required bytes in order to copy the complete set (in case of returned DCM_E_BUFFERTOOLOW).
Return code	
Std_ReturnType	E_OK: If the fixed bytes of the requested security level have been copied. For levels without fixed bytes, nothing will be copied, and the bufferSize parameter will be 0. DCM_E_BUFFERTOOLOW: If the level has fixed bytes, but the provided
	buffer is too small to fit them. The <code>bufferSize</code> will return the required buffer size.
	E_NOT_OK: If an invalid/unsupported security level or the "locked" level is

Functional Description

By calling this API the application gets access to the fixed bytes set associated with the security-access level (i.e. any generated by the RTE DCM_SEC_LEV_XXX value) passed as selector.

passed to this API.

This API can be called at any time, but the most applicable situation is from within any of the *GetSeed()* or/and *CompareKey()* C/S callbacks.

The implementation of the above callbacks shall be aware of passing the correct security-access level value that corresponds to its C/S port prototype. Otherwise the wrong values will be reported back.

Particularities and Limitations

- > ServiceID = 0xA7
- This function is reentrant.
- > This function is synchronous.
- > Available only if at least one security level was configured provide fixed bytes information.

Table 6-20 Dcm_GetSecurityLevelFixedBytes()



6.2.2.7 Dcm_SetActiveDiagnostic()

Prototype	
Std_ReturnType Dcm_SetActiveDiagnostic(boolean active)	
Parameter	
active	Represents the type of DCM interaction with ComM: - TRUE: DCM shall call the ComM_DCM_ActiveDiagnostic as required by [1]. - FALSE: DCM shall not call the ComM_DCM_ActiveDiagnostic anymore.
Return code	
Std_ReturnType	E_OK: This code is always returned even if the action could not be executed due to:Invalid value of active;Not initialized DCM.

Functional Description

This API shall be called by the application in cases where the sleep-prevention managed by DCM is no more desirable.

Particularities and Limitations

- > ServiceID = 0x56
- > This function is reentrant.
- > This function is synchronous.

Table 6-21 Dcm_SetActiveDiagnostic()



6.2.2.8 Dcm_GetRequestKind()

Prototype

 ${\tt Std_ReturnType}~\textbf{Dcm_GetRequestKind}~({\tt uint16}~{\tt TesterSourceAddress},$

value.

Dcm RequestKindType* RequestKind)

	bem_kequestkindiype kequestkind)	
Parameter		
TesterSourceAddress	The source address of the tester which request kind status will be reported.	
RequestKind	Returns the current request kind of the given diagnostic client:	
	 DCM_REQ_KIND_NONE: Currently no request is in processing for this client. 	
	 DCM_REQ_KIND_EXTERNAL: An externally sent request for this client is in progress (i.e. reception/processing/transmission). 	
	 DCM_REQ_KIND_ROE: It is a STRT of RoE is in progress for this client. 	
Return code		
Std_ReturnType	E_OK: The TesterSourceAddress has a valid value. E_NOT_OK: An error occurred or the TesterSourceAddress has no valid	

Functional Description

This API can be called by the application at any time and from any context if information is required regarding the processing status of a certain diagnostic client.

Typically this API can be used from within a *ServiceRequestManufacturerNotification_<SWC>* or *ServiceRequestSupplierNotification_<SWC>*, where the tester source address is passed as an argument, to get not only the request type (functional or physical) but also the kind of the request (internal/external).

Additionally using the provided API <code>Dcm_GetTesterSourceAddress()</code>, the application may get the client request kind also from a known valid <code>DcmRxPduld</code>.

Particularities and Limitations

- > ServiceID = 0xAB
- > This function is reentrant.
- > This function is synchronous.

Table 6-22 Dcm_GetRequestKind()



6.2.2.9 Dcm_VsgSetSingle()

Prototype					
Std_ReturnType Dcm_VsgSetSingle(Dcm_VsgIdentifierType VsgId, Dcm_VsgStateType State)					
Parameter					
VsgId	Unique Identifier of a VSG (see 6.1.3 Dcm_VsgldentifierType).				
State	New state to be set (for valid values see 6.1.4 Dcm_VsgStateType).				
Return code					
Std_ReturnType	E_OK: New state is set successfully.				
	E_NOT_OK: New state is not set successfully.				
Eunstianal Description					

Functional Description

API to set the state of a single Vehicle System Group.

Particularities and Limitations

- > ServiceID = 0xAC
- > This function is reentrant.
- > This function is synchronous.

Table 6-23 Dcm_VsgSetSingle()

6.2.2.10 Dcm_VsgSetMultiple()

Prototype				
Std_ReturnType Dcm_VsgSetMultiple(Dcm_VsgIdentifierType* VsgIdList, uint16 VsgListSize, Dcm_VsgStateType State)				
Parameter				
VsgIdList	Pointer to a list of VSG Identifiers (see 6.1.3 Dcm_VsgIdentifierType).			
VsgListSize	Number of VSG identifiers in VsgIdList.			
State	New state to be set (for valid values see 6.1.4 Dcm_VsgStateType).			
Return code				
Std_ReturnType	E_OK: new state is set successfully for all VSG Identifiers in VsgIdList.			
	E_NOT_OK: new state is not set successfully for all VSG Identifiers in VsgIdList. VSG identifiers that are set successfully remain in new state.			
Functional Description				
API to set the state of a list of Vehicle System Groups.				

Table 6-24 Dcm_VsgSetMultiple()

This function is reentrant.This function is synchronous.

> ServiceID = 0xAE

Particularities and Limitations



6.2.2.11 Dcm_VsglsActive()

Prototype				
Std_ReturnType Dcm_VsgIsActive(Dcm_VsgIdentifierType VsgId, Dcm_VsgStateType* State)				
Parameter				
VsgId	Unique Identifier of a VSG (see 6.1.3 Dcm_VsgldentifierType).			
State	Current state of the VSG if return code is E_OK (for valid values see 6.1.4 Dcm_VsgStateType).			
Return code				
Std_ReturnType E_OK: Current state provided successfully. E_NOT_OK: Operation failed.				

Functional Description

API to query current state of a Vehicle Sytem Group.

Particularities and Limitations

- > ServiceID = 0xAD
- > This function is reentrant.
- > This function is synchronous.

Table 6-25 Dcm_VsgIsActive()

6.2.2.12 Dcm_VsglsActiveAnyOf()

Prototype				
Std_ReturnType Dcm_VsgIsActiveAnyOf(Dcm_VsgIdentifierType* VsgIdList,				
<pre>uint16 VsgListSize, Dcm_VsgStateType State)</pre>				
Parameter				
VsgIdList	Pointer to a list of VSG Identifiers (see 6.1.3 Dcm_VsgIdentifierType).			
VsgListSize	Number of VSG identifiers in VsgIdList.			
State	Result of operation if return code is E_OK (for valid values see 6.1.4 Dcm_VsgStateType).			
Return code				
Std_ReturnType	E_OK: Operation succeded, result provided in parameter State.			
	E_NOT_OK: Operation failed.			
Formational December				

Functional Description

API to query if state of at least one Vehicle System Group in a list of Vehicle System Groups is enabled.

Particularities and Limitations

- > ServiceID = 0xAF
- > This function is reentrant.
- > This function is synchronous.

Table 6-26 Dcm_VsglsActiveAnyOf()



6.2.3 General Purpose

6.2.3.1 Dcm_GetTesterSourceAddress()

Prototype				
Std_ReturnType Dcm_GetTesterSourceAddress (PduIdType DcmRxPduId				
<pre>,uint16* TesterSourceAddress)</pre>				
Parameter				
DcmRxPduId	Specifies the DCM RxPduId for which the tester source address shall be read out.			
TesterSourceAddress	Will contain the configured tester source address of the DCM RxPduld.			
Return code				
Std_ReturnType	E_OK: The TesterSourceAddress has a valid value.			
	E_NOT_OK: An error occurred, the TesterSourceAddress has no valid value.			

Functional Description

This API can be used to access the configured tester source address parameter to a specific DCM main-connection, identified by the DCM RxPduld.

Usually this API is used in a project specific switch between software contexts (i.e. application and boot loader) where the request is received in one context (e.g. application) and the response is sent from the other context (e.g. boot loader) or vice versa.

Particularities and Limitations

- > ServiceID = 0xA6
- > This function is reentrant.
- > This function is synchronous.

Table 6-27 Dcm_GetTesterSourceAddress()



6.2.3.2 Dcm_ProcessVirtualRequest()

Prototype				
Std_ReturnType Dcm_Pr	ocessVirtualRequest	(PduIdType ,Dcm_MsgType ,PduLengthType		
Parameter		, , , , , , , , , , , , , , , , , , , ,		
RxPduId	The DcmPduld (physical or functional) of the diagnostic client this virtual request represents. The response of this request will later be forwarded to this client.			
Data	Pointer to the buffer where the complete diagnostic request incl. SID is located.			
Length	The length of the diagnostic request located in the Data buffer.			
Return code				
Std_ReturnType	low priority client	t was not accepted. busy with another click too long request or	Possible reasons: ent, resp. the RxPduId is from a NULL_PTR for Data location	

Functional Description

This is a generic API that can be used by the application (CDD) to send a virtual request to the ECU which response will be sent to a concrete diagnostic client.

Typical use-case of this API is an application implementation for service 0x86 (ResponseOnEvent).

This API can be called from any context (ISR, TASK, etc.). Just when called from an ISR and the request contains lots of data, the interrupt latency can be significantly affected.

Particularities and Limitations

- > ServiceID = 0xA8
- > This function is reentrant.
- > This function is synchronous.

Table 6-28 Dcm_ProcessVirtualRequest()



6.2.3.3 Dcm_SetSecurityLevel()

Prototype				
Std_ReturnType Dcm_SetSecurityLevel (Dcm_SecLevelType SecLevel)				
Parameter				
SecLevel	Active Security Level (see definition of Dcm_SecLevelType for values).			
Return code				
Std_ReturnType	 E_OK: State change has been performed. E_NOT_OK: State change failed. Possible reasons: - Wrong/invalid security level; - Called while DCM is busy with a diagnostic request; - Called from wrong task context (not from Dcm_MainFunctionWorker); 			

Functional Description

This API shall be called by the application when service *SecurityAccess* (\$27) is supported in the ECU but not handled in DCM. In this case DCM will be able to switch only to the LOCKED security level when performing a diagnostic session transition. In order to unlock the ECU in any other security level the application shall trigger the security access state transitions by calling this API with the appropriate value.

Within this API call, DCM will perform the same RTE interaction as if the security state handling was done by itself. For that reason this API **must** be called only from within the Dcm_MainFunction(Worker) context. The best place for this call is either the callback function for *SecurityAccess* (\$27) or a *Confirmation()* if configured.

Particularities and Limitations

- ServiceID = 0xA9
- > This function is not reentrant.
- > This function is synchronous.
- Available only if service SecurityAccess (\$27) is supported in the ECU but handled within the DCM application.

Table 6-29 Dcm_SetSecurityLevel()



6.3 Services used by DCM

In the following table services provided by other components, which are used by the DCM, are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
Dem	
Dem	Dem_DcmCancelOperation Dem_[Dcm]EnableDTCRecordUpdate
	Dem_[Dcm]DisableDTCRecordUpdate
	· ·
	Dem_[Dcm]SetFreezeFrameRecordFilter Dem_GetFreezeFrameDataByRecord / Dem_DcmGetOBDFreezeFrameData
	Dem [Dcm]GetDTCStatusAvailabilityMask
	Dem_[Dcm]SetDTCStatusAvailabilityWask Dem_[Dcm]SetDTCFilter
	Dem [Dcm]GetNextFilteredRecord
	Dem_[Dcm]GetNextFilteredDTCAndSeverity
	Dem_[Dcm]GetNextFilteredDTCAndFDC Dem [Dcm]GetNextFilteredDTC
	Dem [Dcm]GetExtendedDataRecordByDTC
	Dem [Dcm]GetFreezeFrameDataByDTC
	Dem [Dcm]GetNumberOfFilteredDTC
	Dem_[Dcm]GetSeverityOfDTC
	Dem_[Dcm]GetFunctionalUnitOfDTC
	Dem_[Dcm]GetStatusOfDTC
	Dem_[Dcm]GetTranslationType
	Dem_[Dcm]GetDTCByOccurrenceTime
	Dem_[Dcm]DisableDTCSetting
	Dem_[Dcm]EnableDTCSetting
	Dem_[Dcm]GetDTCOfOBDFreezeFrame
	Dem_[Dcm]ReadDataOfOBDFreezeFrame
	Dem_DcmGetAvailableOBDMIDs
	Dem_DcmGetNumTIDsOfOBDMID
	Dem_DcmGetDTRData
	Dem_[Dcm]ClearDTC
	F. AUT00AD F
	For AUTOSAR Environment prior to 4.3.0
	Dem_[Dcm]GetSizeOfExtendedDataRecordByDTC
	Dem_[Dcm]GetSizeOfFreezeFrameByDTC
	For AUTOSAR 4.3.0 Environment
	Dem_SelectDTC
	Dem_GetDTCSelectionResult
	Dem_GetSizeOfExtendedDataRecordSelection
	Dem_GetNextExtendedDataRecord



Component	API
	Dem_SelectFreezeFrameData
	Dem_GetSizeOfFreezeFrameSelection
	Dem_GetNextFreezeFrameData
BswM	BswM_Dcm_ApplicationUpdated
	For AUTOSAR 4.x Environment
	BswM_Dcm_CommunicationMode_CurrentState
	For AUTOSAR 3.x Environment
	BswM_Dcm_RequestCommunicationMode
Det	Det_ReportError
ComM	ComM_DCM_ActiveDiagnostic ComM_DCM_InactiveDiagnostic
PduR	PduR_DcmTransmit
SchM	For AUTOSAR 4.x Environment
	SchM_Enter_Dcm_DCM_EXCLUSIVE_AREA_0
	SchM_Exit_Dcm_DCM_EXCLUSIVE_AREA_0
	For AUTOSAR 3.x Environment
	SchM Enter Dcm
	SchM Exit Dcm
NvM	NvM_ReadBlock
	NvM_WriteBlock
	NvM_CancelJobs
	NvM_SetBlockLockStatus
	NvM_GetErrorStatus
	NvM_GetDcmBlockId
EcuM	EcuM_BswErrorHook

Table 6-30 Services used by the DCM

6.4 **Callback Functions**

This chapter describes the callback functions that are implemented by the DCM and can be invoked by other modules. The prototypes of the callback functions are provided in the header file Dcm Cbk.h by the DCM.

6.4.1 <Module>

The following callbacks are to be used from the module that implements the callouts:

- <Module> <DiagnosticService>()
- <Module>_<DiagnosticService>_<SubService>()



6.4.1.1 Dcm_ExternalProcessingDone()

Prototype					
<pre>void Dcm_ExternalProcessingDone (Dcm_MsgContextType* pMsgContext)</pre>					
Parameter					
pMsgContext	Message-related information for one diagnostic protocol identifier.				
Return code					
void	N/A				

Functional Description

Used by service interpreter outside of DCM to indicate that the current diagnostic service processing is finished and (if required) a final response can be sent.

Particularities and Limitations

- > ServiceID = 0x31
- > This function is not reentrant.
- This function is synchronous.

Table 6-31 Dcm_ExternalProcessingDone()

6.4.1.2 Dcm_ExternalSetNegResponse()

Prototype				
<pre>void Dcm_ExternalSetNegResponse (Dcm_MsgContextType* pMsgContext, Dcm_NegativeResponseCodeType ErrorCode)</pre>				
Parameter				
pMsgContext	Message-related information for one diagnostic protocol identifier.			
ErrorCode	Contains the NRC to be returned to the diagnostic client.			
Return code				
void	N/A			
Functional Description				

Used by service interpreter outside of DCM to indicate that a final response shall be a negative one. Dcm_ExternalSetNegResponse will not finalize the response processing.

Particularities and Limitations

- > ServiceID = 0x30
- > This function is not reentrant.
- > This function is synchronous.

Table 6-32 Dcm_ExternalSetNegResponse()



6.4.2 ComM

The DCM supports the ComM interface according to AR3 and AR4. By default, AR4 is used. AR3 is only available in deliveries which are preconfigured accordingly.

6.4.2.1 Dcm_ComM_NoComModeEntered()

D	roi	lo	ŧν	pe
ш	I	JU	-77	μc

ComM AR 4.x.x

void Dcm ComM_NoComModeEntered (uint8 NetworkId)

ComM AR 3.x.x

void Dcm ComM NoComModeEntered (void)

Parameter

NetworkId Identifier of the network concerned by the mode change.

Return code

void N/A

Functional Description

This call informs the DCM module about a ComM mode change to COMM_NO_COMMUNICATION.

Particularities and Limitations

- > ServiceID = 0x21
- > This function is reentrant.
- > This function is synchronous.

Table 6-33 Dcm_ComM_NoComModeEntered()

6.4.2.2 Dcm_ComM_SilentComModeEntered()

Prototype

ComM AR 4.x.x

 $\verb"void Dcm_ComM_SilentComModeEntered" (| \verb"uint8" | \verb"NetworkId")")$

ComM AR 3.x.x

void Dcm ComM SilentComModeEntered (void)

Parameter

NetworkId Identifier of the network concerned by the mode change.

Return code

void N/A

Functional Description

This call informs the DCM module about a ComM mode change to COMM_SILENT_COMMUNICATION.

Particularities and Limitations

- > ServiceID = 0x22
- > This function is reentrant.
- > This function is synchronous.

Table 6-34 Dcm_ComM_SilentComModeEntered()



6.4.2.3 Dcm_ComM_FullComModeEntered()

Prototype

ComM AR 4.x.x

void Dcm ComM FullComModeEntered (uint8 NetworkId)

ComM AR 3.x.x

void Dcm_ComM_FullComModeEntered (void)

Parameter

NetworkId Identifier of the network concerned by the mode change.

Return code

void N/A

Functional Description

This call informs the DCM module about a ComM mode change to COMM_FULL_COMMUNICATION.

Particularities and Limitations

- > ServiceID = 0x23
- > This function is reentrant.
- > This function is synchronous.

Table 6-35 Dcm_ComM_FullComModeEntered()



6.4.3 PduR

The DCM supports different versions of the PduR interface. For details regarding the configuration, please refer to chapter 9.17 How to Deal with the PduR AR version.

6.4.3.1 All AUTOSAR Versions

6.4.3.1.1 Dcm_TriggerTransmit()

Prototype		
Std_ReturnType Dcm_TriggerTransmit (PduIdType DcmTxPduId, PduInfoType* Info)		
Parameter		
DcmTxPduId	ID of DCM I-PDU that has been transmitted. Range: 0(maximum number of I-PDU IDs transmitted by DCM) - 1	
Info	Pointer to the data buffer where to be transmitted data shall be copied to.	
Return code		
Std_ReturnType	E_OK: If data has been copied.	
	E_NOT_OK: In case of any error detected within this API.	

Functional Description

This is called by the PduR to get any data to be transmitted to a lower layer with timed triggered transmission (i.e. FlexRay).

Particularities and Limitations

- > ServiceID = 0xA2
- > This function is reentrant.
- > This function is synchronous.

Table 6-36 Dcm_TriggerTransmit ()

6.4.3.2 AUTOSAR 4

6.4.3.2.1 Dcm_StartOfReception()

Prototype

PduR AR 4.0.3 (DCM Version >= 1.00.00)

 $\label{lem:bufkeq_ReturnType_Dcm_StartOfReception} \mbox{ (PduIdType DcmRxPduId, PduLengthType* TpSduLength, PduLengthType* RxBufferSizePtr)}$

PduR AR 4.1.2 (DCM Version >= 2.02.00)

BufReq_ReturnType Dcm_StartOfReception (PduIdType DcmRxPduId, PduInfoType*
info, PduLengthType TpSduLength, PduLengthType* RxBufferSizePtr)

Parameter	
DcmRxPduId	Identifies the DCM data to be received. This information is used within the DCM to distinguish two or more receptions at the same time.



info	Pointer to a structure containing content and length of the first frame or single frame including MetaData.
TpSduLength	This length identifies the overall number of bytes to be received.
RxBufferSizePtr	Length of the available buffer.
Return code	
BufReq_ReturnType	BUFREQ_OK: The diagnostic request will be accepted.
	BUFREQ_E_NOT_OK: The diagnostic request will not be accepted at all (i.e. no free buffer or processing context).
	BUFREQ_E_OVFL: The diagnostic request could be accepted, but it will not fit the configured buffer and therefore is rejected.

Functional Description

Called once to initialize the reception of a diagnostic request.

Particularities and Limitations

- > ServiceID = 0x00
- > This function is reentrant.
- > This function is synchronous.
- > The prototype of the API depends on the AR version of the PduR (please refer to chapter 9.17 How to Deal with the PduR AR version).

Table 6-37 Dcm_StartOfReception()

6.4.3.2.2 Dcm_CopyRxData()

Prototype BufReq ReturnType Dcm CopyRxData (PduIdType DcmRxPduId, PduInfoType* PduInfoPtr, PduLengthType* RxBufferSizePtr) **Parameter** DcmRxPduId Identifies the DCM data to be received. This information is used within the DCM to distinguish two or more receptions at the same time. PduInfoPtr Pointer to a PduInfoType which indicates the number of bytes to be copied (SduLength) and the location of the source data (SduDataPtr). An SduLength of 0 is possible in order to poll the available receive buffer size. In this case no data are to be copied and PduInfoPtr might be invalid. RxBufferSizePtr Remaining free place in receive buffer after completion of this call. Return code BufReq ReturnType BUFREQ OK: Data has been copied to the receive buffer completely as requested. BUFREQ E NOT OK: Data has not been copied. Request failed.



Functional Description

Called once upon reception of each segment. Within this call, the received data is copied from the receive TP buffer to the DCM receive buffer.

The API might only be called with an SduLength greater 0 if the RxBufferSizePtr returned by the previous API call indicates sufficient receive buffer (SduLength <= RxBufferSizePtr).

The function must only be called if the connection has been accepted by an initial call to Dcm StartOfReception.

Particularities and Limitations

- > ServiceID = 0x02
- Reentrant for different Pdulds. Non reentrant for the same Pduld.
- > This function is synchronous.

Table 6-38 Dcm_CopyRxData()



Dcm_TpRxIndication() 6.4.3.2.3

Prototype

PduR AR 4.0.3 (DCM Version >= 1.00.00)

void Dcm TpRxIndication (PduIdType DcmRxPduId, NotifResultType Result)

PduR AR 4.1.2 (DCM Version >= 2.02.00)

void Dcm TpRxIndication (PduIdType DcmRxPduId, Std ReturnType Result)

Parameter	
DcmRxPduId	ID of DCM I-PDU that has been received. Identifies the data that has been received.
	Range: 0(maximum number of I-PDU IDs received by DCM) – 1
Result	PduR AR 4.0.3:
	NTFRSLT_OK: The complete N-PDU has been received and is stored in the receive buffer.
	Any other value: The N_PDU has not been received; the receive buffer can be unlocked by the DCM.
	PduR AR 4.1.2:
	E_OK: The complete N-PDU has been received and is stored in the receive buffer
	E_NOT_OK: The N_PDU has not been received properly, DCM should prepare for a new reception.
Return code	

void N/A

Functional Description

This is called by the PduR to indicate the completion of a reception.

Particularities and Limitations

- > ServiceID = 0x03
- > This function is reentrant.
- > This function is synchronous.
- > The prototype of the API depends on the AR version of the PduR (please refer to chapter 9.17 How to Deal with the PduR AR version).

Table 6-39 Dcm_TpRxIndication()



6.4.3.2.4 Dcm_CopyTxData()

Prototype

BufReq_ReturnType Dcm_CopyTxData (PduIdType DcmTxPduId, PduInfoType*
PduInfoPtr, RetryInfoType* RetryInfoPtr, PduLengthType* TxDataCntPtr)

· -	
Parameter	
DcmTxPduId	Identifies the DCM data to be sent. This information is used to derive the PCI information within the transport protocol. The value has to be same as in the according service call PduR_DcmTransmit().
PduInfoPtr	Pointer to a PduInfoType, which indicates the number of bytes to be copied (SduLength) and the location where the data have to be copied to (SduDataPtr).
	An SduLength of 0 is possible in order to poll the available transmit data count. In this case no data are to be copied and SduDataPtr might be invalid.
RetryInfoPtr	If the transmitted TP I-PDU does not support the retry feature a NULL_PTR can be provided. This indicates that the copied transmit data can be removed from the buffer after it has been copied.
TxDataCntPtr	Remaining Tx data after completion of this call.
Return code	
BufReq_ReturnType	BUFREQ_OK: Data has been copied to the transmit buffer completely as requested.
	BUFREQ_E_NOT_OK: Data has not been copied. Request failed, in case the corresponding I-PDU was stopped.
	BUFREQ_E_BUSY: There is temporarily not enough data to be transmitted. Retry later.

Functional Description

At invocation of Dcm_CopyTxData the DCM module copies the requested transmit data with ID PduId from its internal transmit buffer to the location specified by the PduInfoPtr. The function Dcm_CopyTxData also calculates and sets the TxDataCntPtr to the amount of remaining bytes for the transmission of this data.

If RetryInfoPtr is NULL_PTR or if TpDataState is equal to TP_DATACONF, the DCM shall always copy the next fragment of data to the SduDataPtr.

No TpDataState other than TP DATACONF is supported by the current DCM implementation.

Particularities and Limitations

- > ServiceID = 0x04
- > Reentrant for different Pdulds. Non reentrant for the same Pduld.
- > This function is synchronous.

Table 6-40 Dcm_CopyTxData()



6.4.3.2.5 Dcm_TpTxConfirmation()

Prototype

PduR AR 4.0.3 (DCM Version >= 1.00.00)

void Dcm_TpTxConfirmation (PduIdType DcmTxPduId, NotifResultType Result)

PduR AR 4.1.2 (DCM Version >= 2.02.00)

void Dcm TpTxConfirmation (PduIdType DcmTxPduId, Std ReturnType Result)

Parameter	
DcmTxPduId	ID of DCM I-PDU that has been transmitted.
	Range: 0(maximum number of I-PDU IDs transmitted by DCM) – 1
Result	PduR AR 4.0.3:
	NTFRSLT_OK if the complete N-PDU has been transmitted.
	Any other value: An error occurred during transmission, the DCM can unlock the transmit buffer.
	PduR AR 4.1.2:
	E_OK: The complete N-PDU has been transmitted.
	E_NOT_OK: An error occurred during transmission, the DCM can unlock the transmit buffer.
Return code	

Return code	
void	N/A

Functional Description

This is called by the PduR to confirm an end of transport protocol (e.g. CanTp) transmission.

Particularities and Limitations

- > ServiceID = 0x05
- > This function is reentrant.
- > This function is synchronous.
- > The prototype of the API depends on the AR version of the PduR (please refer to chapter 9.17 How to Deal with the PduR AR version).

Table 6-41 Dcm_TpTxConfirmation()



6.4.3.2.6 Dcm_TxConfirmation()

Prototype	
<pre>void Dcm_TxConfirmation (PduIdType DcmTxPduId)</pre>	
Parameter	
DcmTxPduId	ID of DCM I-PDU that has been transmitted.
	Range: 0(maximum number of I-PDU IDs transmitted by DCM) – 1
Return code	
void	N/A

Functional Description

This is called by the PduR to confirm an end of interface (e.g. Canlf) transmission.

Particularities and Limitations

- > ServiceID = 0xA1
- > This function is reentrant.
- > This function is synchronous.

Table 6-42 Dcm_TxConfirmation()



6.4.3.3 AUTOSAR 3

6.4.3.3.1 Dcm_ProvideRxBuffer()

Prototype

BufReq_ReturnType Dcm_ProvideRxBuffer (PduIdType DcmRxPduId, PduLengthType
TpSduLength, PduInfoType** PduInfoPtr)

Parameter	arameter	
DcmRxPduId	Identifies the DCM data to be received. This information is used within the DCM to distinguish two or more receptions at the same time.	
TpSduLength	The overall length of the message being received.	
PduInfoPtr	Pointer to pointer to PduInfoType containing data pointer and length of a receive buffer, which is provided by the DCM.	
	Note that certain TP's will put an initial value inside the length buffer, which is the minimal size of the RxBuffer. This value is ignored by the DCM.	
Return code		
BufReq_ReturnType	BUFREQ_OK: buffer has been successfully provided.	
	BUFREQ_E_OVFL: no buffer provided, available buffer is too small.	
	BUFREQ_E_NOT_OK: no buffer provided, request failed.	

Functional Description

Called at least once upon reception by a lower layer TP to request a buffer, where the received data will be stored.

When called multiple times, the DCM expects that the previously provided buffer has been filled up completely.

Particularities and Limitations

- > ServiceID = 0x02
- > Reentrant for different Pdulds. Non reentrant for the same Pduld.
- > This function is synchronous.

Table 6-43 Dcm_ProvideRxBuffer ()



6.4.3.3.2 Dcm_RxIndication()

Prototype	
void Dcm_RxIndication	(PduIdType DcmRxPduId, NotifResultType Result)
Parameter	
DcmRxPduId	ID of DCM I-PDU that has been received. Identifies the data that has been received.
	Range: 0(maximum number of I-PDU IDs received by DCM) – 1
Result	NTFRSLT_OK: The complete I-PDU has been received and is stored in the receive buffer.
	Any other value: The I-PDU has not been received; the receive buffer can be unlocked by the DCM.
Return code	
void	N/A
Functional Description	
This is called by the PduP to indicate the completion of a recention	

This is called by the PduR to indicate the completion of a reception.

Particularities and Limitations

- > ServiceID = 0x03
- > This function is reentrant.
- > This function is synchronous.

Table 6-44 Dcm_RxIndication()



6.4.3.3.3 Dcm_ProvideTxBuffer()

Prototype

BufReq_ReturnType Dcm_ProvideTxBuffer (PduIdType DcmTxPduId, PduInfoType**
PduInfoPtr, PduLengthType Length)

Parameter	
DcmTxPduId	Identifies the DCM data to be sent. This information is used to derive the PCI information within the transport protocol. The value has to be same as in the according service call PduR_DcmTransmit().
PduInfoPtr	Pointer to pointer to PduInfoStructure containing data pointer and length of a transmit buffer which is provided by the DCM.
Length	Minimum buffer size requested by the lower layer. A length of zero indicates that the length of the buffer can be of arbitrary size (larger than zero). The Length parameter is expected by DCM to be always zero.
Return code	
BufReq_ReturnType	BUFREQ_OK: Buffer has been successfully provided. BUFREQ_E_NOT_OK: No buffer provided, request failed. BUFREQ_E_BUSY: There is temporarily not enough data to be transmitted. Retry later.

Functional Description

Called by a lower layer TP to request a buffer with data to be transmitted.

Particularities and Limitations

- > ServiceID = 0x04
- > Reentrant for different Pdulds. Non reentrant for the same Pduld.
- > This function is synchronous.

Table 6-45 Dcm_ProvideTxBuffer ()



6.4.3.3.4 Dcm_TxConfirmation()

Prototype	
<pre>void Dcm_TxConfirmation (PduIdType DcmTxPduId, NotifResultType Result)</pre>	
Parameter	
DcmTxPduId	ID of DCM I-PDU that has been transmitted. Range: 0(maximum number of I-PDU IDs transmitted by DCM) – 1
Result	NTFRSLT_OK: If the complete I-PDU has been transmitted. Any other value: An error occurred during transmission, the DCM can unlock the transmit buffer.
Return code	
void	N/A

Functional Description

This is called by the PduR to confirm an end of transmission.

Particularities and Limitations

- > ServiceID = 0x05
- > This function is reentrant.
- > This function is synchronous.

Table 6-46 Dcm_TxConfirmation()



6.4.4 CanTp

6.4.4.1 Dcm_OnRequestDetection()

Prototype		
<pre>void Dcm_OnRequestDetection (PduIdType canTpRxPduId, uint8 tpAddrExtension)</pre>		
Parameter		
canTpRxPduId	Represents the CanIf to CanTp RxPduId of the request.	
tpAddrExtension	Defines the address extension byte value of the message.	
Return code		
void	N/A	

Functional Description

This API will be called by the CanTp each time a new TP CAN frame of type first-frame or single-frame is received. The DCM will check whether this CAN message applies to any DCM connection (i.e. the CAN message is one of the DCM clients' physical requests). If so, any ongoing diagnostic (request/response) transmission over this client connection will be terminated. Additionally if there is service processing in progress, it will be terminated too.

Particularities and Limitations

- > ServiceID = 0xA4
- > This function is reentrant.
- > This function is synchronous.
- > This function is only available if DCM shall support Mixed11 addressing CanTp connections.

Table 6-47 Dcm_ OnRequestDetection()

6.5 Configurable Interfaces

6.5.1 Callout Functions

At its configurable interfaces the DCM defines callout functions. The declarations of the callout functions are provided by the BSW module, i.e. the DCM. It is the integrator's task to provide the corresponding function definitions. The definitions of the callouts can be adjusted to the system's needs. The DCM callout function declarations are described in the following tables:



6.5.1.1 <Module>_<DiagnosticService>()

6.5.1.1.1 DCM AUTOSAR Version Equal or Newer Than 4.2.2

Prototype

Std_ReturnType <Module>_<DiagnosticService> (Dcm_OpStatusType OpStatus,
Dcm MsgContextType* pMsgContext, Dcm NegativeResponseCodeType* ErrorCode)

Dom_MsgcontextType	pMsgContext, Dcm_NegativeResponseCodeType* ErrorCode)
Parameter	
OpStatus	DCM_INITIAL: All In-parameters are valid.
	DCM_PENDING: All parameters are still valid. This is the subsequent function calls after DCM_E_PENDING has been returned.
	DCM_CANCEL: All In-parameters are still valid, but since this call is a final one it must be used to finalize any pending activities only.
	DCM_FORCE_RCRRP_OK: (Vendor extension) The enforced RCR-RP transmission has finished with success.
	DCM_FORCE_RCRRP_NOT_OK: (Vendor extension) The enforced RCR-RP transmission has failed
pMsgContext	Request/Response message-related information.
ErrorCode	Returns the NRC to be sent in the negative response.
Return code	
Std_ReturnType	E_OK: Job processing finished, send positive response.
	E_NOT_OK: Job processing finished, send NRC from the ErrorCode.
	DCM_E_PENDING: Job processing is not yet finished.
	DCM_E_FORCE_RCRRP: (Vendor extension) Forces a RCR-RP response. The call out will called again once the response is sent. The OpStatus parameter will contain the transmission result.

Functional Description

DCM calls a function of this kind as soon as a supported diagnostic service, configured to be handled by a CDD, is received. All of the relevant diagnostic request parameter information is forwarded by DCM through the pMsgContext function parameter.

The concrete name of the callout is defined by the configuration parameter /Dcm/DcmConfigSet/DcmDsdServiceTable/DcmDsdService/DcmDsdSidTabFnc.

Description of pMsgContext parameter values, set by DCM for diagnostic service level processing (all other members are specified in [1] and within the definition of **Dcm_MsgContextType**):

pMsgContext->reqDataLen - contains the total request length less one (SID) byte.

pMsgContext->resDataLen - is set to 0. If any data shall be returned in the positive response

(i.e. something written at pMsgContext->resData), return its size through this member.

pMsgContext->resMaxDataLen - contains the available response buffer size.

 ${\tt pMsgContext->reqData} \qquad \qquad \textbf{- points to the request data behind the SID byte}.$

pMsqContext->resData - points to the response data behind the SID byte.

Job processing finished:

- > With success: Commit any applicable data size in pMsgContext->resDataLen and return E_OK.
- > With failure: Put an appropriate NRC to ErrorCode and return E_NOT_OK.



Particularities and Limitations

- > ServiceID = 0x32
- > This function is reentrant.
- > This function is asynchronous.

Table 6-48 <Module>_<DiagnosticService>() (AR version >= 4.2.2)

6.5.1.1.2 DCM AUTOSAR Version Older Than 4.2.2

Prototype

Std_ReturnType <Module>_<DiagnosticService> (Dcm_OpStatusType OpStatus,
Dcm MsgContextType* pMsgContext)

Parameter	
OpStatus	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>
pMsgContext	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>
Return code	
Std_ReturnType	E_OK: Job processing finished, send positive response. DCM_E_PENDING: Job processing is not yet finished. DCM_E_FORCE_RCRRP: (Vendor extension) Forces a RCR-RP response. The call out will called again once the response is sent. The OpStatus parameter will contain the transmission result.
	DCM_E_PROCESSINGDONE: (Vendor extension): Can be returned instead of calling <i>Dcm_ExternalProcessingDone()</i> for the current pMsgContext. Saves application code and stack usage.

Functional Description

Refer to <Module>_<DiagnosticService>() (AR version >= 4.2.2) except the "Job processing finished" part.

Job processing finished:

- > With success: Commit any applicable data size in pMsgContext->resDataLen, call Dcm_ExternalProcessingDone() and return E_OK.
- > With failure: Call Dcm_ExternalSetNegResponse() with appropriate NRC and finish as in "with success".

Particularities and Limitations

> Refer to <Module>_<DiagnosticService>() (AR version >= 4.2.2)

Table 6-49 <Module>_<DiagnosticService>() (AR version < 4.2.2)



6.5.1.2 <Module>_<DiagnosticService>_<SubService>()

6.5.1.2.1 DCM AUTOSAR Version Equal or Newer Than 4.2.2

Prototype

Std_ReturnType <Module>_<DiagnosticService>_<SubService> (Dcm_OpStatusType
OpStatus, Dcm_MsgContextType* pMsgContext, Dcm_NegativeResponseCodeType*
ErrorCode)

Parameter	
OpStatus	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>
pMsgContext	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>
ErrorCode	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>
Return code	
Std_ReturnType	Refer to <module>_<diagnosticservice>() (AR version >= 4.2.2)</diagnosticservice></module>

Functional Description

DCM calls a function of this kind as soon as a supported diagnostic sub-service, configured to be handled by a CDD, is received. All of the relevant diagnostic request parameter information is forwarded by DCM through the pMsgContext function parameter.

The concrete name of the callout is defined by the configuration parameter /Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService/DcmDsdSubServiceFnc.

Description of pMsgContext parameter values, set by DCM for diagnostic sub-service level processing (all other members are specified in [1] and within the definition of **Dcm_MsgContextType**):

pMsgContext->reqDataLen

- contains the total request length less two (SID + SF) bytes.

pMsqContext->resDataLen

- is set to 0. If any data shall be returned in the positive response

(i.e. something written at pMsqContext->resData), return its size through this member.

pMsqContext->resMaxDataLen

- contains the available response buffer size.

pMsqContext->reqData

- points to the request data behind the SF byte.

pMsgContext->resData

- points to the response data behind the SF byte.

Job processing finished:

> Refer to "Job processing finished" part in <Module> <DiagnosticService>() (AR version >= 4.2.2).

Particularities and Limitations

- > ServiceID = 0x33
- > This function is reentrant.
- > This function is asynchronous.

Table 6-50 <Module>_<DiagnosticService>_<SubService>() (AR version >= 4.2.2)



6.5.1.2.2 DCM AUTOSAR Version Older Than 4.2.2

Prototype

Std_ReturnType <Module>_<DiagnosticService>_<SubService> (Dcm_OpStatusType OpStatus, Dcm MsgContextType* pMsgContext)

Parameter	
OpStatus	Refer to <module>_<diagnosticservice>() (AR version < 4.2.2)</diagnosticservice></module>
pMsgContext	Refer to <module>_<diagnosticservice>() (AR version < 4.2.2)</diagnosticservice></module>
Return code	
Std ReturnType	Refer to <module> <diagnosticservice>() (AR version < 4.2.2)</diagnosticservice></module>

Functional Description

Refer to <Module>_<DiagnosticService>_<SubService>() (AR version >= 4.2.2) except for the "Job processing finished" part.

Job processing finished:

> Refer to "Job processing finished" part in <Module> <DiagnosticService>() (AR version < 4.2.2).

Particularities and Limitations

> Refer to <Module> <DiagnosticService> <SubService>() (AR version >= 4.2.2)

Table 6-51 <Module>_<DiagnosticService>_<SubService>() (AR version < 4.2.2)

6.5.1.3 Dcm_SetProgConditions()

Prototype		
Std_ReturnType Dcm_SetProgConditions (Dcm_ProgConditionsType * ProgConditions)		
Parameter		
ProgConditions	Conditions on which the jump to bootloader has been requested.	
Return code		
Std_ReturnType	E_OK: Conditions have correctly been set.	
	E_NOT_OK: Conditions cannot be set.	
	DCM_E_PENDING: Conditions set is in progress, a further call to this API is needed to end the setting.	

Functional Description

The Dcm_SetProgConditions callout allows the integrator to store relevant information prior jumping to bootloader. The context parameters are defined in Dcm_ProgConditionsType.

Particularities and Limitations

- > ServiceID = N/A
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-52 Dcm_SetProgConditions()



6.5.1.4 Dcm_GetProgConditions()

Prototype

 $\label{local_conditions} \begin{tabular}{ll} Dcm_EcuStartModeType \begin{tabular}{ll} Dcm_GetProgConditions (Dcm_ProgConditionsType * ProgConditions) \end{tabular}$

Parameter	
ProgConditions	Conditions on which the jump from the bootloader has been requested.
Return code	
Dcm_EcuStartModeType	DCM_COLD_START: The ECU starts normally.
	DCM_WARM_START: The ECU starts from a bootloader jump. The function parameter values will be evaluated for further processing.

Functional Description

The Dcm_GetProgConditions callout is called upon DCM initialization and allows determining if a response (\$50 or \$51) has to be sent depending on request within the bootloader. The context parameters are defined in Dcm_ProgConditionsType.

Particularities and Limitations

- > ServiceID = N/A
- > This function is not reentrant.
- > This function is synchronous.

Table 6-53 Dcm_GetProgConditions()



6.5.1.5 Dcm_Confirmation()

Prototype

void Dcm_Confirmation (Dcm_IdContextType idContext, PduIdType dcmRxPduId, Dcm ConfirmationStatusType status)

_	71
Parameter	
idContext	Current context identifier which can be used to retrieve the relation between request and confirmation.
	Within the confirmation, the Dcm_MsgContext is no more available, so the idContext can be used to represent this relation.
	The idContext is also part of the Dcm_MsgContext.
dcmRxPduId	DcmRxPduld on which the request was received. The source of the request can have consequences for message processing.
status	Status indication about confirmation (differentiate failure indication and normal confirmation) / The parameter "Result" of "Dcm_TxConfirmation" shall be forwarded to status depending if a positive or negative responses was sent before.
Return code	
void	N/A

Functional Description

This function confirms the successful transmission or a transmission error of a diagnostic service. The idContext and the dcmRxPduld are required to identify the message which was processed. If there was no response for this request, this call out is invoked at service processing finish.

Note: This call out is invoked only then when a DCM internal or external <Module>_<DiagnosticService> service handler has been executed.

Particularities and Limitations

- > ServiceID = 41
- > Not Reentrant
- > This function is synchronous.

Table 6-54 Dcm_Confirmation()



6.5.1.6 Dcm_ReadMemory()

Prototype

Dcm_ReturnReadMemoryType Dcm_ReadMemory (Dcm_OpStatusType OpStatus, uint8
MemoryIdentifier, uint32 MemoryAddress, uint32 MemorySize, uint8* MemoryData [, Dcm NegativeResponseCodeType* ErrorCode])

Parameter	
OpStatus	DCM_INITIAL: All In-parameters are valid.
	DCM_PENDING: All parameters are still valid. This is the subsequent function calls after DCM_E_PENDING has been returned.
	DCM_CANCEL: All In-parameters are still valid, but since this call is a final one it must be used to finalize any pending activities only.
	DCM_FORCE_RCRRP_OK: (Vendor extension) The enforced RCR-RP transmission has finished with success.
	DCM_FORCE_RCRRP_NOT_OK: (Vendor extension) The enforced RCR-RP transmission has failed.
MemoryIdentifier	Memoryldentifier Identifier of the Memory Block (e.g. used if memory section distinguishing is needed).
	Note: If it's not used this parameter shall be set to 0.
MemoryAddress	Starting address of server memory from which data is to be retrieved.
MemorySize	Number of bytes in the MemoryData.
MemoryData	Data read (Points to the diagnostic buffer in DCM).
ErrorCode	Optional parameter. Exists only in AR 4.2.2 or later enabled DCMs.
	If written by the application, a specific NRC will be sent back. This NRC is evaluated only in case DCM_READ_FAILED is returned.
Return code	
Dcm_ReturnReadMemory Type	DCM_READ_OK: Read was successful.
	DCM_READ_FAILED: Read was not successful.
	DCM_READ_PENDING: Read is not yet finished.
	DCM_READ_FORCE_RCRRP: Enforce RCR-RP transmission (vendor extension).

Functional Description

The Dcm_ReadMemory callout is used to request memory data identified by the parameter memoryAddress and memorySize from the UDS request message. This service is needed for the implementation of UDS services:

- ReadMemoryByAddress (\$23);
- ReadDataByldentifier (\$22) (in case of Dynamical DID defined by memory address);
- ReadDataByPeriodicIdentifier (\$2A) (in case of Dynamical DID defined by memory address).

Particularities and Limitations

- > ServiceID = 0x26
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-55 Dcm_ReadMemory()



6.5.1.7 Dcm_WriteMemory()

Prototype

Dcm_ReturnWriteMemoryType Dcm_WriteMemory (Dcm_OpStatusType OpStatus, uint8
MemoryIdentifier, uint32 MemoryAddress, uint32 MemorySize, uint8* MemoryData[,
Dcm NegativeResponseCodeType* ErrorCode])

Parameter	
OpStatus	DCM_INITIAL: All In-parameters are valid.
	DCM_PENDING: All parameters are still valid. This is the subsequent function calls after DCM_E_PENDING has been returned.
	DCM_CANCEL: All In-parameters are still valid, but since this call is a final one it must be used to finalize any pending activities only.
	DCM_FORCE_RCRRP_OK: (Vendor extension) The enforced RCR-RP transmission has finished with success.
	DCM_FORCE_RCRRP_NOT_OK: (Vendor extension) The enforced RCR-RP transmission has failed.
MemoryIdentifier	Memoryldentifier Identifier of the Memory Block (e.g. used if memory section distinguishing is needed).
	Note: If it's not used this parameter shall be set to 0.
MemoryAddress	Starting address of server memory where the data is to be written.
MemorySize	Number of bytes in the MemoryData.
MemoryData	Data to be written (Points to the diagnostic buffer in DCM).
ErrorCode	Optional parameter. Exists only in AR 4.2.2 or later enabled DCMs.
	If written by the application, a specific NRC will be sent back. This NRC is evaluated only in case DCM_WRITE_FAILED is returned.
Return code	
Dcm_ReturnWriteMemor	DCM_WRITE_OK: Write was successful.
уТуре	DCM_WRITE_FAILED: Write was not successful.
	DCM_WRITE_PENDING: Write is not yet finished.
	DCM_WRITE_FORCE_RCRRP: Enforce RCR-RP transmission (vendor extension).

Functional Description

The Dcm_WriteMemory callout is used to write memory data identified by the parameter memoryAddress and memorySize. This service is needed for the implementation of UDS services:

- WriteMemoryByAddress (\$3D)

Particularities and Limitations

- > ServiceID = 0x27
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-56 Dcm_WriteMemory()



6.5.1.8 < Diagnostic Session Change Notification Callback>

Prototype

void <Diagnostic Session Change Callback> (Dcm_SesCtrlType formerSesCtrlId,
Dcm SesCtrlType newSesCtrlId)

Parameter	
formerSesCtrlId	Specifies the former diagnostic session ID (transition's source state)
newSesCtrlId	Specifies the new diagnostic session ID (transition's target state)
Return code	
_	-

Functional Description

Any configured function of this kind will be called at a diagnostic session state transition.

Note:

The function argument values have the same definition as the ones returned by the API Dcm GetSesCtrlType().

Please refer also to 9.24 How to Know When the Diagnostic Session Changes for more details on how to configure such a callback and when it will be called.

Particularities and Limitations

- > This function is not reentrant.
- > This function is synchronous.

Table 6-57 < Diagnostic Session Change Notification Callback >



6.5.1.9 <Security Access Change Notification Callback>

Prototype

void <Security Access Change Callback> (Dcm_SecLevelType formerSecLevelId,
Dcm SecLevelType newSecLevelId)

Parameter	
formerSecLevelId	Specifies the former security access level ID (transition's source state)
newSecLevelId	Specifies the new security access level ID (transition's target state)
Return code	
_	-

Functional Description

Any configured function of this kind will be called at a security access level state transition.

Note:

The function argument values have the same definition as the ones returned by the API Dcm_GetSecurityLevel().

Please refer also to 9.16.2 Calling a Function Implemented Within a CDD Module for more details on how to configure such a callback and when it will be called.

- > This function is not reentrant.
- > This function is synchronous.

Table 6-58 <Security Access Change Notification Callback>



6.5.1.10 Dcm_GetRecoveryStates()

Prototype		
Std_ReturnType Dcm_GetRecoveryStates (Dcm_RecoveryInfoType* RecoveryInfo)		
Parameter		
RecoveryInfo	Contains all the information that has to be recovered.	
Return code		
Std_ReturnType	E_OK: Recovery info is available and valid, process it.	
	DCM_E_PENDING: Recovery info not yet available, call again.	
	E_NOT_OK: No information to be recovered or result reading failed. DCM will continue with the default initialized states.	

Functional Description

This API will be called by DCM within the first $Dcm_MainFunction()$ call right after the call of $Dcm_Init()$. For details on the usage of this API, please refer chapter 9.28 How to Recover DCM State Context on ECU Reset/ Power On.

Note:

- If no recovery of any state is needed (default startup of DCM), then the return value shall always be E NOT OK.
- Before this API is called, DCM will lock any external connections until the result is processed. This is required in order to be able to switch into a consistent state without any influence from outside.
- For details on the recovered information, please refer the data type definition: Dcm RecoveryInfoType.

Particularities and Limitations

- > ServiceID = 0xA5
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-59 Dcm_GetRecoveryStates()



Caution

It is not intended to use <code>Dcm_GetRecoveryStates()</code> as a standalone API. The data it transfers depends on the DCM implementation version. For optimization reasons, the data structure uses internal data representation and not any official DCM AR APIs (e.g. macros for session and security access, or communication channel SNVs). Thus, it shall be used only if the information provider (<code>Dcm_ProvideRecoveryStates()</code>) has been used.



6.5.1.11 Dcm_FilterDidLookUpResult

Prototype

Std_ReturnType Dcm_FilterDidLookUpResult(Dcm_OpStatusType OpStatus, uint16 Did,
Dcm DidOpType DidOperation)

Parameter	
OpStatus	Status of the current operation.
Did	Data Identifier to be filtered.
DidOperation	DCM_DID_OP_READ: Available for services 0x22, 0x2A.
	DCM_DID_OP_WRITE: Available for service 0x2E.
	DCM_DID_OP_IO: Available for service 0x2F.
	DCM_DID_OP_SCALINGINFO: Available for service 0x24.
	DCM_DID_OP_DEFINE: Available for service 0x2C.
Return code	
Std_ReturnType	E_OK: The DID is (still) active.
	DCM_E_PENDING: The DID validation needs more time. Call this API again.
	E_NOT_OK: The DID is not active.

Functional Description

This API will be called by DCM to check whether a particular combination of a DID and a DID operation is still supported. The return of that API is E_OK if that DID is active for the provided DID operation. This API is used in the filtering feature described in 9.30 How to Handle Multiple Diagnostic Service Variants.

Particularities and Limitations

- > This function is not reentrant.
- > This function is asynchronous.

Table 6-60 Dcm_FilterDidLookUpResult



6.5.1.12 Dcm_FilterRidLookUpResult

Prototype		
Std_ReturnType Dcm_FilterRidLookUpResult(Dcm_OpStatusType OpStatus, uint16 Rid)		
Parameter		
OpStatus	Status of the current operation.	
Rid	Routine Identifier to be filtered.	
Return code		
Std_ReturnType	E_OK: The RID is (still) active. DCM_E_PENDING: The RID validation needs more time. Call this API again. E_NOT_OK: The RID is not active.	

Functional Description

This API will be called by DCM to check whether a particular RID is still supported. The return of that API is E_OK if that RID is active. This API is used in the filtering feature illustrated in 9.30 How to Handle Multiple Diagnostic Service Variants.

Particularities and Limitations

- > This function is not reentrant.
- > This function is asynchronous.

Table 6-61 Dcm_FilterRidLookUpResult



6.5.2 Required Port Operation Functions

6.5.2.1 ConditionCheckRead()

Prototype

Std_ReturnType ConditionCheckRead (Dcm_OpStatusType OpStatus,
Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
OpStatus	Status of the current operation.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application, if the conditions to read a data element are correct.

Particularities and Limitations

- > ServiceID = 0x37
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Table 6-62 ConditionCheckRead()



6.5.2.2 ReadData() (asynchronous)

Prototype	
Std_ReturnType ReadData (Dcm_OpStatusType OpStatus, uint8* Data)	
Parameter	
OpStatus	Status of the current operation.
Data	Buffer where the read data shall be copied.
Return code	
Std_ReturnType	E_OK: The operation is finished. DCM E PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. The DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to get a data value of a DID/PID if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Particularities and Limitations

- > ServiceID = 0x3B
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-63 ReadData() (asynchronous)

6.5.2.3 ReadData() (synchronous)

Prototype		
Std_ReturnType ReadData (uint8* Data)		
Parameter		
Data	Buffer where the read data shall be copied.	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	E_NOT_OK: The operation has failed. The DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to get a data value of a DID/PID if DcmDspDataUsePort is set to USE_DATA_SYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Particularities and Limitations

- > ServiceID = 0x34
- > This function is not reentrant.
- > This function is synchronous.

Table 6-64 ReadData() (synchronous)



6.5.2.4 ReadDataLength()

Prototype

Std ReturnType ReadDataLength (Dcm OpStatusType OpStatus, uint16* DataLength)

bed_keediniype keadbacabeigtii (beiii_opstatusiype opstatus, dintio bacabeigtii)		
Parameter		
OpStatus	Status of the current operation.	
DataLength	Length of the data to be read.	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	DCM_E_PENDING: The operation is not yet finished.	
	E_NOT_OK: The operation has failed. The DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to return the data length of a data element.

Note: This callout type is available only if the DID has dynamic length.

Particularities and Limitations

- > ServiceID = 0x36
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Table 6-65 ReadDataLength()



6.5.2.5 WriteData() (dynamic length)

Prototype

Std_ReturnType WriteData (uint8* Data, uint16 DataLength, Dcm_OpStatusType
OpStatus, Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
Data	Buffer containing the data to be written.
DataLength	Length of the data to be written.
OpStatus	Status of the current operation.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to set the data value of a DID.

Note: This callout type is available only if the DID has dynamic length.

Particularities and Limitations

- > ServiceID = 0x3E
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Table 6-66 WriteData() (dynamic length)



6.5.2.6 WriteData() (static length)

Prototype

Std_ReturnType WriteData (uint8* Data, Dcm_OpStatusType OpStatus,
Dcm NegativeResponseCodeType* ErrorCode)

Parameter		
Data	Buffer containing the data to be written.	
OpStatus	Status of the current operation.	
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	DCM_E_PENDING: The operation is not yet finished.	
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to set the data value of a DID.

Note: This callout type is available only if the DID has constant length.

- > ServiceID = 0x35
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.

Table 6-67 WriteData() (static length)



6.5.2.7 ReturnControlToECU()

Prototype

Std_ReturnType ReturnControlToECU (Dcm_OpStatusType OpStatus, <ControlMaskType>
ControlMask, Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
OpStatus	Status of the current operation.
ControlMask	Contains/points to the CEMR from request or equals 0xFF (all signals) on lost session/security permissions.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: This return value is not allowed to be used!
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to return control of an IOControl back to the ECU.

For details about the usage of the ControlMask parameter and the possible ControlMaskTypes, please refer to chapter 5.22.3 Implementation Aspects of InputOutputControlByIdentifier (\$2F).

Particularities and Limitations

- > ServiceID = 0x39
- This function is not reentrant.
- > This function is synchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.
- > The DCM_E_PENDING return value is not allowed to be used due to the fact that this operation shall always be executed synchronously. Refer to 5.22.3 Implementation Aspects of InputOutputControlByIdentifier (\$2F) for details.
- > The "ControlMask" parameter is only available if DcmDspDidControlMask is set to "DCM_CONTROLMASK_EXTERNAL".

Table 6-68 ReturnControlToECU()



6.5.2.8 ResetToDefault()

Prototype

Std_ReturnType ResetToDefault (Dcm_OpStatusType OpStatus, <ControlMaskType>
ControlMask, Dcm_NegativeResponseCodeType* ErrorCode)

Parameter	
OpStatus	Status of the current operation.
ControlMask	Contains/points to the CEMR from request.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to reset an IOControl to default value.

For details about the usage of the ControlMask parameter and the possible ControlMaskTypes, please refer to chapter 5.22.3 Implementation Aspects of InputOutputControlByIdentifier (\$2F).

Particularities and Limitations

- > ServiceID = 0x3C
- This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.
- The "ControlMask" parameter is only available if DcmDspDidControlMask is set to "DCM CONTROLMASK EXTERNAL".

Table 6-69 ResetToDefault()



6.5.2.9 FreezeCurrentState()

Prototype

Std_ReturnType FreezeCurrentState (Dcm_OpStatusType OpStatus, <ControlMaskType>
ControlMask, Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
OpStatus	Status of the current operation.
ControlMask	Contains/points to the CEMR from request.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
Std_ReturnType	E_OK: The operation is finished. DCM_E_PENDING: The operation is not yet finished.

Functional Description

This function is a request from the DCM to the application to freeze the current state of an IOControl. For details about the usage of the ControlMask parameter and the possible ControlMaskTypes, please

Particularities and Limitations

ServiceID = 0x3A

- > Not Reentrant
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.
- The "ControlMask" parameter is only available if DcmDspDidControlMask is set to "DCM CONTROLMASK EXTERNAL".

refer to chapter 5.22.3 Implementation Aspects of InputOutputControlByldentifier (\$2F).

Table 6-70 FreezeCurrentState()



6.5.2.10 ShortTermAdjustment()

Prototype

Std_ReturnType ShortTermAdjustment (uint8* ControlOptionRecord,
Dcm_OpStatusType OpStatus, <ControlMaskType> ControlMask,
Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
ControlOptionRecord	Control option parameter for the adjustment request.
OpStatus	Status of the current operation.
ControlMask	Contains/points to the CEMR from request.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to adjust the IO signal.

For details about the usage of the ControlMask parameter and the possible ControlMaskTypes, please refer to chapter 5.22.3 Implementation Aspects of InputOutputControlByIdentifier (\$2F).

- > ServiceID = 0x3D
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE_DATA_ASYNCH_CLIENT_SERVER/ USE_DATA_ASYNCH_FNC.
- The "ControlMask" parameter is only available if DcmDspDidControlMask is set to "DCM_CONTROLMASK_EXTERNAL".

Table 6-71 ShortTermAdjustment()



6.5.2.11 GetScalingInformation()

Prototype

Std_ReturnType GetScalingInformation(Dcm_OpStatusType OpStatus, uint8*
ScalingInfo, Dcm NegativeResponseCodeType* ErrorCode)

Parameter		
OpStatus	Status of the current operation.	
ScalingInfo	Buffer where the read scaling info data shall be copied.	
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	DCM_E_PENDING: The operation is not yet finished.	
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to read the scaling information of the corresponding data signal.

- > ServiceID = 0x38
- > This function is not reentrant.
- > This function is asynchronous.
- > The "OpStatus" parameter is only available if DcmDspDataUsePort is set to USE DATA ASYNCH CLIENT SERVER/ USE DATA ASYNCH FNC.

Table 6-72 GetScalingInformation()



6.5.2.12 Start()

Prototype	
Std_ReturnType Start	<pre>([<datatype> <reqsignalname>,] Dcm_OpStatusType OpStatus, [<datatype> <ressignalname>,] [uint16(*) DataLength,] Dcm_NegativeResponseCodeType* ErrorCode)</ressignalname></datatype></reqsignalname></datatype></pre>
Parameter	
<reqsignalname></reqsignalname>	Optional list of parameters.
	Exists only if at least one request signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
OpStatus	Status of the current operation.
<ressignalname></ressignalname>	Optional list of parameters.
	Exists only if at least one response signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
DataLength	Optional parameter. Exists only if either the last request or response signal has dynamic length.
	As IN parameter contains the current request length (for dynamic length RID requests).
	As OUT parameter shall return the actual response length (for dynamic length RID responses).
	The DCM will ignore the returned value on RIDs with static response length.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	DCM_E_FORCE_RCRRP: Forces a RCR-RP response. The service port will be called again once the RCR-RP response is sent. The OpStatus parameter will contain the transmission result.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to start a RID execution.

Particularities and Limitations

- > ServiceID = N/A
- > This function is asynchronous.

Table 6-73 Start()



6.5.2.13 Stop()

Prototype	
Std_ReturnType Stop (<pre>[<datatype> <reqsignalname>,] Dcm_OpStatusType OpStatus, [<datatype> <ressignalname>,] [uint16(*) DataLength,] Dcm_NegativeResponseCodeType* ErrorCode)</ressignalname></datatype></reqsignalname></datatype></pre>
Parameter	
<reqsignalname></reqsignalname>	Optional list of parameters.
	Exists only if at least one request signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
OpStatus	Status of the current operation.
<ressignalname></ressignalname>	Optional list of parameters.
	Exists only if at least one response signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
DataLength	Optional parameter. Exists only if either the last request or response signal has dynamic length.
	As IN parameter contains the current request length (for dynamic length RID requests).
	As OUT parameter shall return the actual response length (for dynamic length RID responses).
	The DCM will ignore the returned value on RIDs with static response length.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	DCM_E_FORCE_RCRRP: Forces a RCR-RP response. The service port will be called again once the RCR-RP response is sent. The OpStatus parameter will contain the transmission result.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to stop an already started RID execution.

Note: The DCM will call this function even if the concrete RID was not started yet. The application shall take care about correct sequence execution.

- > ServiceID = N/A
- > Not Reentrant
- > This function is asynchronous.



Table 6-74 Stop()

6.5.2.14 RequestResults()

- Itequestite	
Prototype	
Std_ReturnType Requ	uestResults (
	[<datatype> <reqsignalname>,] Dcm_OpStatusType OpStatus,</reqsignalname></datatype>
	[<datatype> <ressignalname>,] [uint16(*) DataLength,]</ressignalname></datatype>
	Dcm_NegativeResponseCodeType* ErrorCode)
Parameter	
<reqsignalname></reqsignalname>	Optional list of parameters.
	Exists only if at least one request signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
OpStatus	Status of the current operation.
<ressignalname></ressignalname>	Optional list of parameters.
	Exists only if at least one response signal is defined in the configuration for this RID operation.
	For each signal there will be a dedicated function parameter of the data type derived from the configuration. The parameter name is the same as the ECUC data container name.
DataLength	Optional parameter. Exists only if either the last request or response signal has dynamic length.
	As IN parameter contains the current request length (for dynamic length RID requests).
	As OUT parameter shall return the actual response length (for dynamic length RID responses).
	The DCM will ignore the returned value on RIDs with static response length.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	DCM_E_FORCE_RCRRP: Forces a RCR-RP response. The service port will be called again once the RCR-RP response is sent. The OpStatus parameter will contain the transmission result.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.
Functional Description	on
This function is a request	t from the DCM to the application to read the routine result of a stepped DID

This function is a request from the DCM to the application to read the routine result of a stopped RID execution.



- ServiceID = N/A
- > Not Reentrant
- > This function is asynchronous.

Table 6-75 RequestResults()

6.5.2.15 GetSeed() (with SADR)

Prototype

Parameter

Std_ReturnType GetSeed (uint8* SecurityAccessDataRecord, Dcm_OpStatusType
OpStatus, uint8* Seed, Dcm_NegativeResponseCodeType* ErrorCode)

Seed	Points to the response seed data.	
SecurityAccessDataRe cord	Points to the request data. If the current security access level does not have any request data, the pointer is still valid (points behind the sub-function byte).	
OpStatus	Status of the current operation.	
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	DCM_E_PENDING: The operation is not yet finished.	
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to provide a security level specific seed.

Particularities and Limitations

- > ServiceID = 0x44
- > Not Reentrant
- > This function is asynchronous.

Table 6-76 GetSeed() (with SADR)



6.5.2.16 GetSeed() (without SADR)

Prototype

Std_ReturnType GetSeed (Dcm_OpStatusType OpStatus, uint8* Seed,
Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
Seed	Points to the response seed data.
OpStatus	Status of the current operation.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to provide a security level specific seed.

- > ServiceID = 0x45
- > Not Reentrant
- > This function is asynchronous.

Table 6-77 GetSeed() (without SADR)



6.5.2.17 CompareKey()

Prototype

Std_ReturnType CompareKey (uint8* Key, Dcm_OpStatusType OpStatus [,
Dcm NegativeResponseCodeType* ErrorCode])

	-
Parameter	
Key	Points to the requested key.
OpStatus	Status of the current operation.
ErrorCode	Optional parameter. Exists only in AR 4.2.1 or later enabled DCMs.
	If written by the application, a specific NRC will be sent back. This NRC is evaluated only in case E_NOT_OK is returned.
Return code	
Std_ReturnType	E_OK: The operation is finished.

Return code	
Std_ReturnType	E_OK: The operation is finished. DCM_E_PENDING: The operation is not yet finished.
	DCM_E_COMPARE_KEY_FAILED: The received key is not a valid one. NRC 0x35/0x36 will be send accordingly.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set. Otherwise the DCM sends NRC 0x35/0x36 as for return value DCM_E_COMPARE_KEY_FAILED

Functional Description

This function is a request from the DCM to the application to verify the requested security access level specific key.

- > ServiceID = 0x47
- > Not Reentrant
- > This function is asynchronous.

Table 6-78 CompareKey()



6.5.2.18 Indication()

Prototype

Std_ReturnType Indication (uint8 SID, uint8* RequestData, uint16 DataSize,
uint8 ReqType, uint16 SourceAddress, Dcm_NegativeResponseCodeType* ErrorCode)

Parameter	
SID	Contains the diagnostic service Id.
RequestData	Points to the request data. Points behind the service Id byte.
DataSize	Specifies the requested data length (without the SID byte).
ReqType	Specifies the diagnostic request type: 0 - physical request, 1 - functional request.
SourceAddress	Contains the diagnostic client source address.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_REQUEST_NOT_ACCEPTED: The diagnostic service shall not be processed. No response will be sent.
	E_NOT_OK: The operation has failed. A concrete NRC shall be set, otherwise the DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to validate the received diagnostic service, additionally to the DCM internal validation.

Particularities and Limitations

- > ServiceID = N/A
- > Not Reentrant
- > This function is synchronous.

Table 6-79 Indication()



6.5.2.19 Confirmation()

Prototype

Std_ReturnType Confirmation (uint8 SID, uint8 ReqType, uint16 SourceAddress,
Dcm ConfirmationStatusType ConfirmationStatus)

Parameter	
SID	Contains the diagnostic service Id.
ReqType	Specifies the diagnostic request type: 0 - physical request, 1 - functional request.
SourceAddress	Contains the diagnostic client source address.
ConfirmationStatus	Contains the response transmission resp. diagnostic response type.
Return code	
Std_ReturnType	E_OK: The operation is finished. E_NOT_OK: The operation has failed. Has no effect on DCM.

Functional Description

This function is a notification from the DCM to the application that a diagnostic service processing is finished.

Particularities and Limitations

- > ServiceID = N/A
- > Not Reentrant
- > This function is synchronous.

Table 6-80 Confirmation()



6.5.2.20 ActivateEvent()

Prototype		
Std_ReturnType ActivateEvent (uint8 RoeEventId, Dcm_RoeStateType RoeState)		
Parameter		
RoeEventId	Contains the diagnostic service Id.	
RoeState	Specifies the activation type: DCM_ROE_ACTIVE or DCM_ROE_UNACTIVE.	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	E_NOT_OK: The operation has failed. The DCM will take the appropriate further action.	

Functional Description

This function is a request from the DCM to the application to activate/deactivate a specific RoE event.

Particularities and Limitations

- > ServiceID = N/A
- > Not Reentrant
- > This function is synchronous.

Table 6-81 ActivateEvent()



FAQ

This client-server operation depends on the DCM AR version preconfiguration. Please refer to chapter 9.20.1 ResponseOnEvent Specifics to learn in which cases it is available.



6.5.2.21 GetDTRValue()

Prototype

Std_ReturnType GetDTRValue (Dcm_OpStatusType OpStatus, uint16* Testval, uint16*
MinLimit, uint16* MaxLimit, DTRStatusType * Status)

Parameter	
OpStatus	Status of the current operation. Since the operation is synchronous, only possible value is DCM_INITIAL.
Testval	Returns the current test value.
MinLimit	Returns the minimum limit.
MaxLimit	Returns the maximum limit.
Status	Returns the TID status: - DCM_DTRSTATUS_VISIBLE: All returned values are valid. - DCM_DTRSTATUS_INVISIBLE: All returned values are invalid.
Return code	
Std_ReturnType	E_OK: The operation is finished. E_NOT_OK: The operation has failed, DCM sends NRC 0x22.

Functional Description

This function is a request from the DCM to the application to report the corresponding MID test data. If the data is currently not available the Status parameter shall be set to INVISIBLE. DCM will send to the tester zero values.

Particularities and Limitations

- > ServiceID = N/A
- > This function is synchronous.

Table 6-82 GetDTRValue()



6.5.2.22 RequestControl()

Prototype		
Std_ReturnType RequestControl (uint8* OutBuffer, uint8* InBuffer)		
Parameter		
OutBuffer	Points to the response routine control data. If the current TID does not have any data, the pointer is still valid (points behind the TID parameter).	
InBuffer	Points to the request routine control data. If the current TID does not have any data, the pointer is still valid (points behind the TID parameter).	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	E_NOT_OK: The operation has failed, DCM sends NRC 0x22.	
Functional Description		
This function is a request from the DCM to the application to start a TID execution.		

Particularities and Limitations

- > ServiceID = N/A
- > This function is synchronous.

Table 6-83 RequestControl()



6.5.2.23 GetInfotypeValueData()

Prototype

Std_ReturnType GetInfotypeValueData (Dcm_OpStatusType OpStatus, uint8*
DataValueBuffer [, uint8* DataValueBufferSize])

Parameter		
OpStatus	Status of the current operation.	
DataValueBuffer	Points to the response of the VID data.	
DataValueBufferSize	Optional parameter. Exists only in AR 4.2.2 or later enabled DCMs. The input value is the total/maximum size of the VID data (incl. NODI) in bytes, configured in DCMs ECUC file (refer to 5.8.4). The output value is the current size of the VID data (incl. NODI) in bytes, returned by the application.	
Return code		
Std_ReturnType	E_OK: The operation is finished. DCM_E_PENDING: The operation is not yet finished. E_NOT_OK: The operation has failed, DCM sends NRC 0x22.	

Functional Description

This function is a request from the DCM to the application to read the corresponding vehicle information. As long as the data is temporarily not available, the DCM_E_PENDING code shall be returned. Once the data is available, the E_OK shall be used to acknowledge that.

The returned data size (via <code>DataValueBufferSize</code>) shall always be less or equal to the value passed by DCM as input.

Refer to chapter 9.32 How to Enable Support of OBD VIDs with Dynamic Length for details.

Particularities and Limitations

- > ServiceID = 0x60 (introduced first with AR 4.3.0 DCM SWS)
- > This function is asynchronous.

Table 6-84 GetInfotypeValueData()



6.5.2.24 StartProtocol()

	•
Prototype	
Std_ReturnType StartProtocol (Dcm_ProtocolType ProtocolID)	
Parameter	
ProtocolID	Specifies the protocol ID of the new protocol to be started.
Return code	
Std_ReturnType	E_OK: The protocol switch is allowed.
	DCM_E_PROTOCOL_NOT_ALLOWED: The old protocol shall not be stopped and the new one is not accepted, DCM sends NRC 0x22 to the new request.
	E_NOT_OK: Same as DCM_E_PROTOCOL_NOT_ALLOWED.
E	

Functional Description

This function is a request from the DCM to the application to get permission for switching to a new protocol. It is called each time a request from a diagnostic client belonging to a protocol other than the currently active one is received or for the very first diagnostic request (i.e. switches from no active protocol to any other supported one).

Particularities and Limitations

- > ServiceID = N/A
- > This function is synchronous.

Table 6-85 StartProtocol()



6.5.2.25 IsDidAvailable()

Prototype

Std_ReturnType IsDidAvailable (uint16 DID, Dcm_OpStatusType OpStatus, Dcm_DidSupportedType* supported)

Parameter		
DID	The DID to be checked for active in the current range.	
OpStatus	Status of the current operation.	
supported	Returns the information whether the DID is a supported one: DCM_DID_SUPPORTED: Requested DID is a valid one; DCM_DID_NOT_SUPPORTED: Requested DID is not a valid one;	
Return code		
Std_ReturnType	E_OK: The operation is finished. DCM_E_PENDING: The operation is not yet finished. E_NOT_OK: The operation has failed. The DCM will treat the DID as unsupported one.	

Functional Description

This function is a request from the DCM to the application to get information whether the requested DID, from a supported DID range is really a valid one or not.

Note: This operation is only available if the corresponding DID range has been specified to have gaps (i.e. not all DIDs within the range are valid ones).

Particularities and Limitations

- > ServiceID = 0x3F
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-86 IsDidAvailable ()



6.5.2.26 ReadDidData()

Prototype

Parameter

Std_ReturnType ReadDidData (uint16 DID, uint8* Data, Dcm_OpStatusType OpStatus, uint16* DataLength, Dcm NegativeResponseCodeType* ErrorCode)

DID	The DID which data will be read.	
Data	Buffer where the read data shall be copied.	
OpStatus	Status of the current operation.	
DataLength	Actual length of the read data.	
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).	
Return code		
Std_ReturnType	E_OK: The operation is finished.	
	DCM_E_PENDING: The operation is not yet finished.	
	E_NOT_OK: The operation has failed. The DCM sends NRC 0x22, if ErrorCode is not set.	

Functional Description

This function is a request from the DCM to the application to get the data of a concrete DID within a DID range.

Particularities and Limitations

- > ServiceID = 0x40
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-87 ReadDidData()



6.5.2.27 WriteDidData()

Prototype

Std_ReturnType WriteDidData (uint16 DID, uint8* Data, Dcm_OpStatusType
OpStatus, uint16* DataLength, Dcm NegativeResponseCodeType* ErrorCode)

Parameter	
DID	The DID which data will be written.
Data	Buffer where the requested data shall be copied from.
OpStatus	Status of the current operation.
DataLength	Actual length of the data to be written.
ErrorCode	NRC to be sent in the negative response in case of failure (E_NOT_OK).
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed. The DCM sends NRC 0x22, if ErrorCode is not set.

Functional Description

This function is a request from the DCM to the application to write the requested data of a concrete DID within a DID range.

Particularities and Limitations

- > ServiceID = 0x41
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-88 WriteDidData()



6.5.2.28 GetSecurityAttemptCounter()

Prototype

Std_ReturnType GetSecurityAttemptCounter(Dcm_OpStatusType OpStatus, uint8*
AttemptCounter)

Parameter	
OpStatus	Status of the current operation.
AttemptCounter	Contains the stored attempt-counter value.
Return code	
Std_ReturnType	E_OK: The operation is finished. DCM_E_PENDING: The operation is not yet finished. E_NOT_OK: The operation has failed. The counter value will be assumed to be zero. Note: The delay-timer could be started, depending on the configuration (see below).

Functional Description

Once DCM is initialized, DCM requests this function per security level to get the stored attempt-counter value prior last power-down/reset event.

Particularities and Limitations

- > ServiceID = 0x59
- > Not Reentrant
- > This function is asynchronous.
- Exists for a certain security level only if the security row "DcmDspSecurityAttemptCounterEnabled" specific parameter is enabled and the security level supports brute-force-attack prevention (i.e. delay counter/timer).

Table 6-89 GetSecurityAttemptCounter ()



6.5.2.29 SetSecurityAttemptCounter()

Prototype

Std_ReturnType SetSecurityAttemptCounter(Dcm_OpStatusType OpStatus, uint8
AttemptCounter)

Parameter	
OpStatus	Status of the current operation.
AttemptCounter	Contains the current attempt-counter value.
Return code	
Std_ReturnType	E_OK: The operation is finished.
	DCM_E_PENDING: The operation is not yet finished.
	E_NOT_OK: The operation has failed.

Functional Description

Each time the corresponding security level counter value is changes, DCM will first notify the application calling this API to store the new value prior giving any result to the diagnostic client.

Note:

DCM cannot provide any failed-write counter behavior replacement. It is up to the application to provide at next *GetSecurityAttemptCounter()* call an appropriate counter value, resp. just E_NOT_OK. If this API fails to store the current counter value, the NRC sent back is still one of the appropriate ones 0x35 or 0x36.

Particularities and Limitations

- ServiceID = 0x5A
- > Not Reentrant
- > This function is asynchronous.
- Exists for a certain security level only if the security row "DcmDspSecurityAttemptCounterEnabled" specific parameter is enabled and the security level supports brute-force-attack prevention (i.e. delay counter/timer).

Table 6-90 SetSecurityAttemptCounter ()



6.5.2.30 ReadData() (paged-data-reading)

Prototype

Std_ReturnType ReadData (Dcm_OpStatusType OpStatus, uint8* Data, uint16*
DataLength)

Parameter	
OpStatus	Status of the current operation.
Data	Buffer where the read data shall be copied.
DataLength	As IN parameter contains the currently available buffer size.
	As OUT parameter shall return the actual data chunk length.
Return code	
Std_ReturnType	E_OK: The operation is finished, all data chunks are copied.
	DCM_E_PENDING: Current data chunk read operation is not yet finished.
	E_NOT_OK: The operation has failed.
	DCM_E_BUFFERTOOLOW: There was more data to be copied, but the provided buffer was not big enough to fit all of them. The DataLength parameter contains the amount of currently copied data.

Functional Description

This function is a request from the DCM to the application to get a data value of a DID if DcmDspDataUsePort is set to USE_PAGED_DATA_ASYNCH_CLIENT_SERVER/USE_PAGED_DATA_ASYNCH_FNC.

For details on this API usage, please refer to chapter 9.25 How to Save RAM using Paged-Buffer for Large DIDs.

Particularities and Limitations

- > ServiceID = 0xA3
- > This function is not reentrant.
- > This function is asynchronous.

Table 6-91 ReadData() (paged-data-reading)

6.6 Service Ports

6.6.1 Client-Server Interface

A client server interface is related to a Provide Port at the server side and a Require Port at client side.

6.6.1.1 Provide Ports on DCM Side

At the Provide Ports of the DCM the API functions described in 6.1.5 are available as Runnable Entities. The Runnable Entities are invoked via Operations. The mapping from a SWC client call to an Operation is performed by the RTE. In this mapping the RTE adds Port Defined Argument Values to the client call of the SWC, if configured.

The following sub-chapters present the Provide Ports defined for the DCM and the Operations defined for the Provide Ports, the API functions related to the Operations and the Port Defined Argument Values to be added by the RTE.



6.6.1.1.1 DCM_Roe

Operation	API Function	Port Defined Argument Values
TriggerOnEvent	Dcm_TriggerOnEvent()	IN uint8 RoeEventId, ERR{E_NOT_OK}

Table 6-92 DCM_Roe

6.6.1.1.2 DCMServices

Operation	API Function	Arguments
GetActiveProtocol	Dcm_GetActiveProtocol()	OUT Dcm_ProtocolType ActiveProtocol, ERR{E_OK}
GetSesCtrlType	Dcm_GetSesCtrlType()	OUT Dcm_SesCtrlType SesCtrlType, ERR{E_OK}
GetSecurityLevel	Dcm_GetSecurityLevel()	OUT Dcm_SecLevelType SecLevel, ERR{E_OK}
ResetToDefaultSession	Dcm_ResetToDefaultSession()	ERR{E_OK}
GetSecurityLevelFixedBytes	Dcm_GetSecurityLevelFixedBytes()	IN Dcm_SecLevelType secLevel, OUT uint8 fixedBytes, INOUT uint8 bufferSize ERR{E_NOT_OK, DCM_E_BUFFERTOOLOW}
SetActiveDiagnostic	Dcm_SetActiveDiagnostic()	boolean Active, ERR{E_OK}
GetRequestKind	Dcm_GetRequestKind()	IN uint16 TesterSourceAddress, OUT Dcm_RequestKindType RequestKind, ERR{E_NOT_OK}
VsgSetSingle	Dcm_VsgSetSingle	IN Dcm_VsgldentifierType Vsgld, IN Dcm_VsgStateType State, ERR{E_NOT_OK}
VsgSetMultiple	Dcm_VsgSetMultiple	IN Dcm_VsgldentifierType* VsgldList, IN uint16 VsgListSize, IN Dcm_VsgStateType State, ERR{E_NOT_OK}
VsglsActive	Dcm_VsglsActive	IN Dcm_VsgldentifierType Vsgld, OUT Dcm_VsgStateType State, ERR{E_NOT_OK}
VsglsActiveAnyOf	Dcm_VsglsActiveAnyOf	IN Dcm_VsgldentifierType* VsgldList, IN uint16 VsgListSize, OUT Dcm_VsgStateType State, ERR{E_NOT_OK}



Table 6-93 DCMServices

6.6.1.2 Require Ports on DCM Side

At its Require Ports the DCM calls Operations. These Operations have to be provided by the SWCs by means of Runnable Entities. These Runnable Entities implement the callback functions expected by the DCM.

The following sub-chapters present the Require Ports defined for the DCM, the Operations that are called from the DCM and the related Notifications, which are described in chapter 6.4.4.

6.6.1.2.1 DataServices_<DataName>

Operation	Callout
ConditionCheckRead()	
ReadData() (synchronous) / ReadData() (asynchronous) / ReadData() (paged-data-reading)	Rte_Call_DataServices_ <dataname>_<operation></operation></dataname>
ReadDataLength()	
WriteData() (static length) / WriteData() (dynamic length)	
ReturnControlToECU()	
ResetToDefault()	
FreezeCurrentState()	
ShortTermAdjustment()	
GetScalingInformation()	

Table 6-94 DataServices_<DataName>

6.6.1.2.2 RoutineServices_<RoutineName>

Operation	Callout
Start()	
Stop()	Rte_Call_RoutineServices_ <routinename>_<operation></operation></routinename>
RequestResults()	

Table 6-95 RoutineServices_<RoutineName>



6.6.1.2.3 ROEServices



FAQ

This client-server depends on the DCM AR version pre-configuration. Please refer to chapter 9.20.1 ResponseOnEvent Specifics to learn in which cases it is available.

Operation	Callout
ActivateEvent()	Rte_Call_ROEServices_ <operation></operation>

Table 6-96 ROEServices

6.6.1.2.4 SecurityAccess_<SecurityLevelName>

Operation	Callout
GetSeed() (with SADR) / GetSeed() (without SADR)	
CompareKey()	Rte_Call_SecurityAccess_ <securitylevelname>_<operation></operation></securitylevelname>
GetSecurityAttemptCounter()	
SetSecurityAttemptCounter()	

Table 6-97 SecurityAccess_<SecurityLevelName>

6.6.1.2.5 ServiceRequestManufacturerNotification_<SWC>

Operation	Callout
Indication()	
Confirmation()	Rte_Call_ServiceRequestManufacturerNotification_ <swc>_<operation></operation></swc>

Table 6-98 ServiceRequestManufacturerNotification_<SWC>

6.6.1.2.6 ServiceRequestSupplierNotification_<SWC>

Operation	Callout
Indication()	Rte_Call_ServiceRequestSupplierNotification_ <swc>_<operation></operation></swc>
Confirmation()	

Table 6-99 ServiceRequestSupplierNotification_<SWC>



6.6.1.2.7 DtrServices_<MIDName>_<TIDName>

Operation	Callout
GetDTRValue()	Rte_Call_DtrServices_ <midname>_<tidname>_<operation></operation></tidname></midname>

Table 6-100 DtrServices_<MIDName>_<TIDName>

6.6.1.2.8 RequestControlServices_<TIDName>

Operation	Callout
RequestControl()	Rte_Call_RequestControlServices_ <tidname>_<operation></operation></tidname>

Table 6-101 RequestControlServices_<TIDName>

6.6.1.2.9 InfotypeServices_<VEHINFODATA>

Operation	Callout
GetInfotypeValueData()	Rte_Call_InfotypeServices_ <vehinfodata>_<operation></operation></vehinfodata>

Table 6-102 InfotypeServices_<VEHINFODATA>

6.6.1.2.10 CallbackDCMRequestServices_<SWC>

Operation	Callout
StartProtocol()	Rte_Call_CallbackDCMRequestServices_ <swc>_<operation></operation></swc>

Table 6-103 CallbackDCMRequestServices_<SWC >

6.6.1.2.11 DataServices_DIDRange_<RangeName>

Operation	Callout
IsDidAvailable()	Rte_Call_DataServices_DIDRange_ <rangename>_<operation></operation></rangename>
ReadDidData()	
WriteDidData()	

Table 6-104 DataServices_DIDRange_<RangeName>

6.6.2 Managed Mode Declaration Groups

DCM is a mode manager of the following modes.



ModeDeclarationGroup	Description
DcmDiagnosticSessionControl	Represents the diagnostic sessions from the DCM configuration.
DcmCommunicationControl_ <comm_channel _snv=""></comm_channel>	For each ComM channel, there is a mode declaration group that represents the communication state of the channel.
DcmEcuReset	Represents the normal ECU reset modes.
DcmModeRapidPowerShutDown	Represents the extended ECU reset modes.
DcmControlDTCSetting	Represents the DTC setting state.
DcmSecurityAccess	Represents the security access level from the DCM configuration.
DcmResponseOnEvent_ <eventid></eventid>	For each configured RoE event, there is a mode declaration group that represents its state.

Table 6-105 ModeDeclarationGroups managed by DCM

DcmDiagnosticSessionControl 6.6.2.1

Callout	Description
Rte_Switch_Dcm_DcmDiagnosticSessionControl_ DcmDiagnosticSessionControl	Called each time a session change occurs. This call is only a notification and has no effect on any DCM diagnostic service processing.
	Invoked by <i>DiagnosticSessionControl</i> (\$10) or S3 timeout.

Table 6-106 DcmDiagnosticSessionControl callouts

Mode	Description
DefaultSession	Represents the UDS Default session (initial state).
ProgrammingSession	Represents the UDS Programming session.
ExtendedSession	Represents the UDS Extended session.
DcmDspSessionRow> container's short-name	Any user defined session.

Table 6-107 DcmDiagnosticSessionControl modes



DcmCommunicationControl_<ComM_CHANNEL_SNV> 6.6.2.2

Callout	Description
Rte_Switch_Dcm_DcmCommunicationControl_ <c ommchannelsnv="">_ Dcm_DcmCommunicationControl_<commchannel snv=""></commchannel></c>	Called each time a communication state change on the corresponding channel occurs. This call is only a notification and has no effect on any DCM diagnostic service processing.
	Invoked by service CommunicationControl (\$28) or DiagnosticSessionControl (\$10) or S3 timeout.

Table 6-108 DcmCommunicationControl _<ComM_CHANNEL_SNV> callouts

Mode	Description
DCM_ENABLE_RX_TX_NORM	Reception and transmission of application messages is enabled (initial state).
DCM_ENABLE_RX_DISABLE_TX_NORM	Reception of application messages is enabled but their transmission is disabled.
DCM_DISABLE_RX_ENABLE_TX_NORM	Reception of application messages is disabled but their transmission is enabled.
DCM_DISABLE_RX_TX_NORMAL	Reception and transmission of application messages is disabled.
DCM_ENABLE_RX_TX_NM	Reception and transmission of network management messages is enabled.
DCM_ENABLE_RX_DISABLE_TX_NM	Reception of network management messages is enabled but their transmission is disabled.
DCM_DISABLE_RX_ENABLE_TX_NM	Reception of network management messages is disabled but their transmission is enabled.
DCM_DISABLE_RX_TX_NM	Reception and transmission of network management messages is disabled.
DCM_ENABLE_RX_TX_NORM_NM	Reception and transmission of application and network management messages is enabled.
DCM_ENABLE_RX_DISABLE_TX_NORM_NM	Reception of application and network management messages is enabled but their transmission is disabled.
DCM_DISABLE_RX_ENABLE_TX_NORM_NM	Reception of application and network management messages is disabled but their transmission is enabled.
DCM_DISABLE_RX_TX_NORM_NM	Reception and transmission of application and network management messages is disabled.

Table 6-109 DcmCommunicationControl_<ComM_CHANNEL_SNV> modes



6.6.2.3 DcmEcuReset

Callout	Description
Rte_Switch_Dcm_DcmEcuReset_DcmEcuReset	Called each time a power down state change occurs. This call is a notification but has effect on the DCM diagnostic service EcuReset (\$11) EcuReset (\$11) or DiagnosticSessionControl (\$10) processing. Invoked by EcuReset (\$11) or DiagnosticSessionControl (\$10) for bootloader related sessions.
Rte_SwitchAck_Dcm_DcmEcuReset_DcmEcuReset	Called after the Switch API is called to get the mode transition acknowledged prior continuing with the EXECUTE mode switch. Invoked by EcuReset (\$11) or DiagnosticSessionControl (\$10) for bootloader related sessions

Table 6-110 DcmEcuReset callouts

Mode	Description
NONE	No reset (initial state)
HARD	Hard reset target request (service 0x11 0x01)
KEYONOFF	KeyOnOff reset target request (service 0x11 0x02)
SOFT	Soft reset target request (service 0x11 0x03)
JUMPTOBOOTLOADER	Jump to bootloader reset target request (service 0x10 0x02 or any session with jump boot support)
JUMPTOSYSSUPPLIERBOOTLOADER	Jump to system supplier bootloader reset target request (service 0x10 0x02 or any session with jump boot support)
EXECUTE	Commits an already made reset target request.

Table 6-111 DcmEcuReset modes

6.6.2.4 DcmModeRapidPowerShutDown

Callout	Description
Rte_Switch_DcmModeRapidPowerShutDown_Dcm ModeRapidPowerShutDown	Called each time a power down state change occurs. This call is a notification but has effect on the DCM diagnostic service <i>EcuReset</i> (\$11) processing.
	Invoked by EcuReset (\$11)



Callout	Description
cmModeRapidPowerShutDown	Called after the Switch API is called to get the mode transition acknowledged prior continuing with the EXECUTE mode switch. Invoked by EcuReset (\$11)

Table 6-112 DcmModeRapidPowerShutDown callouts

Mode	Description
ENABLE_RAPIDPOWERSHUTDOWN	Rapid shutdown is enabled (initial state) or Rapid shutdown is disabled (Service 0x11 0x04)
DISABLE_RAPIDPOWERSHUTDOWN	Rapid shutdown is disabled (Service 0x11 0x05)

Table 6-113 DcmModeRapidPowerShutDown modes

6.6.2.5 DcmControlDTCSetting

Callout	Description
Rte_Switch_Dcm_DcmControlDtcSetting_DcmControlDtcSetting	Called each time a DTC setting state change occurs. This call is only a notification and has no effect on any DCM diagnostic service processing.
	Invoked by ControlDTCSetting (\$85), DiagnosticSessionControl (\$10) or S3 timeout.

Table 6-114 DcmControlDTCSetting callouts

Mode	Description
ENABLEDTCSETTING	DTC setting is enabled (initial state service 0x85 0x01 or <i>DiagnosticSessionControl</i> (\$10) or S3 timeout)
DISABLEDTCSETTING	DTC setting is disabled (service 0x85 0x02)

Table 6-115 DcmControlDTCSetting modes

6.6.2.6 DcmSecurityAccess



FAQ

This mode declaration group is vendor specific one and only available under certain circumstances. Please refer to chapter 9.16 How to Know When the Security Access Level Changes for more details.



Callout	Description
Rte_Switch_Dcm_DcmSecurityAccess_DcmSecurityAccess	Called each time a security access level change occurs. This call is only a notification and has no effect on any DCM diagnostic service processing.
	Invoked by SecurityAccess (\$27) or DiagnosticSessionControl (\$10) or S3 timeout.

Table 6-116 DcmSecurityAccess callouts

Mode	Description
LockedLevel	Represents the UDS locked level (initial state).
DcmDspSecurityRow > container's short-name	Any user defined security access level.

Table 6-117 DcmSecurityAccess modes

6.6.2.7 DcmResponseOnEvent_<EventId>



FAQ

This mode declaration group depends on the DCM AR version pre-configuration. Please refer to chapter 9.20.1 ResponseOnEvent Specifics to learn in which cases it is available.

Callout	Description
Rte_Switch_DcmResponseOnEvent_ <eventid>_D cmResponseOnEvent_<eventid></eventid></eventid>	Called each time an event specific RoE state change occurs. This call is only a notification and has no effect on any DCM diagnostic service processing.
	The mode switch invocation is generally implementation and configuration specific, but mostly caused by ResponseOnEvent (\$86), DiagnosticSessionControl (\$10) or S3 timeout.

Table 6-118 DcmResponseOnEvent_<EventId> callouts



FAQ

The <EventId> is the short name of the configuration container:

/Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent.



Mode	Description
EVENT_CLEARED	The corresponding event is cleared (initial state).
EVENT_STARTED	RoE monitoring of the corresponding event started.
EVENT_STOPPED	RoE monitoring of the corresponding event stopped.

Table 6-119 DcmResponseOnEvent_<EventId> modes

6.6.3 Sender-Receiver Interface

The following S/R interfaces are available in the current implementation:

6.6.3.1 DataServices_{DidName/DidDataName}

Туре	Callout
DataServices (Read)	Rte_Read_Dcm_DataServices_READ_ <didname diddataname="">_data</didname>
DataServices (Write)	Rte_Write_Dcm_DataServices_WRITE_< DidName/DidDataName >_data

Table 6-120 Sender-receiver interface of type DataServices

Supported data types are illustrated in Table 9-11.

6.6.3.2 IOControlRequest_{DidName/DidDataName}

Туре	Callout
IOControlRequest (Read)	Rte_Read_Dcm_IOControlRequest_READ_< DidName/DidDataName >_ <dataelementname></dataelementname>
IOControlRequest (Write)	Rte_Write_Dcm_IOControlRequest_< DidName/DidDataName >_ <dataelementname></dataelementname>

Table 6-121 Sender-receiver interface of type IOControlRequest

<DataElementName> is either

- > underControl. Refer to Table 9-11 for supported data types,
- > IOOperationRequest which is of a type struct. Table 6-5 illustrates type definitions of inputOutputControlParameter associated with IOOperationRequest. Enabling control mask shall be handled as stated in Table 6-7, and
- controlState. Refer to Table 9-11 for supported data types.

6.6.3.3 IOControlResponse

Туре	Callout
IOControlResponse (Read)	Rte_Read_Dcm_IOControlResponse_< DidName/DidDataName >_ IOOperationResponse



IOControlResponse	Rte_IsUpdated_Dcm_IOControlResponse_< DidName/DidDataName >_
(IsUpdated)	IOOperationResponse

Table 6-122 Sender-receiver interface of type IOControlResponse

Table 6-6 illustrates type definitions associated with IOOperationResponse.



7 Configuration

7.1 Configuration Variants

The DCM supports the configuration variants

- ▶ VARIANT-PRE-COMPILE
- ► VARIANT-POST-BUILD-SELECTABLE
- ► VARIANT-POST-BUILD-LOADABLE
- ► VARIANT-POST-BUILD-LOADABLE-SELECTABLE

The configuration classes of the DCM parameters depend on the supported configuration variants. For their definitions please see the *Dcm_bswmd.arxml* file.

7.2 Configurable Attributes

The description of each configurable option is described within its online help in the Configurator 5 tool.



AUTOSAR Standard Compliance

8.1 Deviations

Deviation	Statement
CallbackDCMRequestServices_ <swc></swc>	Operation StopProtocol not supported since not fully specified in AR 4.0.3 SWS DCM what a protocol stop really does. Instead a single protocol switch point is realized by StartProtocol().

Deviations to AUTOSAR Table 8-1



8.2 Additions/ Extensions

Additions/Extensions	Statement
DCM CPU peak load reduction support.	See 9.2
RAM and run time optimization parameters for multi-client support	See 9.4
Optimized DCM DEM iterator	DCM internal design.
Calibrateable configuration parameters	See 9.11
Used definition for no active protocol (DCM SWS AR 4.1.1): DCM_NO_ACTIVE_PROTOCOL	Required since before the very first diagnostic request is received, there is no active protocol assigned in DCM. But at the same time the <code>Dcm_GetActiveProtocol()</code> shall return a valid value.
Support for DEM AR 4.1.2 API	See 9.13
Combined OBD and UDS protocols over a single client connection	See 9.14
Support for sub-functions 0x17, 0x18 and 0x19 of service Id 0x19.	See ReadDiagnosticInformation (\$19)
Notification on security access level state change	See 9.16
AR version specific DCM features	See 9.20
Integration within an AR 3.x environment	DCM will be delivered in a preconfigured state for interaction with BSWs implemented on the basis of the corresponding AR3 SWS.
Suppression on functional addressed requests	See 9.22
Support of paged-buffer data access on DID signals	See 9.25
Configurable Security-Access level specific fixed bytes	See 9.26
Extensible keep-alive time period	See 9.27
DCM state recovery on reset /power on	See 9.28
Alternative solution for diagnostic service variant handling	See 9.30
Support for externally handled CEMR with more than four byte control mask.	According to see [1], a CEMR can be only up to four bytes in size. MICROSAR DCM extends the SWS by allowing also any size of CEMR. Refer to InputOutputControlByIdentifier (\$2F) for details.

Additions/ Extensions to AUTOSAR Table 8-2



8.3 Limitations

Limitation	Statement
OEM specific RoE support.	Due to insufficient specification in the DCM SWS, the RoE support can only be implemented for specific OEM requirements.
Support of up to 32 protocols	Required due to optimized implementation of service to protocol mapping.
Support of up to 32 concurrent client connections	Required due to optimized implementation of concurrent request processing.
Sharing of signals between DIDs not supported	Required due to the inability to differentiate between the callers of a signal (e.g. service 0x22 and 0x2A).

Table 8-3 Limitations to AUTOSAR



9 Using the DCM

This chapter shall give some examples and hints, how to handle common use cases of the DCM.

9.1 How to Reduce RAM Usage

All diagnostic services in DCM have a constant length so the DCM integrator person can perform a static buffer pre-calculation for finding the optimal buffer size.

Starting with DCM 7.01.00, Configurator 5 provides a means to estimate each DCM buffer size, depending on the configured diagnostic services, accessible via this buffer. The buffer-to-service relation is determined by the DCM protocol configuration entity that refers to a certain diagnostic service table.



Caution

Depending on the DCM configuration the calculated buffer sizes are either **precise** or just **estimated** values. The calculation algorithm has the goal to assure the minimum value required so that each service, related to the validated buffer, can be requested and processed in its simplest form (e.g. on multiple DID reading, that at least one DID can be read). The worst case could also be calculated, but it will require too much RAM to be reserved unnecessarily (e.g. it is not considered to be possible to read N-times the largest DID with a single diagnostic request).

There are two calculation steps:

- > The first one verifies that the validated buffer must be set at least to the proposed value (Error Message). Otherwise runtime errors may occur.
- > The second one verifies whether with the currently set buffer size the DCM will be able to execute the diagnostic service or will ignore the request resp. send negative responses due to a lack of enough buffer space (Warning Message).

The buffer size calculation considers only diagnostic (sub-)services, that are internally handled by DCM. Once a diagnostic (sub-)service is redirected to an application handler, it will be excluded from the buffer size calculation. This is always the case regardless of the fact if the given diagnostic service was/is completely configured in the ECUC file (e.g. all related DIDs are available).

In Table 9-1 Diagnostic services with non-trivial DCM Buffer size estimation calculation method you can find information about the exactness of the buffer size calculation for each diagnostic services DCM can handle. From this table there are excluded all diagnostic services that have a trivial calculation formula (e.g. DiagnosticSessionControl (\$10)) or could only be implemented by the application (i.e. non-UDS user-defined diagnostic services or UDS services for which the DCM does not have any configuration details in order to make a meaningfull estimation).



Diagnostic Service	Buffer Size Calculation Type		
	Request	Response	
RequestCurrentPowertrainDiagnosticData (\$01)	Precise	Precise ¹	
RequestPowertrainFreezeFrameData (\$02)	Precise	Precise ²	
RequestEmissionRelatedDTC (\$03)	Precise	Not estimated ³	
RequestOnBoardMonitorTestResults (\$06)	Precise	Precise ⁴	
RequestEmissionRelatedDTCsDetectedDuringCurrentOrLa stDrivingCycle (\$07)	Precise	Not estimated ³	
RequestControlOfOnBoardSystemTestOrComponent (\$08)	Precise	Precise	
RequestVehicleInformation (\$09)	Precise	Precise	
RequestEmissionRelatedDTCsWithPermanentStatus (\$0A)	Precise	Not estimated ³	
ReadDiagnosticInformation (\$19)	Precise	Precise ⁵ Not estimated ³	
ReadDataByIdentifier (\$22)	Precise ⁶	Minimum estimation ⁷	
ReadMemoryByAddress (\$23)	Precise ⁸	Minimum estimation9	
ReadScalingDataByIdentifier (\$24)	Precise	Precise	
SecurityAccess (\$27)	Precise	Precise	
ReadDataByPeriodicIdentifier (\$2A)	Precise ⁶	Precise ¹⁰	
DynamicallyDefineDataIdentifier (\$2C)	Minimum estimation ¹¹	Precise	
WriteDataByIdentifier (\$2E)	Precise	Precise	
InputOutputControlByIdentifier (\$2F)	Precise	Precise	
RoutineControl (\$31)	Precise	Precise	
WriteMemoryByAddress (\$3D)	Minimum estimation9	Precise ⁸	
ControlDTCSetting (\$85)	Precise	Precise	
ResponseOnEvent (\$86)	Precise	Precise	

Table 9-1 Diagnostic services with non-trivial DCM Buffer size estimation calculation method

¹ Based on worst case: "response for six times the largest PID".

² Only if all PIDs accessible via this service have configured PID data size (usually not set, since the DEM implements the PID data retrieval).

³ Usually the paged-buffer response will be used, so the final response length is not that much relevant.

⁴ Only if DCM knows the OBDMID configuration (refer to 9.31 How to Switch Between OBD DTR Support by DCM and DEM). Otherwise only the worst case for "SupportedID" OBD MID will be considered.

⁵ For all sub-functions with constant length (i.e. 0x01, 0x07, 0x09, 0x0B-0x0E, 0x11 and 0x12).

⁶ It is considered that multiple-DIDs can be requested as per ECUC configuration. Refer to the service configuration chapter for details on the maximum number of DID that can be requested simultaneously in a single message.

⁷ It is guaranteed that the largest configured not dynamically definable DID with no paged-buffer response can be read at least in a single DID request. Note: The (WWH-)OBD DIDs are not considered as in "1".

⁸ The configured ALFIDs are taken into account for this estimation. If no specifc ALFID(s) specified, the worst case (0x44 or 0x45 in case of MID usage) will be considered.

⁹ It is guaranteed that at least one memory byte can be transfered.

¹⁰ UUDT buffer size is not considered here. Only the USDT request/response messages.

¹¹ It is guaranteed that at least one source item (DID or memory block) can be requested for the corresponding definition function. Subfunction "clear" is of course precisly calculated.



In some special cases like reading fault memory data the required buffer size cannot be estimated or a pessimistic prediction will be applied to guarantee that the ECU will always respond. Nevertheless, DCM provides a means to reduce the overall required buffer size for these scenarios.

9.1.1 Reading fault memory data

For reading fault memory data, the DCM offers the option to enable response paged buffer handling, that may reduce the overall required buffer by DCM. Enabling this option will lead to an increased code ROM usage in DCM due to the added functionality. The affected diagnostic services are:

- > ReadDiagnosticInformation (\$19)
- > RequestEmissionRelatedDTC (\$03)
- > RequestEmissionRelatedDTCsDetectedDuringCurrentOrLastDrivingCycle (\$07)
- > RequestEmissionRelatedDTCsWithPermanentStatus (\$0A)



Note

It is recommended always to keep the paged buffer option in DCM enabled to avoid situations where the tester would not be able to get a positive response when reading the fault memory content.

To enable the paged buffer handling in DCM for reading fault memory data, just set the configuration parameter to TRUE:

/Dcm/DcmConfigSet/DcmPageBufferCfg/DcmPagedBufferEnabled

9.1.2 Reading multiple DIDs in a single request

The situation here is different from *Reading fault memory data* case with standard AUTOSAR approach. In case the tester requests reading more data as the response buffer can handle, the DCM will respond with NRC 0x14 (ResponseTooLong) to avoid buffer overflow. The tester shall then use single-DID requests to get the data. Only one diagnostic service supports multiple DIDs in a single request, therefore just the following one is affected:

> ReadDataByldentifier (\$22)

Using the MSR DCM, you have still an option that will allow you to save RAM also for multiple- or single-DID reading when the DIDs are too large even for a single-DID request. Please refer to 9.25 How to Save RAM using Paged-Buffer for Large DIDs for details on this usage.



9.1.3 Exchanging data between OS tasks

In some circumstances data cannot be interchanged directly between DCM and a SW-C. That means, that the application cannot directly write into a buffer provided by DCM e.g. to supply requested data for a *ReadDataByldentifier* (\$22) request. This is the case when DCM and SW-C are mapped to different OS tasks.

To realize an intertask communication the RTE provides a temporary buffer where the data can be written to. That means that the data is written to the RTE temporary buffer at first and afterwards copied to the DCM internal buffer. The size of the temporary buffer depends on the used SW-C port and may be larger than the remaining available DCM buffer. For example, on a multi DID request DCM would be able to read a DID with variable length if the concrete length fits into the remaining available buffer, whereas the specified data size of the appropriate SW-C port is equal to the maximum size of that DID. Since RTE copies always as much data as specified in the SW-C port DCM is enforced to provide an own temporary buffer which can hold the whole data, even if only a subset of that data is required for the response message. Of course, this leads to an additional RAM usage.

Whether an internal temporary buffer is needed or not can be resolved by DCM itself. The only exception is, that DCM does not know whether any SW-C connected to is mapped to a different OS task. Therefore, as a precaution, a multi OS task mapping is assumed by default. This setting can be overwritten, if it can be guaranteed that DCM and the connected SW-Cs are mapped to the same OS task:

/Dcm/DcmConfigSet/DcmDsp/DcmDspReadVariableSizeDataCopyEnabled



Caution

Setting this parameter to FALSE, although DCM and SW-C are mapped to different OS tasks, may lead to memory corruption!

9.2 How to Reduce DCM Main-Function Run Time Usage

The DCM is designed and optimized for best possible response performance. This means the DCM main function will perform as much as possible operations per single activation in order to keep the P2 timings requirements. Additional the DCM internal code is optimized for short run time in order to lower the CPU burden during the many operations performed within a single DCM main function activation. But in cases where other BSWs are intensely involved in the service processing, such as the DEM during reading the fault memory information, the DCM can no more guarantee for total short run time execution. Therefore, the DCM offers a configuration option that may reduce the CPU peak load by limiting the number of iterations of an external BSW API.

After introducing the signal level access on DID data, the CPU peak load can be significantly affected also by services other than *ReadDiagnosticInformation* (\$19). Such services are:

- > ReadDataByIdentifier (\$22)
- ReadDataByPeriodicIdentifier (\$2A)



> DynamicallyDefineDataIdentifier (\$2C)

Any of these allows multiple DIDs in a single request, that, depending on the total number of DIDs in a request and the corresponding number of signals in a single DID, can lead to really long execution times of the *Dcm_MainFunction()*.

To enable the run time limitation in DCM set up the configuration parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmMaxNumberIterationsPerTask



FAQ

There is no recommended default value for this parameter. It shall be measured during the integration by testing the worst case of the above mentioned diagnostic services.

Please note that a too low value of this parameter will lower the CPU usage to a minimum, but will lead to long processing times of a diagnostic request. RCR-RP responses will be always sent, since the P2 times expire after a few <code>Dcm_MainFunction()</code> iterations. A compromise between performance and CPU usage can be found using the <code>Split Task Functions</code> concept. Using this approach, the worker task will be called more often than the timer task. This will help to achieve less CPU load per task activation and at the same time more work done per unit of a real time.

9.3 How to Force DCM to not Respond on Requests with Response SIDs

Generally the DCM will replay to any physical addressed not supported service identifier with a negative response: NRC 0x11 (ServiceNotSupported). This includes also all service identifier from the diagnostic response Id range [0x40, 0x7F]U[0xC0, 0xFF]. In some cases it is not allowed to reply to any request service Id from this range.

To specify whether DCM shall reply to any diagnostic response Id or not, set up the configuration parameter: /Dcm/DcmConfigSet/DcmGeneral/DcmRespondAllRequest.

9.4 How to Handle Multiple Diagnostic Clients Simultaneously

The DCM is a single instance component. This means that once a diagnostic client has sent a request, the server (DCM) is busy until the processing of that request is finished. While busy, the DCM cannot handle in parallel other clients' requests. In such a situation the second client will not get a response.

If it is required to send always a response to a parallel client request, the DCM offers an option to send NRC 0x21 (BusyRepeatRequest) to any additional request to the main one.

To specify the DCM behavior on a multiple client environment, set up the configuration parameter:

/Dcm/DcmConfigSet/DcmDsI/DcmDsIDiagResp/DcmDsIDiagRespOnSecondDeclinedReq uest



Since there will be reserved RAM for each client the DCM shall be able to communicate with, the DCM RAM usage may increase drastically for large number of configured DCM connections. Also the DCM main function run time, needed to process all parallel connections, may increase significantly. In the practice, even if the DCM is configured to communicate with many clients, it is not necessary that all of them will send request to the same server at the same time. To optimize the RAM and run time resource usage of DCM, there is configuration option provided that limits the amount of in parallel handled diagnostic

/Dcm/DcmConfigSet/DcmDsI/DcmDsIDiagResp/DcmDsIDiagRespMaxNumOfDeclinedRequests

9.5 How to Restrict a Diagnostic Service Execution by a Condition

On a reception of a validly formatted diagnostic request DCM evaluates also with it associated diagnostic session and security access restrictions, defined in Configurator 5.

In case of not matching required states, the DCM automatically rejects the request with the appropriate NRC.

Additionally, DCM can be configured to consider any ECU specific states, related to a concrete diagnostic execution. These states are the so called modes that can either be managed by any BSW, including DCM or a SWC. You can simply define a condition made of such a mode and create a rule that will be later used by a diagnostic service, subservice, DID, RID, etc. as a processing restriction.

An example of a use case using mode rules is service *DiagnosticSessionControl* (\$10). If you need to restrict session activation by an ECU condition, you have to model this condition in your SWC and make a reference between the diagnostic session sub-service you want to restrict and a mode rule that uses this mode in a logical expression.

To configure any processing conditions and rule, refer to the configuration container in Configurator 5: /Dcm/DcmConfigSet/DcmProcessingConditions

Later, you can reference these rules from the corresponding diagnostic processing object as an additional restriction to the diagnostic session and security access conditions.

9.6 How to Get Notified on a Diagnostic Service Execution Start and End

Usually the DCM validates the requested services without involving the application, only using the configuration parameters. In some cases the DCM application may need to know about a diagnostic services execution start and when it is finished. Additionally the application may need to restrict globally the processing of all or just some diagnostic services.

For all the above mentioned use cases, the DCM offers two kinds of application notification groups:

- > Manufacturer diagnostic service notification
- System supplier diagnostic service notification



Each of them supports a list of one or more request indication and response confirmation notification function pairs that will be called on request reception resp. service processing finishing time.

The differences between these two kinds of notifications are described in within the corresponding API documentation:

- ServiceRequestManufacturerNotification_<SWC>
- ServiceRequestSupplierNotification_<SWC>

To set up a manufacturer diagnostic service notification, add a configuration container in the Configurator 5:

/Dcm/DcmConfigSet/DcmDsl/DcmDslServiceRequestManufacturerNotification

To set up a system supplier diagnostic service notification, add a configuration container in the Configurator 5:

/Dcm/DcmConfigSet/DcmDsl/DcmDslServiceRequestSupplierNotification



FAQ

If you have already specified long lists of notifications and want just temporary to disable the usage of a certain kind of notifications (e.g. disable all manufacturer notifications), you don't need to delete the lists. Just disable the usage of the notification kind by setting up the corresponding DCM configuration parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmRequestManufacturerNotificationEnabled /Dcm/DcmConfigSet/DcmGeneral/ DcmRequestSupplierNotificationEnabled

9.7 How to Limit the Diagnostic Service Processing Time

In general there is no limitation of a diagnostic service processing time. If the DCM application needs longer time before it can return the final request result i.e. waiting for a response from an external ECU or during heavy NvM usage from other components, the DCM monitors the diagnostic P2 times and keeps the diagnostic client notified about the final response delay. This behavior fully complies with the ISO UDS specification.

In some cases, usually required by the car manufacturer, the DCM shall not wait endlessly for the final operation result, but instead it will have a configured service processing deadline. If such time monitoring is required, the time limit shall be set high enough, to avoid abortion of a long service execution. In such a situation the DCM will decouple the application, take over the service processing and finalize it with a specific NRC (usually 0x10 (GeneralReject)). In that way the diagnostic client will be notified about this critical situation and it will be given the opportunity to send a reset command to the server to reinitialize the ECU, since obviously the software is no more in a reliable state.

To enable the application reaction deadline monitoring, set up the DCM configuration parameter:

/Dcm/DcmConfigSet/DcmDsI/DcmDsIDiagResp/DcmDsIDiagRespMaxNumRespPend



9.8 How to Jump into the FBL from Service DiagnosticSessionControl (\$10)

The DCM provides means for transitions into the FBL from the ECU's application software. You can specify in the DCM configuration on which diagnostic session request this transition shall occur by the following parameter type:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionFor Boot

9.9 The HIS Compliant Jump into FBL

By default if a diagnostic request for SID \$10 with a session Id configured for boot loader activation is received by the ECU, the DCM stores all necessary information for the FBL (via callout <code>Dcm_SetProgConditions()</code>) and resets the ECU without sending the final positive response to the request. This will be done by the FBL after the reset. Additionally, to avoid P2 time violation during the transition (reset) phase, the DCM can be configured to send a RCR-RP response prior resetting the ECU. For that purpose the DCM configuration parameter shall be set accordingly:

/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmSendRespPendOnTransToBoot

9.9.1 The HIS Alternative Jump into FBL

In some cases and depending on the FBL used in the ECU it may not be possible to send a final response from the FBL. In that case the DCM within the ECUs application software shall first send the final positive response to the diagnostic client and then jump into the FBL. To achieve this behavior, you have to set the following DCM configuration parameter to TRUE:

/Dcm/DcmConfigSet/DcmGeneral/DcmResetToFblAfterSessionFinalResposeEnabled

9.10 How to Put DCM in a Non-Default Session at ECU Power-On

The DCM supports also the HIS compliant transition from FBL into the application software, where the positive response is to be sent after the transition is accomplished. These usually are responses for diagnostic services that cause a reset in the FBL during the reprogramming process: \$10 \$01 and \$11 \$01.

This mechanism can be used to instruct DCM to enter in a non-default session, using appropriate combination of the parameter values returned by the <code>Dcm_GetProgConditions()</code>. The callout shall return the value <code>DCM_WARM_START</code> to notify DCM that the out-parameters are valid and shall be evaluated. The correct values during this operation are defined below:

Member of the Dcm_ProgConditionsType parameter	Value
TesterSourceAddr	Contains the Id of a tester that communications with the ECU over the communication bus shall be kept awaken while the non-default session is



Member of the Dcm_ProgConditionsType parameter	Value
	active. The tester Ids are assigned to each DCM connection in Configurator 5: /Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolRxTesterSourceAddr
Protocolld	Not evaluated.
Sid	\$10
SubFuncId	The Id of the session to be activated [\$02 -\$7E]. Must be a supported session within the DCM configuration (refer to 5.10DiagnosticSessionControl (\$10) for details).
ReprogrammingRequest	FALSE (Not evaluated.)
ApplUpdated	FALSE
ResponseRequired	FALSE

Table 9-2 Initialization of the Dcm_ProgConditionsType for non-default session activation at ECU power-on

9.11 How to Support Calibrateable Configuration Parameters

Vector DCM provides a limited functionality for configuration calibration. The following chapters describe which DCM objects are possible to be calibrated after ECU programming.

9.11.1 OBD Calibration



FAQ

This feature is first supported in DCM 1.04.00.

In order to activate it, please use the following DCM ECUC parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmCalibrationOfObdIdsEnabled

DCM implementation is prepared for post-programming calibration regarding the OBD supported services and their sub-service parameters. With these calibration abilities you can only disable or re-enable an already configured and supported OBD service and/or any of its sub-service parameters. The following calibration levels are supported in DCM:

- Deactivate/Re-activate an OBD diagnostic service or complete disabling of OBD support;
- > Deactivate/Re-activate specific OBD related parameter identifiers
 - For [6]: PIDs/MIDs/TIDs/VIDs
 - For OBD in UDS resp. [7] and [8]:



- DIDs in range 0xF400-0xF8FF
- RIDs in range 0xE000-0xE1FF

9.11.1.1 Calibration of Supported OBD Services

DCM supports this level of calibration only in connection with the *How to Get Notified on a Diagnostic Service Execution Start and End* feature. It is recommended to use the *ServiceRequestManufacturerNotification_*<*SWC*> notification in order to block as early as possible any not supported OBD service identifiers.



Caution

Do not block any UDS OBD services: 0x22 and 0x31. These services are shared between OBD and the UDS protocol. In case OBD or/and the UDS OBD parameters shall be disabled, please refer to the chapter 9.11.1.2 Calibration of Supported OBD Parameter Identifier to disable only the affected sub-service parameters.

The diagnostic service level filtering is completely handled by the application implementation. This can be achieved by a calibrateable filter object that will be evaluated within the diagnostic request indication function. This application call shall behave depending on the filter state as follows:

- Any OBD service(s) is (are) disabled: set the ErrorPtr function parameter to NRC 0x11 (SNS) and return the value DCM_E_NOT to DCM. On functional requests there will be no response sent back.
- > Any OBD service(s) shall be **re-enabled**: just return the value **E_OK** to DCM.



FAQ

Filtering the OBD services on SID level within the ServiceRequestManufacturerNotification_<SWC> will avoid the diagnostic session transition into the default session, required on an OBD request. This is especially useful when the OBD support shall be completely disabled, and the ECU shall behave as if it is a general UDS ECU.

9.11.1.2 Calibration of Supported OBD Parameter Identifier

Due to the OBD protocol specifics, the filtering of single OBD related parameter identifier is completely handled within the DCM. The application shall implement only the write operation onto the calibrateable DCM configuration objects described in *Table 9-3 Calibrateable OBD "availability parameter identifier" values*.

There are two types of OBD parameter identifiers:

- Availability Parameter Identifier (APID):
- > For [6]: 0x00, 0x20, 0x40, ... 0xE0



- For OBD in UDS resp. [7] and [8]: 0xZZ00, 0xZZ20, 0xZZ40, ... 0xZZE0, where ZZ stays for:
 - > DIDs: Any value in range 0xF4-0xF8
- > RIDs: Any value in range 0xE0-0xE1.
- Data Parameter Identifier (DPID): Any other parameter identifiers

The first type reports to the requester a bit map of the corresponding "data parameter identifiers" supported by the ECU. These bitmap values always have to be consistent with the real ECU "data parameter identifier" availability configuration. To guarantee this consistency and simplify the calibration process, DCM uses calibrateable bitmaps for each "availability parameter identifier" that shall be supported.

The following table shows the overview of all OBD diagnostic service dependent calibrateable symbols:

Diagnostic Service ID	Table Name	Availability Condition
0x01	Dcm_CfgSvc01SupportedIdMask[n] 1)	If SID 0x01 is to be supported.
0x02	Dcm_CfgSvc02SupportedIdMask[8] 2)	If SID 0x02 is to be supported
0x06	Dcm_CfgSvc06SupportedIdMask[n] 1)	If SID 0x06 is to be supported.
80x0	Dcm_CfgSvc08SupportedIdMask[n] 1)	If SID 0x08 is to be supported.
0x09	Dcm_CfgSvc09SupportedIdMask[n] 1)	If SID 0x09 is to be supported.
0x22	Dcm_CfgSvc22SupportedIdMask[n] 3)	If SID 0x22 with any OBD DIDs is to be supported.
0x31	Dcm_CfgSvc31SupportedIdMask[n] 4)	If SID 0x31 with any OBD RIDs is to be supported.

Table 9-3 Calibrateable OBD "availability parameter identifier" values

All the above table symbols have a 32bit value according to *[6]* that represents the bitmap for the corresponding parameter identifier range, defined by the APID. The only identifier not available in these bitmaps is the APID 0x00, since this one shall be always supported if the corresponding OBD diagnostic service is to be supported. For example if SID 0x02 is to be supported, then PID 0x00 must exist in order SID 0x02 to be able to report the complete parameter identifier support list. Due to the differences between the two byte UDS OBD DIDs/RIDs and their single byte OBD equivalence, the following shall be considered for their calibration:

¹⁾ n = total number of APIDs for this service.

²⁾ always contains all possible APIDs.

³⁾ n = total number of APIDs for the whole range of OBD DIDs [0xF400-0xF8FF].

⁴⁾ n = total number of APIDs for the whole range of OBD RIDs [0xE000-0xE1FF].



- If an OBD parameter identifier is to be disabled, its corresponding APID bit value in the bitmap shall be reset. For the two types of parameter identifiers this means:
- > For an APID:
 - > All bits in the corresponding service table shall be reset as follows:

All APIDs below the one to be disabled shall reset bit 0.

The APID to be disabled and the greater ones shall have zero mask value.

Example: for SID 0x02 APID 0x40 shall be disabled:



Note

Disabling APID 0x00 would mean that the corresponding OBD diagnostic service is not available. Therefore actually the SID level filtering described in *9.11.1.1 Calibration of Supported OBD Services* shall apply.

> For a DPID: The corresponding APID table entry (table index = DPID / 32) bitmap value shall be changed (reset bit number [DPID % 32]).

Example: If PID 0x51 of SID 0x02 shall be disabled, then the value shall be:



If a UDS OBD parameter identifier is to be disabled, its corresponding APID bit value in the bitmap shall be reset. Here are the same rules as for the single byte OBD APIDs to apply, but only within a concrete OBD DID type (i.e. 0xF4XX, 0xF6XX, etc.).

Example: If PID 0x**F600** for SID 0x**22** shall be disabled, then the value shall be:



Caution

DCM will react just as proper as the calibrated values are. This means that the generator of the calibration values is responsible for the correctness of the DCM configuration. Therefore the following points have to be considered during the new bitmap values' generation:

- > The APID concatenation has to be taken into account see examples above how bit 0 of the corresponding APID masks changes.
- It is not possible to enable any APID or DPID that didn't exist in the initial DCM configuration. If the newly generated calibration value sets a bit in a bitmap, which was not set in the initial configuration, DCM will report the calibrated APID value. But once the tester tries to read the DPID, corresponding to the wrongly set bit in the APID, DCM will react according to its initial configuration state the DPID is not supported.
- > If the OBD functionality shall be completely disabled, then:
 - > The OBD services have to be filtered as described in 9.11.1.1 Calibration of Supported OBD Services.
 - > The UDS OBD DIDs/RIDs shall be disabled by resetting **all** APID specific bitmap values.

Any faulty calibration will **not** cause any damage to the ECU or its software, but will **lead to OBD diagnostic protocol violations**.

9.12 How and When to Configure Multiple Protocols

DCM provides means for supporting multiple diagnostic protocols in one configuration. There are several use cases, where multiple protocols shall be used in need of:

Diagnostic Client(s) Processing Prioritization



- Client Specific Diagnostic Application Timings
- > Diagnostic Service Firewall

Please refer to the corresponding use case chapter below for details. Please note that all these use cases can also be combined.

9.12.1 Diagnostic Client(s) Processing Prioritization

If one or more diagnostic clients shall have privileged access over other clients (e.g. OBD2 client is more important than an OEM service tool), then all clients shall be grouped according to their priority. These groups are called in the DCM configuration "protocols" (/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow). Each protocol possesses a priority property (DcmDslProtocolPriority) that determines the group importance. Please refer to the online help of this setting for more details about it.

Once all clients that will communicate with the ECU were classified upon their importance, their connections

(/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection) have to be assigned to the corresponding protocol.



FAQ

It is important to know, that in case of **protocol prioritization needed**, each protocol available in the DCM configuration shall refer to a **dedicated diagnostic buffer**. If two or more protocols do share the same buffer, no concurrent reception of diagnostic requests will be possible for clients assigned to these protocols. Only in case a non-default session is already started and the ECU is currently not processing any request, will give a client with higher priority the opportunity to get access over the ECU (please refer to *Table 9-6 Protocol prioritization during non-default session*).

Having specified the diagnostic protocols with their tester connections, corresponding buffers and priority, your ECU is ready to handle privileged requests.

Under the assumption that for all requests the activation of the new protocol is accepted (StartProtocol() returns E_OK), the handling of higher priority clients to lower priority ones (and vice versa) in DCM in different diagnostic sessions is shown in the matrixes below. The most important situations that can occur between two concurrent clients are focused by dedicated colors. Please, refer to Table 9-4 Color legend to the protocol prioritization matrixes for detailed explanation.

Color	Meaning
Blue	Focuses on the different behavior for a lower or equal priority client when the ECU is in the default or in a non-default session.
Green	Focuses on the situations where a lower or equal priority client will get a NRC 0x21.
Orange	Focuses on the situations where an active job of a client will be interrupted by a



Color	Meaning
	higher priority client.
Grey	A situation that can never occur due to reactions in the preceded cases.

Table 9-4 Color legend to the protocol prioritization matrixes

Hi-Prio Client (A)						Tx End
Lo-Prio	Lalla	Dy Ongoing	Dy Fod	Service	Ty On wains	(Post-
Client (B)	Idle	Rx Ongoing	Rx End	Processing	Tx Ongoing Continue	Processing)
Idle		Receive request (A).	Start service processing (A).	Continue service processing (A).	response transmission (A).	Do post- processing (A).
Rx Ongoing	Receive request (B).	Receive both requests.	Start service processing (A), continue reception (B).	Continue service processing (A), continue reception (B).	Continue response transmission (A), continue reception (B).	Do post- processing (A), continue reception (B).
Rx End	Start service processing (B).	Continue reception (A), start service processing (B).	Start service processing (A), send NRC 0x21 ³⁾ (B).	Continue service processing (A), send NRC 0x21 ³⁾ (B).	Continue response transmission (A), send NRC 0x21 ³⁾ (B).	Do post- processing (A), start service processing (B).
Service Processing	Continue service processing (B).	Continue reception (A), continue service processing (B).	Interrupt service processing 1) (B), do post processing 2) (B), start service processing (A).	N/A	N/A	N/A
Tx Ongoing	Continue response transmission (B).	Continue reception (A), continue response transmission (B).	Interrupt response transmission (B), do post processing ²⁾ (B), start service processing (A).	N/A	N/A	N/A
Tx End (Post- Processing)	Do post- processing (B).	Do post- processing (B), continue reception (A).	Do post- processing (B), start service processing (A).	N/A	N/A	N/A

Protocol prioritization during default session Table 9-5



Hi-Prio Client (A)						Tx End
Lo-Prio	1.00	D. On and an	Du Fu d	Service	T., O.,	(Post-
Client (B)	Idle	Rx Ongoing	Rx End	Processing	Tx Ongoing	Processing)
Idle		Receive request (A).	Start service processing (A).	Continue service processing (A).	Continue response transmission (A).	Do post- processing (A).
Rx Ongoing	Receive request (B) ⁴⁾ .	Receive both requests.	Start service processing (A), continue reception (B).	Continue service processing (A), continue reception (B).	Continue response transmission (A), continue reception (B).	Do post- processing (A), continue reception (B).
Rx End	Send NRC 0x21 ³⁾ (B).	Continue reception (A), start service processing (B).	Start service processing (A), send NRC 0x21 ³⁾ (B).	Continue service processing (A), send NRC 0x21 ³⁾ (B).	Continue response transmission (A), send NRC 0x21 ³⁾ (B).	Do post- processing (A), start service processing (B).
Service Processing	N/A	Continue reception (A), continue service processing (B).	Interrupt service processing 1) (B), do post processing 2) (B), start service processing (A).	N/A	N/A	N/A
Tx Ongoing	N/A	Continue reception (A), continue response transmission (B).	Interrupt response transmission (B), do post processing ²⁾ (B), start service processing (A).	N/A	N/A	N/A
Tx End (Post- Processing)	N/A	Do post- processing (B), continue reception (A).	Do post- processing (B), start service processing (A).	N/A	N/A	N/A

Table 9-6 Protocol prioritization during non-default session

- 1) If an operation is ongoing (i.e. any callout with an OpStatus parameter that already has been called with OpStatus == DCM_INITIAL), then this operation is called for a last time with OpStatus == DCM_CANCEL to stop any further job execution.
- 2) In case of interruption all configured confirmation functions (i.e. ServiceRequestManufacturerNotification_<SWC>, ServiceRequestSupplierNotification_<SWC>) will be called to finalize the jobs e.g. releasing semaphores, resources, etc. The confirmation status will be negative.



- 3) NRC 0x21 will be sent only if configured (refer to 9.4 How to Handle Multiple Diagnostic Clients Simultaneously). Otherwise there will be no response at all.
- 4) The low priority request reception will be granted only if there shall be NRC 0x21 to be sent back (see ³⁾). Otherwise there will be no response at all on single frame request, or FC.OVFW in case of a multi-frame request.

9.12.2 Client Specific Diagnostic Application Timings

If the ECU shall be able to communicate with clients that have the same importance, but some of the clients are connected to it via bus systems that cannot guarantee the default P2 timings, then these clients can be assigned to a dedicated protocol. The new protocol shall fulfill the following requirements:

- > share the same diagnostic service table (same services are accessible);
- > have the same priority in order to avoid any protocol preemption;
- share the same buffer

Only the protocol specific P2 and P2Star specific parameters:

- /Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmTimStrP2Serv erAdjust
- /Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmTimStrP2Star ServerAdjust

shall be specified so that the RCR-RP messages can be sent in time to the corresponding clients.

9.12.3 Diagnostic Service Firewall

If the ECU shall allow only limited diagnostic service access to certain diagnostic clients, then the multi-protocol feature can be used to specify that.



FAQ

Diagnostic service firewalling support is limited to service identifier level. This means, that you can specify whether a service is visible to a client or not, but cannot hide specific sub-functions, DIDs, RIDs, etc. of a service. This also implies that if a diagnostic service with a given SID is available in more than one diagnostic service table; all of its corresponding properties must be identical in all instances of this service. For example: it is not possible to specify different session and security access execution precondition for the same SID in different tables.

Each protocol refers to a specific diagnostic service table



(/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolSIDT able) that contains all services visible to this protocol. So in case an OBD2 tester shall only be able to access the OBD2 services (SID 0x01-0x0A), and the service tester shall be able to access all UDS services and additionally *ClearEmissionRelatedDTC* (\$04), then the DCM configuration shall look like as follows:

- There shall be two diagnostic service tables (/Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable):
- > One for the UDS services and the SID 0x04;
- > One for all OBD2 services (incl. SID 0x04);
- There shall be two diagnostic protocols such as:
- > The "service tool" one:
 - shall refer to the UDS service table:
 - > shall contain only the service tester connection
- The OBD2 one:
 - shall refer to the OBD2 service table;
 - shall contain only the OBD2 tester connection

In such a configuration the UDS tester will always get NRC 0x11 (ServiceNotSupported) if any OBD2 request other than 0x04 is addressed physically. The OBD2 tester will never get access to the UDS services – will get either NRC 0x11 (peer-to-peer communication) or no response (on functionally addressed requests).

9.13 How to Select DEM-DCM Interface Version

As of version 2.01.00, the DCM supports both DEM AR 4.0.3 and AR 4.1.2 API. Starting with version 7.02.00, DEM AR 4.3.0 API is supported as well. The API version selection is not performed automatically since there is not always a DEM available in the ECU configuration, but indeed there is one used in the software. Therefore, a vendor specific configuration parameter for selection of the DEM API version is introduced: \(\textstyle \tex

9.13.1 Setting the ClientId for DEM AR 4.3.0 API

When using the DEM AR 4.3.0 API, a *ClientId* has to be specified for each protocol. This is done with the configuration parameter:

Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDemClientRef

9.14 How to Support OBD and UDS over a Single Client Connection

Usually if an ECU shall support OBD communication capabilities (i.e. OBD2 diagnostic protocol), it shall have a dedicated connection to an OBD tester. This allows



protocol/diagnostic client prioritization (refer to 9.12 How and When to Configure Multiple Protocols) and guaranteed OBD task handling. Nevertheless there are requirements on supporting both UDS and OBD over a shared diagnostic connection. In this case, no client prioritization can take place, but still the ECU shall reset any short term changes caused by an UDS tester right before. This task is automatically performed by DCM. Once a **functionally requested OBD service** is received (regardless of whether it is supported or not by the current ECU configuration), the ECU will enter the default session, just before the OBD request evaluation and execution starts. This automatic switch is only possible if all conditions below are fulfilled:

- There is at least one OBD service (i.e. SID in range [0x00-0x0F]) configured for DCM (as an internal or external service processor implementation).
- There is exactly one diagnostic connection configured in DCM. If there are two or more connections, please use the multi-protocol prioritization mechanism with shared diagnostic buffers instead (refer to 9.12 How and When to Configure Multiple Protocols).

9.15 How to Use a User Configuration File

DCM has an advanced code configuration and code generation tool that completely sets up the module. However, in exceptional cases there is a need to complete or override some of the generated parameters. Most common such cases are workarounds for issues found after product's release.



Caution

User configuration file content must either be described in this manual or agreed by the Vector Informatik company prior using it in production code.

A user configuration file has no specific name. It can be any text file form e.g. Dcm.cfg. In order to use already created user configuration file within the DCM's code generation process, you have to specify the full path to this file here:

/Dcm/DcmConfigSet/DcmGeneral/DcmUserConfigFile

9.16 How to Know When the Security Access Level Changes

There are situations where the ECU shall cancel all by the tester activated functions, when they were secured and the security level changes. In some cases the DCM is able to handle this internally:

- > ReadDataByPeriodicIdentifier (\$2A)
- DynamicallyDefineDataIdentifier (\$2C)



For other diagnostic services, such as

- > InputOutputControlByIdentifier (\$2F) (will be automatically reset by DCM only on (re-)entering default session)
- > RoutineControl (\$31)

this task has to be performed by the application. For that purpose, the DCM can notify the application in several ways each time the security level performs a non-self-state-transition. An example for such a transition is "Level 1 -> Locked", but not "Locked->Locked". The latter occurs when the default session has been re-activated.

The possible notifications are:

- Invoking a Mode Switch
- > Calling a Function Implemented Within a CDD Module

Using these indications the application may stop any running background routines that are secured.



FAQ

A security access level change can be triggered by any of the following events:

- Any diagnostic session change caused by:
 - Service DiagnosticSessionControl (\$10);
 - TesterPresent Timeout:
 - Protocol Preemption;
- A successfully processed security unlocking sequence with service SecurityAccess (\$27)

9.16.1 Invoking a Mode Switch

Whether the DCM shall notify about security access change using a mode switch, you can specify by configuration parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmSecurityLevelChangeNotificationEnabled

In case of state change, the DCM will invoke a mode switch for the mode declaration group *DcmSecurityAccess*.

9.16.2 Calling a Function Implemented Within a CDD Module

Whether the DCM shall notify about security access changes using simple function calls, you can specify by using configuration containers:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityCallback



For each callback you need, a dedicated container of the above type shall be configured for DCM. The parameter

/Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityCallback/DcmDspSecurityCallbackFnc will specify the function you want to be called by DCM. All these functions will have the prototype defined in chapter 6.5.1.9 <Security Access Change Notification Callback>.

9.17 How to Deal with the PduR AR version

The DCM supports the interface to the PduR according to AR 3.x, AR 4.0.1, AR 4.0.3 and AR 4.1.2. Depending on the AR major version there are different configuration strategies.

9.17.1 AUTOSAR 3 Environment

If DCM shall interact with a PduR from an AR3 stack, then the delivery containing this DCM is already properly pre-configured. You cannot switch to any other PduR AR version.

9.17.2 AUTOSAR 4 Environment

For PduRs from AR 4.x stack, the concrete AR version is automatically derived from the PduR BSWMD file.

However, it is possible to enforce a specific AR version during integration by defining MSR_PDUR_API_AR_VERSION in the file Compiler_Cfg.h.

Example: The PduR AR version is set to 4.0.3:

#define MSR PDUR API AR VERSION 0x403

For a detailed description of the PduR APIs, please refer to chapter 6.4.3 PduR.

9.18 Post-build Support

The DCM is optionally capable of flexible configuration selection at run time. The following post-build variants are supported:

- > variant switching at runtime Post-build selectable
- > variant calibration Post-build loadable
- > combination of both Post-build loadable selectable



Note

Please refer to the basic software module description (*Dcm_bswmd.arxml*) file accompanying your delivery to find which parameters support post-build parametrization.

This information is also displayed in the DaVinci Configurator 5 tool.



9.18.1 Post-build Variance Level

For all of the above mentioned supported variants, there is certain variance level that is covered by the module. Since the DCM can be logically divided into two main parts:

- > Communication Part
- > Diagnostic Services Part

we will define the level of variance for each of them separately.

9.18.1.1 Communication Part

DCM's communication part includes every parameter located under the configuration container with path /Dcm/Dsl. The few non-post-build capable parameters are defined within the *Dcm_bswmd.arxml* file.

In general the communication part of DCM handles configurations with:

- > different amount of protocols or/and different protocol properties such as:
 - > P2/P2 timing adjustments, priorities, buffer assignment, protocol ID, service table references, etc.;
 - different number of connections or/and different connection parameters such as:
 - changed diagnostic message identifiers (e.g. multi-ECU use case using the same ECU for both left and right doors);
 - with or without periodic transmission (e.g. when periodic reading is not allowed within a variant (note: This will be possible once the diagnostic part of DCM becomes capable of variant switching).

What you cannot change is the number of diagnostic buffers and their size. Since the size is used for the RTE ports (ServiceRequestManufacturerNotification_<SWC> and ServiceRequestSupplierNotification_<SWC>) it cannot change after compile time since RTE is not post-build capable.

9.18.1.2 Diagnostic Services Part



Note

If you have used the only PBS like option on diagnostic service level, provided in DCM 5.00.00 and later versions, as an alternative way to handle multiple diagnostic service variants (described in details in chapter "9.30 How to Handle Multiple Diagnostic Service Variants") you may now want to switch to the fully operational PBS support by DCM described here.

Since PBL variant handling on diagnostic service is not yet supported, OBD calibration is still the only way to change variants by calibrating data only operation.

DCM's diagnostic service part includes every parameter located under the configuration containers with path /Dcm/Dsd and /Dcm/Dsp.



In general, the PBS support in DCM is limited only to the selection of the following diagnostic entities per ECU variant:

- Diagnostic Services
- Diagnostic Sub-Services
- > DIDs (and their operations)
- > RIDs
- > Memory Ranges
- > OBD PIDs
- OBD MIDs
- > OBD TIDs
- > OBD VIDs

So, you can only decide whether a certain diagnostic entity is available or not in a certain ECU variant. This implies that if an entity is available in more than one variant depending on its type it is not possible to:

- > Vary its execution preconditions (i.e. Session and SecurityAccess state references);
- > Specify different DID/RID etc. data layout and content;
- > Specify variant dependent periodic rates;
- Specify variant dependent scheduler capacity;
- Specify variant RoE events;
- > Specify RID specific sub-functions (i.e. disable only the Stop operation for a RID);
- Specify IO DID specific operation (i.e. disable only FreezeCurrentState for an IODID);
- > Etc.

Although the *Dcm_bswmd.arxml* file already limits those ECUC configuration containers and parameters that are not meant to be variable, there are still some of them that for specific reasons had to be defined as variant. Here is an abstract list of the parameter/container kinds that are specified as post-build related, because they can be absent in a variant, even if they shall not vary in their values:



Rules	Description
All the diagnostic entities, listed above as variant-capable (e.g. DIDs, RIDs, diagnostic services etc.) that have the same identifier in the variants they occur shall always have the same short name.	This is required in order to guarantee that the corresponding diagnostic entity properties that are not variable will remain constant in all variants.
	For example, all corresponding containers that represent a concrete DID must have the same short name in all variants the DID is available. In this way, the DID will have the same data layout in all variants.
Invariant Boolean parameters will be merged over all variants.	There are some Boolean parameters (e.g. DcmDspRoeInitOnDSC) that may be missing in a certain variant (e.g. RoE not supported) thus their multiplicity or the container they belong to is specified as post-build capable. The parameter itself but shall not change its value over all the variants it applies to. Depending on the parameter semantic, the final value for all variants will either be TRUE or FALSE or last is best.
Invariant Integer parameters will be calculated over all variants.	There are some Integer parameters (e.g. DcmDspMaxPeriodicDidToRead) that may be missing in a certain variant (e.g. where service ReadDataByIdentifier (\$22) is not supported) thus their multiplicity or the container they belong to is specified as post-build capable. The parameter value shall not change its value over all the variants it applies to. Depending on the parameter semantic, the final
	value for all variants will either be the minimum, maximum (DcmDspMaxPeriodicDidToRead) or last is best (DcmDspPowerDownTime).
All configuration entities with execution preconditions (i.e. Session/Security/ModeRules) that have the same identifier in the variants shall have the	For example a diagnostic service shall not vary its session state dependencies in different variants.
same precondition.	For details on what shall be considered in case of execution precondition mismatches, please refer to chapter <i>9.18.1.2.1</i> .
OBD related UDS entities are always linked to their corresponding OBD entities, when such are available.	MSR DCM always applies UDS-to-OBD automatic linking for those UDS DIDs and RIDs that have corresponding OBD PID/MID/TID or VID.
	In the context of multiple variants, there can be configurations that for example do have only OBD2 entities (e.g. PIDs) in one variant and OBD related UDS entities (e.g. DIDs) in another variant. In this case DCM will still link those matching UDS and OBD entities as it does in a



	single variant configuration. The advantage is – the application has to implement only one data provider for the overlapping UDS and OBD entities.
--	--

Table 9-7 Post-build configuration rules on invariant DCM parameters

9.18.1.2.1 Handling of State Execution Preconditions of Variant Diagnostic Entities

The execution preconditions of diagnostic entities are meant to be invariant. Still, there are some special scenarios that have to be taken into account.



Note

The configuration tool will detect inconsistencies regarding execution preconditions on related diagnostic entities and warn you with an appropriate message. The message IDs (DCM05010 - DCM05025) you may get and their explanations are listed in 10.2 Code Generation Time Messages.

Only one kind of diagnostic entity will not be validated upon execution precondition mismatch: **memory ranges**.

DCM always calculates an optimized equivalent memory layout, based on the configured memory ranges and their access type (read/write) related preconditions. If there are overlapping memory areas with different preconditions, they will be merged into a corresponding single memory area with new preconditions that allow access to it under a certain state only if at least one variant resp. overlapping instance within the same variant allows the access in the given state.

- A diagnostic entity has execution precondition that refers to states not existing in some variants.
- > A special case: The state group (e.g. SecurityAccess) is not available in all variants, since service SecurityAccess (\$27) is not available at all in those variants.

In the described case the affected diagnostic entity will be configured with an empty list of precondition related states. A list with no state references is always interpreted as "no execution precondition restrictions". This of course mismatches the original semantic of the precondition: "diagnostic entity accessible _only_ in the referenced state(s)".

Solution:

Having a diagnostic entity available in a variant where it shall not be executed in any (remaining) state of a state group sounds implausible. Actually such a diagnostic entity (e.g. diagnostic service, DID etc.) will never be able to send a positive response and thus shall not even exist in the affected variant(s).



Example:

Diagnostic service shall be supported only in the programming session. This service is configured to be available in a variant, where the programming session is not available at all. As a result the given service shall not exist in the variant too.

What happens if the affected diagnostic entity is not removed from the variant?

DCM will interpret the precondition as "there is no precondition" and will merge these states over all the variants, allowing the diagnostic entity to be always accessible.

The execution precondition depends on the preconditions of other related diagnostic entities.

In order to have a UDS compliant NRC prioritization, the execution preconditions on diagnostic service level are derived from their sub-service parameters (i.e. subfunction or parameter identifiers such as DIDs). In other words a diagnostic service shall be allowed in a specific state if at least one of its sub-service parameters is allowed in this state.

Example:

For service *ReadDataByIdentifier* (\$22) it is true, that it shall be allowed in the default session if at least one of the readable DIDs shall be readable in the default session. Otherwise, the DID specific operation "read" will have a precondition that allows to be accessed, but any attempt to read the DID will fail, since it will be rejected on higher processing (diagnostic service) level.

Problem:

The problem the multi-variant handling faces is that if the only DID that has required service *ReadDataByldentifier* (\$22) to be accessible in the default session does not exist in a new variant where other readable DIDs are still available, meaning service *ReadDataByldentifier* (\$22) is still required to be available too. This automatically means that the diagnostic service shall lose its permission to be accessible in the default session within that variant. Due to the invariance of the diagnostic entity preconditions (i.e. once allowed and no not allowed), such configurations will cause warnings to be issued in the configuration tool.

Solution:

There is no real solution for such situations, since the affected service cannot be removed from the variant. But ...

... what would happen in such a configuration?

The ECU will still reject any unsupported in the given state diagnostic entity (in our example the concrete DID). The only difference will be the NRC sent back by the ECU when the variant without the readable in the default session DID is active (i.e. instead of expected NRC 0x7F, 0x31 will be sent). The advantage is that the ECU will have a constant behavior independent of the active variant and will send the same NRC as in the variant with the DID readable in the default session.



9.18.2 Initialization

All post-build variants have in common that DCM must be first correctly initialized with the concrete variant. Thus, the variant switching is only possible at run time during the module initialization phase. For that purpose the DCM API <code>Dcm_Init()</code> has to be called with the appropriate configuration root pointer. Please refer to the API description for more details.

The configuration pointer is passed by the MICROSAR EcuM based on the post-build configuration. If no MICROSAR EcuM is used, the procedure of how to find the proper initialization pointers is out of scope of this document.

9.18.2.1 Error Detection and Handling

The DCM will verify the configuration data before accepting it to initialize the module. If this verification fails, an EcuM error hook (*EcuM_BswErrorHook*) is called with an error code according to *Table 9-8*.

Error Code	Reason
ECUM_BSWERROR_NULLPTR	Initialization with a null pointer.
ECUM_BSWERROR_MAGICNUMBER	Magic pattern check failed. This pattern is appended at the end of the initialization root structure. An error here is a strong indication of random data, or a major incompatibility between the code and the configuration data.
ECUM_BSWERROR_COMPATIBILITYVERSION	The configuration data was created by an incompatible generator. This is also tested by verification of a 'magic' pattern, so initialization with random data can also cause this error code.

Table 9-8 Error Codes possible during Post-Build initialization failure

If no MICROSAR EcuM is used, this error hooks and the error code constants have to be provided by the environment. The DCM performs the following verification steps:

- 1. If the pointer equals NULL PTR, initialization is rejected.
- 2. If the initialization structure does not end with the correct magic number it is rejected.
- If the initialization structure was created by an incompatible generator version it is rejected (starting magic number check)



Caution

The verification steps performed during initialization are neither intended nor sufficient to detect corrupted configuration data. They are intended only to detect initialization with a random pointer, and to reject data created by an incompatible generator version.



9.18.3 Post-build Variants

9.18.3.1 Post-build selectable

The MICROSAR Identity Manager (refer to [10]) is an implementation of the AUTOSAR 4 post-build selectable concept. It allows the ECU manufacturer to include several DCM configurations within one ECU. With post-build selectable and the Identity Manager the ECU variants are downloaded within the ECUs non-volatile memory (e.g. flash) at ECU build time. Post-build selectable does not allow modification of DCM aspects after ECU build time. At the same time, this limitation allows some of the optimization strategies still to be effective – DCM static code part will be optimized for the variant with maximum configuration size.

The variant selection is performed at run time by passing the corresponding configuration root during the module initialization (refer to chapter 9.18.2 Initialization).

9.18.3.2 Post-build loadable

All DCM configuration parameters, that are classified to be post-build selectable, also do support post-build loadable variant. The differences to the post-build-selectable case are listed upon their qualification:

- advantages:
- > The module's configuration can be updated after the module's compile time without reprogramming the whole ECU software.
- disadvantages:
 - Since all of the affected configuration parameters may change after module's compile time, the optimization level of the source code is very low.
 - Since no maximum configuration size can be pre-calculated, some scalable RAM blocks are referred not by a direct linker symbol, but through a pointer.
- > Only one configuration variant is supported at a time (no variant selection at run time possible). This disadvantage is avoided if the post-build loadable selectable variant is chosen instead (refer to chapter 9.18.3.3).
- > Greater risks of passing an invalid pointer during module initialization time.

For details about the post-build loadable feature, please refer to [9].

9.18.3.3 Post-build loadable selectable

This variant actually combines both post-build selectable and loadable variants, allowing a variant selection at run time and at the same time post-build calibration of parameters.

For details on the two mentioned variants, please refer correspondingly to chapters 9.18.3.1 and 9.18.3.2.



9.18.3.4 Post-build deleteable

This variant is actually a specific sub-variant of the post-build loadable variants. It allows deleting of containers that were created at link time, by guaranteeing at the same time the preservation of other post-build capable parameters' values. For details about this feature, refer to the [9].

9.19 Handling with DID Ranges

9.19.1 Introduction

The DIDs in DCM are usually configured in detail: for a concrete DID number, it is specified the data access type (read, write, etc.), number of data signals the DID contains, etc. For each data signal it is exactly configured the maximum/concrete length and type of data acquisition (i.e. RTE C/S port, function call, direct NvM interaction, etc.).

Additionally DCM is able to support a more generic DID access method, using DID ranges. This method has its advantages and disadvantages:

Advantages:

You can implement only one service port/function that covers a large group of DIDs with a similar data access method.

Disadvantages:

Only read and write operations are allowed when using DID ranges. No IO-control or scaling information reading is possible.

9.19.2 Implementation Limitations

Current AR DCM SWS ([1]) defines DID range interaction with the application in such a way that some restrictions must be considered when configuring a DID range.

- ▶ DID ranges may not be defined for DIDs 0xF300-0xF3FF (dynamically defined DIDs).
- ▶ DID ranges may not be defined for DIDs 0xF400-0xF8FF (OBD/ WWH-OBD DIDs), when DCM shall handle these on its own.
- ▶ If a DID from a DID range shall be included in a dynamically defined DID, the requested *DynamicallyDefineDataIdentifier* (\$2C) service will validate the source position and size parameters only upon the configured DID range maximum possible length (9.19.3 Configuration Aspects). Hence, when the actual length of the DID from this range is smaller than the maximum length and the stored source position and size do not match the actual length, the reported data will be fully or partially invalid.
- ▶ If a DID from a DID range is used in a multi DID request for service ReadDataByIdentifier (\$22), in order to protect the ECU from out of boundary access during reading each, DCM will consider at first its maximum length for the total response length. Later, the application will return the concrete length during reading DID-Range data, so the positive response will always have the correct length. The only negative effect is that DCM may reject requests with multiple DIDs that would actually fit the configured buffer. So choosing values for the maximum DID range length, nearly



equal the size of the diagnostic buffer will mostly fail a multi DID request with a DID range DID. To avoid such situations, please consider the following guideline:

- Use DID ranges for DIDs that have nearly the same size, which is represented by the maximum length parameter.
- If not possible to group the DID in the way shown above, try splitting large ranges into smaller ones in order to have less differences between the shortest and longest DID of a range.
- ➤ Try grouping short DIDs within ranges. If the maximum length of a DID range is far smaller than the diagnostic buffer, then the multiple DID request limitation will no longer persist. The best proportion is:

DCMBufferSize >= DcmDspMaxDidToRead * DcmDspDidRangeMaxDataLength

- ► The DID range response length calculation limits also the usage of the paged DIDs (9.25 How to Save RAM using Paged-Buffer for Large DIDs).
- Since DID ranges support read operation, they may be used for periodic reading, but then the maximum length may not exceed 7 bytes (CAN UUDT reference length).

9.19.3 Configuration Aspects

- > If a DID ranges is readable or/and writeable the corresponding UDS services shall be defined in the configuration tool. Refer to *ReadDataByIdentifier* (\$22) and *WriteDataByIdentifier* (\$2E) for more information about their configuration aspects.
- Whether a DID range has read or/and write operation, is to be determined via a corresponding /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo container (referenced by /Dcm/DcmConfigSet/DcmDsp/DcmDspDidRange/DcmDspDidRangeInfoRef

Refer to the concrete DID range configuration parameter online help in the configuration tool for more details about the effect of the parameter value, dependencies to other configuration parameters or any specific restrictions.

9.20 DCM AR Version Specific Features

DCM is always delivered in a preconfigured state for a specific AUTOSAR specification version. This chapter lists the features that are available only in concrete AR version.

9.20.1 ResponseOnEvent Specifics

Depending on the preconfigured DCM SWC AR version, the following functionalities will apply:

- For AR 4.0.3
 - ▶ The client-server interface ROEServices will be used.
- For AR 4.2.1 or later
- Mode switching for the declaration group(s) DcmResponseOnEvent_<EventId> will be used.



9.21 How to Support DID 0xF186

The ActiveDiagnosticSessionDataIdentifier (0xF186) is used to report the active diagnostic session within the DCM. If you want DCM to implement the read access to its data, please follow the configuration steps below:

- A DID shall be defined within the following container: /Dcm/DcmConfigSet/DcmDsp/DcmDspDid
- Set the identifier of that DID to 0xF186: /DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidIdentifier
- Define a read operation for that DID: /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidRead
- The read function should have the name "Dcm_DidMgr_F186_ReadData": /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataReadFnc
- Select the value USE_DATA_SYNCH_FNC for the following container: /DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
- Because only one data byte has to be read the data size should be configured to 8 bit: /DcmDsp/DcmDspData/DcmDspDataSize



Note

Since this is just a regular DID, that can be used in arbitrary manner, the following has to be considered if other options related to this DID are set:

- > The DID may have also other data signals. If one of them fulfills to the above conditions, you can still use the DCM's internal implementation for reporting current session ID.
- > If the DID shall support any other operation than only read (e.g. write), then for the data signal, that will use the DCM's internal implementation, the write operation must be implemented by the application.
 - An example for a write functionality: Since DCM does not provide an API for entering a non-Default session, the only effect such a write function may have is to put DCM into the default session (refer to Dcm_ResetToDefaultSession()) when the requested value is 0x01. All other values shall be rejected by NRC 0x31.

9.22 How to Suppress Responses to Functional Addressed Requests

Sometimes it may be necessary on a specific connection to suppress all kind of responses (positive or negative) on functional addressed service requests. This feature will be automatically activated when Mixed11 addressing (applies to CanTP only) is configured for that connection. To achieve this, the following addressing type parameter has to be configured to "DCM_NET_ADDR_MIXED_11":

/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslAddressingType



Additionally the following configuration switch has to be enabled:

/Dcm/DcmConfigSet/DcmGeneral/DcmSuppressResponseOnCanTpFuncMixedAddrRequests

9.23 How to Support Interruption on Requests with Foreign N_TA

The DCM supports service processing interruption when a request from the same client to another ECU is detected. This feature is only available for Mixed11 addressing CanTp and is automatically activated when Mixed11 addressing is configured for that connection.

The addressing type parameter of a connection can be configured here:

/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslAddressingType

Additionally the following configuration switch has to be enabled:

/Dcm/DcmConfigSet/DcmGeneral/DcmForeignDiagnosticRequestDetectionEnabled

9.24 How to Know When the Diagnostic Session Changes

There are situations where the ECU shall cancel all by the tester activated functions, when the diagnostic session changes. In some cases the DCM is able to handle this internally:

- > ReadDataByPeriodicIdentifier (\$2A)
- > DynamicallyDefineDataIdentifier (\$2C)
- > CommunicationControl (\$28)
- ControlDTCSetting (\$85)

For other diagnostic services, such as

- > InputOutputControlByIdentifier (\$2F) (will be automatically reset by DCM only on (re-)entering default session)
- > RoutineControl (\$31)

this task has to be performed by the application. For that purpose, DCM already notifies the application by invoking a mode switch for the mode declaration group <code>DcmDiagnosticSessionControl</code>.

Additionally for better DCM integration flexibility, there is also another way an application located in a CDD can be notified – by a simple function call.

Whether the DCM shall notify about diagnostic session changes using simple function calls, you can specify by using configuration containers:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionCallback

For each callback you need, a dedicated container of the above type shall be configured for DCM. The parameter

/Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionCallback/DcmDspSessionCallbackFnc will specify the function you want to be called by DCM. All these functions will



have the prototype defined in chapter 6.5.1.8 < Diagnostic Session Change Notification Callback >.

9.25 How to Save RAM using Paged-Buffer for Large DIDs

9.25.1 Introduction

According to all up to now released AUTOSAR DCM SWS documents, the only service that supports paged-data reading is service *ReadDiagnosticInformation* (\$19).

For any other data access services, i.e. service 0x22 (ReadDataByldentifier), it is not possible to implement paged-buffer reading, without the need of fulfilling a lot of conditions and accepting implementation drawbacks and unnecessary risks.

So if a large amount (measured in hundreds of bytes or even some kilobytes) of data has to be carried out from the ECU, the DCM shall have at least one buffer that can handle the entire DID data. To avoid this in most cases unnecessarily RAM resource waste, the MICROSAR DCM offers a concept for paged-data reading, described in details further below.

9.25.2 Functionality

In order to provide a user-friendly method for getting data from the application using the paged-buffer concept, a non-AUTOSAR extension of the already available DataServices client-server port interface is required: ReadData() (paged-data-reading).

The advantage of this concept is the great flexibility it offers:

- > The application has full control of how many bytes to be transferred and for simple "memory copy only" implementations will be able to optimally fill up the response transmission buffer.
- > Only a single function has to be implemented, that handles the complete data transfer.
- The imported diagnostic description ODX/CDD will not be affected by these changes, since the ECU project implementer just chooses the kind of the data access, such as it could be made for direct access to NvM signals.
 - If the diagnostic description defines a DID with multiple large signals, for example four signals with 1000Byte each, for all those signals the new access type can be used and the DCM can still have a small diagnostic buffer.
- The concept is not defined by AUTOSAR but fits the AUTOSAR conventions.
- > Either RTE C/S port or a callback to a complex device driver can be used.
- > All DID related ECUC parameters are re-used as long as they are applicable for that concept.



There are also some possible drawbacks that have to be considered when paged-DID reading feature is activated:

Reading data using the paged-buffer access, could lead to some unwanted effects:

- Sudden transmission interruptions for multiple DID requests on SID 0x22.
- If the application generally has slow data access, then up to now, without the paged-data access, it had only caused some RCR-RP responses on the bus. With paged-buffer enabled read data access, a slow data provision could lead to transmission abortion by the TP if the N_as/N_cs are significantly shorter than the application data provision rate.
- Limiting the maximum number of DIDs per service 0x22 request to one will avoid such interruptions, but may also lead to a major deviation from the OEM diagnostic requirements.

9.25.3 Implementation Limitations

When paged-data access of a DID is intended to be used, there are still some limitations that have to be considered:

- > A DID, whose data shall be read via paged-data access, shall only support read operation. No paged-data access for writing or I/O control is possible. So only service 0x22 (ReadDataByldentifier) may use it.
- For DIDs, accessible via service 0x2A (ReadDataByPeriodicIdentifier), paged-data access shall not be used.
- > Since those DIDs (0xF200-0xF2FF) are limited to only 7 bytes of data (on CAN) it makes also no real sense to apply this concept.
- Paged-data access cannot be used for DIDRanges (see 9.19 Handling with DID Ranges).
- The support of DIDRanges and the paged-data access DIDs lead to contradictory concepts regarding the design of service 0x22 processor:
- > For paged-data access DID, the length of the DID shall be known prior reading the data and starting the positive response transmission.
- > For DIDRanges due to a lack of appropriate interfaces, the response data length is first known to DCM after the data reading has finished.
 - Thus, it is not possible to have both DIDRanges and paged-data access DID within the same DCM configuration.
- Service 0x2C (DynamicallyDefineDataIdentifier) shall not be supported in DCM configurations with paged-data access DID.



9.25.4 Usage

From application point of view, paged-data reading concept using the new DataServices port operation does not differ very much from the AUTOSAR data reading via an asynchronous port interface.

Any single return value of the new *ReadData()* (paged-data-reading) is described in details within its API description table.

For simplification reasons the following pictures show the DCM to application flow reading a single DID, consisting of a single data signal, that provides its content via paged-data access. The *ReadDataLength()* usage in the example is only to show that paged-DID signals can also have dynamic length.

The following scenarios are covered below:

- Straightforward DID Paged-Data Reading
- Error Handling During DID Paged-Data Reading



9.25.4.1 Straightforward DID Paged-Data Reading

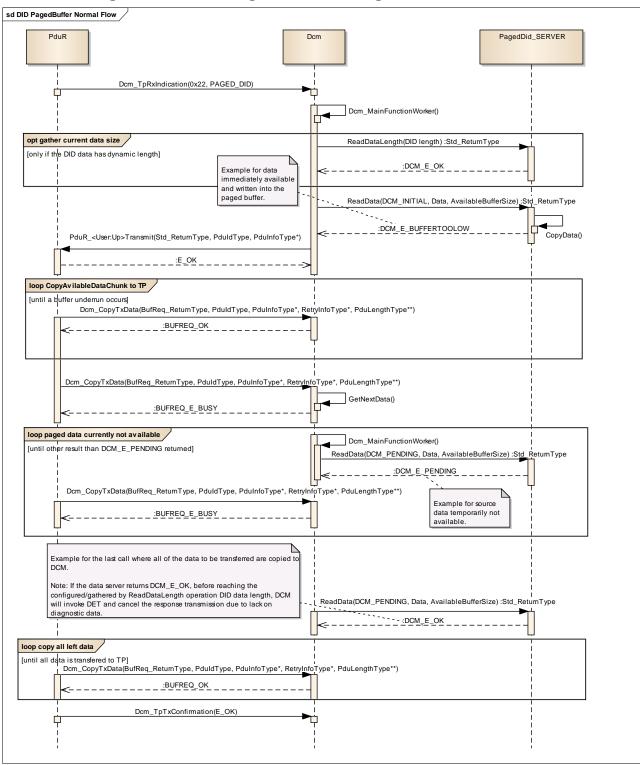


Figure 9-1 Straightforward DID paged-data reading

9.25.4.2 Error Handling During DID Paged-Data Reading

There are certain situations where the paged-data reading can be prematurely aborted:



- > On response transmission abortion initiated by the TP layer caused by:
 - > Too slow data provision by the application, which lead to a N as/N cs timeout.
 - > Connection interrupted by the diagnostic client (i.e. no flow-control was sent).
- > Other communication bus error has enforced the TP to abort the transmission.
- > On protocol preemption via a higher priority client (e.g. OBD vs. UDS);
- > On hitting RCR-RP limitation (if configured) caused by:
 - > Too slow data provision by the application (over several seconds or even minutes).
 - Application deadlock that leads to an inability even to initiate the response transmission.

The figures below depict these situations and how the application is notified about the job interruption.

The common part is: The *ReadData()* (paged-data-reading) will be always called with OpStatus = DCM CANCEL to notify the application that:

- > it can initialize now any internal states (e.g. releasing semaphores),
- > this is the last call of this data operation for current diagnostic service processing.



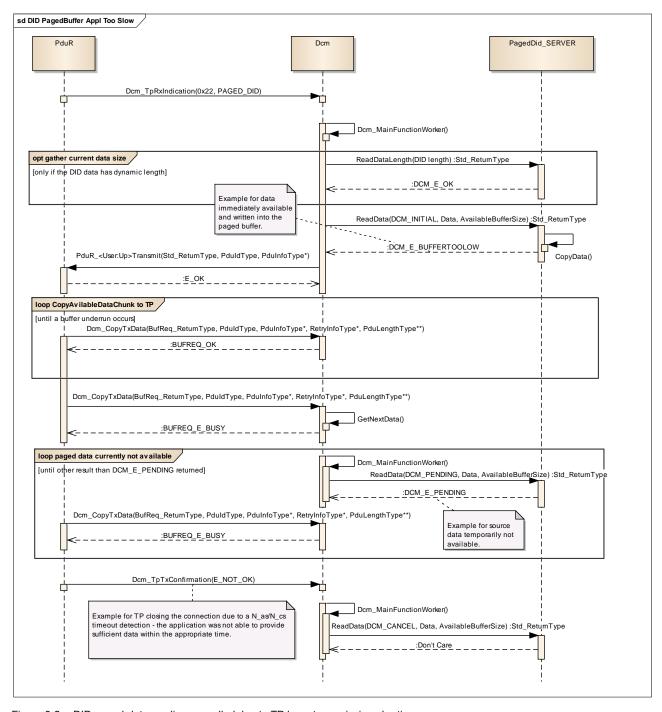


Figure 9-2 $\,\,$ DID paged-data reading cancelled due to TP layer transmission abortion



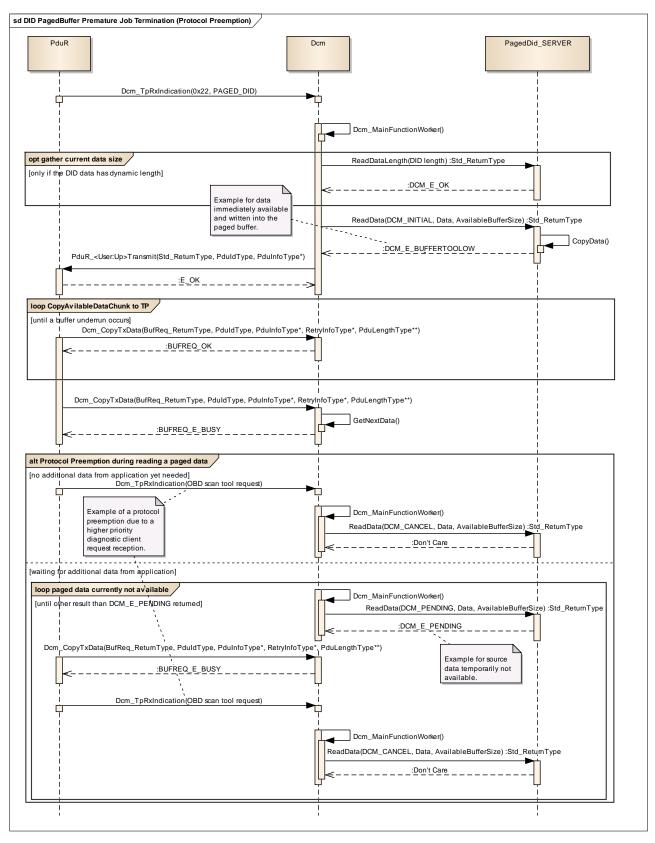


Figure 9-3 Protocol preemption during DID paged-data access



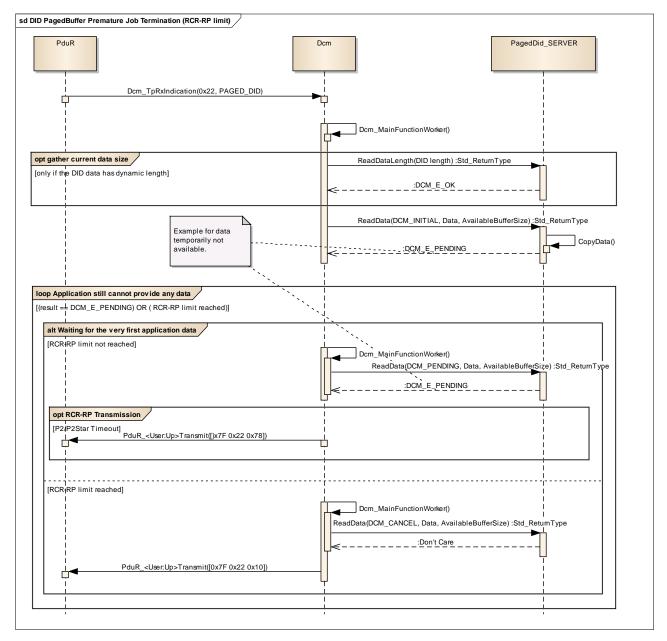


Figure 9-4 RCR-RP limit reached during DID paged-data access

9.25.5 Configuration Aspects



Note

The DCM parameter

/Dcm/DcmConfigSet/DcmPageBufferCfg/DcmPagedBufferEnabled has no effect on the paged-data access of a DID. It affects only the paged-buffer support on service 0x19. In this way both services (0x19 and 0x22) can be independently configured for using paged-buffer data reading.

To configure a DID signal for paged-data access, the DCM BSWMD file has to be changed in the following way:



Parameter: /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort was extended by two new values:

- USE_PAGED_DATA_ASYNCH_CLIENT_SERVER for SWC implementations
- > USE_PAGED_DATA_ASYNCH_FNC for callouts in ComplexDeviceDrivers.

From the parameters and containers already defined by AUTOSAR the following ones are only allowed to be used in context of a DID with paged-data access:

On DID level:

- > /Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidIdentifier
- > /Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidUsed
- > /Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidInfoRef
- /Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidRead
 with all sub-parameters
- /Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignal with all subparameters

On DID Data level:

- > /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
- /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataConditionCheckReadFncUs ed
- > /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataConditionCheckReadFnc
- > /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataReadFnc
- /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataSize
- > /Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataInfoRef
 - > /Dcm/DcmConfigSet/DcmDsp/DcmDspDataInfo/DcmDspDataFixedLength

The size of the Paged-Buffer can be configured here:

/Dcm/DcmConfigSet/DcmDsp/DcmDspReadPagedDataPageSize



Note

The value of /Dcm/DcmConfigSet/DcmDsp/DcmDspReadPagedDataPageSize shall be chosen with care. A small value leads to runtime overhead, because DCM must invoke the *ReadData()* (paged-data-reading) callout more often. On the other hand, a large value leads to additional RAM usage, because a dedicated buffer is established for paged reading. Please refer to 9.1.3 Exchanging data between OS tasks for informations about reducing the RAM usage.



9.26 How to Get Security-Access Level Specific Fixed Byte Values

9.26.1 Introduction

In some ECU projects it is desired, that some or all security-access level calculation algorithm shall use additional, level specific fixed bytes set to provide better flexibility and higher security protection. The latter is guaranteed by the split knowledge between provided implementation and project specific concrete values calculation.

Additionally, the diagnostic clients shall know these fixed bytes values, so in such cases these values are located within the diagnostic data exchange document (ODX/CANdela) imported by the system supplier into the MICROSAR DCM configuration. In that way, both diagnostic client and server (ECU) have always the correct values.

To achieve this goal, MICROSAR DCM extends the AR DCM standard ECUC configuration model by a new set of parameters (refer to the *Configuration Aspects*), as well as a new provided port operation *Dcm_GetSecurityLevelFixedBytes()*.

9.26.2 Usage

Once the fixed bytes are specified for the corresponding security levels, the DCM application implementer has the opportunity to access them within its software, by using the newly introduced provided port operation *Dcm GetSecurityLevelFixedBytes()*.

9.26.3 Security Level Fixed Bytes variant handling with VSGs

The DCM provides a means to define a set of security fixed byte values for a security level and to assign each fixed byte value to a Vehicle System Group. The required security fixed byte values can be enabled or disabled at run time of the ECU by enabling or disabling the corresponding Vehicle System Group.

The operation <code>Dcm_GetSecurityLevelFixedBytes()</code> will provide one of the enabled fixed byte values. If all fixed byte values of a security level are disabled the operation will act as if there were no fixed bytes configured for this level.

For detailed information see also 9.35 Vehicle System Group Support.

9.26.4 Configuration Aspects

If a security level shall provide a fixed bytes set to the application, then the following container shall exist:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurity FixedBytes

For each fixed byte value, belonging to the set, an instance of the parameter below shall be specified:

/Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurity FixedBytes/DcmDspSecurityFixedByteValue





FAQ

For the fixed bytes sets definition, the following rules do apply:

- It is allowed to define fixed byte sets only for some security-access levels;
- It is allowed to have security-access level specific set size (e.g. one level with 5 bytes, another with 15);
- The order of creation of each byte value parameter within a set must be the same as the expected order of the values to be reported later to the application.

9.27 How to Extend the Diag Keep Alive Time during Diagnostics

9.27.1 Problem Description

Per specification (see [1]) DCM shall keep the ECU alive (awaken) for a diagnostics reason under following circumstences:

- > While in the default diagnostic session: As long as there is a diagnostic service in processing.
- While in a non-default session: As long as the DCM has not entered the default session again.

In some projects it is required that the ECU shall be kept alive for a certain time period after the processing of a diagnostic request is finished. This leads to changes in the above listed situations as follows:

DCM will keep the ECU alive for a diagnostic reason when:

- While in the default diagnostic session:
 - as long as there is a diagnostic service in processing
- > **OR** for the time period after the service processing is accomplished until the configured keep-alive time elapses.
- While in a non-default session:
 - > as long as the DCM has not entered the default session again
 - > **OR** as long as the running keep-alive timer is active. This condition is of course only applicable if the keep-alive time is configured to a value greater than the S3 time (set to 5000ms) since the keep-alive timer and the S3 timer are startet at the same time.

9.27.2 Configuration Aspects

If such an extended time period for keep ECU alive is required, then please set up DCM in the configuration tool by specifying the keep-alive time in parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmKeepAliveTime



9.28 How to Recover DCM State Context on ECU Reset/ Power On

9.28.1 Introduction

There are situations, where the ECU shall perform reset/power shutdown, but without losing some DCM internal states. Such states are for example:

- Active diagnostic session;
- Active security access level (if applicable);
- > The already managed communication control states (if applicable);
- Active state of control DTC setting (if applicable);
- > Active state of any managed by DCM communication channel (DiagActive state)

Since this is not a feature supported by the AR standard per definition it was implemented in DCM for optional use only (refer to the configuration chapter below).

9.28.2 Functionality

In order to support the state context recovery, DCM has been extended by two new APIs for providing the data to be recovered on demand (*Dcm_ProvideRecoveryStates()*) and to retrieve this data back on each reset /power on phase (*Dcm_GetRecoveryStates()*).

The data to be transferred is stored in the structure *Dcm RecoveryInfoType*.



Caution

Please do always use both API to store and restore the context information. Only compatible versions of this data shall be used. Since the transferred data primarily consists of DCM internal data representation, it shall not be passed to DCM except if it was retrieved via the <code>Dcm_ProvideRecoveryStates()</code> API call.

On any state change (recovery data with default state does not have any effect), DCM will execute all notifications and actions related to that state transition. Due to this, DCM always executes the recovery process in the best applicable order for dependent states. For example:

- If security access and session change have to be switched, then first the session change will apply then the security access level in order not to reset the security level during the session transition.
- > If ControlDTCSetting shall be disabled and CommunicationControl shall apply too, then first the DTC setting will be disabled, and then the communication channels will change their states in order to avoid any unnecessary fault memory entries.



9.28.3 Configuration Aspect

If the recovery state feature is required for your project, please change the following parameter as described in its online help:

/Dcm/DcmConfigSet/DcmGeneral/DcmStateRecoveryAfterResetEnabled

9.29 How to Define a Diagnostic Connection without USDT Responses

Sometimes it may be necessary on a specific connection to suppress all kind of responses (positive or negative) in general. In order to configure such a connection, you have to delete the following sub-container of it:

/Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolTx

9.30 How to Handle Multiple Diagnostic Service Variants

9.30.1 Introduction

DCM provides a means to execute filtering process on incoming requests at service, subservice, DID, RID, and DID operation level. For example, if a specific DID is configured in ECUC to be available for read and write purposes, the user is capable of using DCM tools to update the configuration at runtime and to make the DID available only for read purposes. So when a request comes with writing in that specific DID, the request will be rejected accordingly.

9.30.2 Filtering Level Availability and the Corresponding Filtering Tools

In the following two tables, namely, *Table 9-9* and *Table 9-10*, the filtering options available for each service are illustrated along with the corresponding filtering tools.



Service Filtering Level	[AII]	[0x22, 0x2A, 0x24, 0x2C, 0x2E, & 0x2F]	[0x31]	[0x23 & 0x3D]	[0x01 & 0x02]	[90×0]	[0x08]	[60×0]
Service								
Sub-service (Sub-function)	-							
DID		•						
DID Operation		•						
RID								
RID Operation								
Memory								
Memory Operation								
PID					-			
MID								
TID								
VID								

Table 9-9 Filtering level availability

In order to get an advantage of DCM extended filtering tools, the extended filtering feature has to be activated in the configuration tools. Refer to *Table 9-10* under column "Configuration Aspects" for more details.



Filtered Diagnostic Object	Filtering API / Callback	Configuration Aspects
Service, Sub-service (Sub- function)	Refer to: 6.6.1.2.5 ServiceRequestManufacturerNotific ation_ <swc> <operation> = Indication()</operation></swc>	Refer to: 9.6 How to Get Notified on a Diagnostic Service Execution Start and End
DID, DID Operation	Refer to: Dcm_FilterDidLookUpResult	/Dcm/DcmConfigSet/DcmDsp/ DcmDspDidLookUpFilterEnabled
RID	Refer to: Dcm_FilterRidLookUpResult	/Dcm/DcmConfigSet/DcmDsp/ DcmDspRidLookUpFilterEnabled
RID Operation	Refer to: 6.6.1.2.5 ServiceRequestManufacturerNotific ation_ <swc> <operation> = Indication()</operation></swc>	Refer to: 9.6 How to Get Notified on a Diagnostic Service Execution Start and End
Memory, Memory Operation	Refer to: 6.6.1.2.5 ServiceRequestManufacturerNotific ation_ <swc> <operation> = Indication()</operation></swc>	Refer to: 9.6 How to Get Notified on a Diagnostic Service Execution Start and End
PID	Refer to:	Refer to:
MID	9.30.3 Filtering OBD Objects	9.30.3 Filtering OBD Objects
TID		
VID		

Table 9-10 Filter diagnostic objects and the corresponding filtering APIs / Callbacks



FAQ

The filtering process is executed on already defined objects in the compile-time. The filtering process requires interference from the application. It is not possible that the application enables features via the filtering process in the runtime that is disabled in the first place in the compile-time. In case of OBD2, the application risks upon violation this rule a wrong reported "AvailabilityID" masks by DCM.

9.30.3 Filtering OBD Objects

In order to filter OBD objects and at the same time to report the appropriate "AvailabilityID" values in the most efficient way, the variant handling on OBD related objects is based on the feature *Calibration of Supported OBD Parameter Identifier* (refer to chapter 9.11.1.2). Since the "calibration" in this case is performed on-board, the calibratable data specified in the reference chapter shall be located in the **volatile memory (RAM)**. To change the calibration data memory location, please use the following parameter:

/Dcm/DcmConfigSet/DcmGeneral/DcmCalibrationOfObdIdsMemoryType



The concept requires that the application initializes the calibration data at every ECU power-on/reset, prior the call of the *Dcm_Init()* function. For that purpose it is advisable for the application to keep prepared sets of the calibration data for each variant in its non-volatile memory and just copy it into the DCM volatile memory variant.

9.30.3.1 Suggested Preparation Methodology for Filtering Process of OBD Objects

In order to get a consistent content of these tables in the fastest way, we suggest you to follow the steps below:

- Create configurations (ECUC) files with Configurator 5 for each variant you need. You will need only the configuration part of DCM, and only few mandatory BSWs which DCM refers to. These references will not be from importance for the purpose of multiple-variant-handling, so they don't need to be maintained in future.
- Generate DCM configuration (Dcm Lcfg.c/.h) for each of those variants.
- Copy the generated tables described in Table 9-3 Calibrateable OBD "availability parameter identifier" values which exist in Dcm_Lcfg.c to your application.
- ▶ Rename the above copied tables according to the variant they belong to for better identification at the use time.
- ▶ If one variant includes one of the above mentioned tables to be copied while the other does not (OBD service is disabled), make sure to add this table to your configuration anyway with zero entries.

9.31 How to Switch Between OBD DTR Support by DCM and DEM

Starting with AR version 4.1.1 DCM shall implement OBD MIDTID data retrieval for service RequestOnBoardMonitorTestResults (\$06) not directly from the application, but via a dedicated DEM API. Still, DCM provides a backward compatibility mode and if configured accordingly, it will handle the DTR values as before. Reading the following chapters you will learn more about the impacts the new DTR value reporting implementation may have on your project. Then, if any choice is possible, you can decide which method you will prefer to use.

9.31.1 Implementation Particularities and Limitations

Once DCM is configured to provide DTR handling via DEM, any already available MID resp. MIDTID and MID DID (0xF6XX) in its configuration will be discarded. The configuration tool will inform you via "information" messages for all ignored related OBD MID parameters.

This does not mean that you will have to delete all these redundant data. Any available DID in range 0xF600-0xF6FF will be used as information for the DCM code generator that it is required a UDS MID mirroring of all of the OBD MIDs. Since DCM does no more know which are the valid MID DIDs, it catches the whole DID 0xF6XX range for OBD MID reporting purpose.



This implies that:

- The UDS MIDs reported by DCM can only be those defined as MIDs under the DEM configuration. No application specific DIDs (i.e. some DIDs still to be read via C/S port) in the above cited range of identifiers is possible to be defined in DCM.
- Due to the DCM internal redirection of the MID DID handling to a DID range handler, the already known *Implementation Limitations* on *Handling with DID Ranges* do apply in this case too.

9.31.2 Configuration Aspect



Caution

The DCM configuration regarding the OBD MIDTID handling shall always be kept synchronized with the current DEM configuration.

- > In case DCM is used together with the MSR DEM, it will notify you for any configuration mismatch by a corresponding error message, issued by an error directive at compile time (refer to *Table 10-1 Compile time error messages* for details on each message).
- In case another DEM vendor implementation is provided to the ECU project, a mismatching configuration between DCM and the DEM will result either in compile time errors (i.e. missing required DEM APIs) or may lead to an unexpected run time behavior as a result of the redundant and incompatible DEM and DCM MIDTID configurations (i.e. DEM does not support a certain MID, TID but DCM does support it or the DEM defines a different TID list for the same MID used within DCM etc.).

The OBD MIDTID handling is determined by setting the following DCM ECUC parameter accordingly: /Dcm/DcmConfigSet/DcmGeneral/DcmDtrDataProvisionViaDemEnabled

9.32 How to Enable Support of OBD VIDs with Dynamic Length

Depending on the DCM AR SWS compatibility mode, determined by the project license, the OBD VIDs will be retrieved from the application resp. DEM using corresponding variant of the *GetInfotypeValueData()* API. As you can see, the new API variant unconditionally (a project license is assumed as a constant property) provides a means for supporting a VID with variable data size. There is no additional configuration parameter to specify whether a certain VID shall have a variable length.

9.32.1 Implementation Limitations

While the VID reading via *RequestVehicleInformation* (\$09) is not really affected by the API change, *ReadDataByIdentifier* (\$22) does require some limitations to be taken into account, depending on the API variant. These limitations are of course only applicable if any OBD DIDs in the VID range (0xF800-0xF8FF) are to be supported by DCM.

The main difference in the usage of both API types is the point in time the DCM will calculate the final response length. When using API *GetInfotypeValueData()* in its AR 4.2.2 or newer variant, the final response length will be known to DCM *after* the VID data is



read. This is the same situation as the one already known from chapter 9.19 Handling with DID Ranges and therefore the Implementation Limitations regarding the DID length calculation do apply for these OBD VID DIDs too. Please note, that the maximum DID length of those DIDs is determined by the corresponding VID data size parameter, as specified in 5.8.4 Configuration Aspects.

9.33 How to setup DCM for Sender-Receiver Communication

Additionally to the *Client-Server Interface* type of communication with the application, starting with DCM 7.00.00 also the Sender-Receiver (S/R) kind is supported for the following diagnostic services only:

- Data Identifier (DID) related:
 - > Read Access:
 - > ReadDataByldentifier (\$22)
 - > ReadDataByPeriodicIdentifier (\$2A)
 - Write Access:
 - > WriteDataByIdentifier (\$2E)
- > IO Control:
 - > InputOutputControlByIdentifier (\$2F) (first available in DCM 7.01.00)

The read and write S/R communication can be applied on a single DID data element or for the whole DID package as a single unit. The latter is required for the NvM SW-C communication to guarantee that all the data of a single NvM block is written consistently.

9.33.1 Implementation Limitations

When using the DCM S/R communication some limitations and particularities shall be considered:

- > Please see Table 9-11 Sender-Receiver DID: Supported data types for further details.
- > The data element or DID shall have constant length.
- > The data element or DID shall represent data that is synchronously accessible (the IO Control operation is an exception of this rule).
- > For the DID related IOControl operations, the CEMR is limited by AR up to 4 bytes.
- > If a DID supports any other operation than the above listed (i.e. GetScalingInformation()), those operations will be treated as if the data element was specified to have access of kind "SYNCH_FNC". Therefore a callout will be expected to be implemented by the application for the affected configuration object.



	Supported operation	S/R S	Signal
Element data types		0x22, 0x2E, 0x2A	0x2F
	Boolean	•	•
	Uint8	•	•
A 4 ' -	Uint16	•	•
Atomic	Uint32	•	•
	Sint8		
	Sint16		
	Sint32		
	Uint8_N		
	Uint16_N	12	12
	Uint32_N	12	12
Array	Sint8_N	-	
	Sint16_N	12	
	Sint32_N	12	
Combined Signal (Struct) ¹³			
Combined Signal (NV data) ¹³		•	

Table 9-11 Sender-Receiver DID: Supported data types



Caution

Multi-byte array data types (like Uint16_N) can be configured, but result in a validation warning. Please refer to *Table 9-11 Sender-Receiver DID: Supported data types*. The Boolean data type is mapped to a Uint8 (Byte aligned) data element.

9.33.2 Application usage Scenario

In order to get S/R IOControl operation working with your application, the following design aspects shall be considered:

> On diagnostic request for service InputOutputControlByIdentifier (\$2F)

¹² This data type is not supported by Dcm. Configuring this data type will result in a validation warning. Furthermore a Uint8_N data type will be generated.

¹³ A Uint8 N data type will be generated due to combination of all DID signals.



On each valid diagnostic request for an IO DID, DCM either delegates the IOControl job to the corresponding C/S port or performs multiple S/R port operation as a form of communication with the application. In the latter case if the requested IOControl operation is "ReturnControlToECU" DCM executes the same sequence of S/R port operations as for the diagnostic session transition, described in the next section. The only difference is that not all IO channels of the IO DID will be reset, but only the ones, marked via the CEMR by the diagnostic client. For any other IOControl operation DCM will perform the following steps (per IO DID):

- > If the operation was "ShortTermAdjustment" the "controlState" data will be updated with the content of the diagnostic request.
- > The "controlEnableMask" will be updated with the content of the diagnostic request CEMR. (Please, read carefully the specifics of the CEMR handling in the corresponding chapter *InputOutputControlByIdentifier* (\$2F)).
- > At last the "inputOutputControlParameter" will be set to the requested IOControl operation (e.g. DCM_SHORT_TERM_ADJUSTMENT), indicating that all related to this operation parameters are already set and the operation can be executed.
- DCM starts waiting for the operation result (IOControlResponse). The wait state persists as long as the corresponding S/R has not yet been updated by the application, or DCM reads one of the values DCM_IDLE or DCM_RESPONSE_PENDING.
- Once DCM reads any other from the above mentioned values (i.e. application has finished validation of the requested operation), the diagnostic service processing continues with:

If the result in IOControlResponse was DCM POSITIVE RESPONSE:

- The "underControl" will be updated by adding the requested bits from the CEMR.
- > The "inputOutputControlParameter" will be set to DCM_IDLE, indicating to the application that the operation is now accomplished.
- > DCM will now call the S/R port of the read operation to return to the client the actual IO DID values within the positive response.

In any other case for IOControlResponse, DCM will take the value as NRC for the initiated negative response that will follow.

> On diagnostic session transition to a session

Once DCM performs a diagnostic session transitions to the default session or to a non-default session where an IO DID under control is no longer supported, the "ReturnControlToECU" operation of the affected DID is executed. For the S/R IOControl DIDs the following steps will be performed (per IO DID):

> The "underControl" data will be updated with all bits set to zero, indicating no IO channel of this DID is under control.



- > The "controlEnableMask" will be updated with all bits set, indicating all IO DID channels will be set back to normal mode.
- At last the "inputOutputControlParameter" will be set to 0x00 (i.e. DCM_RETURN_CONTROL_TO_ECU), indicating that all parameters related to this operation are already set and the operation can be executed.



Note

Since the IOControl operation "ReturnControlToECU" is a synchronous one that must always succeed, DCM will **not** expect any negative or pending response from the application via the IOControlResponse_<XX> S/R port. This is also the case, when this operation is executed upon an explicit diagnostic client request.

This implies that the application shall not expect that for "ReturnControlToECU" the "inputOutputControlParameter" will be set to DCM_IDLE by DCM at a later point!

9.33.3 Configuration Aspects

In order to enable S/R communication on DIDs, you have to specify the RTE usage on the corresponding DID data elements to be SENDER RECEIVER:

/Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort

Additionally, if the S/R communication shall be applied on DID level for Combined Signal (Struct) or NV usage (i.e. all DID data elements will be merged into a single data block with the total length of the DID), then following parameter shall be set accordingly:

/Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidUsePort

For usage details of these particular parameters, please refer to the Configurator5 online help.

9.34 How to Support Routine Info Byte with UDS RIDs

9.34.1 Introduction

The Routine Info Byte is a manufacturer specific value that is assigned to a routine and that can be reported to the tester when the diagnostic service *RoutineControl* (\$31) is requested. The DCM provides a means to report this Routine Info Byte without need of application intervention.

9.34.2 Configuration Aspects

If the DCM shall report the Routine Info Byte of a routine automatically, specify the value of the Routine Info Byte using following parameter:

/Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRoutineInfoByte



For every routine where this parameter is not supported, the application has to provide the Routine Info Byte if needed.

9.35 Vehicle System Group Support

9.35.1 Introduction

Vehicle System groups (VSGs) is a multi configuration feature that provides a means to define sub-sets of diagnostic entities at configuration time that can be activated and deactivated at run time in the ECU. Deactivated entities will not be available at run time.

9.35.2 Functionality

A sub-set is defined by assigning a diagnostic entity to a VSG. A diagnostic entity can be assigned to one or several VSGs. The entity will be available at run time if at least one of the corresponding VSGs is enabled. Diagnostic entities that are not assigned to a VSG are part of the base variant and thus they are always available.

During initialization of DCM all configured VSGs will be disabled. The DCM application is responsible to enable all required VSGs after the initialization.

The base variant is always enabled and can not be disabled.

9.35.3 VSG operations

Beside the operations to enable and disable VSGs, the DCM provides also operations to request the current state of the VSGs:

- > 6.2.2.9 Dcm_VsgSetSingle()
- > 6.2.2.10 Dcm_VsgSetMultiple()
- > 6.2.2.11 Dcm VsglsActive()
- > 6.2.2.12 Dcm VsglsActiveAnyOf()

9.35.4 Configuration Aspects

All VSGs that shall be supported have to be defined:

/Dcm/DcmConfigSet/DcmDsp/DcmDspVehicleSystemGroups

Following diagnostic entities can be assigned to the defined VSGs:

Service

/Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSidTabVehicleSystemGroupRef

SubService



/Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService/DcmDsdSubServiceVehicleSystemGroupRef

> DID Operations (Read, Write, IO control)

/Dcm/DcmConfigSet/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidRead/DcmDspDidReadVehicleSystemGroupRef

/Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidWrite/DcmDspDidWriteVehicleSystemGroupRef

/Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidAccess/DcmDspDidControl/DcmDspDidControlVehicleSystemGroupRef

Memory access operations (Read, Write)

/Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspRead MemoryRangeInfo/DcmDspReadMemoryRangeVehicleSystemGroupRef

/Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeInfo/DcmDspWriteMemoryRangeVehicleSystemGroupRef

> RID

/Dcm/DcmConfigSet/DcmDsp/DcmDspRoutineInfo/DcmDspRoutineAuthorization/DcmDspRoutineVehicleSystemGroupRef

> PID

/Dcm/DcmConfigSet/DcmDspPid/DcmDspPidSvc01VehicleSystemGroupRef

> TID

/Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl/DcmDspRequestControlVehicleSystemGroupRef

> MID

/Dcm/DcmConfigSet/DcmDsp/DcmDspTestResultByObdmid/DcmDspTestResultObdmidTid/DcmDspTestResultByObdmidVehicleSystemGroupRef

> VID

/Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoVehicleSystemGroupRef

 Security Level Fixed Bytes (see also 9.26.3 Security Level Fixed Bytes variant handling with VSGs)

/Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurityFixedBytes/DcmDspSecurityFixedByteVehicleSystemGroupRef



9.36 Usage Hints for Operation with SilentBSW

9.36.1 Introduction

The SilentBSW concept assures that a BSW module does not corrupt memory of itself, the application and other BSW modules. The DCM module ensures this with:

- Additional runtime checks.
- Assisted reviews by customer of the generated configuration output according to SafetyManual.

9.36.2 Configuration Aspects

Activate SilentBSW handling for DCM by setting the following DCM ECUC parameter accordingly: /Dcm/DcmConfigSet/DcmGeneral/DcmSafeBswChecks



Caution

- > Please make sure that your delivery requires safety aspects.
- > Please refer to the SafetyManual as well.
- > The code generator will automatically deactivate particular features if not yet released for ASIL application. Please refer to *Table 9-12 Automatically Disabled Features with SilentBSW* for further details.

9.36.3 Automatically Disabled Features

The following table lists all automatically disabled features while DCM is in SilentBSW mode. Other configuration limitations are described in the SafetyManual.

Feature	Condition	Description
Periodic transmission	Service 0x2A is configured	No periodic message objects will be generated.

Table 9-12 Automatically Disabled Features with SilentBSW



10 Troubleshooting

10.1 Compile Error Messages

This chapter describes the error situations the DCM code checks and catches at compile time.

Error Message	Reason	Countermeasure
Service 0x2A is enabled, but no periodic messages have been configured for Dcm. Please, refer to the Dcm TechRef for SID 0x2A configuration aspect.	You have activated service ReadDataByPeriodicIdentifier (\$2A) but have no periodic connection specified.	 Remove the service from the DCM configuration. Check if any available periodic messages in the communication layers used by DCM. Check for periodic connections not automatically recognized by the configuration tool. Refer to 9.36.3 Automatically Disabled Features.
Vendor specific version numbers of Dcm.c and Dcm.h are inconsistent	The Dcm.c and Dcm.h are not from the same delivery.	- Check for correct sources resp. re-update the sources from the delivered package.
Mismatching OEMs between static and generated code	Using the DCM code intended for another OEM.Using wrong configuration tool output for this project.	 Check for correct sources resp. re-update the sources from the delivered package. Check for using correct configuration tool generation output (<i>Dynamic Files</i>).
Unsupported PduR version!	Unrecognized/unsupported PduR version is specified.	Refer to 9.17 How to Deal with the PduR AR version.
Missing information for the supported DTC Extended Data Records! See DCM TechRef!	 The DCM could not retrieve any extended data record information from the DEM module or it is a non-MICROSAR DEM. In a MICROSAR DEM no extended data records are defined. In a MICROSAR DEM no DTC refers an extended data record. 	- Refer to 5.13.3.1Reporting Stored DTC Environment Data for information about this configuration Correct the MICROSAR DEM configuration Remove the corresponding DCM ReadDiagnosticInformation (\$19) sub-function since obviously not required when the DEM does not specify any records.
Missing information for the supported DTC Freeze Frame Records! See DCM TechRef!	- The DCM could not retrieve any snapshot data record information from the DEM module or it is a non-	- Refer to 5.13.3.1Reporting Stored DTC Environment Data for information about this configuration.



Error Message	Reason	Countermeasure	
	MICROSAR DEM. - In a MICROSAR DEM no snapshot records are defined. - In a MICROSAR DEM no DTC refers a snapshot record. - In a MICROSAR DEM all DTC has been specified to have up to zero (0) snapshot records if calculated snapshot records are chosen.	- Correct the MICROSAR DEM configuration Remove the corresponding DCM ReadDiagnosticInformation (\$19) sub-function since obviously not required when the DEM does not specify any records.	
Unknown DEM AR API interface!	Unrecognized/unsupported DEM API version is specified.	Refer to 9.13 How to Select DEM-DCM Interface Version.	
Too many system timers!	Internal error – DCM design limits reached.	Try reducing the maximum number of schedulable DIDs or number of periodic messages per connection (refer to ReadDataByPeriodicIdentifier (\$2A))	
DCM configured to handle OBD DID MIDs via DCM configuration, but MID handling is done by DEM.	This message can be issued		
DCM configured to handle OBD DID MIDs via DEM configuration, but no MID handling is done by DEM.	only if MSR DEM is used together with MSR DCM. Either the MSR DEM has been	Refer to the 9.31 How to Switch Between OBD DTR Support by DCM and DEM for details on OBD DTR handling and the configuration aspects.	
DCM configured to handle OBD MIDs via DCM configuration, but MID handling is done by DEM.	configured to handle OBD DTRs as per AR 4.2.2, but at the same time, DCM is configured to this job too		
DCM configured to handle OBD MIDs via DEM configuration, but no MID handling is done by DEM.	or vice-versa.		
DID ranges are not allowed if any paged DID is configured!	Incompatible features have been activated.	Refer to 9.25.3 Implementation Limitations for details on using paged DIDs.	
Paged DIDs are not allowed if any OBD2 VIDs as per AR4.2.2 are enabled!	Incompatible features have been activated.	Refer to 9.32.1 Implementation Limitations for details on using OBD2 VIDs with AR 4.2.2 API.	
Any other message	Internal inconsistency detection.	Contact Vector.	

Table 10-1 Compile time error messages

10.2 Code Generation Time Messages

Here are listed only some of the specific error/warning/information messages that may occur during code generation for MSR DCM.



Message ID	Reason	Description
DCM05010	The control operation over a DID has been defined to have different execution preconditions for the state group " session " in multiple variants.	
DCM05011	The read operation over a DID has been defined to have different execution preconditions for the state group " session " in multiple variants.	
DCM05012	The write operation over a DID has been defined to have different execution preconditions for the state group " session " in multiple variants.	
DCM05013	An RID has been defined to have different execution preconditions for the state group " session " in multiple variants.	
DCM05014	A diagnostic service has been defined to have different execution preconditions for the state group "session" in multiple variants.	
DCM05015	A diagnostic sub-service has been defined to have different execution preconditions for the state group "session" in multiple variants.	Refer to 9.18.1.2.1 Handling of State Execution Preconditions of Variant
DCM05020	The control operation over a DID has been defined to have different execution preconditions for the state group " security access " in multiple variants.	Diagnostic Entities to learn more about multiple variants and execution preconditions variance.
DCM05021	The read operation over a DID has been defined to have different execution preconditions for the state group " security access " in multiple variants.	
DCM05022	The write operation over a DID has been defined to have different execution preconditions for the state group "security access" in multiple variants.	
DCM05023	An RID has been defined to have different execution preconditions for the state group " security access " in multiple variants.	
DCM05024	A diagnostic service has been defined to have different execution preconditions for the state group "security access" in multiple variants.	
DCM05025	A diagnostic sub-service has been	



Message ID	Reason	Description
	defined to have different execution preconditions for the state group "security access" in multiple variants.	

Table 10-2 Code Generation Time Messages



11 Glossary and Abbreviations

11.1 Glossary

Term	Description
Configurator 5	Configuration and generation tool for MICROSAR components

Table 11-1 Glossary

11.2 Abbreviations

Abbreviation	Description
ALFID	Address and Length Format Identifier
API	Application Programming Interface
ASIL	Automotive Safety Integrity Level
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
C/S	Client/Server (Port)
CDD	Complex Device Driver
CEM	Control Enable Mask
CEMR	CEM Record
DCM	Diagnostic Communication Manager
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DDID	Dynamic DID
DID	Data Identifier
DTR	Diagnostic Test Result
ECU	Electronic Control Unit
EWT	Event Window Time
FC.OVFW	Flow Control with status Overflow
FBL	Flash Boot Loader
HIS	Hersteller Initiative Software
ISR	Interrupt Service Routine
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
MID	Monitor Identifier
NRC	Negative Response Code
N_TA	Node Target Address
OBD2	On Board Diagnostics 2
OCY	Operation Cycle
PBS	Post Build Selectable (variant handling)
PBL	Post Build Loadable (variant handling)



PDID	Periodic DID
PID	Parameter Identifier
PPort	Provide Port
RID	Routine Identifier
ROE	Response on Event
RPort	Require Port
RTE	Runtime Environment
S/R	Sender/Receiver (Port)
SADR	Security Access Data Record
SNS	Service Not Supported
SNV	Symbolic Name Value
SRS	Software Requirement Specification
STRT	Service To Respond To
SWC	Software Component
SWS	Software Specification
TID	Test Identifier
VID	Vehicle Information Identifier
VSG	Vehicle System Group

Table 11-2 Abbreviations



12 Contact

Visit our website for more information on

- News
- Products
- Demo software
- Support
- Training data
- Addresses

www.vector.com