

RUCG Tool

User's Manual

Version 1.1.3

Target Device: RH850/P1M

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other disputes involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawing, chart, program, algorithm, application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics products.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (space and undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.

- 6. When using the Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat radiation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions or failure or accident arising out of the use of Renesas Electronics products beyond such specified ranges.
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please ensure to implement safety measures to guard them against the possibility of bodily injury, injury or damage caused by fire, and social damage in the event of failure or malfunction of Renesas Electronics products, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures by your own responsibility as warranty for your products/system. Because the evaluation of microcomputer software alone is very difficult and not practical, please evaluate the safety of the final products or systems manufactured by you.
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please investigate applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive carefully and sufficiently and use Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall not use Renesas Electronics products or technologies for (1) any purpose relating to the development, design, manufacture, use, stockpiling, etc., of weapons of mass destruction, such as nuclear weapons, chemical weapons, or biological weapons, or missiles (including unmanned aerial vehicles (UAVs)) for delivering such weapons, (2) any purpose relating to the development, design, manufacture, or use of conventional weapons, or (3) any other purpose of disturbing international peace and security, and you shall not sell, export, lease, transfer, or release Renesas Electronics products or technologies to any third party whether directly or indirectly with knowledge or reason to know that the third party or any other party will engage in the activities described above. When exporting, selling, transferring, etc., Renesas Electronics products or technologies, you shall comply with any applicable export control laws and regulations promulgated and administered by the governments of the countries asserting jurisdiction over the parties or transactions.
- 10. Please acknowledge and agree that you shall bear all the losses and damages which are incurred from the misuse or violation of the terms and conditions described in this document, including this notice, and hold Renesas Electronics harmless, if such misuse or violation results from your resale or making Renesas Electronics products available any third party.
- 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics

Abbreviations and Acronyms

Abbreviation / Acronym	Description
ARXML/arxml	AUTOSAR xml
AUTOSAR	AUTomotive Open System Architecture
BSWMDT	Basic Software Module Description Template
<msn></msn>	Module Short Name
ECU	Electronic Control Unit
DMA	Direct Memory Access
ECU	Electronic Control Unit
MCAL	Microcontroller Abstraction Layer
MCU	Microcontroller Unit
XML	eXtensible Mark-up Language
DLL	Dynamic Linking Library

Definitions

Terminology	Description
.arxml	AUTOSAR XML File.
.trxml	Translation XML File.
PerlCtrl	The utility converts a Perl program into an ActiveX control.

Table of Contents

Cha	pter 1	Introduction	9
1.1	Docur	nent Overview	9
Cha	pter 2	Reference	11
2.1.	Refere	ence Documents	11
2.2.	Trade	mark Notice	11
Cha	pter 3	Tool Overview	13
3.1	Usage	·	13
Cha	pter 4	Input Files	17
4.1	Msn C	Control DLL	
4.2		Configuration Description File(s)	
4.3	BSWN	/IDT File	17
4.4	Trans	lation XML File	18
	4.4.1	Translation Header File	
	4.4.2	Device Specific Header File	
4.5		guration XML File	
4.6		Description Files	
Cha	pter 5	Output Files	21
Cha	pter 6	er 6 Precautions	
Chapter 7 User Configuration Validation		25	
Cha	pter 8	Messages	27
8.1.	-	Tool Messages	
	8.1.1	Error Messages	
	8.1.2	Warning Messages	
	8.1.3	Information Messages	
8.2.		non Messages	
	8.2.1	Error Messages	
	8.2.2 8.2.3	Warning MessagesInformation Messages	
8.3.		2 Messages	
0.0.	8.3.1	Error Messages	
	8.3.2	Warning Messages	
	8.3.3	Information Messages	
8.4.	R4.0.3	B Messages	32
	8.4.1	Error Messages	
	8.4.2	Warning Messages	
	8.4.3	Information Messages	
Cha	pter 9	Notes	35
Cha	pter 10) Appendix	37

List of Figures

Figure 3.1 Tool Overview	13
List of Tables	
Table 1.1 Document Overview	9
Table 2.1 Reference Documents	11
Table 3.1 Options and Description	14
Table 8.1 R3.2.2 BSWMDT Mandatory Parameters	32
Table 8.2 R4.0.3 BSWMDT Mandatory Parameters	33

Introduction Chapter 1

Chapter 1 Introduction

The document describes the features of the RUCG Tool.

RUCG Tool is a command line tool that extracts information from ECU Configuration Description File(s) and generates Driver C source and C header files.

This document contains information on the options, input and output files of the RUCG Tool. In addition, this manual covers a step-by-step procedure for the usage of tool.

1.1 Document Overview

This user manual is organized as given in the table below:

Table 1.1 Document Overview

Section	Contents	
Section 1 (Introduction)	Provides an introduction to the document and explains how information is organized in this manual.	
Section 2 (Reference)	Provides a list of documents referred while developing this	
Section 3 (RUCG Tool Overview)	Provides the component overview of RUCG.	
Section 4 (Input Files)	Provides information about all the input files supplied to Tool.	
Section 5 (Output Files)	Explains the output files that are generated by the RUCG Tool.	
Section 6 (Precautions)	Contains precautions to be taken during execution of RUCG Tool.	
Section 7 (User Configuration Validation)	Describes about user configuration validation done by the RUCG Tool.	
Section 8 (Messages)	Describes all the Error/Warning/Information messages that help the user to understand the probable reason for the	
Section 9 (Notes)	Provides notes to help the user to understand this document	
Section 10(Appendix)	Provides additional information, if any.	

Chapter 1 Introduction

Reference Chapter 2

Chapter 2 Reference

2.1. Reference Documents

The following table lists the documents referred to develop this document:

Table 2.1 Reference Documents

SI.No.	Title	Version
1.	EAAR-RS-0089.pdf	1.1.0
2.	GettingStarted_MCAL_Drivers_X1x.pdf	1.0.6

2.2. Trademark Notice

Microsoft and Windows are trademarks/registered trademarks of Microsoft Corporation.

Chapter 2 Reference

Tool Overview Chapter 3

Chapter 3 Tool Overview

RUCG Tool is a command line tool that provides scalability and configurability for the component. It accepts Module Specific DLL, ECU Configuration Description File(s), BSWMDT File, Translation XML File and Configuration XML File as input and generates the C Header and C Source files. However Configuration XML File is optional.

RUCG Tool is a standalone windows executable. The Tool can run without any additional dependencies.

Operating Environment:

Operating System	Windows 7 Professional SP1 64 bit
RAM	8 GB

RUCG Tool doesn't support parallel execution.

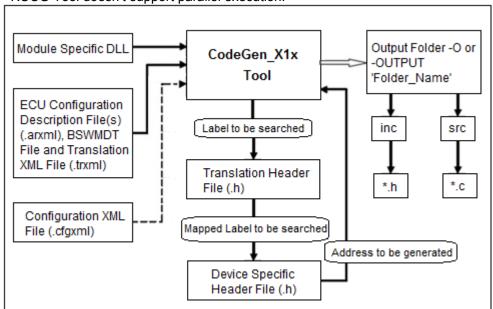


Figure 3.1 Tool Overview

For more information about input files to be given to the RUCG tool refer section "4 *Input Files*".

For more information about output files generated by the RUCG tool refer section "5 *Output Files*".

3.1 Usage

This section provides the information regarding usage of the RUCG Tool. It also provides the syntax of the command line arguments (input filenames and options).

RUCG Tool executable is invoked as shown below.

RUCG.exe <DLL Path> [<Options>] {<Input Filename>}

Chapter 3 Tool Overview

Where,

RUCG.exe: RUCG Tool Executable DLL Path: Module specific DLL file path

Options: [-H/-Help -C/-Config -O/-Output -Osrc -Oinc -L/-Log -F/-

FILVERSION -D/-Dryrun -T/-TimeOut]

Input Filename: {ECU Configuration Description File(s), BSWMDT File, Translation XML File [optional] and Configuration XML File

[optional]}

Notations:

{data} represents compulsory data

<data> represents the actual data that will be specified on command

line during tool usage.

[data] represents optional data.

Table 3.1 Options and Description

Options	Description
-H/-Help	To display help regarding usage of the tool. Gets the highest priority when used with other options.
-C/-Config	To execute tool with the options provided in the Configuration XML File. Command line options get the higher priority than the options provided in Configuration XML File.
-O/-Output	By default, the tool generates output files in the " <msn>_Output" folder in the path where DLL is present. The user can use the -O option followed by the folder name, to generate the output files in the specified folder. Either absolute path or relative path can be provided to specify the folder name.</msn>
	The C Source and C Header files are generated in the sub folders "src" and "inc" within the output folder.
-Osrc	The user can use the -Osrc option followed by the folder name, to generate the C Source files in the specified folder.
-Oinc	The user can use the -Oinc option followed by the folder name, to generate the C Header files in the specified folder.
–L/-Log	To log the output to the <msn>.log file in the output folder.</msn>
-D/-Dryrun	To execute tool in validation mode. The tool will not generate output files even though the input file provided is error free.
-F/-FILEVERSION	To display the perl file version which are used to create the DLL.
-T/-TimeOut	The user can use the –TimeOut option followed by the timeout value, to set the maximum timeout for underlying DLL execution. Default timeout value is 10 seconds. Timeout value should be in the range of 1 – 60 seconds.

Remark

• If the "-H/-Help" option is provided on the command line without any other inputs, RUCG Tool help is displayed.

Tool Overview Chapter 3

 If the "-H/-Help" option is provided with DLL path, module specific DLL help is displayed.

- If Translation XML File is not provided on the command line then "<Msn>_X1x.trxml" which is present in the same location of DLL is considered as "default" Translation XML File by the RUCG Tool.
- If Configuration XML File is not provided on the command line then "<Msn>_X1x.cfgxml" which is present in the same location of DLL is considered as "default" Configuration XML File by the RUCG Tool.
- The RUCG tool doesn't allow parallel execution.
- The RUCG tool returns its execution status to the user through the console. User can get this tool return status using the environment variable %ERRORLEVEL%.

Chapter 3 Tool Overview

Input Files Chapter 4

Chapter 4 Input Files

RUCG Tool accepts the following files as inputs to generate output files.

4.1 Msn Control DLL

Module specific DLL File can be generated using PerlCtrl utility from the perl scripts. The Perl script contains implementation of generating configuration output files with PerlCtrl template. PerlCtrl accepts the perl scripts and generates module specific DLL. For the PerlCtrl template contents, refer Chapter "10 Appendix".

4.2 ECU Configuration Description File(s)

The ECU Configuration Description file is in XML format, which contains the configured values for Parameters, Containers and Modules. ECU Configuration Description XML File format will be compliant with the AUTOSAR ECU specification standards. ECU Configuration Description File can be created or edited using ECU Configuration Editor.

4.3 BSWMDT File

The BSWMDT File in XML format, which is the template for the Basic Software Module Description. BSWMDT File format will be compliant with the AUTOSAR BSWMDT specification standards.

RUCG Tool uses "Common Published Information" from module specific BSWMDT file. BSWMDT file should not be updated manually since it is "Static Configuration" file.

The required elements from BSWMDT File by module specific Generation Tool is as follows:

BSW-MODULE-DESCRIPTION

MODULE-ID

BSW-IMPLEMENTATION

- SW-VERSION
- VENDOR-ID
- AR-RELEASE-VERSION
- VENDOR-API-INFIX

In case of multiple driver support implementation, VENDOR-API-INFIX is mandatory. In case of single driver support implementation, VENDOR-API- INFIX is not used.

Chapter 4 Input Files

4.4 Translation XML File

Translation XML File is in XML format which contains translation and device specific header file path. For the syntax of the contents of Translation XML File, please refer the Chapter 10 Appendix.

If mapped device specific address label is changed/updated then only respective mapping in Translation Header File needs to be updated. In this case there will not be any impact on Generation Tool for the generation of address in tool generated output file(s).

4.4.1 Translation Header File

This file is look-up table (mapping in the form of definitions) for the device specific address labels. Based on the configuration in ECU Configuration Description File, the mapped device specific address labels will be searched in Device Specific Header File by RUCG Tool to generate associated address in tool generated output file(s). For the Translation Header File path, the value of "<Msn>DeviceName" parameter from the container "<Msn>General" container should be present as child tag of TRANSLATION-FILE-PATH in Translation XML File. Both "Absolute" and "Relative" paths are supported by generation tool however default path is "Relative" path.

E.g. <TRANSLATION-FILE-PATH> <Value_Of_MsnDeviceName>..\DF_Timer.h ..\DF_Timer_ISR.h<//>
Value_Of_MsnDeviceName> </TRANSLATION-FILE-PATH>

4.4.2 Device Specific Header File

This file contains device specific labels and associated address. Based on the configuration in ECU Configuration Description File, the mapped device specific address labels will be used to generate associated address in tool generated output file(s). For the Device Specific Header File path, the value of "<Msn>DeviceName" parameter from the container "<Msn>General" container should be present as child tag of DEVICE-FILE-PATH in Translation XML File. Both "Absolute" and "Relative" paths are supported by generation tool however default path is "Relative" path.

If multiple Device Specific Header Files need to be provided for the same device (value of "<Msn>DeviceName" parameter) in Translation XML File, then each Device Specific Header File path should be separated with "space".

Input Files Chapter 4

4.5 Configuration XML File

Configuration XML File is in XML format which contains command line options and input/output path. For the syntax of the contents of Configuration XML File, please refer the Chapter 10 Appendix.

E.g. <LOG>ON/OFF</LOG> <HELP>ON/OFF</HELP>

4.6 Other Description Files

RUCG Tool requires other description files (i.e. Dem File and MCU File) inputs, depends on the corresponding parameter configuration in the ECU Configuration Description File

Chapter 4 Input Files

Output Files Chapter 5

Chapter 5 Output Files

RUCG Tool is a command line tool that provides scalability and configurability for Msn Driver component. It accepts inputs which mentioned in the Chapter 4 Input Files and generates configuration details in C Header and C Source files (<Msn>_Cfg.h, <Msn>_Cbk.h, <Msn>_Lcfg.c and <Msn>_PBcfg.c).

<Msn>_Cfg.h

This file contains pre-compile configuration parameters.

<Msn>_Cbk.h

This file contains prototype declarations for callback notification functions.

<Msn> Lcfg.c

This file contains link-time parameters.

<Msn>_PBcfg.c

This file contains post-build configuration data.

Log File

The file which briefs the execution details of RUCG Tool.

Remark: Output files generated by Msn Driver Generation Tool should not be modified or edited manually

Chapter 5 Output Files

Precautions Chapter 6

Chapter 6 Precautions

 Module Specific DLL must be created by using PerlCtrl with the PerlCtrl template which specified in this document. For the PerlCtrl template contents, refer Chapter "10 Appendix".

- ECU Configuration Description File and BSWMDT File must comply with AUTOSAR standard for R4.0 ECU Configuration Description File and BSWMDT File respectively.
- Default Translation XML File (<Msn>_Xx4.trxml) must be present in same location of DLL file.
- Default Configuration XML File (<Msn>_Xx4.cfgxml) must be present in same location of DLL file.
- If Translation XML File is not provided on the command line, <msn>_Xx4.trxml which is present in same location of DLL file is considered as 'default' Translation XML File.
- If Configuration XML File is not provided on the command line, Msn_Xx4.cfgxml which is present in same location of DLL file is considered as 'default' Configuration XML File.
- ECU Configuration Description File(s) should contain the file extension '.arxml'.
- Translation XML File should contain the file extension '.trxml'.
- Configuration XML File should contain the file extension '.cfgxml'.
- If the output files generated by RUCG Tool are modified externally, then they may lead to error while compilation or not produce the expected results.

Chapter 6 Precautions

Chapter 7 User Configuration Validation

This section provides help to analyze the error, warning and information messages displayed during the execution of RUCG Tool. It ensures conformance of input file with syntax and semantics. It also performs validation on the input file for correctness of the data.

For more details on list of Error/Warning/Information messages that are displayed as a result of input file(s) validation, refer Chapter "8 Messages".

The RUCG Tool displays error or warning or information messages when the user has configured incorrect inputs. There are two types of messages displayed,

RUCG Tool generated messages Module Specific DLL generated messages

The format of RUCG Tool generated message is as shown below.

CGERR/CGINF/CGWAR<xx><yy>:

<Error/Warning/Information Message>.

<xx>: Stage of error happen

<yy>: Actual error code

The format of Module Specific DLL generated messages is as shown below.

ERR/WRN/INF<mid><xxx>: <Error/Warning/Information
 Message>. where,

<mid>: 123 - MSN Driver Module id (123) for user configuration checks.

000 - for command line checks.

<xxx>: 001-999 - Message id.

- · File Name: Name of the file in which the error has occurred
- Path: Absolute path of the container in which the parameter is present.

'File Name' and 'Path' need not be present for all Error/Warning/Information messages.

Messages Chapter 8

Chapter 8 Messages

The messages help to identify the syntax or semantic errors in the inputs supplied to execution.

The following section gives the list of error, warning and information messages displayed during the tool execution.

When the tool detects the following errors, it will automatically exit after showing the error message.

8.1. RUCG Tool Messages

This section contains the list of error/warning/information messages which is generated by the RUCG tool.

8.1.1 Error Messages

CG_ERR0001: Another instance is already running.

This error occurs, if trying to run more than one instance of application in parallel.

CG_ERR0002: First argument should be a module specific DLL file path.

This error occurs, if the specified first file argument does not have extension (.dll or .ocx).

CG_ERR0003: DLL not found on specified path.

This error occurs, if the specified DLL file input is not found in the specified location.

CG_ERR0004: Specified module specific DLL file is not DLL executable.

This error occurs, if the specified DLL file is not a windows executable DLL.

CG ERR0101: Please provide valid number of arguments.

This error will occur, if the no option is provided in the command line.

CG_ERR0102: Please provide valid time out value in seconds (1 - 60).

This error occurs, if the specified timeout value is invalid or out of range.

CG_ERR0301: DLL activation context creation failed.

This error occurs, if the generated manifest file for the specified DLL is wrong. Ensure the manifest file write implementation in the RUCG Tool.

CG_ERR0302: Specified DLL implemented using wrong PerlCtrl template.

This error occurs, if the specified DLL file is created using wrong Control ID in PerlCtrl template. For the PerlCtrl template contents, refer Chapter "10 Appendix".

CG_ERR0303: DLL directory should be write-enabled.

This error occurs, if the specified DLL file path is write protected.

CG_ERR0401: Code generation is not completed within the time out.

This error occurs, if the specified DLL does not return within a default or specified timeout.

Chapter 8 Messages

Note: When Code Generation is terminated due to timeout, the RUCG Tool drops a temporary file (GLOB(0x2a8d104)) in the execution location. Please delete the file after the execution.

CG_ERR0402: Cannot find implementation of method "execution" in the DLL.

This error will occur, if the specified DLL created without entry function call "execute".

CG_ERR0403: Error occurred while code generation.

This error will occur, when the specified DLL calls "exit" function while its execution. In the tool code implementation, general assumption is "exit" function in the perl script should called only at the erroneous conditions.

8.1.2 Warning Messages

None

8.1.3 Information Messages

CG INF0001: Tool Version

This is to display Tool Version for each execution of the tool.

CG INF0002: Module DLL Path

This is to display parsed Module DLL Path from the command line arguments.

CG_INF0003: <RUCG Tool Usage Information>

This is to display usage information of the tool.

CG_INF0004: Execution terminated due to parallel execution errors. This information will occur, if the execution is terminated due to parallel

execution.

CG INF0005: Execution terminated due to command line errors.

This information will occur, if the execution is terminated due to command line errors.

CG_INF0006: Execution terminated due to the previous errors.

This information will occur, if the error happened during the DLL execution.

CG_INF0007: Code generation completed successfully.

This information will occur, if the tool execution completed successfully.

8.2. Common Messages

This section contains the list of error/warning/information messages which is common for AUTOSAR Renesas R3.2.2 and R4.0.3 X1x MCAL Driver module that will be generated during the Module Specific DLL execution.

8.2.1 Error Messages

ERR000001: File <File_Name> does not exist.

This error occurs, if the input <File_Name> is not found.

ERR000002: Name of the Generation Tool Configuration XML File is

Messages Chapter 8

not given along with <-C/-CONFIG> option.

This error occurs, if the name of the Generation Tool Configuration XML File is not given along with <-C/-CONFIG> option.

ERR000003: File <File name> is not as per XML standard.

This error will occur, if the input <File name> is not as per XML standard.

ERR000004: Cannot open the <Log file name> file.

This error will occur, if unable to open the <Log file name> file.

ERR000005: Name of output directory is not given along with <-O/-OUTPUT> option.

This error will occur, if the output directory name is not given along with <- O/- OUTPUT> option.

ERR000006: Name of output directory is not given in OUTPUT-PATH tag in <File name>.

This error will occur, if the output directory is not given in OUTPUT-PATH tag in configuration file.

ERR000007: The Generation Tool expects inputs.

This error will occur, if Only specified Module Specific DLL path in the command line without default configuration file.

ERR000008: The option <option> is not supported by the Generation Tool. The Generation Tool supports <-O/-OUTPUT, -Osrc , -Oinc, -H/-HELP, -L/-LOG, -C/-CONFIGFILE and -D/-DRYRUN>" options.

This error will occur, if the invalid <option> is provided to the tool.

ERR000009: Invalid output directory name <output directory name> as the file with same name exists.

This error will occur, if the <output directory name> already exists.

ERR000010: Invalid output directory name <output directory name> Directory name should not contain any of *\?\"\|\: characters.

This error will occur, if the <output directory name> path contains junk character.

ERR000011: ECU Configuration Description File is not provided as input to the Generation Tool.

This error will occur, if the ECU Configuration Description File is not given in the command line or in configuration file.

ERR000012: The input <File name> is not as per XML standard. Provide the ECU Configuration Description File as input on the command line.

This error will occur, if the ECU Configuration Description File is not as per XML standard.

ERR000014: 'TRANSLATION-FILE-PATH' tag in <File name> is empty.

This error will occur, if the translation <File name > doesn't have "TRANSLATION-FILE-PATH" tags.

ERR000015: The 'device_name' tag should be present as child of 'TRANSLATION-FILE-PATH" tag in <File name>.

This error will occur, if the device mentioned in ECU Configuration Description File is not present in "TRANSLATION-FILE-PATH" tag in the <File name>

ERR000016: 'DEVICE-FILE-PATH' tag in <File name> is empty.

Chapter 8 Messages

This error will occur, if the translation file <File name> doesn't have "DEVICE- FILE-PATH" tags.

ERR000017: The 'device_name' tag should be present as child of 'DEVICE-FILE-PATH' tag in <File name>.

This error will occur, if the device mentioned in ECU Configuration Description File is not present in "DEVICE-FILE-PATH" tag.

ERR000018: Cannot create directory <output directory name>.

This error will occur, if unable to create output directory coutput directory name>.

ERR000019: Cannot open <File name>.

This error will occur, if unable to open <File name>.

ERR000020: The macro label <macro label> should be unique in <translation file name> translation C Header File.

This error will occur, if macro label is not unique in translation C Header File.

ERR000021: The macro definition for <macro label> macro is not found in <translation file name> translation C Header File. The macro label format should be <label format>.

This error will occur, if macro definition is not found in translation C Header File.

ERR000022: The macro value for <macro label> macro is empty in <translation file name> translation C Header File.

This error will occur, if macro label value is empty in translation C Header File.

ERR000023: The macro definition for <macro value> macro is not found in input device specific C Header File(s).

This error will occur, if macro definition is not found in input device specific C Header File(s).

ERR000024: The macro value for <macro value> macro is empty in input device specific C Header File(s).

This error will occur, if macro value is empty in input device specific C Header File(s).

ERR000025: Path <Configured Reference Path> provided for Bsw Module is incorrect.

This error will occur, if the reference provided for Bsw Module Component is incorrect.

ERR000026: BSWMDT content is not present in the input file(s) for '<Module Name>' module.

This error will occur, if the module specific BSWMDT content is not present in the input files.

ERR000027: <MSN> BSWMDT File of either AUTOSAR R3.2 or R4.0 should be given as input.

This error will occur, if the both R3.2 and R4.0 BSWMDT file given to the input to the generation tool.

ERR000028: 'MODULE-DESCRIPTION-REF' element should be present in the description file of '<Module Name>' module.

This error will occur, if the MODULE-DESCRIPTION-REF element is not present module specific description file.

Messages Chapter 8

ERR000029: AUTOSAR version of BSWMDT File and Module Description File is different.

This error will occur, if the AUTOSAR version of the BSWMDT File and module description file is different.

Remark Apart from the above error codes DLL will generates some additional Module Specific errors during the execution.

8.2.2 Warning Messages

WRN000001: As per AUTOSAR ECU Configuration Description File naming convention, the file extension should be '.arxml' for file.

This warning will occur, if ECU Configuration Description files having an extension other than ".arxml".

8.2.3 Information Messages

INF000001: DLL Version:

This is to display DLL Version of specified module specific DLL.

INF000002: Command line arguments:

This is to display the DLL arguments received from the Tool.

INF000003: The valid inputs are provided below.

This information will occur, if the DLL option is not given. (I.e. only provide Module DLL Path as command line arguments)

INF000004: Opened file <filename> at <time>.

This information will occur, during opening the file.

INF000005: Error(s) and Warning(s) detected.

This information will display the number of errors and warnings.

INF000006: Execution completed successfully.

This information will occur, if the execution completed successfully.

INF000007: Execution completed successfully with warnings.

This information will occur, if the execution completed successfully with warnings.

INF000008: Execution terminated due to command line errors.

This information will occur, if the execution terminated due to command line errors.

INF000009: Execution terminated due to error in the input file.

This information will occur, if the execution terminated due to error in the input file.

INF000010: Execution terminated due to error, during the structure generation in the output file.

This information will occur, if the execution terminated during structure generation in output file.

8.3. **R3.2.2 Messages**

This section contains the list of error/warning/information messages which is specific to AUTOSAR Renesas R3.2.2 X1x MCAL Driver module that will be generated during the Module Specific DLL execution.

Chapter 8 Messages

8.3.1 Error Messages

ERR000030: The 'parameter tag name' tag should be configured in BSWMDT File.

This error will occur, if any of the configuration parameter(s) mentioned below is (are) not configured in BSWMDT File.

The list of mandatory parameters with respect to container is listed below:

Table 8.1 R3.2.2 BSWMDT Mandatory Parameters

Table 6.1 No.2.2 Bowmb1 Managery Farameters		
Container	Parameters	
BswImplementation	SW-MAJOR-VERSION	
	SW-MINOR-VERSION	
	SW-PATCH-VERSION	
	AR-MAJOR-VERSION	
	AR-MINOR-VERSION	
	AR-PATCH-VERSION	
	VendorApiInfix	
BswModuleDescription	ModuleId	

Note: VendorApiInfix parameter is mandatory for only some modules.

8.3.2 Warning Messages

None.

8.3.3 Information Messages

None.

8.4. **R4.0.3 Messages**

This section contains the list of error/warning/information messages which is specific to AUTOSAR Renesas R4.0.3 X1x MCAL Driver module that will be generated during the Module Specific DLL execution.

8.4.1 Error Messages

ERR000030: The 'parameter tag name' tag should be configured in BSWMDT File.

This error will occur, if any of the configuration parameter(s) mentioned below is (are) not configured in BSWMDT File.

Messages Chapter 8

The list of mandatory parameters with respect to container is listed below:

Table 8.2 R4.0.3 BSWMDT Mandatory Parameters

Container	Parameters
BswImplementation	SwVersion
	Vendorld
	ArReleaseVersion
	VendorApiInfix
BswModuleDescription	ModuleId

Note: VendorApiInfix parameter is mandatory for only some modules.

8.4.2 Warning Messages

None.

8.4.3 Information Messages

None.

Chapter 8 Messages

Notes Chapter 9

Chapter 9 Notes

"Tool" terminology is used interchangeably to refer RUCG Tool.

Chapter 9 Notes

Appendix Chapter 10

Chapter 10 Appendix

Translation XML File

Translation XML File content format shall be given as mentioned below:

```
<?xml version="1.0" encoding="UTF-8"?> <!--
```

The tag PATH-DETAILS should not be renamed since it is top level element.

-->

<PATH-DETAILS>

۔۔اے

TRANSLATION-FILE-PATH should contain the path of the translation header file. The tag TRANSLATION-FILE-PATH should not be renamed. Only respective value should be updated for the translation header file.

-->

<TRANSLATION-FILE-PATH>

<value_of_MsnDeviceName>Path</value_of_MsnDeviceName>
</TRANSLATION-FILE-PATH>

<!--

The tags present in DEVICE-FILE-PATH tag should contain the path of the device specific C Header File.

The tags present in DEVICE-FILE-PATH should be equal to the value for parameter

 ${\bf MsnDeviceName\ present\ in\ MsnGeneral\ container.\ The}$

tag DEVICE-FILE-PATH should not be renamed.

If multiple device header files need to provide for same device then each file name should be separated with space.

-->

</PATH-DETAILS>

```
<DEVICE-FILE-PATH>
  <value_of_MsnDeviceName>Path</value_of_MsnDeviceName>
</DEVICE-FILE-PATH>
```

Chapter 10 Appendix

Configuration XML File

Configuration XML File content format shall be given as mentioned below:

```
<?xml version="1.0" encoding="UTF-8"?>
-->
<!--
None of the tag from this XML should be renamed or deleted.
-->
<XML>
 <!-- Supported Command Line options<OPTION>
  <!-- Only ON or OFF should be provided. -->
  <HELP>ON/OFF</HELP>
  <!-- Only ON or OFF should be provided. -->
  <LOG>ON/OFF</LOG>
  <!-- Only ON or OFF should be provided. -->
  <DRYRUN>ON/OFF</DRYRUN>
  <!-- Only ON or OFF should be provided. -->
  <OUTPUT>OFF</OUTPUT>
  <!-- Name of output directory -->
  <OUTPUT-PATH>Path</OUTPUT-PATH>
 </OPTION>
 <!-- To provide input files. If multiple input files need to be
   provided then each file should be separated with ",". -->
 <INPUT-FILE>Path</INPUT-FILE>
</XML>
```

Appendix Chapter 10

PerlCtrl Template

Module Specific dll can be created by using PerlCtrl utility. PerlCtrl accepts the perl scripts which consists implementation of generating module specific configuration files with correct perlCtrl template.

PerlCtrl Template content shall be given as mentioned below:

```
=pod
=begin PerlCtrl
    %TypeLib = (
       PackageName => 'MsnCtrl',
       TypeLibGUID => '{52093072-B5B3-413B-B4CF-
ACD3E3AAFE7A}', # do NOT edit this line
       ControlGUID => '{1D887D1B-E692-4F8B-8552-F6957BB8B834}',
# do NOT edit this line either
       DispInterfaceIID=> '{CFC0FF40-EAE4-49C8-8720-
850170DB1ADD}', # or this one
       ControlName => 'MsnVeryOwnControl',
                   => 1. # increment if new object with same ProgID
       ControlVer
                   # create new GUIDs as well
       ProgID
                   => 'MsnCtrl.Control',
       DefaultMethod => 'main',
       Methods
                    => {
         'main' => {
             DocString
                             => "The main() method",
             HelpContext
                              => 10,
                             => VT_I4,
             RetType
             TotalParams
                              => 1,
              NumOptionalParams => 0,
             ParamList
                             =>[ 'cmd_input' => VT_BSTR ]
           },
         }, # end of 'Methods'
       Properties
                   => {
         }, # end of 'Properties'
       ); # end of %TypeLib
=end PerlCtrl
=cut
```

Chapter 10 Appendix

Revision History

SI.No.	Description	Version	Date
1	Initial Version	1.0.0	7-Nov-2015
2	Section 3.1 and 8.1 are updated as per the new enhancement feature requirements (EAAR_PN0089_FR_0018, EAAR_PN0089_FR_0019, EAAR_PN0089_NR_0010).	1.1.0	12-Dec-2015
3	Reference section is updated with correct document name.	1.1.1	7-Apr-2016
4	R-Number corrected for the document	1.1.2	13-Jul-2016
5	Following changes are made, 1. Updated notice and copyright information. 2. Updated R Number.	1.1.3	17-Feb-2017

RUCG Tool User's Manual V1.1.3

Publication Date: Rev.1.01, February 17, 2017

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information

Renesas Electronics America Inc.
2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tei: +1-408-588-6000, Fax: +1-408-588-6130
Renesas Electronics Canada Limited
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tei: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Reneasa Electronics Europe GmbH Arcadiastrasse 10, 40472 Düsseldorf, Germany Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Reneasa Electronics (China) Co., Ltd.
Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +861-08235-1155, Fax: +861-08235-7679

Reneasa Electronics (Shanghai) Co., Ltd.
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: 486-21-2226-0886, Fax. 486-21-2226-0999

Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 1617-, Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

137- No. 363, Fu Shing North Road, Taipei 10543, Taiwan

Tel: +886-2-1875-9600, Fax: +886-2-1875-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 hyllux Innovation Centre, Singapore 339949

Tel: +655-6213-0200, Fax: +65-6213-0300

18. 169-0215-0200; 7ax. 169-0215-02000
Reneass Electronics Malaysia Sdn.Bhd.
Unit 1207, Block B, Menara Amoorp, Amoorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tei: 460-3-7955-5930, Fax: 460-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HAL II Stage, Indiranagar, Bangalore, India Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd. 12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea Tel: +82-2-558-3737, Fax: +82-2-558-5141

RUCG Tool User's Manual

