

# **MICROSAR EcuM Flex**

**Technical Reference** 

SysService\_Asr4EcuM Version 5.00.00

Authors Jochen Vorreiter
Status Released



# **Document Information**

# History

Author	Date	Version	Remarks
Jochen Vorreiter	2012-06-06	1.00.00	> Initial Setup
Jochen Vorreiter	2013-01-30	1.00.01	> ESCAN00064669 Updated compiler abstraction and memory mapping
Jochen Vorreiter	2013-05-03	1.01.00	> Added support of post-build-loadable
			Added support of asynchronous transceiver handling in 3.9.2
			<ul> <li>Added API</li> <li>EcuM_ClearValidatedWakeupEvent()</li> </ul>
			in 5.2.10
			> Extended description of EcuM_StartupTwo() in 5.2.3
Jochen Vorreiter	2013-10-31	2.00.00	> ESCAN00069010 Added support for Alarm Clock in 3.14
			> ESCAN00071546 Added Multi Core support in 3.15
			> New API EcuM_GoToSelectedShutdownTarget
			ESCAN00071553 Changed handling of wakeup source states in 5.1
			> Changes in chapter 4.2 Critical Sections
			> ESCAN00071552 Removed BswM_EcuM_CurentState notification
Jochen Vorreiter	2014-06-03	3.00.00	> Added Support for EcuM fixed
			<ul> <li>ESCAN00073631 Fixed missing description of EcuM_BswErrorHook()</li> </ul>
Jochen Vorreiter	2014-11-04	4.00.00	<ul> <li>Added Support for Post-Build Selectable</li> </ul>
			Added chapter 3.15.1.2.1 Driver initialization on the Slave Core.
			<ul> <li>Added chapter 3.15.5 Reconfiguration of the BSW Core ID</li> </ul>
			<ul> <li>Added MICROSAR specific CanSM handling in 3.18.2.3.3</li> </ul>
			<ul> <li>ESCAN00079382 Fixed missing description of the StateRequest Port in 5.8.1.1</li> </ul>
			> ESCAN00077124 Fixed description of Critical Sections in 4.2
			> ESCAN00079407, ESCAN00068331 Fixed description in Type Definitions of



			EcuM_WakeupStateType in 5.1
Jochen Vorreiter	2014-11-25	4.00.01	<ul> <li>Adapted description of EcuM_DeterminePbConfiguration</li> </ul>
Jochen Vorreiter	2015-01-26	4.01.00	Updated the Include structure and added two files in 4.1.2
			Updated access on PB and Variant data in DriverInitLists in Ch. 5.7.2
Jochen Vorreiter	2015-07-14	5.00.00	Added new EcuM error ID for invalid CoreID in Ch. 3.11.3
			<ul><li>Added support for Mode Handling, see Ch. 3.16, 5.3.13 and 5.5</li></ul>
			Removed subchapters "Parameter Checking" from Ch. 3.11
			Added missing API ID in Table 3-8 Service IDs

### **Reference Documents**

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_SWS_ECUStateManager.pdf	V3.0.0
[2]	AUTOSAR	AUTOSAR_SWS_DevelopmentErrorTracer.pdf	V3.2.0
[3]	AUTOSAR	AUTOSAR_SWS_DiagnosticEventManager.pdf.pdf	V4.2.0
[4]	AUTOSAR	AUTOSAR_TR_BSWModuleList.pdf	V1.6.0
[5]	AUTOSAR	AUTOSAR_EXP_ModemanagementGuide.pdf	V1.0.0
[6]	VECTOR	TechnicalReference_PostBuildLoadable.pdf	see delivery
[7]	AUTOSAR	AUTOSAR_SWS_ECUStateManagerFixed.pdf	V1.4.0
[8]	VECTOR	TechnicalReference_IdentityManager.pdf	see delivery



### Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



### **Contents**

1	Comp	onent His	story		13
2	Introd	luction			14
	2.1	Archited	ture Overvi	ew	15
3	Funct	ional Des	cription		17
	3.1	Feature	s		17
	3.2	States o	f EcuM flex		19
	3.3	States o	f EcuM fixe	d	20
	3.4	The Sta	te Diagram	of the EcuM flex	22
	3.5	The Sta	te Diagram	of the EcuM with fixed state machine	23
	3.6	Initializa	tion		24
		3.6.1	EcuM_Ini	t	24
		3.6.2	EcuM_Sta	artupTwo	24
			3.6.2.1	EcuM_StartupTwo in case of EcuM flex	24
			3.6.2.2	EcuM_StartupTwo in case of EcuM fixed	24
		3.6.3	Initializati	on Order	24
		3.6.4	Additiona	l Code in the Initialization Callouts	25
		3.6.5	Inclusion	of Additional Header Files	26
		3.6.6	Configura	ation Set Selection	26
	3.7	Initializa	tion of a Mu	ıltiCore ECU	27
	3.8	Shutdov	vn Targets		27
		3.8.1	Using the	API EcuM_SelectShutdownTarget()	27
		3.8.2	Default S	hutdown Target	27
		3.8.3	Reset Mo	odes	27
		3.8.4	Sleep Mo	des	28
	3.9	Wake-u <sub>l</sub>	Sources		28
		3.9.1	Validation	Timeout	28
		3.9.2	Check-Wa	akeup Validation Timeout	29
		3.9.3	ComM Ch	nannel Reference	29
		3.9.4	Polling of	Wake-up Sources	29
		3.9.5	MCU Res	set Reason	29
	3.10	Main Fu	nctions		30
		3.10.1	Wake-up	Validation Protocol	30
		3.10.2	Wake-up	Validation Protocol for asynchronous Can transceiver	32
	3.11	Error Ha	andling		33
		3.11.1	Developm	nent Error Reporting	33
		3.11.2	Productio	on Code Error Reporting	35



	3.11.3	EcuM_Err	orHook		35
3.12	Callout I	Execution Se	equences		36
	3.12.1	Callouts fr	om Startup to	o Run	36
	3.12.2	Callouts fr	om Run to S	leep (Halt) and back to Run	37
	3.12.3	Callouts fr	om Run to R	eset	38
	3.12.4	Callouts fr	om Run to O	ff	38
3.13	EcuM Fl	lex Users an	d Defensive	Behavior	39
3.14	Alarm C	lock			40
	3.14.1	Configurin	ng the Gpt to	provide the Time base	40
	3.14.2	Configurin	ng the EcuM f	or using the Alarm Clock	40
	3.14.3	Setting of	the EcuM Clo	ock	41
	3.14.4	Setting of	a Time Trigge	ered Wake Up Alarm	41
3.15	MultiCo	re Ecu			42
	3.15.1	Initializatio	on of a MultiC	ore ECU	42
		3.15.1.1	Initialization	on the Master Core	42
		3.15.1.2	Initialization	on the Slave Core	43
			3.15.1.2.1	Driver initialization on the Slave Core	43
	3.15.2	Sleep han	dling of slave	cores	44
	3.15.3	Blocking of	of the BSW S	cheduler during Sleep	45
	3.15.4	Shutdown	of the MultiC	Core ECU	45
	3.15.5	Reconfigu	ration of the	BSW Core ID	45
3.16	Mode H	andling for E	cuM Flex		46
	3.16.1	Mode Har	ndling		46
	3.16.2	Run Requ	est Protocol.		47
3.17	Generat	ed Template	Files		48
3.18	Wake-u <sub>l</sub>	p Event Han	dling and Wa	ke-up Validation	48
	3.18.1	Wake-up	after a Physic	cal Sleep Mode	48
		3.18.1.1	Use Case [	Description	48
		3.18.1.2	Execution F	Flow	49
		3.18.1.3	Callout Imp	lementation Examples	49
	3.18.2	•		Communication Channels (ECUM in RUN	
		State)			
		3.18.2.1		Description	
		3.18.2.2		Flow	
		3.18.2.3	·	lementation Examples	
			3.18.2.3.1	EcuM_CheckWakeup	
			3.18.2.3.2	EcuM_CheckValidation	51
			3.18.2.3.3	EcuM_StartWakeupSources and EcuM_StopWakeupSources in the case of a MICROSAR CanSM	51



#### 

_	•			
4.1	•	of Delivery		
	4.1.1	Static Files		
	4.1.2	Dynamic Files		
4.2		Sections		
4.3		Structure		
4.4	Depend	dencies on other BSW Modules		
	4.4.1	BswM	56	
		4.4.1.1 BswM and EcuM fixed	56	
	4.4.2	AUTOSAR OS	56	
	4.4.3	MCU	56	
	4.4.4	DEM	56	
	4.4.5	DET	56	
	4.4.6	ComM	56	
		4.4.6.1 ComM and EcuM fixed	56	
	4.4.7	SchM	57	
	4.4.8	Gpt	57	
	4.4.9	NvM	57	
API I	Descriptio	n	58	
5.1	Type De	efinitions	58	
5.2	0		00	
	Service	s Provided by EcuM	62	
	5.2.1	s Provided by EcuM EcuM_MainFunction		
		•	62	
	5.2.1	EcuM_MainFunction	62 63	
	5.2.1 5.2.2	EcuM_MainFunction EcuM_Init	62 63 64	
	5.2.1 5.2.2 5.2.3	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo	62 63 64 65	
	5.2.1 5.2.2 5.2.3 5.2.4	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown	62 63 64 65	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget	62 63 64 65 66	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget	62 63 65 65 66	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget  EcuM_GetLastShutdownTarget	62 63 65 66 67 68	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget  EcuM_GetLastShutdownTarget  EcuM_GetPendingWakeupEvents	62 63 65 66 67 68 69	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8 5.2.9	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget  EcuM_GetLastShutdownTarget.  EcuM_GetPendingWakeupEvents  EcuM_ClearWakeupEvent	62 64 65 66 68 69 69	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8 5.2.9 5.2.10	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget  EcuM_GetLastShutdownTarget  EcuM_GetPendingWakeupEvents  EcuM_ClearWakeupEvent  EcuM_ClearValidatedWakeupEvent	62 64 65 66 67 69 69 70	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11	EcuM_MainFunction  EcuM_Init  EcuM_StartupTwo  EcuM_Shutdown  EcuM_SelectShutdownTarget  EcuM_GetShutdownTarget  EcuM_GetLastShutdownTarget  EcuM_GetPendingWakeupEvents  EcuM_ClearWakeupEvent  EcuM_ClearValidatedWakeupEvent  EcuM_GetValidatedWakeupEvents	62 64 65 66 68 69 69 71	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12	EcuM_MainFunction  EcuM_Init	62 63 65 66 68 69 69 71 72	
	5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.6 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.2.13	EcuM_MainFunction  EcuM_Init	62 63 65 66 67 69 69 71 72 72	



	5.2.17	EcuM_Ge	tVersionInfo	75
	5.2.18	EcuM_Re	questRUN	76
	5.2.19	EcuM_Re	leaseRUN	77
	5.2.20	EcuM_Re	questPOST_RUN	78
	5.2.21	EcuM_Re	leasePOST_RUN	79
5.3	Services	Provided b	y EcuM flex	80
	5.3.1	EcuM_Se	lectShutdownCause	80
	5.3.2	EcuM_Ge	tShutdownCause	81
	5.3.3	EcuM_Go	Halt	81
	5.3.4	EcuM_Go	Poll	82
	5.3.5	EcuM_Go	Down	83
	5.3.6	EcuM_Go	ToSelectedShutdownTarget	84
	5.3.7	EcuM_Se	tRelWakeupAlarm	85
	5.3.8	EcuM_Se	tAbsWakeupAlarm	86
	5.3.9	EcuM_Ab	ortWakeupAlarm	87
	5.3.10	EcuM_Ge	tWakeupTime	88
	5.3.11	EcuM_Se	tClock	89
	5.3.12	EcuM_Ge	tCurrentTime	90
	5.3.13	EcuM_Se	tState	91
5.4	Services	Provided b	y EcuM fixed	92
	5.4.1	EcuM_Ge	tState	92
	5.4.2	EcuM_Kill	AllRUNRequests	93
	5.4.3	EcuM_Kill	AllPostRUNRequests	94
5.5	Services	Used by Ed	cuM	95
5.6	Callback	Functions		96
	5.6.1	EcuM_Se	tWakeupEvent	96
	5.6.2	EcuM_Val	idateWakeupEvent	97
	5.6.3	EcuM_Ala	ırmCheckWakeup	98
	5.6.4	Callback F	Functions by EcuM fixed	99
		5.6.4.1	EcuM_CB_NfyNvMJobEnd	99
5.7	Configur	able Interfa	ces	99
	5.7.1	Notificatio	ns	99
	5.7.2	Callout Fu	inctions	99
		5.7.2.1	EcuM_ErrorHook	100
		5.7.2.2	EcuM_OnGoOffOne	100
		5.7.2.3	EcuM_OnGoOffTwo	101
		5.7.2.4	EcuM_AL_SwitchOff	101
		5.7.2.5	EcuM_AL_Reset	102
		5.7.2.6	EcuM_AL_DriverInitZero	102
		5.7.2.7	EcuM_AL_DriverInitOne	103
		5.7.2.8	EcuM_AL_DriverRestart	104



		5.7.2.9	ECUIVI_AL_	_SetProgrammableInterrupts	105
		5.7.2.10	EcuM_Mc	uSetMode	105
		5.7.2.11	EcuM_Wa	itForSlaveCores	106
		5.7.2.12	EcuM_Sta	rtOS	106
		5.7.2.13	EcuM_Shu	ıtdownOS	107
		5.7.2.14	EcuM_Ge	nerateRamHash	108
		5.7.2.15	EcuM_Che	eckRamHash	108
		5.7.2.16	EcuM_Sle	epActivity	109
		5.7.2.17	EcuM_Ena	ableWakeupSources	110
		5.7.2.18	EcuM_Dis	ableWakeupSources	110
		5.7.2.19	EcuM_Sta	rtWakeupSources	111
		5.7.2.20	EcuM_Sto	pWakeupSources	111
		5.7.2.21	EcuM_Che	eckWakeup	112
		5.7.2.22	EcuM_Che	eckValidation	112
		5.7.2.23	EcuM_Det	erminePbConfiguration	113
		5.7.2.24	EcuM_Bsv	vErrorHook	114
	5.7.3	Callout Fu	unctions by E	cuM flex	115
		5.7.3.1	EcuM_Gpt	StartClock	115
		5.7.3.2	EcuM_Gpt	SetSleep	116
		5.7.3.3	EcuM_Gpt	SetNormal	117
		5.7.3.4	EcuM_AL_	_DriverInitBswM_ <id></id>	118
	5.7.4	Callout Fu	unctions by E	cuM fixed	119
		5.7.4.1		_DriverInitTwo	
		5.7.4.2		_DriverInitThree	
		5.7.4.3	EcuM_Onl	EnterRun	121
		5.7.4.4	EcuM_Onl	ExitRun	121
		5.7.4.5	EcuM_On	GoSleep	122
		5.7.4.6	EcuM_Onl	PrepShutdown	122
		5.7.4.7	EcuM_Onl	ExitPostRun	123
		5.7.4.8	EcuM_Onl	FailedNvmWriteAllJobReaction	123
		5.7.4.9	EcuM_On\	WakeupReaction	124
		5.7.4.10	EcuM_Onl	RTEStartup	124
5.8	Service	Ports			125
	5.8.1	Client Ser	ver Interface	9	125
		5.8.1.1	Provide Po	orts on EcuM Side	125
			5.8.1.1.1	ShutdownTarget Port	125
			5.8.1.1.2	BootTarget Port	125
			5.8.1.1.3	AlarmClock Port	126
			5.8.1.1.4	StateRequest Port	
		5.8.1.2	Require Po	orts on EcuM Side	127
			5.8.1.2.1	currentMode Port	127



6.1	Deviatio	ns		128
	6.1.1	Deviation	in the Naming of API Parameters	128
		6.1.1.1	ResetSleepMode	128
		6.1.1.2	TargetState	128
		6.1.1.3	ShutdownTarget	128
		6.1.1.4	Target (ShutdownTarget)	128
		6.1.1.5	Target (BootTarget)	128
		6.1.1.6	Sources	128
	6.1.2	Starting o	f the Validation Timer	128
	6.1.3	Multiplicity	y of Parameters	128
		6.1.3.1	EcuMResetReasonRef	128
		6.1.3.2	EcuMSleepMode	129
		6.1.3.3	EcuMConfigConsistencyHash	129
		6.1.3.4	Removed parameter ConfigPtr from DriverInit Lists.	129
.2	Addition	s/ Extension	ns	129
	6.2.1	Additiona	Configuration Parameters	129
	6.2.2	Buffering	of Wake ups if the BswM is Not Initialized	129
	6.2.3	Buffering	of Wake ups if the ComM is Not Initialized	130
	6.2.4	Additiona	API EcuM_ClearValidatedWakeupEvent	130
	6.2.5	Support o	f Asynchronous Transceiver Handling	130
	6.2.6	Deferred	notification of the BswM about wake-up events	130
	6.2.7	Additiona	Callback EcuM_AlarmCheckWakeup	130
	6.2.8	Additiona	API EcuM_GoToSelectedShutdownTarget	130
	6.2.9	Additiona	Callout EcuM_WaitForSlaveCores	130
	6.2.10	Support o	f EcuM fixed	130
		6.2.10.1	Shutdown Target ECUM_STATE_RESET	130
		6.2.10.2	Synchronization of EcuM and RTE modes	131
.3	Limitatio	ns		131
	6.3.1	Inter Mod	ule Checks	131
	6.3.2	Recording	g of Shutdown Causes	131
	6.3.3	Not Supp	orted Configuration Parameters and Containers	131
	6.3.4	Wake-up	Events after Reset Reason Translation are not Validat	ted 131
	6.3.5	EcuM Fix	ed Limitations	131
Bloss	ary and A	bbreviation	ns	133
<b>'</b> .1	Glossar	y		133
7.2	Abbrevia	ations		133
Conta	act			134



# Illustrations

Figure 2-1	AUTOSAR architecture	. 15
Figure 2-2	Interfaces to adjacent modules of the EcuM	. 16
Figure 3-1	The state diagram of the EcuM flex	. 22
Figure 3-2 State	Diagram of the EcuM with fixed state machine	. 23
Figure 3-3	Example Wake-up Validation	. 31
Figure 3-4	Example Wake-up Validation for asynchronous Can Transceivers	. 32
Figure 3-5	Startup Sequence on a Master Core	. 42
Figure 3-6	Startup Sequence on a Slave Core	. 43
Figure 4-1	Include structure	. 55
Tables		
Table 1-1	Component history	12
Table 1-1 Table 3-1	Component history Supported AUTOSAR EcuM common features	
Table 3-1 Table 3-2		
	Supported AUTOSAR EcuM flex features	
Table 3-3	Supported AUTOSAR EcuM fixed features	
Table 3-4	Features provided beyond the AUTOSAR standard	
Table 3-5	States of the EcuM	
Table 3-6	States of the EcuM	
Table 3-7	Initialization Order	
Table 3-8	Service IDs	
Table 3-9	Errors reported to DET	
Table 3-10	Errors reported to DEM	
Table 3-11	Description of EcuM internal Error Codes	
Table 3-12	Callouts from Startup to Run	
Table 3-13	Callouts from Run to Sleep (Halt) and back to Run	
Table 3-14	Callouts from Run to Reset	
Table 3-15	Callouts from Run to Off	
Table 3-16	Gpt Channel Configuration	
Table 3-17	Sleep handling on Slave Cores	
Table 3-18	Mapping of States to Modes	
Table 4-1	Static files	
Table 4-2	Generated files	
Table 4-3	Critical Sections	
Table 5-1	Type definitions	
Table 5-2	EcuM_MainFunction	
Table 5-3 Table 5-4	EcuM_Init	
	EcuM_StartupTwo	
Table 5-5 Table 5-6	EcuM_Shutdown  EcuM SelectShutdownTarget	
Table 5-6 Table 5-7	EcuM GetShutdownTarget	
Table 5-7 Table 5-8	_	
	EcuM_GetLastShutdownTarget	
Table 5-9	EcuM_GetPendingWakeupEvents	
Table 5-10	EcuM_ClearWakeupEvent  EcuM ClearValidatedWakeupEvent	
Table 5-11	·	
Table 5-12	EcuM_GetValidatedWakeupEvents	
Table 5-13	EcuM_GetExpiredWakeupEvents	
Table 5-14 Table 5-15	EcuM_GetBootTarget	
Table 5-15	EcuM_SelectBootTarget	
Table 5-16 Table 5-17	EcuM_StartCheckWakeup  EcuM EndCheckWakeup	
14016 2-17	Ecuivi_Endoneckyvakeup	. 73

# Technical Reference MICROSAR EcuM Flex



Table 5-18	EcuM_GetVersionInfo	75
Table 5-19	EcuM_RequestRUN	76
Table 5-20	EcuM_ReleaseRUN	77
Table 5-21	EcuM_RequestPOST_RUN	78
Table 5-22	EcuM_ReleasePOST_RUN	79
Table 5-23	EcuM SelectShutdownCause	80
Table 5-24	EcuM_GetShutdownCause	81
Table 5-25	EcuM GoHalt	
Table 5-26	EcuM GoPoll	
Table 5-27	EcuM GoDown	
Table 5-28	EcuM_GoToSelectedShutdownTarget	
Table 5-29	EcuM_SetRelWakeupAlarm	
Table 5-30	EcuM_SetAbsWakeupAlarm	
Table 5-31	EcuM_AbortWakeupAlarm	
Table 5-32	EcuM GetWakeupTime	
Table 5-33	EcuM SetClock	
Table 5-34	EcuM GetCurrentTime	
Table 5-35	EcuM SetState	
Table 5-36	EcuM GetState	
Table 5-37	EcuM_ KillAllRUNRequests	
Table 5-38	EcuM_ KillAllPostRUNRequests	
Table 5-39	Services used by the EcuM	
Table 5-40	EcuM SetWakeupEvent	
Table 5-41	EcuM ValidateWakeupEvent	
Table 5-42	EcuM AlarmCheckWakeup	
Table 5-43	EcuM_AlarmCheckWakeup	
Table 5-44	EcuM ErrorHook	
Table 5-45	EcuM OnGoOffOne	
Table 5-46	EcuM OnGoOffTwo	
Table 5-47	EcuM AL SwitchOff	
Table 5-48	EcuM AL Reset	
Table 5-49	EcuM AL DriverInitZero	
Table 5-50	EcuM AL DriverInitOne	
Table 5-51	EcuM AL DriverRestart	
Table 5-52	EcuM_AL_SetProgrammableInterrupts	
Table 5-52	EcuM_McuSetMode	
Table 5-54	EcuM WaitForSlaveCores	
Table 5-55	EcuM_StartOS	
Table 5-56	EcuM_StartOS	100
Table 5-57	EcuM GenerateRamHash	
Table 5-58	EcuM CheckRamHash	
Table 5-59	EcuM SleepActivity	
Table 5-60	EcuM EnableWakeupSources	
Table 5-61	EcuM DisableWakeupSources	
Table 5-62	EcuM StartWakeupSources	
Table 5-63 Table 5-64	EcuM_StopWakeupSources	
	EcuM_CheckVakeup	
Table 5-65	EcuM_CheckValidation	
Table 5-66	EcuM_DeterminePbConfiguration	
Table 5-67	EcuM_BswErrorHook	
Table 5-68	EcuM_GptStartClock	
Table 5-69	EcuM_GptSetSleep	
Table 5-70	EcuM_GptSetNormal	
Table 5-71	EcuM AL DriverInitBswM	118

# Technical Reference MICROSAR EcuM Flex



Table 5-72	EcuM_AL_DriverInitTwo	119
Table 5-73	EcuM_AL_DriverInitThree	120
Table 5-74	EcuM_OnEnterRun	121
Table 5-75	EcuM_OnExitRun	121
Table 5-76	EcuM_OnGoSleep	122
Table 5-77	EcuM_OnPrepShutdown	122
Table 5-78	EcuM_OnExitPostRun	123
Table 5-79	EcuM_OnFailedNvmWriteAllJobReaction	123
Table 5-80	EcuM_OnFailedNvmWriteAllJobReaction	124
Table 5-81	EcuM_OnRTEStartup	124
Table 5-82	Shutdown Target Port	125
Table 5-83	BootTarget Port	125
Table 5-84	AlarmClock Port	126
Table 5-85	StateRequest Port	
Table 5-86	currentMode Port	127
Table 7-1	Glossary	133
Table 7-2	Abbreviations	



# 1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.00.00	Adaption to AUTOSAR Release 4
1.01.00	Added support of configuration variant Post-Build Loadable Added support of asynchronous transceiver handling
2.00.00	Added support for handling of MuliCore ECUs Added support of Alarm Clock to provide the absolute time and handling of time triggered wake-ups.
3.00.00	Added support for EcuM with fixed state machine
4.00.00	Added support for Post-Build Selectable
5.00.00	Added support for Mode Handling in EcuM Flex

Table 1-1 Component history



### 2 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module EcuM as specified in [1] and [7].

Supported AUTOSAR Release*:	4.0.3	
<b>Supported Configuration Variants:</b>	Pre-Compile, Post-Build Loadable	
Vendor ID:	ECUM_VENDOR_ID	30 decimal (= Vector-Informatik, according to HIS)
Module ID:	ECUM_MODULE_ID	10 decimal (according to ref. [4])

<sup>\*</sup> For the precise AUTOSAR Release 4.x please see the release specific documentation.

This document describes the functionality and API of the ECU State Manager (EcuM) as a hardware independent module.

The main tasks of the EcuM are:

- Initialization of BSW (Basis Software) modules that are needed to start the operating system
- > Preparation of the microcontroller for a sleep phase and the following wake up
- > Performing an ordered shut down or reset of the ECU
- > Validation of occurred wake ups via the wake-up validation protocol



#### 2.1 **Architecture Overview**

The following figure shows where the EcuM is located in the AUTOSAR architecture.

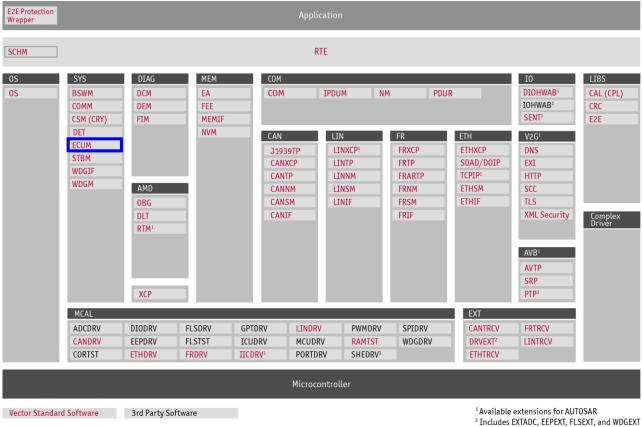


Figure 2-1 AUTOSAR architecture

<sup>&</sup>lt;sup>3</sup> Functionality represented in ETHTSYN and STBM



The next figure shows the interfaces to adjacent modules of the EcuM. These interfaces are described in chapter 5.2 Services Provided by EcuM and 5.5 Services Used by EcuM.

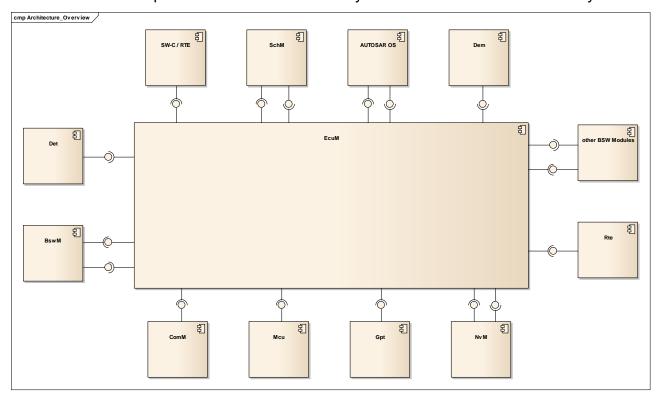


Figure 2-2 Interfaces to adjacent modules of the EcuM



# 3 Functional Description

#### 3.1 Features

The features listed in the following tables cover the complete functionality specified for the EcuM.

The AUTOSAR standard functionality is specified in [1] and [7], the corresponding features are listed in the tables:

- > Table 3-1 Supported AUTOSAR EcuM common features
- > Table 3-2 Supported AUTOSAR EcuM flex features
- Table 3-3 Supported AUTOSAR EcuM fixed features

For further information of not supported features see also chapter 0.

Vector Informatik provides further EcuM functionality beyond the AUTOSAR standard. The corresponding features are listed in the table:

Table 3-4 Features provided beyond the AUTOSAR standard

The following features specified in [1] and [7] are supported:

**Supported AUTOSAR Standard Conform Features** 

• • •		
Configuration of different wake-up sources.		
Configuration of EcuM users.		
Configurable startup sequence of the BSW stack that is needed before starting the OS.		
Possibility to add additional initialization code into the initialization lists.		
Notification of the BswM if a wake-up event occurs on a wake-up source.		
Notification of the ComM if a wake-up event occurs on communication channels.		
Assignment of communication channels to wake-up sources.		
Configuration of different sleep modes.		
Selection of different shutdown targets.		
Selection of different shutdown causes.		
Generation of the SW-C description file needed for the generation of the RTE.		
Service Port: EcuM_ShutdownTarget		
Service Port: EcuM_BootTarget		
Consistency hash checking according to AUTOSAR specification		
Post-build configuration of the EcuM		
Support of MultiCore ECUs		
Run / Post_Run Request Protocol		

Table 3-1 Supported AUTOSAR EcuM common features

Mode Port: EcuM\_CurrentMode



### The following EcuM flex features specified in [1] are supported:

### **Supported AUTOSAR EcuM flex Features**

Configuration of different reset modes.

Service Port: EcuM AlarmClock

Defensive Behavior to check the valid call of EcuM GoDown

Alarm clock to provide an absolute time and handling of time triggered wake-ups.

Table 3-2 Supported AUTOSAR EcuM flex features

## The following EcuM fixed features specified in [7] are supported:

### **Supported AUTOSAR EcuM fixed Features**

Full initialization of the Stack via configurable DriverInitLists

Fixed state machine to control the ECU states

Allow communication via ComM CommunicationAllowed when entering the ECUM STATE RUN

Handle NvM\_WriteAll() and NvM\_CancelWriteAll()

Start and stop of the RTE

Table 3-3 Supported AUTOSAR EcuM fixed features

### The following features are provided beyond the AUTOSAR standard:

### **Features Provided Beyond The AUTOSAR Standard**

Adding of additional initialization code by the configuration tool

Wake-up Events are buffered until the BswM and the ComM are initialized

Support of asynchronous transceiver handling (Introduced API EcuM\_StartCheckWakeup + EcuM\_EndCheckWakeup)

Providing an additional API EcuM\_ClearValidatedWakeupEvent() to clear only validated, but not pending wake-up events

Providing an additional API EcuM\_GoToSelectedShutdownTarget() to decide EcuM internal if EcuM\_GoPoll(), EcuM\_GoHalt() or EcuM\_GoDown() has to be called, depending on the selected shutdown target [EcuM flex only]

Configuration of the Core ID on which the BSW is initialized

Table 3-4 Features provided beyond the AUTOSAR standard



## 3.2 States of EcuM flex

These states indicate the current internal EcuM Operation State.

Module State         Activities         Point in Time           ECUM_STATE_STARTUP         Initializes the drivers out of the EcuM_DriverInitZero list.         Entered during EcuM_Init().           ECUM_STATE_STARTUP_ONE         Initializes the drivers out of the EcuM_DriverInitOne list.			
the EcuM_DriverInitZero list.  ECUM_STATE_STARTUP_ONE  Initializes the drivers out of the EcuM_DriverInitOne list.  Reset reason translation, setting of the default shutdown target and at the end start the operating system.  ECUM_STATE_STARTUP_TWO  Initializes the BswM and the SchM. Former buffered Wake-up Events are notified to the BswM.  ECUM_STATE_APP_RUN  After initializing the necessary BSW, the EcuM EcuM_StartupTwo(), EcuM_GoSleep(), EcuM_GoPoll() or during the MainFunction.  ECUM_STATE_GO_SLEEP  Prepares the ECU for the upcoming sleep phase.  ECUM_STATE_SLEEP  Handles the sleep.  Entered during EcuM_GoSlaep().  Entered during EcuM_GoSlaep().  Entered during EcuM_GoSlaep().	Module State	Activities	Point in Time
the EcuM_DriverInitOne list.  Reset reason translation, setting of the default shutdown target and at the end start the operating system.  ECUM_STATE_STARTUP_TWO  Initializes the BswM and the SchM.  Former buffered Wake-up Events are notified to the BswM.  ECUM_STATE_APP_RUN  After initializing the necessary BSW, the EcuM is in the Run state.  ECUM_STATE_GO_SLEEP  Prepares the ECU for the upcoming sleep phase.  ECUM_STATE_SLEEP  Handles the sleep.  Entered during EcuM_StartupTwo(), EcuM_GoSleep(), EcuM_GoPoll() or during the MainFunction.  ECUM_STATE_SLEEP  Handles the sleep.  Entered during EcuM_GoHalt() or EcuM_GoPoll().	ECUM_STATE_STARTUP	the EcuM_DriverInitZero	Entered during EcuM_Init().
the SchM. Former buffered Wake-up Events are notified to the BswM.  After initializing the necessary BSW, the EcuM is in the Run state.  Entered during EcuM_StartupTwo(), EcuM_GoSleep(), EcuM_GoPoll() or during the MainFunction.  ECUM_STATE_GO_SLEEP  Prepares the ECU for the upcoming sleep phase.  Entered during EcuM_GoSleep().  Entered during EcuM_GoSleep().	ECUM_STATE_STARTUP_ONE	the EcuM_DriverInitOne list.  Reset reason translation, setting of the default shutdown target and at the end start the operating	Entered during EcuM_Init().
necessary BSW, the EcuM is in the Run state.  EcuM_StartupTwo(), EcuM_GoSleep(), EcuM_GoPoll() or during the MainFunction.  ECUM_STATE_GO_SLEEP  Prepares the ECU for the upcoming sleep phase.  ECUM_STATE_SLEEP  Handles the sleep.  Entered during EcuM_GoHalt() or EcuM_GoPoll().	ECUM_STATE_STARTUP_TWO	the SchM. Former buffered Wake-up Events are notified to the	
upcoming sleep phase.  ECUM_STATE_SLEEP  Handles the sleep.  Entered during EcuM_GoHalt() or EcuM_GoPoll().	ECUM_STATE_APP_RUN	necessary BSW, the EcuM	EcuM_StartupTwo(), EcuM_GoSleep(), EcuM_GoPoll()
EcuM_GoPoll().	ECUM_STATE_GO_SLEEP		Entered during EcuM_GoSleep().
ECUM_STATE_GO_OFF_ONE Prepares the ECU for the Entered during EcuM_GoDown().	ECUM_STATE_SLEEP	Handles the sleep.	
upcoming Off phase.  The SchM and the BswM are deinitialized in this phase and the EcuM_OnGoOffOne() Callout is invoked. Finally the operating system will be shut down.	ECUM_STATE_GO_OFF_ONE	upcoming Off phase. The SchM and the BswM are deinitialized in this phase and the EcuM_OnGoOffOne() Callout is invoked. Finally the operating	Entered during EcuM_GoDown().
ECUM_STATE_GO_OFF_TWO  The configured shutdown target is called by the EcuM_Shutdown().	ECUM_STATE_GO_OFF_TWO	target is called by the	
ECUM_STATE_WAKEUP_ONE The hardware is reinitialized after a former sleep mode.	ECUM_STATE_WAKEUP_ONE	reinitialized after a former	
ECUM_STATE_WAKEUP_VALIDATION Waits for the validation of an occurred wake up. After a wake-up event has occurred that needs validation.	ECUM_STATE_WAKEUP_VALIDATION		

Table 3-5 States of the EcuM



### 3.3 States of EcuM fixed

These states indicate the current internal EcuM Operation State which can be retrieved via the API 5.4.1 EcuM\_GetState.

All the states, except ECUM\_STATE\_STARTUP and ECUM\_STATE\_ERROR are notified to the BswM. In some state transitions an RTE mode switch will be performed.

Module State	Activities	RTE Mode
ECUM_STATE_STARTUP	Initializes the drivers via the DriverInitLists.	ECUM_RTE_STARTUP (initial mode)
	Reset reason translation, setting of the default shutdown target and at the end start the operating system.	
	Initializes the BswM, the SchM and the RTE.	
	Former buffered Wake-up Events are notified to the BswM.	
ECUM_STATE_APP_RUN	EcuM stays in this state while there are active Run Requests, the EcuM Self Run Request timeout has not expired or ComM Channels are in communication.	ECUM_RTE_RUN
ECUM_STATE_APP_POST_RUN	Post Run Requests keep the EcuM in this state.	ECUM_RTE_POST_RUN
ECUM_STATE_PREP_SHUTDOWN	Shutdown the DEM and transit directly to ECUM_STATE_GO_SLEEP or ECUM_STATE_GO_OFF_ONE	ECUM_RTE_POST_RUN
ECUM_STATE_GO_SLEEP	EcuM triggers the NvM_WriteAll() job.  EcuM remains in this state until the NvM calls  EcuM_CB_NfyNvMJobEnd() or the occurrence of a wake up event cancels the sleep process. In case of a wake up event, NvM_CancelWriteAll() is called.	ECUM_RTE_SLEEP
ECUM_STATE_SLEEP	Handles the sleep and a wake up from sleep.	ECUM_RTE_SLEEP
ECUM_STATE_GO_OFF_ONE	Stops the RTE and triggers NvM_WriteAll(). EcuM remains in this state until the NvM call EcuM_CB_NfyNvMJobEnd().	ECUM_RTE_SHUTDOWN
ECUM_STATE_WAKEUP_VALIDATION	Waits for the validation of an occurred wake up.	ECUM_RTE_SLEEP
ECUM_STATE_WAKEUP_REACTION	Wait for completion of a potential NvM_CancelWriteAll().	ECUM_RTE_SLEEP

# Technical Reference MICROSAR EcuM Flex



Module State	Activities	RTE Mode
ECUM_STATE_WAKEUP_WAKESLEEP	-	ECUM_RTE_WAKE_SLEEP
ECUM_STATE_ERROR	The EcuM_ErrorHook is called in this state.	-
	This state is only reached if the ShutdownOS() or EcuM_AL_SwitchOff returns to the EcuM.	

Table 3-6 States of the EcuM



## 3.4 The State Diagram of the EcuM flex

The following figure shows the EcuM state diagram with all state transitions, the corresponding conditions and actions:

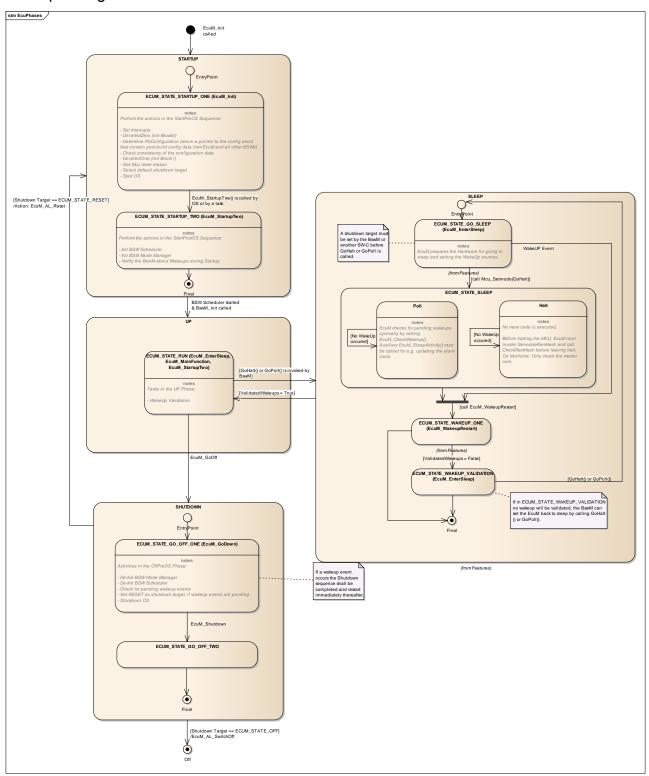


Figure 3-1 The state diagram of the EcuM flex



# 3.5 The State Diagram of the EcuM with fixed state machine

The following figure shows the EcuM state diagram with all state transitions and the corresponding RTE modes:

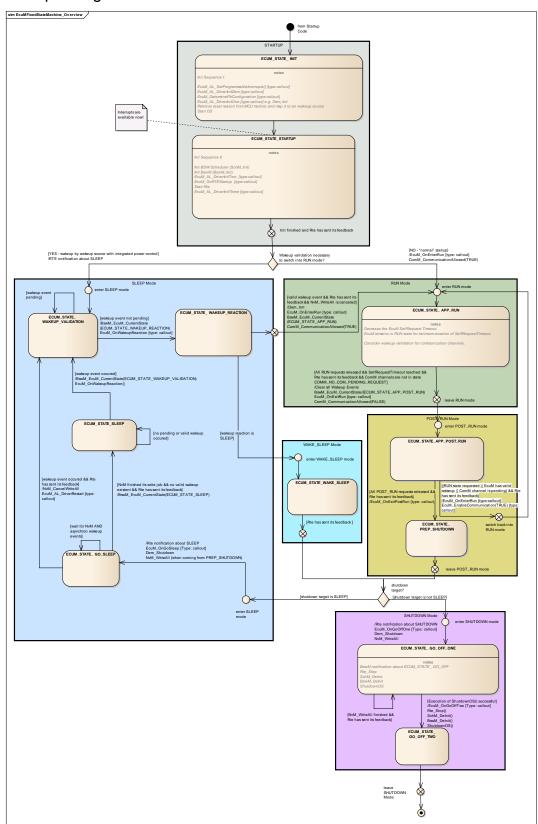


Figure 3-2 State Diagram of the EcuM with fixed state machine



### 3.6 Initialization

The initialization of the EcuM is split into two parts: one part is the initialization before the OS is up and running and the second part must be executed when the OS is started.

## 3.6.1 EcuM Init

The first part will be performed by the function EcuM\_Init() (refer to chapter 5.2.2). This function executes the DriverInitLists "EcuMDriverInitListZero" and "EcuMDriverInitListOne" where the basic driver initialization should be performed. EcuM\_Init() starts the AUTOSAR OS by calling the function StartOS() (refer to chapter 5.2.3).

### 3.6.2 EcuM\_StartupTwo

The second part of the initialization sequence will be executed by the EcuM API EcuM\_StartupTwo(). The integrator must ensure that this function is called once right after the start of the OS.

### 3.6.2.1 EcuM StartupTwo in case of EcuM flex

When EcuM\_StartupTwo() is left, the EcuM flex is in Run state and passes the control of the ECU to the BswM.



#### Caution

At the end of the EcuM\_StartupTwo the EcuM is fully initialized. That does not mean that the whole stack is initialized, it means only that the EcuM has passed the control over to the BswM. Further initialization is done by the BswM.

### 3.6.2.2 EcuM\_StartupTwo in case of EcuM fixed

In case of EcuM fixed, in EcuM\_StartupTwo() the DriverInitLists "EcuMDriverInitListTwo" and "EcuMDriverInitListThree" can be used to initialize the whole stack.



#### Caution

At the end of the EcuM\_StartupTwo the EcuM fixed transits to ECUM\_STATE\_APP\_RUN in case of a validated wake up, e.g. set by the MCU Reset Reason (refer to chapter 3.9.5).

If this wake up was cleared (in EcuMDriverInitListTwo), the EcuM transits to ECUM\_STATE\_WAKEUP\_VALIDATION and performs a wake up validation if any wake up source is pending.

#### 3.6.3 Initialization Order

Depending on which modules are needed for starting the operating system the initialization lists can look different.



In the following an example initialization order is given. Init Block 0 corresponds to the EcuM\_AL\_DriverInitZero() (refer to chapter 5.7.2.6) and Init Block 1 corresponds to EcuM\_AL\_DriverInitOne() (refer to chapter 5.7.2.7).

Initialization Group		
Init Block0		
Det_Init()		
Dem_PreInit(ConfigPointer)		
Init Block1		
Mcu_Init(ConfigPointer)		
Gpt_Init(ConfigPointer)		
Wdg_Init()		
WdgM_Init()		
Adc_Init(ConfigPointer)		
Icu_Init(ConfigPointer)		
Pwm_Init(ConfigPointer)		

Table 3-7 Initialization Order

#### 3.6.4 Additional Code in the Initialization Callouts

If the user needs more than the initialization routines offered by the AUTOSAR modules, the configuration tool offers the facility to add own Code to the DriverInitLists. To use this feature the user has to choose "Code" instead of a MSN, then the code can be added to a special field.

The user code is added to the Init Block 0 or Init Block 1 as configured by the user.



### **Example**

In this example the routine Mcu\_InitClock() is added to the DriverInitListOne:

- > Open the Initialization dialogue
- > Go to the configuration of DriverInitListOne in the Pre-OS Init Sequence
- > Add an InitItem to the list and choose a name like "McuInitClock"
- > Choose "Code" in the field Type
- In the field "Code" you can insert: "Mcu\_InitClock();"
- Reorder the position of the InitItem



### 3.6.5 Inclusion of Additional Header Files

If the user needs additional headers for using in the EcuM\_Callout\_Stubs.c file, the EcuM offers the possibility of adding them by the configuration tool.



#### Note

All header files of the modules that are initialized in the DriverInitLists must be included into the additional header files because they are not included automatically.

### 3.6.6 Configuration Set Selection

The AUTOSAR compatible mechanism to select the configuration set which should be used for module initialization considers the following aspects:

- Most of the AUTOSAR modules provide a configuration reference to the provided configuration sets
- Some modules are initialized without a configuration pointer (Init-function signature <MSN>\_Init(void))
- > Some modules have an Init-function signature with configuration pointer but make no use of it, therefore, they need to be initialized with a NULL PTR.

The user must decide which routines use a configuration pointer. For these routines the configuration reference must be configured.

- > Module uses a configuration pointer for its initialization:
  - Select in the DriverInitList a MSN via the field Type (e.g. Dem)
  - Select the corresponding Service (e.g. Dem PreInit)
  - Configure the corresponding Configuration Pointer for that MSN (e.g. DemConfigSet)
  - Result: The EcuM generates "Dem PreInit(&DemConfigSet)"
- > Module has a void Init-function signature
  - Select in the DriverInitList a MSN via the field Type (e.g. Det)
  - Select the corresponding Service (e.g. Det Init)
  - Do not configure the corresponding Configuration Pointer for this MSN
  - Result: The EcuM generates: "Det\_Init()"





#### **Caution**

If a module initialization routine requires a configuration set as parameter, the corresponding reference to the module must be configured.

This is also necessary if the initialization routine does not use the parameter. The reference must be configured, otherwise the parameter list will be generated empty.

#### 3.7 Initialization of a MultiCore ECU

The initialization of a MultiCore Ecu is described in chapter 3.15.1 Initialization of a MultiCore ECU.

### 3.8 Shutdown Targets

The EcuM provides the possibility to select a shutdown target that is used for the next shutdown, initiated by calling EcuM\_GoDown() (refer to chapter 5.3.5), EcuM GoPoll()(refer to chapter 5.3.4) or EcuM GoHalt()(refer to chapter 5.3.3).

The following three different targets can be selected by a SWC or a BSW module:

- > ECUM\_STATE\_SLEEP
- > ECUM\_STATE\_RESET
- > ECUM\_STATE\_OFF



#### Note

The two targets ECUM\_STATE\_SLEEP and ECUM\_STATE\_RESET have an additional mode parameter, which is used to identify the configuration for the Sleep mode or to identify the reason for an upcoming reset of the ECU.

### 3.8.1 Using the API EcuM SelectShutdownTarget()

The API EcuM\_SelectShutdownTarget()(refer to chapter 5.2.5) can only be used when the EcuM is in the state ECUM\_STATE\_RUN. In the startup phase or during the sleep phase it is not allowed to change the shutdown target.

#### 3.8.2 Default Shutdown Target

A Default shutdown target must be set during the configuration. This is the first target that is selected as shutdown target after a startup. During runtime the shutdown target can be changed by another BSW or SWC via the API EcuM\_SelectShutdownTarget().

### 3.8.3 Reset Modes

The reset modes can be used to identify the reason for an upcoming ECU reset. A set of reset modes is defined by the AUTOSAR standard. Additional modes can be added by the configuration.



The reset mode is passed over to the Callout EcuM\_AL\_Reset(EcuM\_ResetType) and the user can implement different ways to reset the ECU, depending on the reason for this reset.

The Vector extension ECUM\_RESET\_WAKEUP is used as the reset mode in the case of a late wake-up event in the shutdown phase. If a wake-up occurs during the shutdown procedure, the shutdown target is changed by the EcuM to ECUM\_STATE\_RESET and the described mode is used.



#### **Note**

The following reset mode is defined by Vector as an extension to the standard AUTOSAR modes:

ECUM RESET WAKEUP



#### Caution

Reset Modes are only available if EcuM flex is used.

### 3.8.4 Sleep Modes

A sleep mode holds the information about the configured sleep modes and the corresponding relevant settings. The following items can be set for a sleep mode:

- > Reference to a configured MCU mode that is executed for that sleep mode.
- > Active Wake-up Sources during this sleep mode.

### 3.9 Wake-up Sources

The EcuM flex offers the possibility to configure wake-up sources for all modules that have the functionality to wake up the ECU. The EcuM handles the Wake-up Validation Protocol for these sources as described in 3.10.1 Wake-up Validation Protocol.

The Wake-up Sources have several configurable attributes as described in the following section.

#### 3.9.1 Validation Timeout

For every source, except for the standard sources 0 - 4, a validation timeout timer can be configured. This timer specifies the time (in seconds) until the wake-up source must be validated by calling EcuM ValidateWakeupEvent().

If the wake-up event is not validated during that time the EcuM sets this event to "expired" and reports it to the BswM.





#### **Note**

The following standard wake-up sources are pre-configured and do not need the wakeup validation protocol:

- > ECUM\_WKSOURCE\_POWER
- > ECUM WKSOURCE RESET
- > ECUM WKSOURCE INTERNAL RESET
- > ECUM\_WKSOURCE\_INTERNAL\_WDG
- > ECUM\_WKSOURCE\_EXTERNAL\_WDG

### 3.9.2 Check-Wakeup Validation Timeout

For every source, except for the standard sources 0-4, a check wake-up validation timeout timer can be configured. This timer specifies the time (in seconds) until the wake-up source must be set by calling EcuM SetWakeupEvent().

This timer can be used for e.g. asynchronous transceiver drivers, which cannot check the wake-up source in the context of EcuM\_CheckWakeup.

#### 3.9.3 ComM Channel Reference

If the configured Wake-up Source is a ComM Channel, the reference to the corresponding channel can be configured by the parameter EcuMComMChannelRef.

If this reference is configured and a validated wake-up event occurred, the EcuM calls the function ComM EcuM WakeupIndication() and reports it to the ComM.



#### Note

Only Wake-up Sources which represent a ComM Channel can lead to a wake up in the state ECUM\_STATE\_RUN. Other Wake-up Sources are ignored during this state.

### 3.9.4 Polling of Wake-up Sources

If a Wake-up Source needs to be polled to detect wake-up events this parameter must be set. In that case, the sleep can be entered by calling EcuM\_GoPoll() and the EcuM polls all Wake-up Sources that are active during that Sleep mode and the polling parameter is set.

#### 3.9.5 MCU Reset Reason

The EcuM calls the routine Mcu\_GetResetReason() to acquire the reason for the recent reset. The EcuM iterates over all configured Wake-up Sources and checks if the configured Reset Reason of one Wake-up Source matches to the return value of the MCU.



If a reset reason is found, the EcuM maps this MCU reset reason to an EcuM Wake-up Source and reports the event to the BswM. The regular wake-up validation is done by the EcuM in case it is required by the source.



#### Note

If the reset reason translation is not successful and no reset reason can be determined, the EcuM reports to the BswM the default reset reason ECUM\_WKSOURCE\_RESET.

#### 3.10 Main Functions

### 3.10.1 Wake-up Validation Protocol

The wake-up validation protocol provides a standardized way to recognize valid controller wake ups after a sleep phase.

For all user configured wake-up sources the parameter "Validation Timeout" is configurable. If the parameter is set to a value which is not 0, the wake-up validation protocol is active for that source.

©2015, Vector Informatik GmbH Version: 5.00.00 30 / 134





### **Example**

In the following example the whole wake-up validation procedure can be seen. A wake-up event occurs for the ComMChannel CanIf and needs validation. The validation is processed and the wake-up event is notified to the BswM and to the ComM.

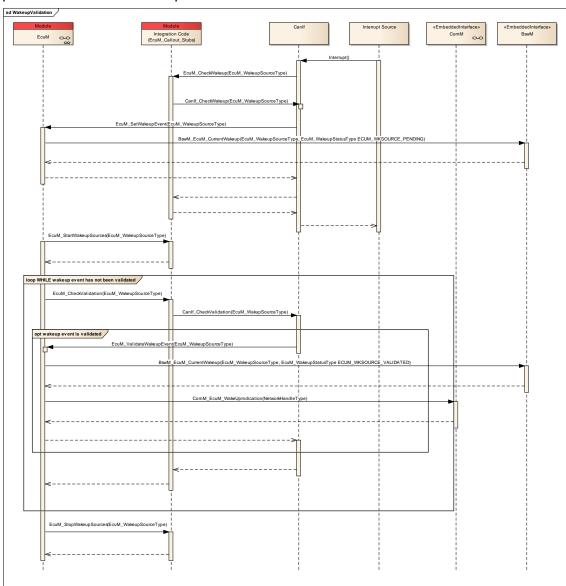


Figure 3-3 Example Wake-up Validation

©2015, Vector Informatik GmbH Version: 5.00.00 31 / 134



## 3.10.2 Wake-up Validation Protocol for asynchronous Can transceiver

For all user configured wake-up sources the parameter "Check Validation Timeout" is configurable. If the parameter is set to a value which is not 0, the check wake-up validation protocol is active for that source.

For these sources the call of EcuM\_SetWakeupEvent must not occur in the context of EcuM CheckWakeup.



#### **Example**

In the following example parts of the wake-up validation procedure can be seen for an asynchronous Can transceiver.

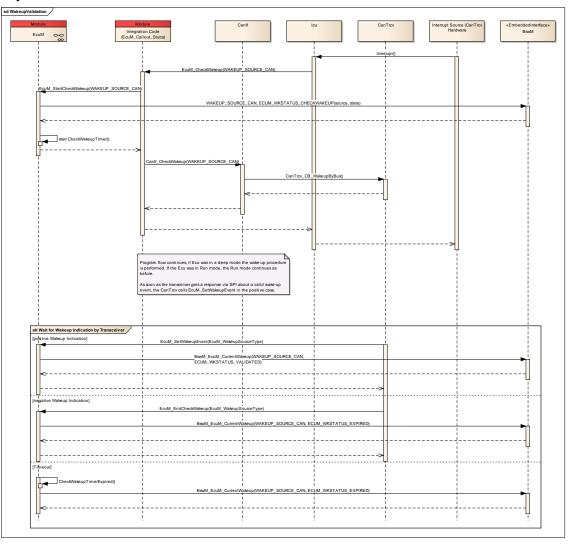


Figure 3-4 Example Wake-up Validation for asynchronous Can Transceivers

©2015, Vector Informatik GmbH Version: 5.00.00 32 / 134



## 3.11 Error Handling

## 3.11.1 Development Error Reporting

Development errors are reported to the DET using the service Det\_ReportError() as specified in [2], if development error reporting is enabled (ECUM\_DEV\_ERROR\_DETECT==STD\_ON).

The reported EcuM ID is 10.

The reported service IDs identify the services which are described in 5.2. The following table presents the service IDs and the related services:

Service ID	Service
0x00	EcuM_GetVersionInfo()
0x01	EcuM_Init()
0x02	EcuM_Shutdown()
0x03	EcuM_RequestRun()
0x04	EcuM_ReleaseRun()
0x05	EcuM_KillAllRUNRequests()
0x06	EcuM_SelectShutdownTarget()
0x07	EcuM_GetState()
0x08	EcuM_GetLastShutdownTarget()
0x09	EcuM_GetShutdownTarget()
0x0A	EcuM_RequestPOST_RUN()
0x0B	EcuM_ReleasePOST_RUN()
0x0C	EcuM_SetWakeupEvent()
0x0D	EcuM_GetPendingWakeupEvents()
0x12	EcuM_SelectBootTarget()
0x13	EcuM_GetBootTarget()
0x14	EcuM_ValidateWakeupEvent()
0x15	EcuM_GetValidatedWakeupEvents()
0x16	EcuM_ClearWakeupEvent()
0x18	EcuM_MainFunction()
0x19	EcuM_GetExpiredWakeupEvents()
0x1A	EcuM_StartupTwo()
0x1B	EcuM_SelectShutdownCause()
0x1C	EcuM_GetShutdownCause()
0x1D	EcuM_GetMostRecentShutdown()[not supported in this release]
0x1E	EcuM_GetNextRecentShutdown()[not supported in this release]
0x1F	EcuM_GoDown()
0x20	EcuM_GoHalt()
0x21	EcuM_GoPoll()
0x22	EcuM_SetRelWakeupAlarm()



Service ID	Service
0x23	EcuM_SetAbsWakeupAlarm()
0x24	EcuM_AbortWakeupAlarm()
0x25	EcuM_GetCurrentTime()
0x26	EcuM_GetWakeupTime()
0x27	EcuM_SetClock()
0x28	EcuM_StartCheckWakeup()
0x29	EcuM_EndCheckWakeup()
0x30	EcuM_ClearValidatedWakeupEvent()
0x2A	EcuM_KillAllPostRUNRequests()
0x2B	EcuM_SetState()
0x65	EcuM_CB_NfyNvMJobEnd()

Table 3-8 Service IDs

# The errors reported to DET are described in the following table:

Error Code		Description
0x10	ECUM_E_UNINIT	A service was called prior to initialization.
0x11	ECUM_E_SERVICE_DISABLE D	Error code defined by AUTOSAR SWS (not used in this implementation).
0x12	ECUM_E_NULL_POINTER	A null pointer was passed as an argument.
0x13	ECUM_E_INVALID_PAR	A parameter was invalid (not specified)
0x14	ECUM_E_MULTIPLE_RUN_REQUESTS	EcuM_RequestRUN or EcuM_ RequestPOST_RUN was called two times by the same user without release.
0x15	ECUM_E_MISMATCHED_RUN _RELEASE	EcuM_ReleaseRUN or EcuM_ ReleasePOST_RUN was called by a user without a previous request.
0x16	ECUM_E_STATE_PAR_OUT_ OF_RANGE	API service EcuM_SelectShutdownTarget() called with parameter not in expected range
0x17	ECUM_E_UNKNOWN_ WAKEUP_SOURCE	Wake-up source ID is not known by ECU State Manager
0x20	ECUM_E_MODULE_NOT_IN_ STARTUP	EcuM_StartupTwo() is called and the EcuM is not in state EcuM_Startup_One which is entered in EcuM_Init().
0x21	ECUM_E_MODULE_NOT_IN_ PREPSHUTDOWN	EcuM_Shutdown() was invoked without calling EcuM_GoDown().
0x22	ECUM_E_MODULE_NOT_IN_ RUN_STATE	This error will be reported if the callout EcuM_AL_SwitchOff() does not switch off the ECU.
0x23	ECUM_E_NO_SLEEPMODE_C ONFIGURED	This error will be reported if EcuM_GoPoll() or EcuM_GoHalt() is called and no SleepMode is configured.
0x24	ECUM_E_INVALID_STATERE QUEST	A state which was requested is invalid, perhaps because a former request is not finished yet.

Table 3-9 Errors reported to DET



### 3.11.2 Production Code Error Reporting

By default, production code related errors are reported to the DEM using the service <code>Dem\_ReportErrorStatus()</code> as specified in [3], if production error reporting is enabled (In the case that a reference to a Dem event parameter is configured in <code>EcuMDemEventParameterRefs</code>).

If another module is used for production code error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service <code>Dem ReportErrorStatus()</code>.

The errors reported to DEM are described in the following table:

Error Code	Description
ECUM_E_RAM_CHECK_FAILED	The RAM check during wake-up failed.
ECUM_E_CONFIGURATION_DATA_INCONSISTENT	Post build configuration data is inconsistent.
ECUM_E_IMPROPER_CALLER	Defensive behavior checks have detected improper use of the module.
ECUM_E_ALL_RUN_REQUESTS_KILLED	The API EcuM_KillAllRUNRequests() was called.

Table 3-10 Errors reported to DEM



#### Caution

Only ECUM\_E\_IMPROPER\_CALLER and ECUM\_E\_ALL\_RUN\_REQUESTS\_KILLED are passed to the Dem directly out of the static code. In the other cases EcuM\_ErrorHook (see 3.11.3) is called and the integrator has to decide what happens in the case of these errors.

### 3.11.3 EcuM ErrorHook

The EcuM has an own ErrorHook which offers the integrator the possibility to react on occurring errors during runtime.

Error Code	Description
ECUM_E_HOOK_RAM_CHECK_FAILED	If the Ram check has failed after a sleep phase, the ErrorHook is called with this parameter.
ECUM_E_HOOK_CONFIGURATION_DATA_INCONSISTENT	If the consistency check of pre-compile and link-time parameters in variant post-build has failed, the ErrorHook is called with this parameter.
ECUM_E_HOOK_WRONG_ECUM_USAGE	If the call of ShutdownOS returns to the EcuM. ShutdownOS has to call EcuM_Shutdown() to perform a



Error Code	Description
	shutdown.
ECUM_E_HOOK_INVALID_COREID	The OS returned an invalid CoreID via the API GetCoreID().

Table 3-11 Description of EcuM internal Error Codes

The integrator has to implement the behavior of the EcuM in this situation. The EcuM reports the error not by default to the Dem. If this is desired, the integrator has to call the Dem.

### 3.12 Callout Execution Sequences

This chapter describes the execution order of callouts and important functions. This may be useful while integrating the software stack.



#### Caution

The execution sequences are not relevant for EcuM fixed.

## 3.12.1 Callouts from Startup to Run

# STARTUP - RUN

#### Execution in EcuM Init()

- EcuM\_AL\_SetProgrammableInterrupts()
- EcuM AL DriverInitZero()
- EcuM\_AL\_DriverInitOne()
- Mcu\_GetResetReason()
- EcuM\_SetWakeupEvent(ResetReason)
- StartOS(ECUM DEFAULTAPPMODE)

### Execution in EcuM\_StartupTwo()

- SchM\_Init()
- BswM Init(NULL PTR / CfgPtr BswM)
  - If Wake-up Events have occurred before BswM\_Init:
    - BswM\_EcuM\_CurrentWakeup(WakeupSource, ECUM\_WKSTATUS\_VALIDATED)

Table 3-12 Callouts from Startup to Run



#### 3.12.2 Callouts from Run to Sleep (Halt) and back to Run

#### Run - Sleep (Halt) - Run

Selection of the ShutdownTarget must be done before the transition to sleep e.g. by the BswM

EcuM\_SelectShutdownTarget(ECUM\_STATE\_SLEEP, resetSleepMode)

All validated wake-up events must be cleared, e.g. by the BswM

EcuM ClearValidatedWakeupEvent(ECUM WKSOURCE ALL SOURCES)

#### GoHalt must be called e.g. by the BswM

EcuM GoHalt()

#### Execution in EcuM GoHalt()

- BswM EcuM CurrentWakeup(wakeupSource, ECUM WKSTATUS NONE)
- EcuM EnableWakeupSources(wakeupSource)
- GetResource(ECUM OS RESOURCE)
- DisableAllInterrupts()
- EcuM GenerateRamHash()
- Mcu\_SetMode(ECUM\_SLEEPMODELIST[ECUM\_CURRENTSLEEPMODE].mcuMode)
- EnableAllInterrupts()
- EcuM CheckRamHash()
  - If CheckRamHash has failed
    - EcuM ErrorHook(ECUM\_E\_HOOK\_RAM\_CHECK\_FAILED)
- DisableAllInterrupts()
- Mcu\_SetMode(ECUM\_NORMALMCUMODEREF)
- EnableAllInterrupts()
- EcuM\_DisableWakeupSources(EcuM\_PendingWakeups | EcuM\_ValidatedWakeups))
- BswM\_EcuM\_CurrentWakeup(EcuM\_PendingWakeups | EcuM ValidatedWakeups), ECUM WKSTATUS DISABLED)
- EcuM Al DriverRestart()
- ReleaseResource(ECUM\_OS\_RESOURCE)

Table 3-13 Callouts from Run to Sleep (Halt) and back to Run



#### 3.12.3 Callouts from Run to Reset

#### Run - Reset

Selection of the ShutdownTarget must be done before the transition to Off e.g. by the BswM

EcuM SelectShutdownTarget(ECUM STATE RESET, resetMode)

GoDown must be called e.g. by the BswM

EcuM GoDown()

#### Execution in EcuM\_GoDown()

- EcuM OnGoOffOne()
- BswM Deinit()
- SchM\_Deinit()
- ShutdownOS(E OK)

Shutdown must be called from the ShutdownHook

EcuM Shutdown()

Execution in EcuM\_Shutdown()

- EcuM OnGoOffTwo()
- EcuM\_AL\_Reset( EcuM\_CurrentShutdownMode )

Table 3-14 Callouts from Run to Reset

#### 3.12.4 Callouts from Run to Off

#### Run - Reset

Selection of the ShutdownTarget must be done before the transition to Off e.g. by the BswM

EcuM\_SelectShutdownTarget(ECUM\_STATE\_Off, 0)

All validated wake-up events must be cleared, e.g. by the BswM

EcuM\_ClearValidatedWakeupEvent(ECUM\_WKSOURCE\_ALL\_SOURCES)

GoDown must be called e.g. by the BswM

EcuM GoDown()

#### Execution in EcuM\_GoDown()

- EcuM OnGoOffOne()
- BswM\_Deinit()
- SchM\_Deinit()
  - If a wake-up event has occurred, the Shutdown Target will be changed to ECUM\_STATE\_RESET and the reset mode will be ECUM\_RESET\_WAKEUP
- ShutdownOS(E OK)

#### Shutdown must be called from the ShutdownHook

EcuM\_Shutdown()

#### Execution in EcuM Shutdown()

- EcuM\_OnGoOffTwo()
- EcuM\_AL\_SwitchOff()

Table 3-15 Callouts from Run to Off



# 3.13 EcuM Flex Users and Defensive Behavior

The EcuM offers the facility to configure flex Users to identify the caller of the routine EcuM\_GoDown. The calling module has to use its Module ID as specified by AUTOSAR in [4].



#### **Note**

To use this feature, the switch EcuMEnableDefBehaviour must be active.



#### 3.14 Alarm Clock

The EcuM flex offers the possibility to configure a clock which provides the absolute time since the last power-on reset of the ECU. This clock can be used to retrieve the current system time via the API EcuM\_GetCurrentTime and to wake up the ECU from sleep phases.

In sleep phases the ECU will be woken up by the Gpt every second, depending if the Gpt supports this. If the wake up by the Gpt is the only wakeup event, the EcuM will increment the system clock and falls back to sleep again. If a wake up alarm has expired, the EcuM will call EcuM SetWakeupEvent() to indicate a valid wake up of the ECU.



#### **Note**

To use this feature, the switch EcuMAlarmClockPresent must be active.

#### 3.14.1 Configuring the Gpt to provide the Time base

To support the Alarm Clock, a Gpt channel must be configured in a way which leads to an interrupt every second. For a correct behavior of the Alarm Clock, even in sleep phases, the channel must be configured as followed:

Gpt Channel Parameter	Value
GptChannelMode	GPT_CH_MODE_CONTINUOUS
GptEnableWakeup	True
GptNotification	EcuM_AlarmCheckWakeup
GptWakeupSourceRef	Choose here the same Wakeup Source as configured for EcuM parameter EcuMAlarmWakeupSource

Table 3-16 Gpt Channel Configuration



#### **Caution**

The implementation of the EcuM alarm clock requires that the Gpt provides a time base of exactly one second. If this is not supported by Gpt, the EcuM does not perform a correction of the time base.

# 3.14.2 Configuring the EcuM for using the Alarm Clock

For setting a wake up alarm during the runtime of the ECU, an EcuMAlarmClock with a reference to an EcuMFlexUserConfig must be configured.



The Gpt channel configured in 3.14.1 must be referenced by the EcuM parameter EcuMGptChannelRef.

# 3.14.3 Setting of the EcuM Clock

The API EcuM\_SetClock is offered to allow configuring an EcuMFlexUser to modify the system time during runtime. This user must be set as reference in the configuration parameter EcuMSetClockAllowedUserRef.

Only if this reference is configured, the usage of the API EcuM\_SetClock is allowed for this user.

#### 3.14.4 Setting of a Time Triggered Wake Up Alarm

Via the APIs EcuM\_SetRelWakeupAlarm and EcuM\_SetAbsWakeupAlarm the configured EcuMFlexUsers can set wake up alarms during the runtime of the ECU. This wake up alarm will be active during the next sleep phase.

The wake up alarm can be cancelled by the user during runtime of the ECU via the API EcuM\_AbortWakeupAlarm.



#### Note

One single EcuMFlexUser can only set one single wake up alarm.



#### Caution

All wake up alarms are cleared if the ECU wakes up from a sleep phase, even if the reason for this wake up was not time triggered. The wake up alarms must be rearmed before the next sleep phase is entered.

©2015, Vector Informatik GmbH Version: 5.00.00 41 / 134



#### 3.15 MultiCore Ecu

The EcuM offers the possibility to handle multi core ECUs. The handling of the initialization, sleep and shutdown differs to a single core ECU and is described in the following.

# 3.15.1 Initialization of a MultiCore ECU

#### 3.15.1.1 Initialization on the Master Core

After power-on of the ECU, the master core starts running and EcuM\_Init() should be called in the startup code. At the end of EcuM\_Init() the callout EcuM\_StartOS() is called.

In the callout EcuM StartOS() all other slave cores are started via the OS API StartCore().



#### Example

In the following example the startup sequence of the master core for a ECU with 4 cores can be seen:

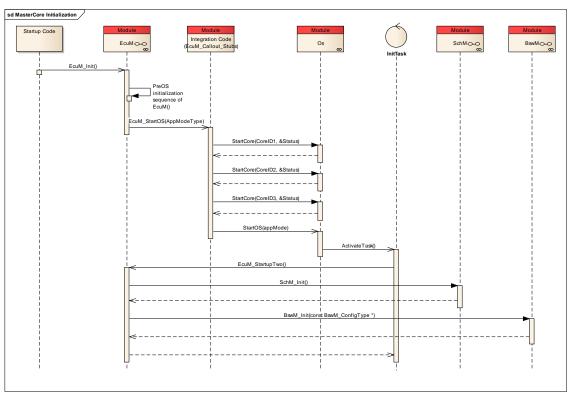


Figure 3-5 Startup Sequence on a Master Core



#### **Note**

The callout EcuM\_StartOS() is filled by the configuration tool per default. In some cases it might be necessary to adapt this callout.



#### 3.15.1.2 Initialization on the Slave Core

After the slave core has been started by the master core, it also starts running with the startup code. EcuM\_Init() is called from the startup code, but on the slave core only driver initialization and a call to StartOS() is performed via the callout EcuM\_StartOS().



#### **Example**

In the following example the startup sequence of a slave core for a ECU with 4 cores can be seen:

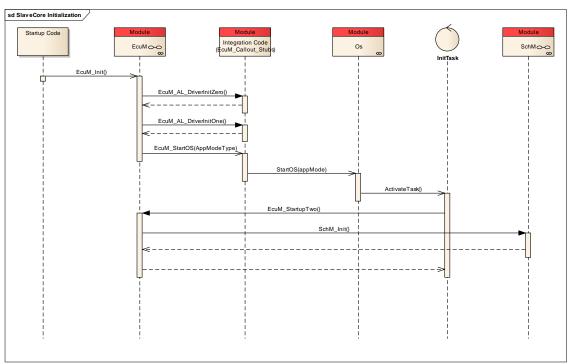


Figure 3-6 Startup Sequence on a Slave Core



#### Caution

On the slave core a call to EcuM\_StartupTwo() is only necessary if the initialization of the SchM should be done by the EcuM.

The BswM is currently not initialized on a slave core in this release!

#### 3.15.1.2.1 Driver initialization on the Slave Core

The callouts EcuM\_AL\_DriverInitZero() and EcuM\_AL\_DriverInitOne() are also called on slave cores, but the generated code is only executed on the master core.



On which core the driver initialization is called, is determined via the OS API GetCoreID(), as it can be seen in the code example below.

A slave core specific handling has to be implemented by the user.



```
Example
/***********************
* EcuM AL DriverInitZero
               FUNC(void, ECUM CODE) EcuM AL DriverInitZero(void)
 if(GetCoreID() == ECUM CORE ID MASTER)
  MasterCore Init();
 }
/************************
* DO NOT CHANGE THIS COMMENT! <USERBLOCK EcuM AL DriverInitZero>
DO NOT CHANGE THIS COMMENT!
      ****************
 /* Add implementation of EcuM AL DriverInitZero() */
 return;
/************************
* DO NOT CHANGE THIS COMMENT! </USERBLOCK> DO NOT CHANGE THIS
```

# 3.15.2 Sleep handling of slave cores

The EcuM flex supports two different ways to set the ECU to sleep, with and without synchronization of all cores. Which handling is used depends on the boolean parameter EcuMSlaveCoreHandling

EcuMSlaveCoreHandling	Behavior
False	The Master Core does not care about slave cores during the sleep mode. Depending on the used hardware, it might happen that the Master Core has switched already to sleep and the slave cores are still running.
True	The Master Core waits on the way to sleep (initiated via EcuM_GoHalt() / EcuM_GoPoll() ) till all slave cores has already switched to sleep. During wait for the slave cores, the callout EcuM_WaitForSlaveCores is called cyclically till all cores have switched their state to sleep. The callout can be used to set the slaves to sleep.

Table 3-17 Sleep handling on Slave Cores



#### 3.15.3 Blocking of the BSW Scheduler during Sleep

If only one BSW scheduler is used on the master core, it is sufficient to configure only one OsResource which is blocked during the sleep mode.

If there is more than one BSW scheduler running on several cores, it is necessary to configure an OsResource for every core. The configuration tool assigns automatically the configured OsResource to the corresponding core.

#### 3.15.4 Shutdown of the MultiCore ECU

It is necessary to call EcuM\_GoDown() on all cores which have a running SchM to assure a regular de-initialization of the SchM.

Finally after EcuM\_GoDown() was called for all these slave cores, the API can be called on the master core. This leads via the callout EcuM\_ShutdownOS to a call of the OS API ShutdownAllCores(). This API synchronizes all cores and stops the slaves.



#### Note

If the SchM is only running on the master core it is sufficient to call EcuM\_GoDown() on the master core only.

# 3.15.5 Reconfiguration of the BSW Core ID

The EcuM supports the configuration of the BSW Core Id. Per default the master Core Id is mapped to the OS define OS\_CORE\_ID\_MASTER (Id 0).

If the BSW shall run on another Core, the Id has to be configured via the configuration tool.



# 3.16 Mode Handling for EcuM Flex

#### 3.16.1 Mode Handling

The BswM can set a specific EcuM state (via EcuM\_SetState) which is mapped to the corresponding mode and an Rte mode switch will be initiated by the EcuM. The mapping of states to modes can be seen in Table 3-18.

After the mode switch is initiated, the EcuM polls the Rte in each MainFunction cycle if the mode switch is executed successfully. After the Rte has acknowledged the successful mode switch execution, the EcuM will notify the BswM about the finished mode switch.

EcuM State	EcuM Mode
ECUM_STATE_STARTUP	RTE_MODE_EcuM_Mode_STARTUP
ECUM_STATE_SLEEP	RTE_MODE_EcuM_Mode_SHUTDOWN
	or
	RTE_MODE_EcuM_Mode_SLEEP
ECUM_STATE_APP_RUN	RTE_MODE_EcuM_Mode_RUN
ECUM_STATE_APP_POST_RUN	RTE_MODE_EcuM_Mode_POST_RUN
ECUM_STATE_SHUTDOWN	RTE_MODE_EcuM_Mode_SHUTDOWN
	or
	RTE_MODE_EcuM_Mode_SLEEP

Table 3-18 Mapping of States to Modes



#### **Note**

In case of a requested state ECUM\_STATE\_SHUTDOWN or ECUM\_STATE\_SLEEP, the corresponding mode depends on the currently configured shutdown target.



#### 3.16.2 Run Request Protocol

The run request protocol is a mechanism for applications or Software Components (SW-C) to request RUN state explicitly via EcuM\_RequestRUN. The EcuM notifies the BswM about an active application request. If the application has nothing to do anymore it must release the previous requested RUN state. If no other SW-C has requested RUN state the ECU State Manger will notify the BswM that no application request is active anymore.

If SW-C needs special preparation for one of the shutdown states (SLEEP, OFF, RESET) the SW-C must request POST RUN state. This is the same mechanism like requesting RUN state. So, the POST RUN state has to be released after the job of the application is finished. It is very important for SW-C's which needs POST RUN state activities to request the POST RUN state before releasing the RUN request. Otherwise it is possible that the application doesn't get the chance to execute its POST RUN activities, depending on the BswM configuration.

To request RUN or POST RUN state each SW-C must be a configured user of the ECU State Manager. Therefore it is necessary to define one user for each SW-C to place requests.



# 3.17 Generated Template Files

A generated template file in this document is a file which:

- > is generated by the generation tool at every generation process
- > the user can modify this template for his needs
- > the changes made by the user will not be overwritten at the next generation process

In order not to overwrite the changes made by the user, the template file contains special comments. The user must insert his code between the two comments which delimit the user block. The comments have the following format:

\* DO NOT CHANGE THIS COMMENT! <USERBLOCK FUNCTIONNAME> DO NOT CHANGE THIS COMMENT!

\* DO NOT CHANGE THIS COMMENT! </USERBLOCK>

DO NOT CHANGE THIS COMMENT!



#### Caution

Do not modify or delete these comments.

# 3.18 Wake-up Event Handling and Wake-up Validation

The handling of Wake-up Sources and Wake-up Validation has to be configured and implemented specifically for every ECU. The following list provides a short overview which callouts are affected:

- EcuM EnableWakeupSources(), (refer to Ch. 5.7.2.17)
- EcuM DisableWakeupSources(), (refer to Ch. 5.7.2.18)
- EcuM\_CheckWakeup(), (refer to Ch. 5.7.2.21)
- EcuM StartWakeupSources(), (refer to Ch. 5.7.2.19)
- EcuM StopWakeupSources(), (refer to Ch. 5.7.2.20)

The integration task is to fill these callouts with code which fulfill the ECU specific requirements. The following paragraphs illustrate two example use cases:

- Wake-up after a physical sleep mode
- Wake-up validation of communication channels (EcuM in Run state)

#### 3.18.1 Wake-up after a Physical Sleep Mode

#### 3.18.1.1 Use Case Description

A raising edge on an ICU channel shall bring the ECUM into RUN state. A wake-up source "ECUM\_WKSOURCE\_ICU\_CH0" is configured for that. The name of the configured ICU channel is Icu\_Channel0.



No wake-up validation shall be performed on that wake-up event. This wake-up event is the only active wake-up event for the desired sleep mode.

#### 3.18.1.2 Execution Flow

- > EcuM is in ECUM STATE RUN
- > BswM calls EcuM\_GoHalt()
  - Callout EcuM EnableWakeupSources() is executed.
  - EcuM transits to sleep, Mcu SetMode() is called
- > External event triggers ICU hardware to raise an interrupt
- > Callout EcuM CheckWakeup() is executed by ISR
- > API function EcuM\_SetWakeupEvent() is executed
- EcuM executes implicitly EcuM\_ValidateWakeupEvent() because wake-up event is instantly valid
- > EcuM transits from ECUM STATE SLEEP to ECUM STATE WAKEUP ONE
- > EcuM transits from ECUM\_STATE\_WAKEUP\_TWO to ECUM\_STATE\_ RUN
  - Callout EcuM DisableWakeupSources() is executed

#### 3.18.1.3 Callout Implementation Examples

```
FUNC (void, ECUM CODE) EcuM EnableWakeupSources (EcuM WakeupSourceType
wakeupSource)
  /* Check for each configured wake-up source the corresponding bit
  * is set. Here the bit for the ICU wake-up source must be set
 if ((wakeupSource & ECUM WKSOURCE ICU CH0) != 0)
   Icu EnableNotification(Icu Channel0);
   Icu_EnableWakeup(Icu Channel0);
   Icu SetMode(ICU MODE SLEEP);
 /* ... */
FUNC (void, ECUM CODE) EcuM CheckWakeup (EcuM WakeupSourceType wakeupSource)
 if ((wakeupSource & ECUM WKSOURCE ICU CH0) != 0)
   /* no validation necessary, so call EcuM SetWakeupEvent() */
   EcuM SetWakeupEvent(ECUM WKSOURCE ICU CH0);
 }
 /* ... */
FUNC (void, ECUM CODE) EcuM DisableWakeupSources (EcuM WakeupSourceType
wakeupSource)
 if ((wakeupSource & ECUM WKSOURCE ICU CH0) != 0)
   Icu DisableNotification(Icu Channel0);
   Icu DisableWakeup(Icu Channel0);
   Icu SetMode(ICU MODE NORMAL);
 }
}
```



# 3.18.2 Wake-up Validation of Communication Channels (ECUM in RUN State)

#### 3.18.2.1 Use Case Description

A wake-up capable CAN hardware is assumed. A message on a CAN channel shall be recognized and set the CAN channel into normal operation mode (which will be triggered by ComM). A wake-up source ECUM\_WKSOURCE\_CAN0 is configured for that. Wake-up Validation shall be performed for that channel.

#### 3.18.2.2 Execution Flow

- ECUM is in RUN state, the CAN channel is in sleep state and is able to detect wake-up events
- > Callout EcuM CheckWakeup() is executed by ISR
- > API EcuM SetWakeupEvent() is executed, EcuM starts wake-up validation timeout
- > EcuM MainFunction() triggered by SCHM
  - (a) ECUM detects a pending wake-up event and executes callout EcuM StartWakeupSources()
  - (b) ECUM executes callout EcuM\_CheckValidation()
  - Note: step (b) may be executed several times, with each EcuM\_MainFunction() call until the wake-up event is validated or expired, but EcuM\_StartWakeupSources() is executed only once.
- Case Validation successful:
  - API EcuM\_ValidateWakeupEvent() is executed, within this routine ComM\_WakeUpIndication() is called
  - EcuM\_MainFunction() triggered by SCHM
    - ECUM stops validation timeout
- Case Validation failed:
  - ECUM executes callout EcuM StopWakeupSources()
  - The pending wake-up changes to an expired wake-up source



#### 3.18.2.3 Callout Implementation Examples

# 3.18.2.3.1 EcuM\_CheckWakeup

```
FUNC(void, ECUM_CODE) EcuM_CheckWakeup(EcuM_WakeupSourceType wakeupSource)
{
   if((wakeupSource & ECUM_WKSOURCE_CANO) != 0)
   {
      CanIf_CheckWakeup(ECUM_WKSOURCE_CANO);
   }
}
```

#### 3.18.2.3.2 EcuM\_CheckValidation

```
FUNC(void, ECUM_CODE) EcuM_CheckValidation(EcuM_WakeupSourceType wakeupSource)
{
   if ((wakeupSource & ECUM_WKSOURCE_CANO) != 0)
   {
      /* Query the driver if the wake-up event was valid */
      CanIf_CheckValidation(ECUM_WKSOURCE_CANO);
   }
}
```

# 3.18.2.3.3 EcuM\_StartWakeupSources and EcuM\_StopWakeupSources in the case of a MICROSAR CanSM

If the used CanSM module is a MICROSAR module, the following implementation can be used.

```
FUNC (void, ECUM_CODE) EcuM_StartWakeupSources(EcuM_WakeupSourceType
wakeupSource)
{
    if ((wakeupSource & ECUM_WKSOURCE_CANO) != 0)
    {/* CanSM needs the corresponding Network Handle */
        if (CanSM_StartWakeupSources(0x00) == E_NOT_OK)
        {
            /* place ECU depended error handling here */
        }
    }
}

void EcuM_StopWakeupSources(EcuM_WakeupSourceType wakeupSource)
{
    if ((wakeupSource & ECUM_WKSOURCE_CANO) != 0)
    {/* CanSM needs the corresponding Network Handle */
        if (CanSM_StopWakeupSources(0x00, wakeupSource) == E_NOT_OK)
        {
            /* place ECU depended error handling here */
        }
    }
}
```

©2015, Vector Informatik GmbH Version: 5.00.00 51 / 134



# 3.18.2.3.4 EcuM\_StartWakeupSources and EcuM\_StopWakeupSources in the case of a non MICROSAR CanSM

If the used CanSM module is a non MICROSAR module, the following implementation can be used.

```
FUNC (void, ECUM CODE) EcuM StartWakeupSources (EcuM WakeupSourceType
wakeupSource)
  CanIf ControllerModeType CanIfCtrlMode;
 if ((wakeupSource & ECUM WKSOURCE CANO) != 0)
   /* determine in which is the current Can Controller state */
   (void)CanIf GetControllerMode(0, &CanIfCtrlMode);
   ^{\prime *} in case the Can Controller is not CANIF CS STARTED */
   if (CANIF CS STARTED != CanIfCtrlMode)
   /* Set the controller and transceiver mode into normal operation mode*/
   CanIf SetTrcvMode(0, CANIF TRCV MODE NORMAL);
   CanIf SetControllerMode(0, CANIF CS STOPPED);
   CanIf SetControllerMode(0, CANIF CS STARTED);
}
else
 /* Stack already up and running */
}
 }
}
FUNC(void, ECUM CODE) EcuM StopWakeupSources(EcuM WakeupSourceType wakeupSource)
 if ((wakeupSource & ECUM WKSOURCE CANO) != 0)
   /* Validation was not successful, set the CAN controller and
   * Transceiver back to sleep mode. */
   CanIf SetControllerMode(0, CANIF CS STOPPED);
   CanIf SetControllerMode(0, CANIF CS SLEEP);
   CanIf SetTrcvMode(0, CANIF TRCV MODE STANDBY);
 }
}
```



# 4 Integration

This chapter gives necessary information for the integration of the MICROSAR EcuM into an application environment of an ECU.

# 4.1 Scope of Delivery

The delivery of the EcuM contains the files which are described in the chapters 4.1.1 and 4.1.2:

#### 4.1.1 Static Files

File Name	Source Code Delivery	Object Code Delivery	Description
EcuM.c	•		This is the source file of the EcuM. It contains the implementation of the EcuM interfaces.
EcuM.h	-	•	This is the header file of the EcuM. It declares the interfaces of the MIRCROSAR module EcuM.
EcuM_Cbk.h	•	•	Contains the prototypes of the provided callbacks and callout functions.

Table 4-1 Static files



# Do not edit manually

The static files listed above must not be edited by the user!

# 4.1.2 Dynamic Files

The dynamic files are generated by the configuration tool.

File Name	Description
EcuM_Cfg.h	Contains the configuration of the EcuM.
EcuM_Cfg.c	Contains the generated configuration data of the EcuM
EcuM_PrivateCfg.h	Contains configuration data which is only relevant for the EcuM implementation. This file must be only included by the EcuM implementation files.
EcuM_Generated_Types.h	Contains all provided types of the EcuM.
EcuM_PBcfg.c	Contains the post-build configuration of the EcuM.
EcuM_Callout_Stubs.c	Template for the callout code which has to be filled by the integrator.
EcuM_Init_PBcfg.c	This file contains configuration pointers to post-build modules.
EcuM_Init_PBcfg.h	This file contains the definition of the global post-build struct.
EcuM_Init_Cfg.c	This file contains configuration pointers to variant modules.
EcuM_Init_Cfg.h	This file contains the definition of the variant modules struct.



File Name	Description
EcuM_Error.h	This file provides an BSW Error function for post-build-loadable

Table 4-2 Generated files

# 4.2 Critical Sections

The EcuM calls the following function when entering a critical section:

- >void SchM\_Enter\_EcuM\_ECUM\_EXCLUSIVE\_AREA\_0(void)
- > When the critical section is left the following function is called by the EcuM:
  - >void SchM\_Exit\_EcuM\_ECUM\_EXCLUSIVE\_AREA\_0(void)

Critical Section Define	Interrupt Lock	
ECUM_EXCLUSIVE_AREA_0	No interrupt by any wake-up interrupt is allowed. These interrupts must be locked in this exclusive area.	
ECUM_EXCLUSIVE_AREA_1	If it cannot be assured that a 32bit variable is written atomically, this exclusive area must be configured as a spin lock to protect access on global state variables.	
	The configuration of this exclusive area is only necessary in the case of a multi core ECU	
ECUM_EXCLUSIVE_AREA_2	No task switch and no interrupt from the Gpt is allowed in this exclusive area to protect the global system time.	
	Note The configuration of this exclusive area is only necessary if the feature Alarm Clock is enabled	

Table 4-3 Critical Sections



# 4.3 Include Structure

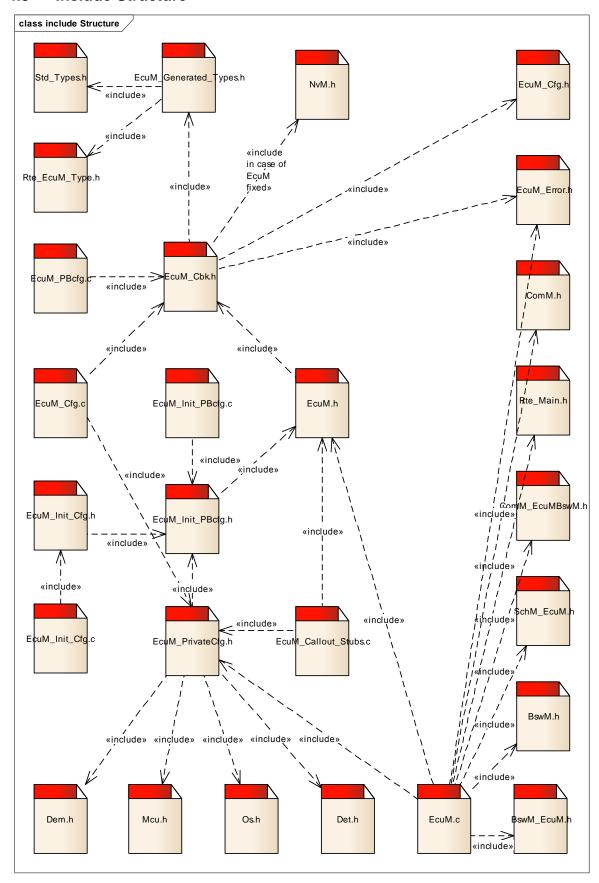


Figure 4-1 Include structure

©2015, Vector Informatik GmbH Version: 5.00.00 55 / 134



# 4.4 Dependencies on other BSW Modules

#### 4.4.1 BswM

The EcuM module depends on the BswM. The EcuM performs the initialization of the BswM during EcuM StartupTwo().

The states of all wake-up sources are reported to the BswM in the case of a changing wake-up source.

The usage of the BswM cannot be switched off.

#### 4.4.1.1 BswM and EcuM fixed

The EcuM reports all state changes described in 3.6.2.1 to the BswM.

#### 4.4.2 AUTOSAR OS

The EcuM module depends on the AUTOSAR OS. It starts and performs the shutdown of the OS.

The EcuM needs a valid reference within the EcuC file to a configured OS application mode. Additionally an OsResource must be configured to block other tasks during a sleep mode.

The usage of the OS cannot be switched off.

#### 4.4.3 MCU

The EcuM module depends on a MCU. The MCU mode settings are used to enter power saving modes in the phases ECUM\_STATE\_SLEEP and ECUM\_STATE\_OFF, it is also used to restore the normal MCU mode. Every sleep mode must have configured a MCU mode which will be entered in that sleep mode.

After a reset, the MCU is called to get the reason for the current reset.

The usage of the MCU cannot be switched off.

#### 4.4.4 DEM

The EcuM depends on the DEM. The EcuM supports the pre-initialization of the DEM and if the production errors for the EcuM are configured as active, the EcuM reports some Errors to the DEM. Refer to chapter 3.11.2 for more information.

The usage of the DEM can be switched off.

#### 4.4.5 DET

The EcuM depends on the DET. The EcuM performs the initialization and reports development errors for diagnostic purposes. Refer to chapter 3.11.1 for more information. The usage of the DET can be switched off.

#### 4.4.6 ComM

This module depends on the ComM. The EcuM manages the validation of communication channels. In the case of a validated wake-up event from a communication channel, the EcuM reports this event to the ComM.

#### 4.4.6.1 ComM and EcuM fixed

In the transition to ECUM\_STATE\_APP\_RUN, the EcuM calls ComM CommunicationAllowed() for all configured communication channels.

In ECUM\_STATE\_APP\_RUN, the ComM API ComM\_GetState() is called for every communication channel in EcuM MainFunction.



If ComM\_GetState() returns COMM\_NO\_COM\_NO\_PENDING\_REQUEST for all channels, the EcuM can leave the ECUM\_STATE\_APP\_RUN.

#### 4.4.7 SchM

The EcuM module depends on the SchM. The EcuM performs the initialization of the SchM during EcuM StartupTwo().

The usage of the SchM cannot be switched off.

# 4.4.8 Gpt

In the case that the Alarm Clock is enabled, the EcuM depends on the Gpt. The EcuM initialize the Gpt (has to be done in EcuM\_AL\_DriverInitOne) and starts the corresponding timer during EcuM\_StartupTwo(). On the way to sleep, the mode of the Gpt is switched to sleep and the normal mode is recovered after a wake-up from sleep.

#### 4.4.9 NvM

The EcuM handles the call of NvM\_WriteAll() and NvM\_CancelWriteAll(). Both calls are protected with a configurable timeout to guarantee a shutdown of the ECU even in case of a defect NvM.



#### Caution

Dependency to the NvM exists only in case of EcuM fixed.



# 5 API Description

# 5.1 Type Definitions

The types defined by the EcuM are described in this chapter.

Typo Name	C-Type	Description	Value Range
Type Name	C-Type	Description	
EcuM_StateType	sub states provided by the ECU State Manager.	sub states provided by the ECU State	Get the current state by AND gating the state with this mask. All states are delivered including substates.
			ECUM_STATE_STARTUP STARTUP super state
		ECUM_STATE_STARTUP_ONE Initialization of drivers which don't need OS support.	
		ECUM_STATE_STARTUP_TWO Initialization of drivers which need OS support.	
			ECUM_STATE_WAKEUP WAKE-UP super state Not used in this EcuM flex Implementation!
			ECUM_STATE_WAKEUP_ONE Reinitializing of drivers for normal operation.
			ECUM_STATE_WAKEUP_VALIDATION Waits for validation of a wake-up event
			ECUM_STATE_WAKEUP_REACTION Computes the appropriate wake-up reaction Not used in this EcuM flex
			Implementation!
			ECUM_STATE_WAKEUP_TWO Prepares the ECU for RUN state Not used in this EcuM flex
			Implementation!  ECUM_STATE_WAKEUP_WAKESLE EP
			A short system phase where the ECU transit from a wake-up directly to sleep again.
			Not used in this EcuM flex Implementation!



Type Name	C-Type	Description	Value Range
Type Name	С-Туре	Description	ECUM_STATE_WAKEUP_TTII Performs the TTII protocol Not used in this EcuM flex Implementation!  ECUM_STATE_RUN Normal ECU operation super state  ECUM_STATE_APP_RUN ECU is in normal operation state Not used in this EcuM flex Implementation!  ECUM_STATE_APP_POST_RUN ECU performs POST RUN activities Not used in this EcuM flex Implementation!  ECUM_STATE_SHUTDOWN Shutdown super state  ECUM_STATE_PREP_SHUTDOWN
			Prepares the ECU for the following shutdown sequence.  Not used in this EcuM flex Implementation!
			ECUM_STATE_GO_SLEEP Activation of the wake-up sources ECUM_STATE_GO_OFF_ONE
			Shutdown of system services
			ECUM_STATE_GO_OFF_TWO Performs a RESET or switches off the ECU
			ECUM_STATE_SLEEP ECU is in sleep state (this information cannot be retrieved)
			ECUM_STATE_OFF ECU is without power supply (this information cannot be retrieved)
EcuM_WakeupSource Type	uint32	Each bit in this type identifies a wake-up	ECUM_WKSOURCE_POWER Identifies a power on reset (bit 0)
.,,,,		source.	ECUM_WKSOURCE_RESET Identifies a hardware reset (bit 1)
			ECUM_WKSOURCE_INTERNAL_RE SET
			Identifies resets which only reset the core of the microcontroller but not the peripherals. This source also indicates unhandled



- N	0.7	D	V
Type Name	C-Type	Description	Value Range
			exceptions (bit 2)
			ECUM_WKSOURCE_INTERNAL_WD G
			Identifies a reset by internal watchdog (bit 3)
			ECUM_WKSOURCE_EXTERNAL_W DG
			Identifies a reset by external watchdog (bit 4). (This is only possible if the hardware supports this feature)
			ECUM_WKSOURCE_ALL_SOURCES Identifies each wake-up source
			ECUM_WKSOURCE_NONE Value 0. This is a MICROSAR ECUM extension and identifies an invalid wake-up source.
			ECUM_WKSOURCE_ <name> Can be extended by configuration</name>
EcuM UserType	uint8	ID of the Users which	0255
	diiito	are able to request RUN state. Each user must have a unique ID.	The Range depends on the number of configured users
EcuM_WakeupStateTy	uint8	The type describes	ECUM_WKSTATUS_NONE
pe		possible results of the	The wake-up source is Disabled
		WAKE-UP VALIDATION state.	ECUM_WKSTATUS_PENDING
		VALIDATION state.	The wake-up event was detected but not yet validated
			ECUM_WKSTATUS_VALIDATED The wake-up event is valid
			ECUM_WKSTATUS_EXPIRED
			The wake-up event has not been validated and has already expired.
			ECUM_WKSTATUS_ENABLED
			The wake-up source is enabled (armed) and is ready for detecting wake-up events.
			ECUM_WKSTATUS_CHECKWAKEUP
			Asynchronous wake-up event is detected but SetWakeupEvent has not been called yet.
EcuM_BootTargetType	uint8	Defines the boot target which should be	ECUM_BOOT_TARGET_APP
			Boot into application mode
		chosen in the next start up.	ECUM_BOOT_TARGET_BOOTLOAD ER Boot into boot loader mode



Type Name	C-Type	Description	Value Range
EcuM_ResetType	the reset mechanisms supported by the ECU State Manager.  It can be extended by configuration.	ECUM_RESET_MCU Microcontroller reset via Mcu_PerformReset ECUM_RESET_WDG Watchdog reset via WdgM PerformReset	
		configuration.  Reset by tog  ECUM_RESE  Reset in the  event during  ECUM_RESE	<b>~</b> =
			ECUM_RESET_ <name> Can be extended by configuration.</name>
EcuM_ShutdownCau seType	shutdown by the ECU State Manager.		ECUM_CAUSE_UNKNOWN No cause was set.
,,		by the ECU State	ECUM_CAUSE_ECU_STATE ECU state machine entered a state for shutdown
		It can be extended by configuration.	ECUM_CAUSE_WDGM Watchdog Manager detected a failure
			ECUM_CAUSE_DCM Diagnostic Communication Manager requests a shutdown due to a service request
			ECUM_CAUSE_ <name> Can be extended by configuration.</name>

Table 5-1 Type definitions



# 5.2 Services Provided by EcuM

#### 5.2.1 EcuM MainFunction

II o T	77.3	100		pe
12	E 0 1	101	IN Y A	1010

void EcuM\_MainFunction (void)

#### **Parameter**

void none

#### Return code

void none

#### **Functional Description**

The service which implements all activities of the ECU state Manager while OS is up and running. In the MainFunction the wake-up validation is handled. This service must be called on a periodic basis from an adequate OS task.

- The service also carries out the wake-up validation protocol. The smallest validation timeout typically should limit the period.
- As a rule of thumb, the period of this service should be in the order of half as long as the shortest time constant mentioned in the topics above

#### **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- Called by SchM

#### Call Context

Function could be called from task level

Table 5-2 EcuM\_MainFunction



# 5.2.2 EcuM\_Init

_					
<b>■</b> > 7	ro		7.67		
14	E 9 /	[ E W ]	1 10,14	w,	ι÷

void EcuM\_Init (void)

#### **Parameter**

void none

#### Return code

void none

# **Functional Description**

The Init function is called to initiate the startup procedure that takes place before the OS is started. Additionally in this API all EcuM variables that need initialization are initialized.



#### Caution

After EcuM\_Init() the EcuM is not in the running state, to achieve this state EcuM\_StartupTwo() has to be called.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- called by start-up code

#### Call Context

Table 5-3 EcuM\_Init



# 5.2.3 EcuM\_StartupTwo

# **Prototype**

# void EcuM\_StartupTwo (void)

#### **Parameter**

void none

#### Return code

void none

# **Functional Description**

The function implements the startup phase where the OS is already running. EcuM\_AL\_DriverInitTwo() is called within this function. This function should be scheduled by a task directly after StartOS() and only be called once.



#### Caution

The integrator has to ensure that the EcuM\_StartupTwo is not interrupted by any other function or task.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### **Call Context**

Table 5-4 EcuM\_StartupTwo



# 5.2.4 EcuM\_Shutdown

# **Prototype**

void EcuM\_Shutdown (void)

#### **Parameter**

void none

# Return code

void none

# **Functional Description**

This function performs a reset or switches off the ECU (depending on which shutdown target is currently chosen).



#### Note

This function shall be called inside the OS ShutdownHook() routine. The integrator is responsible to perform this task.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function should be called from the ShutdownHook of the Os.

Table 5-5 EcuM\_Shutdown



# 5.2.5 EcuM\_SelectShutdownTarget

Prototype	уре	
Std_ReturnType <b>EcuM_S</b> uint8 resetSleepMode)	SelectShutdownTarget (EcuM_StateType targetState,	
Parameter	arameter	
targetState	One of these values:	
resetSleepMode	Depending on the parameter targetState this represents a sleep mode or a reset mode.	
Return code		
E_OK	success	
E_NOT_OK	error	

#### **Functional Description**

This service selects a shutdown target in which the shutdown sequence should change

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant. The EcuM must be in RUN state.
- The ECU State Manager does not define any mechanism to resolve issues arising from parallel requests. It is rather assumed that there will be one application which is ECU specific and handles these kinds of issues.

#### **Call Context**

Table 5-6 EcuM\_SelectShutdownTarget



# 5.2.6 EcuM\_GetShutdownTarget

Prototype		
Std_ReturnType <b>EcuM_GetShutdownTarget</b> (EcuM_StateType *target,		
	uint8 *resetSleepMode)	
Parameter		
target	One of these values:	
	<ul><li>ECUM_STATE_OFF</li></ul>	
	<ul><li>ECUM_STATE_SLEEP</li></ul>	
	<ul><li>ECUM_STATE_RESET</li></ul>	
resetSleepMode	Depending on the parameter target this represents a sleep mode or a reset mode. If the target is ECUM_STATE_OFF this parameter is 0.	
Return code		
E_OK	success	
E_NOT_OK	error	

# **Functional Description**

Returns the actual chosen shutdown target.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

# **Call Context**

Table 5-7 EcuM\_GetShutdownTarget



# 5.2.7 EcuM\_GetLastShutdownTarget

Prototype	ре		
Std_ReturnType <b>EcuM_GetLastShutdownTarget</b>		(EcuM_StateType *target, uint8 *resetSleepMode)	
Parameter			
target	One of these values:		
resetSleepMode	Depending on the parameter target this represents a sleep mode. If the target is ECUM_STATE_OFF this parameter is		
Return code			
E_OK	success		
E_NOT_OK error			

# **Functional Description**

This function returns not the current shutdown target but the shutdown target set before the last reset. This function always shall return the same value until the next shutdown.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-8 EcuM\_GetLastShutdownTarget



#### EcuM\_GetPendingWakeupEvents 5.2.8

	EcuM_WakeupSourceType EcuM_GetPendingWakeupEvents (void)		
	Parameter		
	void	none	
Return code			

EcuM\_WakeupSourceTyp Every bit set in the return value indicates a wake-up source where the validation is in progress.

# **Functional Description**

Returns wake-up events which have been set but not yet validated.

#### **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Function could be called from interrupt level or from task level

Table 5-9 EcuM\_GetPendingWakeupEvents

#### 5.2.9 EcuM\_ClearWakeupEvent

Prototype		
void <b>EcuM_ClearWakeupEvent</b> (EcuM_WakeupSourceType WakeupSource)		
Parameter		
WakeupSource	Wake-up event(s) which should be cleared	
Return code		
void	none	
Functional Description		

Clears the pending, validated and expired wake-up events which are passed by the parameter.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-10 EcuM\_ClearWakeupEvent



# 5.2.10 EcuM\_ClearValidatedWakeupEvent

# **Prototype**

void **EcuM\_ClearValidatedWakeupEvent** (EcuM\_WakeupSourceType WakeupSource)

# **Parameter**

Wake-up event(s) which should be cleared

#### Return code

void none

# **Functional Description**

Clears only the validated wake-up events which are passed by the parameter.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-11 EcuM\_ClearValidatedWakeupEvent



# 5.2.11 EcuM\_GetValidatedWakeupEvents

#### **Prototype**

EcuM\_WakeupSourceType EcuM\_GetValidatedWakeupEvents (void)

#### **Parameter**

void none

Return code

EcuM\_WakeupSourceType ID of the wake-up source which was responsible for the wake-up

# **Functional Description**

This function returns wake-up event which causes the wake-up of the ECU from the previous sleep mode.



#### Caution

The validated Wake-up Events must be cleared before the EcuM is set to sleep. The EcuM does not clear those events by itself.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-12 EcuM\_GetValidatedWakeupEvents



#### 5.2.12 EcuM\_GetExpiredWakeupEvents

# **Prototype**

EcuM\_WakeupSourceType EcuM\_GetExpiredWakeupEvents (void)

#### **Parameter**

void none

Return code

EcuM\_WakeupSourceType | ID's of wake-up sources which are expired in the validation process.

#### **Functional Description**

Returns all events that have been set and for which validation has failed. Events which do not need validation must never be reported by this service.

#### **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Function could be called from interrupt level or from task level

Table 5-13 EcuM\_GetExpiredWakeupEvents

# 5.2.13 EcuM\_GetBootTarget

#### **Prototype**

Std\_ReturnType **EcuM\_GetBootTarget** (EcuM\_BootTargetType \*BootTarget)

#### **Parameter**

BootTarget The current selected BootTarget

#### Return code

E\_OK success
E\_NOT\_OK error

#### **Functional Description**

Returns the current selected boot target of the ECU.

#### **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-14 EcuM GetBootTarget



# 5.2.14 EcuM\_SelectBootTarget

# Prototype

Std\_ReturnType **EcuM\_SelectBootTarget** (EcuM\_BootTargetType BootTarget)

Parameter		
BootTarget	The selected BootTarget	
Return code		
E_OK	success	
E_NOT_OK	error	

# **Functional Description**

Sets the boot target for the next boot.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

## Call Context

Function could be called from interrupt level or from task level

Table 5-15 EcuM\_SelectBootTarget



# 5.2.15 EcuM\_StartCheckWakeup

## **Prototype**

void **EcuM\_StartCheckWakeup** (EcuM\_WakeupSourceType WakeupSource)

#### **Parameter**

WakeupSource ID of the asynchronous wake-up source

Return code

void none

# **Functional Description**

This function starts the check wakeup timeout mechanism and marks that the wakeup source has an unapproved CheckWakeup call if applicable on given wakeup source (check wakeup timeout > 0).



#### Caution

This service shall only be called by EcuM\_CheckWakeup(). The call is generated automatically if at least one wake-up source has a configured check wakeup timeout.

# **Particularities and Limitations**

- This service is synchronous.
- This service is reentrant for the same WakeupSource.
- This service is always available.

## Call Context

Expected to be called in interrupt context.

Table 5-16 EcuM\_StartCheckWakeup



## 5.2.16 EcuM\_EndCheckWakeup

_					
	$\overline{}$	7.0	4.,	72.7	7
Pr	(U)	I(U)	LINVI	l a Y	Ξ,

void EcuM\_EndCheckWakeup (EcuM\_WakeupSourceType WakeupSource)

#### **Parameter**

WakeupSource ID of the asynchronous wake-up source

## Return code

void none

## **Functional Description**

This function stops the check wakeup timeout mechanism and removes the wakeup source from the list of unapproved CheckWakeup calls.

## **Particularities and Limitations**

- This service is synchronous.
- This service is reentrant for the same WakeupSource.
- This service is always available.

# Call Context

Expected to be called in interrupt context.

Table 5-17 EcuM EndCheckWakeup

## 5.2.17 EcuM GetVersionInfo

## Prototype

void EcuM\_GetVersionInfo (Std\_VersionInfoType \*versioninfo)

#### **Parameter**

versioninfo pointer to store the version information

## Return code

void none

## **Functional Description**

Returns the version information of the ECU State Manager.

#### **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- The availability of this service depends on ECUM VERSION INFO API.

## Call Context

Table 5-18 EcuM\_GetVersionInfo



# 5.2.18 EcuM\_RequestRUN

# **Prototype**

# Std\_ReturnType EcuM\_RequestRUN (EcuM\_UserType user)

Parameter		
user	User ID which requests the RUN state	
Return code		
E_OK	Request accepted	
E_NOT_OK	IOT_OK Request not accepted	

# **Functional Description**

Places a RUN request for this user, Users represents normally an application. The tracking of the requests are specific for each user.



#### **Note**

RUN request will be ignored after an API call to EcuM KillAllRUNRequest().

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

## Call Context

Function could be called from application context.

Table 5-19 EcuM\_RequestRUN



# 5.2.19 EcuM\_ReleaseRUN

**Prototype** 

# Std\_ReturnType EcuM\_ReleaseRUN (EcuM\_UserType user)

i didilietei	
user	User ID which requests the RUN state

Return code

E\_OK Request accepted

E\_NOT\_OK Request not accepted

# **Functional Description**

Releases the RUN request previously done with a call to EcuM\_RequestRUN().

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

• Function could be called from application context.

Table 5-20 EcuM\_ReleaseRUN



# 5.2.20 EcuM\_RequestPOST\_RUN

# **Prototype**

# Std\_ReturnType EcuM\_RequestPOST\_RUN (EcuM\_UserType user)

Parameter		
user	User ID which requests the RUN state	
Return code		
E_OK	Request accepted	
E_NOT_OK	Request not accepted	

# **Functional Description**

Places a POST\_RUN request for this user, Users represents normally an application. The tracking of the requests are specific for each user.



#### **Note**

POST\_RUN request will be ignored after an API call to EcuM\_KillAllPostRUNRequest().

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

## Call Context

Function could be called from application context.

Table 5-21 EcuM\_RequestPOST\_RUN



# 5.2.21 EcuM\_ReleasePOST\_RUN

# 

# **Functional Description**

Releases the POST\_RUN request previously done with a call to EcuM\_RequestPOST\_RUN().

## **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from application context.

Table 5-22 EcuM\_ReleasePOST\_RUN



# 5.3 Services Provided by EcuM flex

In the following the services are described which are only relevant for EcuM flex:

# 5.3.1 EcuM\_SelectShutdownCause

Prototype		
Std_ReturnType <b>EcuM_SelectShutdownCause</b>		(EcuM_ShutdownCauseType shutdownCause)
Parameter		
shutdownCause	current shutdown cause	
Return code		
E_OK	success	
E_NOT_OK	error	
Functional Description		
Selects a new Shutdown cause for an intended shutdown.		
Particularities and Limitations		
Service ID: see table 'Service IDs'		

# This function is reentrant.Call Context

Function could be called from interrupt level or from task level

Table 5-23 EcuM\_SelectShutdownCause

This function is synchronous.



## 5.3.2 EcuM\_GetShutdownCause

Prototype		
Std_ReturnType <b>EcuM_GetShutdownCause</b>		(EcuM_ShutdownCauseType *shutdownCause)
Parameter		
shutdownCause current shutdown cause		
Return code		
E_OK	success	
E_NOT_OK	error	

# **Functional Description**

Get the currently set shutdown cause.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Function could be called from interrupt level or from task level

Table 5-24 EcuM\_GetShutdownCause

## 5.3.3 EcuM\_GoHalt

Prototype		
Std_ReturnType <b>EcuM_GoHalt</b> (void)		
Parameter		
void none		
Return code		
E_OK	success	
E_NOT_OK	error	

# **Functional Description**

This API is called in some modes for saving power. In this mode no more code is executed after entering that state.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- The selected shutdown target must set to ECUM\_STATE\_SLEEP

#### Call Context

Function could be called from interrupt level or from task level

Table 5-25 EcuM\_GoHalt



# 5.3.4 EcuM\_GoPoll

Prototype	
Std_ReturnType <b>EcuM_G</b>	GoPoll (void)
Parameter	
void	none

D	<b>at</b> ı	urn	CO	do

E_OK	success
E NOT OK	error

# **Functional Description**

This API is called in some modes for saving power. In this mode code is executed, so the EcuM poll for wake-up events. Only those Wake-up Sources with configured parameter EcuMWakeupSourcePolling are polled during that sleep mode. Other active sources can set wake-up events via interrupts.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- The selected shutdown target must set to ECUM STATE SLEEP

## Call Context

Function could be called from interrupt level or from task level

Table 5-26 EcuM\_GoPoll



# 5.3.5 EcuM\_GoDown

# **Prototype**

Std\_ReturnType **EcuM\_GoDown** (uint16 caller)

#### **Parameter**

void none

Return code

Std\_ReturnType none

## **Functional Description**

This routine is called to initiate a shutdown or a reset. The routine checks if the caller is one of the allowed callers (if defensive behavior is configured) and then the EcuM calls ShutdownOS() and thereafter the API EcuM\_Shutdown() is called by the shutdown hook.

## **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.
- The selected shutdown target must set to ECUM\_STATE\_OFF or ECUM\_STATE\_RESET

## Call Context

Function could be called from interrupt level or from task level

Table 5-27 EcuM\_GoDown



# 5.3.6 EcuM\_GoToSelectedShutdownTarget

Prototype			
Std_ReturnType <b>EcuM_G</b>	Std_ReturnType EcuM_GoToSelectedShutdownTarget(void)		
Parameter			
void	none		
Return code			
E_OK			
E_NOT_OK			

# **Functional Description**

This API can be called e.g. from the BswM without knowledge about the currently configured shutdown target. The EcuM decides if EcuM\_GoHalt(), EcuM\_GoPoll() or EcuM\_GoDown() has to be called.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from interrupt level or from task level

Table 5-28 EcuM\_GoToSelectedShutdownTarget



# 5.3.7 EcuM\_SetRelWakeupAlarm

# Prototype

Std\_ReturnType **EcuM\_SetRelWakeupAlarm** (EcuM\_UserType user, uint32 time)

raiaiiietei		
user	The user that wants to set up the wake up alarm	
time	Relative time for the wake-up alarm in seconds	
Return code		
E_OK	Alarm was successfully started	
E_NOT_OK	No Alarm was started because of an invalid user parameter	

E\_EARLIER\_ACTIVE An earlier alarm was already started

## **Functional Description**

This API can be used to set a relative wake up alarm during runtime of the ECU. For further information about this see chapter 3.14.



#### Caution

All wake up alarms are cleared if the ECU wakes up from a sleep phase, even if the reason for this wake up was not time triggered. The wake up alarms must be rearmed before the next sleep phase is entered.



## Note

Each user can only set one wake-up alarm.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from task level

Table 5-29 EcuM\_SetRelWakeupAlarm



# 5.3.8 EcuM\_SetAbsWakeupAlarm

# **Prototype**

Std\_ReturnType **EcuM\_SetAbsWakeupAlarm** (EcuM\_UserType user, uint32 time)

	· · · · · · · · · · · · · · · · · · ·		
Parameter			
user	The user that wants to set up the wake-up alarm		
time	Absolute time for the wake-up alarm in seconds		
Return code	Return code		
E_OK	Alarm was successfully started		
E_NOT_OK	No Alarm was started because of an invalid user parameter		
E_EARLIER_ACTIVE	An earlier alarm was already started		
E_PAST	The time has already passed		

# **Functional Description**

This API can be used to set an absolute wake up alarm during runtime of the ECU. For further information about this see chapter 3.14.



#### Caution

All wake up alarms are cleared if the ECU wakes up from a sleep phase, even if the reason for this wake up was not time triggered. The wake up alarms must be rearmed before the next sleep phase is entered.



#### Note

Each user can only set one wake-up alarm.

## **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Table 5-30 EcuM\_SetAbsWakeupAlarm



# 5.3.9 EcuM\_AbortWakeupAlarm

Prototype		
Std_ReturnType <b>EcuM_A</b>	Std_ReturnType EcuM_AbortWakeupAlarm (EcuM_UserType user)	
Parameter		
user	The user that wants to abort the wake-up alarm	
Return code		
E_OK	Alarm was successfully aborted	
E_NOT_OK	The parameter 'user' was not valid	
E_NOT_ACTIVE	No alarm was active for this user	

## Functional Description

This API can be used to abort a wake-up alarm which was set via the APIs EcuM\_SetRelWakeupAlarm or EcuM\_SetAbsWakeupAlarm.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Table 5-31 EcuM\_AbortWakeupAlarm



# 5.3.10 EcuM\_GetWakeupTime

# **Prototype**

# Std\_ReturnType **EcuM\_GetWakeupTime** (uint32 \*time)

#### **Parameter**

time Absolute time of the next configured wake-up alarm in seconds

## Return code

E\_OK Time was successfully returned

E\_NOT\_OK A null pointer was passed as parameter 'time'

## **Functional Description**

Returns the time of the next active wake-up alarm which was set via the APIs EcuM\_SetAbsWakeupAlarm or EcuM\_SetRelWakeupAlarm.



#### Note

If the returned value equals '0xFFFFFFFF', no wake-up alarm is currently active

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Table 5-32 EcuM\_GetWakeupTime



# 5.3.11 EcuM\_SetClock

# **Prototype**

Std\_ReturnType **EcuM\_SetClock** (EcuM\_UserType user, uint32 time)

Pa	-17	- 10	a Ya	7.7	A 1
	- I II	-	11 1 -	-11 % 1	

user The user that wants to set up the clock

time The absolute time value designated for the new time in seconds

# Return code

E OK Time was successfully modified

E\_NOT\_ALLOWED The user was not allowed to modify the time

## **Functional Description**

This API can be used to modify the current time. Only special users are allowed to modify this time, e.g. for test purposes.

# Particularities and Limitations

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from task level

Table 5-33 EcuM\_SetClock



# 5.3.12 EcuM\_GetCurrentTime

Prototype	
Std_ReturnType E	cuM_GetCurrentTime (uint32 *time)
Parameter	
time	Current system time in seconds
Return code	
E_OK E_NOT_OK	Time was successfully returned A null pointer was passed as parameter 'time'
Functional Descr	iption

This API can be used to get the current system time.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

# **Call Context**

Table 5-34 EcuM\_GetCurrentTime



# 5.3.13 EcuM\_SetState

# Prototype

void EcuM\_SetState(EcuM\_StateType state);

## **Parameter**

state State indicated by BswM

# Return code

void none

# **Functional Description**

Requests a specific state which will be mapped to the corresponding RTE mode. This mode will be used to trigger a RTE mode switch.

# Particularities and Limitations

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

## Call Context

Function could be called from task level

Table 5-35 EcuM\_SetState



# 5.4 Services Provided by EcuM fixed

In the following the services are described which are only relevant for EcuM fixed:

# 5.4.1 EcuM\_GetState

Prototype	
Std_ReturnType <b>EcuM_0</b>	GetState (EcuM_StateType* state)
Parameter	
state	Current EcuM State
Return code	
E_OK	The parameter state was a not NULL_PTR
E_NOT_OK	The parameter state was a NULL_PTR

# Functional Description

This API returns the current EcuM State. The possible EcuM States for the fixed EcuM can be seen in chapter **3.3** States of EcuM fixed.

# Particularities and Limitations

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is reentrant.

#### Call Context

Table 5-36 EcuM\_GetState



# 5.4.2 EcuM\_KillAllRUNRequests

# **Prototype**

# void EcuM\_ KillAllRUNRequests (void)

#### **Parameter**

void none

## Return code

void none

# **Functional Description**

Deletes all RUN requests and ensures that no new RUN request is accepted. Additionally the EcuM self-run request period will be aborted.



#### Note

The benefit of this function over an ECU reset is that the shutdown sequence is executed, which e.g. takes care of writing back NV memory contents.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from application context.

Table 5-37 EcuM\_ KillAllRUNRequests



# 5.4.3 EcuM\_KillAllPostRUNRequests

# Prototype

# void EcuM\_ KillAllPostRUNRequests (void)

# Parameter

void none

Return code

void none

# **Functional Description**

Deletes all POST\_RUN requests and ensures that no new POST\_RUN request is accepted.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

## Call Context

Function could be called from application context.

Table 5-38 EcuM\_ KillAllPostRUNRequests



# 5.5 Services Used by EcuM

In the following table services provided by other components, which are used by the EcuM are listed. Also refer to chapter 2.1.

For details about prototype and functionality refer to the documentation of the providing component.

Component	API	EcuM flex	EcuM fixed
BswM	BswM_EcuM_CurrentWakeup()		
	BswM_Init()		
	BswM_Deinit()		
	BswM_EcuM_RequestedState()		
	BswM_EcuM_CurrentState()		
ComM	ComM_EcuM_WakeUpIndication()		
	ComM_GetStatus()		
	ComM_GetState()		
	ComM_CommunicationAllowed()		
	ComM_DeInit()		
Det	Det_ReportError()		
Dem	Dem_ReportErrorStatus()		•
	Dem_Init()		
	Dem_Shutdown()		
Gpt	Gpt_EnableNotification()		
	Gpt_EnableWakeup()		
	Gpt_SetMode()		
	Gpt_StartTimer()		
Mcu	Mcu_SetMode()		
	Mcu_GetResetReason()		
NvM	NvM_WriteAll()		
	NvM_CancelWriteAll()		
	NvM_KillWriteAll()		
os	ShutdownOS()		
	StartOS()		
	GetResource()		
	ReleaseResource()		
	EnableAllInterrupts()		
	DisableAllInterrupts()		
RTE	Rte_Start()		
	Rte_Stop()		
	Rte_Switch_currentMode_currentMode()		•
	Rte_Feedback_currentMode_currentMode()		
SchM	SchM_Init()		
	SchM_Deinit()		



Component	API	EcuM flex	EcuM fixed
	SchM_Enter_EcuM_ECUM_EXCLUSIVE_AREA_0()		
	SchM_Exit_EcuM_ECUM_EXCLUSIVE_AREA_0()	-	
	SchM_Enter_EcuM_ECUM_EXCLUSIVE_AREA_1()	-	
	SchM_Exit_EcuM_ECUM_EXCLUSIVE_AREA_1()		
	SchM_Enter_EcuM_ECUM_EXCLUSIVE_AREA_2()	-	
	SchM_Exit_EcuM_ECUM_EXCLUSIVE_AREA_2()	-	

Table 5-39 Services used by the EcuM

## 5.6 Callback Functions

This chapter describes the callback functions that are implemented by the EcuM and can be invoked by other modules. The prototypes of the callback functions are provided in the header file EcuM\_Cbk.h by the EcuM.

# 5.6.1 EcuM\_SetWakeupEvent

Prototype		
void EcuM_SetWakeupEvent (EcuM_WakeupSourceType WakeupSource)		
Parameter		
WakeupSource	the source of the wake-up event.	
Return code		
void	none	
Functional Description		
Marks a wake-up event as pending if validation is required. If no validation is required then EcuM_ValidateSetWakeupEvent will be called within this function.		
Particularities and Limitations		
<ul><li>None</li></ul>		
Call Context		
Function could be called from interrupt level or from task level		

Table 5-40 EcuM\_SetWakeupEvent



# 5.6.2 EcuM\_ValidateWakeupEvent

# **Prototype**

void EcuM\_ValidateWakeupEvent (EcuM\_WakeupSourceType WakeupSource)

#### **Parameter**

WakeupSource the wake-up source which should be validated

Return code

void none

# **Functional Description**

After wake-up, the ECU State Manager will stop the process during the WAKE-UP VALIDATION state to wait for validation of the wake-up event. The validation is carried out with a call of this API service.

## **Particularities and Limitations**

Only ComM channels can validate Wake-up Events during ECUM\_STATE\_RUN.

# Call Context

Function could be called from interrupt level or from task level

Table 5-41 EcuM\_ValidateWakeupEvent



# 5.6.3 EcuM\_AlarmCheckWakeup

<b>Prototy</b>	10.0
	10 I A
1 1000	P -

# void EcuM\_AlarmCheckWakeup(void)

#### **Parameter**

void none

## Return code

void none

## **Functional Description**

This API is used to update the system clock. The API is called by the EcuM callout EcuM\_CheckWakeup or directly by the GPT after one second has elapsed.

If during sleep the wake-up alarm which was set via the APIs EcuM\_SetAbsWakeupAlarm or EcuM\_SetRelWakeupAlarm has expired, this API call will lead to a wake-up event.

# **Particularities and Limitations**

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

## Call Context

Function could be called from interrupt level

Table 5-42 EcuM AlarmCheckWakeup



# 5.6.4 Callback Functions by EcuM fixed

# 5.6.4.1 EcuM\_CB\_NfyNvMJobEnd

Prototype	
void <b>EcuM_CB_NfyNvMJobEnd</b> (uint8 ServiceID, NvM_RequestResultType JobResult)	
Parameter	
ServiceID	Unique service ID of NVRAM manger service.
JobResult	[parameter is ignored by EcuM fixed]
Return code	
void	none
Functional Description	

## Functional Description

Used to notify about the end of NVRAM jobs initiated by ECUM.

# Particularities and Limitations

- Service ID: see table 'Service IDs'
- This function is synchronous.
- This function is non-reentrant.

#### Call Context

Function could be called from interrupt level

Table 5-43 EcuM\_AlarmCheckWakeup

# 5.7 Configurable Interfaces

## 5.7.1 Notifications

The EcuM does not provide notifications.

#### 5.7.2 Callout Functions

At its configurable interfaces the EcuM defines callout functions. The declarations of the callout functions are provided by the BSW module, i.e. the EcuM. It is the integrator's task to provide the corresponding function definitions. The definitions of the callouts can be adjusted to the system's needs. The EcuM callout function declarations are described in the following tables:

©2015, Vector Informatik GmbH Version: 5.00.00 99 / 134



## 5.7.2.1 EcuM ErrorHook

## **Prototype**

void EcuM\_ErrorHook (Std\_ReturnType reason)

#### **Parameter**

reason The reason for the current call of the ErrorHook.

# Return code

void none

## **Functional Description**

The ECU State Manager calls the Errorhook if the following error code occur:

ECUM\_E\_HOOK\_RAM\_CHECK\_FAILED

In that case it is not possible to continue processing. The integrator has to take the decision how the ECU shall react in that situation.

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Expected to be called in application context.

Table 5-44 EcuM\_ErrorHook

## 5.7.2.2 EcuM OnGoOffOne

# **Prototype**

void EcuM\_OnGoOffOne (void)

## **Parameter**

void none

### Return code

void none

## **Functional Description**

Allows the execution of additional activities in GO OFF I state.

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called right after entering ECUM\_STATE\_GO\_OFF\_ONE.

Table 5-45 EcuM\_OnGoOffOne



# 5.7.2.3 EcuM\_OnGoOffTwo

# **Prototype**

void EcuM\_OnGoOffTwo (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

Allows the execution of additional activities in GO OFF II state.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called right after entering ECUM\_STATE\_GO\_OFF\_TWO.

Table 5-46 EcuM\_OnGoOffTwo

## 5.7.2.4 EcuM AL SwitchOff

# Prototype

void EcuM\_AL\_SwitchOff (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

This callout shall take the code for shutting off the power supply of the ECU.

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

## Call Context

Invoked in EcuM\_Shutdown(), task context

Table 5-47 EcuM\_AL\_SwitchOff



# 5.7.2.5 EcuM\_AL\_Reset

Prototype		
void EcuM_AL_Reset (E	cuM_ResetType Reset)	
Parameter		
Reset	The parameter Reset describes the ResetType (refer to 5.1) that is currently configured via EcuM_SelectShutdownTarget () (refer to 5.2.5).	
Return code		
void	none	
Functional Description		

# Functional Description

This callout shall take the decision what kind of reset to be performed depending on the given Reset mode.

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Expected to be called in application context.

Table 5-48 EcuM\_AL\_Reset

## 5.7.2.6 EcuM AL DriverInitZero

Prototype		
void EcuM_AL_DriverInitZero (void)		
Parameter		
void	none	
Return code		
void	none	
Functional Description		

#### Functional Description

This callout is invoked early in the PreOS Sequence during EcuM\_Init().

## **Particularities and Limitations**

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.

#### Call Context

Invoked in EcuM\_Init(), task context

Table 5-49 EcuM\_AL\_DriverInitZero



# 5.7.2.7 EcuM\_AL\_DriverInitOne

# **Prototype**

void EcuM\_AL\_DriverInitOne (void)

## **Parameter**

void none

## Return code

void none

# **Functional Description**

This callout is invoked late in the PreOS Sequence during EcuM Init().

## **Particularities and Limitations**

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.



#### **Note**

PostBuild data can be accessed via the global pointer EcuM\_GlobalPBConfig\_Ptr, example: EcuM\_GlobalPBConfig\_Ptr->CfgPtr\_Com\_Init.



#### **Note**

Variant data can be accessed via the global pointer EcuM\_GlobalPCConfig\_Ptr, example: EcuM\_GlobalPCConfig\_Ptr->CfgPtr\_ComM\_Init.

## **Call Context**

Invoked in EcuM\_Init(), task context

Table 5-50 EcuM\_AL\_DriverInitOne

©2015, Vector Informatik GmbH Version: 5.00.00 103 / 134



# 5.7.2.8 EcuM\_AL\_DriverRestart

## **Prototype**

void EcuM\_AL\_DriverRestart (void)

#### **Parameter**

void none

## Return code

void none

## **Functional Description**

This callout shall provide driver initialization and other hardware related startup activities after a wake-up event from SLEEP state. This callout should be a combination of EcuM\_DriverInitZero and EcuM\_DriverInitOne.

## **Particularities and Limitations**

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.



#### Note

PostBuild data can be accessed via the global pointer EcuM\_GlobalPBConfig\_Ptr, example: EcuM\_GlobalPBConfig\_Ptr->CfgPtr\_Com\_Init.



#### **Note**

Variant data can be accessed via the global pointer EcuM\_GlobalPCConfig\_Ptr, example: EcuM\_GlobalPCConfig\_Ptr->CfgPtr\_ComM\_Init.

#### Call Context

Invoked directly after the wake-up phase

Table 5-51 EcuM\_AL\_DriverRestart



# 5.7.2.9 EcuM\_AL\_SetProgrammableInterrupts

# Prototype

void EcuM\_AL\_SetProgrammableInterrupts (void)

**Parameter** 

void none

Return code

void none

## **Functional Description**

On ECUs with programmable interrupt priorities, these priorities must be set before the OS is started.

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Invoked in EcuM\_Init(), task context

Table 5-52 EcuM\_AL\_SetProgrammableInterrupts

# 5.7.2.10 EcuM\_McuSetMode

## **Prototype**

void EcuM\_McuSetMode (Mcu\_ModeType McuMode)

## **Parameter**

McuMode Mode for the upcoming sleep mode

Return code

void none

# **Functional Description**

Switches the Mcu to a power saving mode during a sleep phase.

## **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

## Call Context

Expected to be called by EcuM\_GoHalt() or EcuM\_GoPoll()

Table 5-53 EcuM\_McuSetMode



## 5.7.2.11 EcuM\_WaitForSlaveCores

## **Prototype**

void EcuM\_WaitForSlaveCores (void)

#### **Parameter**

void none

## Return code

void none

## **Functional Description**

Is only called if EcuMSlaveCoreHandling is active. During the master core is waiting for the slave cores to be ready for the upcoming sleep this callout is called cyclically.

In context of this callout the slave cores can be initiated to enter sleep.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Expected to be called by EcuM GoHalt() or EcuM GoPoll()

Table 5-54 EcuM\_WaitForSlaveCores

## 5.7.2.12 EcuM StartOS

# Prototype

void EcuM\_StartOS (AppModeType appMode)

#### **Parameter**

appMode Default OS application Mode

## Return code

void none

# **Functional Description**

This callout is called at the end of EcuM Init() to start the OS.



#### Note

In case of a MultiCore ECU all slave cores are started from the Master Core via the OS API StartCore() before the OS is started with a call to StartOS().

## **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

#### Call Context

Expected to be called by EcuM\_Init()

Table 5-55 EcuM\_StartOS



# 5.7.2.13 EcuM\_ShutdownOS

# **Prototype**

void EcuM\_ShutdownOS (Std\_ReturnType ErrCode)

## Parameter

ErrCode E\_OK

# Return code

void none

# **Functional Description**

This callout is called at the end of EcuM\_GoDown() to shut down the OS via ShutdownOS(E\_OK).



#### Note

In case of a MultiCore ECU this callout should lead to a call of ShutdownAllCores(E\_OK), inside this OS API all cores are synchronized and stopped.

# **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

## Call Context

Expected to be called by EcuM\_GoDown()

Table 5-56 EcuM\_ShutdownOS



## 5.7.2.14 EcuM\_GenerateRamHash

## **Prototype**

## void EcuM\_GenerateRamHash (void)

#### **Parameter**

void none

## Return code

void none

## **Functional Description**

This callout is intended to provide a RAM integrity test. The goal of this test is to ensure that after a long SLEEP duration, RAM contents are still consistent. The RAM check itself must be provided by the integrator.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Invoked just before setting the ECU into a sleep mode where the ECU is halted

Table 5-57 EcuM\_GenerateRamHash

# 5.7.2.15 EcuM\_CheckRamHash

## Prototype

#### uint8 EcuM\_CheckRamHash (void)

# **Parameter**

void none

## Return code

0	Integrity test failed
1255	Integrity test passed

## **Functional Description**

This callout is intended to provide a RAM integrity check previously done with EcuM\_GenerateRamHash().

## **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Directly called after the wake-up of the ECU.

Table 5-58 EcuM\_CheckRamHash



# 5.7.2.16 EcuM\_SleepActivity

#### **Prototype**

void EcuM\_SleepActivity (void)

#### **Parameter**

void none

# Return code

void none

# **Functional Description**

The ECU State Manager invokes this callout periodically during the Poll Sequence if the MCU is not halted. The EcuM polls periodically all sources that need polling and are active during the configured Sleep mode. After all sources are polled EcuM SleepActivity is called once.



#### **Caution**

The EcuM\_SleepActivity is called in a blocking loop at maximum frequency. If a lower period is preferred, the integrator has to implement this behavior.

# **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Expected to be called in task context.

Table 5-59 EcuM\_SleepActivity



#### 5.7.2.17 EcuM\_EnableWakeupSources

Prototype		
void <b>EcuM_EnableWakeupSources</b> (EcuM_WakeupSourceType wakeupSource)		
Parameter		
wakeupSource	Every bit set in the parameter indicates a wake-up source which should be enabled in the current sleep mode.	
Return code		
void	none	
Functional Description		

This callout will be invoked when the EcuM enters a sleep state. The EcuM calls this callout for every bit that is set as an active source for the current Sleep mode.

The integrator has to take care to implement the necessary activities to enable the corresponding wake-up sources.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Invoked just before setting the ECU into a sleep mode

Table 5-60 EcuM\_EnableWakeupSources

# 5.7.2.18 EcuM\_DisableWakeupSources

Prototype		
void <b>EcuM_DisableWakeupSources</b> (EcuM_WakeupSourceType wakeupSource)		
Parameter		
wakeupSource	Every bit set in the parameter indicates a wake-up source which should be enabled in the current sleep mode.	
Return code		
void	none	
E COLD ID CO		

#### Functional Description

This callout will be invoked when the EcuM leaves a sleep state. The EcuM disables all wake-up sources that have occurred during the recent sleep phase. The not occurred sources remain active till the EcuM transits to ECUM STATE RUN after the successful validation of a wake-up source.

The integrator has to take care to implement the necessary activities to disable the corresponding wake-up sources.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called just before RUN state is entered after a sleep
- Called just before WAKEUP\_VALIDATION state is entered

Table 5-61 EcuM\_DisableWakeupSources



# 5.7.2.19 EcuM\_StartWakeupSources

Prototype		
void <b>EcuM_StartWakeupSources</b> (EcuM_WakeupSourceType wakeupSource)		
Parameter		
wakeupSource	Every bit set in the parameter indicates a wake-up source which is enabled in the current sleep mode.	
Return code		
void	none	
Functional Description		
The callout shall start the given wake-up source(s) so that they are ready to perform wake-up validation.		
Particularities and Limitations		
This function has to be filled with code by the integrator.		

Table 5-62 EcuM\_StartWakeupSources

Call Context

# 5.7.2.20 EcuM\_StopWakeupSources

Expected to be called in task context.

Prototype		
void <b>EcuM_StopWakeupSources</b> (EcuM_WakeupSourceType wakeupSource)		
Parameter		
wakeupSource	Every bit set in the parameter indicates a wake-up source which should be stopped after unsuccessful wake-up validation.	
Return code		
void	none	
Functional Description		
This callout shall stop the given wake-up source(s) after unsuccessful wake-up validation.		
Particularities and Limitations		
This function has to be filled with code by the integrator.		
Call Context		
<ul> <li>Expected to be called in task context.</li> </ul>		

Table 5-63 EcuM\_StopWakeupSources



#### 5.7.2.21 EcuM\_CheckWakeup

127	of a l	TAY.	PAN.	AYA
ш	roi	301	-B'/II	

void EcuM\_CheckWakeup (EcuM\_WakeupSourceType wakeupSource)

#### **Parameter**

wakeupSource ID of the wake-up source to be checked

#### Return code

void none

#### **Functional Description**

This callout shall be called by the ISR of a wake-up source to set up the PLL and check wake-up sources that may be connected to the same interrupt.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### **Call Context**

Expected to be called in interrupt context.

Table 5-64 EcuM CheckWakeup

# 5.7.2.22 EcuM CheckValidation

Prototype			
void <b>EcuM_CheckValidation</b> (EcuM_WakeupSourceType wakeupSource)			
Parameter			
wakeupSource	Wake-up IDs of pending wake-up events.		
Return code			
void	none		

#### Functional Description

This callout is called by the EcuM when wake-up validation of a wake-up event is necessary. The pending wake-up event(s) are passed by the parameter in order to allow the necessary reaction depending on the wake-up source.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called in WAKE-UP VALIDATION state

Table 5-65 EcuM\_CheckValidation



# 5.7.2.23 EcuM\_DeterminePbConfiguration

# **Prototype**

EcuM\_ConfigRefType EcuM\_DeterminePbConfiguration (void)

#### **Parameter**

void none

# Return code

EcuM\_ConfigRefType Pointer to the Post-Build structure

# **Functional Description**

In the case of Post-Build Loadable or Selectable the EcuM gets the global configuration pointer via this callout.



#### **Note**

In case of a MultiCore ECU this callout is only called on the core which starts up first.

# **Particularities and Limitations**

This function has to be filled with code by the integrator.

# **Call Context**

Expected to be called in application context.

Table 5-66 EcuM\_DeterminePbConfiguration



# 5.7.2.24 EcuM\_BswErrorHook

Prototype		
void EcuM_BswErrorHook (uint16 BswModuleId, uint8 ErrorId)		
Parameter		
BswModuleId	The reporting BSW module	
Errorld	The ld of the reported error	
Return code		
void	none	

# **Functional Description**

This API can be called by Basic Software Modules to notify corrupted Postbuild configuration data.

#### Specified Errorlds are:

- ECUM\_BSWERROR\_NULLPTR
- ECUM\_BSWERROR\_COMPATIBILITYVERSION
- ECUM BSWERROR MAGICNUMBER

# **Particularities and Limitations**

The handling of an occurred error has to be specified by the integrator.

#### Call Context

Invoked in task context.

Table 5-67 EcuM\_BswErrorHook



# 5.7.3 Callout Functions by EcuM flex

# 5.7.3.1 EcuM\_GptStartClock

#### Prototype

void **EcuM\_GptStartClock** (Gpt\_ChannelType GptChannel, Gpt\_ModeType Mode, Gpt\_ValueType Value)

Parameter	
GptChannel	The configured Gpt channel which serves as time base for alarm clock
Mode	The Gpt normal mode
Value	The value to start the Gpt timer for second based notification / wake up
Return code	

Void none

# **Functional Description**

This callout prepares the Gpt for calling the callback EcuM\_AlarmCheckWakeup every second to increment the system time.



#### Note

This callout is only active if the EcuM alarm clock is enabled

# **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

#### Call Context

Expected to be called by EcuM\_StartupTwo().

Table 5-68 EcuM\_GptStartClock



# 5.7.3.2 EcuM\_GptSetSleep

# **Prototype**

void **EcuM\_GptSetSleep** (Gpt\_ChannelType GptChannel, Gpt\_ModeType Mode)

#### **Parameter**

GptChannel The configured Gpt channel which serves as time base for alarm clock

Mode The Gpt sleep mode

# Return code

Void none

# **Functional Description**

This callout sets the Gpt to sleep mode and enables the wake up functionality of the Gpt.



#### Note

This callout is only active if the EcuM alarm clock is enabled

# **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

#### Call Context

Expected to be called by EcuM\_GoHalt() or EcuM\_GoPoll()

Table 5-69 EcuM\_GptSetSleep



# 5.7.3.3 EcuM\_GptSetNormal

# **Prototype**

void **EcuM\_GptSetNormal** (Gpt\_ChannelType GptChannel, Gpt\_ModeType Mode)

#### **Parameter**

GptChannel The configured Gpt channel which serves as time base for alarm clock

Value The Gpt normal mode

# Return code

Void none

# **Functional Description**

This callout sets the Gpt back to normal mode after the ECU has woken up from a sleep mode.



#### **Note**

This callout is only active if the EcuM alarm clock is enabled

# **Particularities and Limitations**

This function is filled by the configuration tool. It can be adapted by the integrator.

#### Call Context

Expected to be called by EcuM\_GoHalt() or EcuM\_GoPoll()

Table 5-70 EcuM\_GptSetNormal



# 5.7.3.4 EcuM\_AL\_DriverInitBswM\_<ID>

# **Prototype**

void EcuM\_AL\_DriverInitBswM\_<ID> (const EcuM\_ConfigType \*ConfigPtr)

#### **Parameter**

ConfigPtr Pointer to global module configuration structure.

#### Return code

void none

# **Functional Description**

This callout can be invoked by the BswM to initialize the stack of the ECU.



#### Note

The ID and the count of this callout depends on the configuration. The integrator can configure multiple driver init lists of this type.

# Particularities and Limitations

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.

#### Call Context

Invoked in BswM\_Init(), task context

Table 5-71 EcuM\_AL\_DriverInitBswM



# 5.7.4 Callout Functions by EcuM fixed

# 5.7.4.1 EcuM AL DriverInitTwo

#### Prototype

void EcuM\_AL\_DriverInitTwo (void)

**Parameter** 

void none

Return code

void none

#### **Functional Description**

This callout is invoked during EcuM\_StartupTwo(), prior the Rte is started.

#### **Particularities and Limitations**

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.



#### **Note**

PostBuild data can be accessed via the global pointer EcuM\_GlobalPBConfig\_Ptr, example: EcuM\_GlobalPBConfig\_Ptr->CfgPtr\_Com\_Init.



#### Note

Variant data can be accessed via the global pointer EcuM\_GlobalPCConfig\_Ptr, example: EcuM\_GlobalPCConfig\_Ptr->CfgPtr\_ComM\_Init.

#### **Call Context**

Invoked in EcuM\_StartupTwo(), task context

Table 5-72 EcuM\_AL\_DriverInitTwo



# 5.7.4.2 EcuM\_AL\_DriverInitThree

# **Prototype**

void EcuM\_AL\_DriverInitThree (void)

#### **Parameter**

void none

#### Return code

void none

# **Functional Description**

This callout is invoked during EcuM StartupTwo(), after the Rte is started.

#### **Particularities and Limitations**

This function is filled by the configuration tool. It can be extended by the integrator by using the Userblocks.



#### **Note**

PostBuild data can be accessed via the global pointer EcuM\_GlobalPBConfig\_Ptr, example: EcuM\_GlobalPBConfig\_Ptr->CfgPtr\_Com\_Init.



#### **Note**

Variant data can be accessed via the global pointer EcuM\_GlobalPCConfig\_Ptr, example: EcuM\_GlobalPCConfig\_Ptr->CfgPtr\_ComM\_Init.

#### Call Context

Invoked in EcuM\_StartupTwo(), task context

Table 5-73 EcuM\_AL\_DriverInitThree

©2015, Vector Informatik GmbH Version: 5.00.00 120 / 134



# 5.7.4.3 EcuM\_OnEnterRun

# **Prototype**

void EcuM\_OnEnterRun (void)

#### **Parameter**

void none

#### Return code

void none

# **Functional Description**

Allows the execution of activities before entering RUN state.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called just before entering RUN state.

Table 5-74 EcuM\_OnEnterRun

#### 5.7.4.4 EcuM OnExitRun

# Prototype

# void EcuM\_OnExitRun (void)

#### **Parameter**

void none

# Return code

void none

# **Functional Description**

Allows the execution of activities before leaving RUN state.

# **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called just before leaving RUN state.

Table 5-75 EcuM\_OnExitRun



# 5.7.4.5 EcuM\_OnGoSleep

# **Prototype**

void EcuM\_OnGoSleep (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

Allows the execution of additional activities while module is in GO SLEEP state.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called after entering GO SLEEP state.

Table 5-76 EcuM\_OnGoSleep

# 5.7.4.6 EcuM\_OnPrepShutdown

# Prototype

#### void EcuM\_OnPrepShutdown (void)

#### **Parameter**

void none

# Return code

void none

# **Functional Description**

Allows the execution of additional activities in PREP SHUTDOWN state.

# **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called just after entering PREP SHUTDOWN state.

Table 5-77 EcuM\_OnPrepShutdown



# 5.7.4.7 EcuM\_OnExitPostRun

# **Prototype**

void EcuM\_OnExitPostRun (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

Allows the execution of activities while leaving POST RUN state.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called while leaving POST RUN state.

Table 5-78 EcuM\_OnExitPostRun

#### 5.7.4.8 EcuM OnFailedNvmWriteAllJobReaction

# Prototype void EcuM\_OnFailedNvmWriteAllJobReaction (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

The ECU State Manager will call this function in case that a Nvm\_WriteAll() job was not finished in time.

# **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

Invoked in task context

Table 5-79 EcuM\_OnFailedNvmWriteAllJobReaction



# 5.7.4.9 EcuM\_OnWakeupReaction

# **Prototype**

void EcuM\_OnWakeupReaction (void)

**Parameter** 

void none

Return code

void none

# **Functional Description**

Allows the execution of additional activities in WAKEUP\_REACTION state.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called in ECUM STATE WAKEUP REACTION state.

Table 5-80 EcuM\_OnFailedNvmWriteAllJobReaction

# 5.7.4.10 EcuM\_OnRTEStartup

#### Prototype

#### void EcuM\_OnRTEStartup (void)

# **Parameter**

void none

#### Return code

void none

# **Functional Description**

Allows the execution of activities before starting the RTE.

#### **Particularities and Limitations**

This function has to be filled with code by the integrator.

#### Call Context

- Invoked in task context
- Called before Rte\_Start() is executed. Module state: STARTUP

Table 5-81 EcuM\_OnRTEStartup



#### 5.8 Service Ports

#### 5.8.1 Client Server Interface

A client server interface is related to a Provide Port at the server side and a Require Port at client side.

#### 5.8.1.1 Provide Ports on EcuM Side

At the Provide Ports of the EcuM the API functions described in 5.2 are available as Runnable Entities. The Runnable Entities are invoked via Operations. The mapping from a SWC client call to an Operation is performed by the RTE. In this mapping the RTE adds Port Defined Argument Values to the client call of the SWC, if configured.

The following sub-chapters present the Provide Ports defined for the EcuM and the Operations defined for the Provide Ports, the API functions related to the Operations to be added by the RTE.

# 5.8.1.1.1 ShutdownTarget Port

Operation	API Function
SelectShutdownTarget	EcuM_SelectShutdownTarget()
GetLastShutdownTarget	EcuM_GetLastShutdownTarget()
GetShutdownTarget	EcuM_GetShutdownTarget()
SelectShutdownCause	EcuM_SelectShutdownCause()
GetShutdownCause	EcuM_GetShutdownCause()

Table 5-82 Shutdown Target Port

# 5.8.1.1.2 BootTarget Port

Operation	API Function
SelectBootTarget	EcuM_SelectBootTarget()
GetBootTarget	EcuM_GetBootTarget()

Table 5-83 BootTarget Port



# 5.8.1.1.3 AlarmClock Port

Operation	API Function
SelectRelWakeupAlarm	EcuM_SelectRelWakeupAlarm()
SelectAbsWakeupAlarm	EcuM_SelectAbsWakeupAlarm()
AbortWakeupAlarm	EcuM_AbortWakeupAlarm()
GetCurrentTime	EcuM_GetCurrentTime()
GetWakeupTime	EcuM_GetWakeupTime()
SetClock	EcuM_SetClock()

Table 5-84 AlarmClock Port



#### Caution

The AlarmClock Port is only available in case of EcuM flex.

# 5.8.1.1.4 StateRequest Port

Operation	API Function	Port Defined Argument Value
RequestRUN	EcuM_RequestRUN()	EcuM_UserType UserId
ReleaseRUN	EcuM_ReleaseRUN()	EcuM_UserType UserId
RequestPOST_RUN	EcuM_RequestPOST_RUN()	EcuM_UserType UserId
ReleasePOST_RUN	EcuM_ReleasePOST_RUN()	EcuM_UserType UserId
GetState	EcuM_GetStateWrapper()	EcuM_UserType UserId

Table 5-85 StateRequest Port



#### Info

©2015, Vector Informatik GmbH Version: 5.00.00 126 / 134



# 5.8.1.2 Require Ports on EcuM Side

The EcuM calls operations at its Require Ports. These Operations have to be provided by the SWCs by means of Runnable Entities. These Runnable Entities implement the callback functions expected by the EcuM.

The following sub-chapters present the Require Port defined for the EcuM, the Operations that are called from the EcuM and the related Notifications.

#### 5.8.1.2.1 currentMode Port

Operation	RTE Interface	Mode Declaration Group
currentMode	Rte_Switch_currentMode_currentMode	STARTUP
		RUN
		POST_RUN
		SLEEP
		WAKE_SLEEP
		SHUTDOWN

Table 5-86 currentMode Port



#### Caution

The Ports CurrentMode and StateRequest are only available in case of EcuM fixed.



# 6 AUTOSAR Standard Compliance

#### 6.1 Deviations

#### 6.1.1 Deviation in the Naming of API Parameters

#### 6.1.1.1 ResetSleepMode

The parameter "mode" has been changed to "resetSleepMode" for the following APIs:

- EcuM GetLastShutdownTarget()
- EcuM GetShutdownTarget()
- > EcuM\_SelectShutdownTarget()

#### 6.1.1.2 TargetState

The parameter "target" has been changed to "targetState" for the following API:

EcuM SelectShutdownTarget()

# 6.1.1.3 ShutdownTarget

The parameter "shutdownTarget" has been changed to "target" for the following API:

- EcuM GetShutdownTarget()
- EcuM GetLastShutdownTarget()

#### 6.1.1.4 Target (ShutdownTarget)

The parameter "target" has been changed to "shutdownCause" for the following API:

> EcuM SelectShutdownCause()

#### 6.1.1.5 Target (BootTarget)

The parameter "target" has been changed to "BootTarget" for the following API:

- EcuM SelectBootTarget()
- > EcuM\_GetBootTarget()

#### 6.1.1.6 Sources

The parameter "sources" has been changed to "WakeupSource" for the following API:

- EcuM ClearWakeupEvent()
- EcuM SetWakeupEvent()
- > EcuM ValidateWakeupEvent()

#### 6.1.2 Starting of the Validation Timer

The validation timer is not started by calling EcuM\_SetWakeupEvent(), instead it is started with the next MainFunctionCycle.

#### 6.1.3 Multiplicity of Parameters

#### 6.1.3.1 EcuMResetReasonRef

The parameter has been changed to optional so that not every wake-up source must have configured an Mcu reset reason.



#### 6.1.3.2 EcuMSleepMode

The parameter has been changed to optional to allow code optimization on ECUs without the possibility to switch ECUM STATE OFF.

# 6.1.3.3 EcuMConfigConsistencyHash

The parameter has been changed to optional because it is only necessary in the case of variant post build.

#### 6.1.3.4 Removed parameter ConfigPtr from DriverInit Lists

Removed the parameter ConfigPtr from the prototypes of the following Callouts:

- > EcuM\_AL\_DriverInitOne()
- > EcuM AL DriverInitTwo()
- > EcuM\_AL\_DriverInitThree()

#### 6.2 Additions/ Extensions

#### 6.2.1 Additional Configuration Parameters

To fulfill the jobs of the EcuM some more parameters beyond the AUTOSAR specification are needed. The description of these parameters can be found in the BSWMD file which is part of the delivery.

The following containers are added:

EcuMDriverInitListBswM

The following parameters are added:

- EcuMAdditionalInitCode
- EcuMGoDownReguestID
- EcuMAdditionalIncludes
- > EcuMUserConfigurationFile
- > EcuMCheckWakeupTimeout
- EcuMDeferredBswMNotification
- EcuMGptChannelRef
- > EcuMSlaveCoreHandling
- EcuMGenModeSwitchPort
- > EcuMIncludeDem
- > EcuMModeSwitchRteAck
- EcuMGenModeSwitchPort
- > EcuMNvmCancelWriteAllTimeout
- EcuMEnableFixBehavior
- > EcuMBswCoreId

# 6.2.2 Buffering of Wake ups if the BswM is Not Initialized

In early phases of the ECU, wake-up events can occur and should not be missed. The EcuM detects these Wake-up Events and if the BswM is not initialized the Event will be buffered and reported to the BswM as soon as the BswM is initialized by the EcuM.



#### 6.2.3 Buffering of Wake ups if the ComM is Not Initialized

In early phases of the ECU, wake-up events can occur and should not be missed. The EcuM checks if the ComM is active by the routine ComM\_GetStatus(), if the ComM is not active in this phase the Wake-up Event is also buffered. In the EcuM\_MainFunction the EcuM checks if the ComM is still uninitialized and the Wake-up Event is reported as soon as possible to the ComM.

#### 6.2.4 Additional API EcuM\_ClearValidatedWakeupEvent

The EcuM implements an API to clear only the validated wakeup events. A call of the regular API EcuM\_ClearWakeupEvent leads to a clear of all events, pending wakeup events will be lost in this case.

It is necessary to clear the validated wakeup events to enter a sleep mode or shutdown the Ecu.

#### 6.2.5 Support of Asynchronous Transceiver Handling

To support asynchronous transceiver handling a check-wakeup validation timeout was introduced for wake-up sources which cannot be checked in the context of EcuM\_CheckWakeup.

# 6.2.6 Deferred notification of the BswM about wake-up events

To prevent that the notification via BswM\_EcuM\_CurrentWakeup() is executed in context of an interrupt (via EcuM\_SetWakeupEvent or EcuM\_ValidateWakeupEvent), the notification can be deferred to the next cycle of the EcuM\_MainFunction. If the notification is executed deferred or not can be configured via the parameter EcuMDeferredBswMNotification.

#### 6.2.7 Additional Callback EcuM\_AlarmCheckWakeup

This callback is called by the Gpt every second to increment the EcuM clock which is provided by the alarm clock feature.

#### 6.2.8 Additional API EcuM GoToSelectedShutdownTarget

This API can be called e.g. from the BswM without knowledge about the currently configured shutdown target. The EcuM decides if EcuM\_GoHalt(), EcuM\_GoPoll() or EcuM GoDown() has to be called.

#### 6.2.9 Additional Callout EcuM WaitForSlaveCores

This callout is only active in case of MultiCore and if the parameter EcuMSlaveCoreHandling is set true. In this case, the EcuM Master Core calls cyclically this callout. It can be used to initiate that the sleep is also entered on the slave core.

#### 6.2.10 Support of EcuM fixed

The EcuM supports the EcuM with fixed state machine. The EcuM fixed can be configured without EcuM flex or combined.

# 6.2.10.1 Shutdown Target ECUM\_STATE\_RESET

The shutdown target ECUM\_STATE\_RESET is available and the callout EcuM\_AL\_Reset is available, independent of EcuM\_Flex configuration. The ResetMode parameter will be passed to EcuM\_AL\_Reset but EcuM does not check if the parameter is valid, because this is a EcuM flex parameter.



#### 6.2.10.2 Synchronization of EcuM and RTE modes

Some transitions in the EcuM state machine lead to RTE mode switch notifications via the API Rte Switch currentMode currentMode().

If the acknowledge mechanism of the EcuM is configured active, EcuM remains in its state until the RTE has acknowledged the current mode switch.

#### 6.3 Limitations

#### 6.3.1 Inter Module Checks

The EcuM does not check the AUTOSAR version of included external modules.

# 6.3.2 Recording of Shutdown Causes

The EcuM does not support the facility to record recent shutdown causes. Therefore the following two APIs are not supported:

- > EcuM\_GetMostRecentShutdown()
- > EcuM GetNextRecentShutdown()

#### 6.3.3 Not Supported Configuration Parameters and Containers

Some of the specified configuration parameters are not supported. These parameters are marked with the addition "Not used" in the corresponding parameter description. The description is located within the module's BSWMD file which is part of the delivery. The following containers (including the parameters) are not supported in this release:

- EcuMShutdownTarget
- EcuMTTII

The following parameters are not supported in this release:

- > EcuMSleepModeSuspend
- > EcuMAlarmClockTimeOut
- EcuMFlexEcucPartitionRef
- EcuMResetLoopDetection
- EcuMIncludeDem
- > EcuMIncludeDet
- > EcuMNvramReadallTimeout
- EcuMIncludeNvM
- > EcuMTTIIEnabled
- EcuMTTIIWakeupSourceRef

#### 6.3.4 Wake-up Events after Reset Reason Translation are not Validated

During the initialization the EcuM get the reason for the current startup via the Mcu reset reason translation. For this translated events the wake-up validation is not performed.

#### 6.3.5 EcuM Fixed Limitations

- NvM\_ReadAll() is not started by the EcuM. This can be done by the integrator e.g. in DriverInitListTwo().
- EcuM\_AL\_Reset is available, independent of EcuM\_Flex configuration. ResetMode parameter will be passed to EcuM\_AL\_Reset, but EcuM checks not if the parameter is valid.



- TTII is not supported. As a consequence, the callout EcuM\_OnWakeupReaction has no parameter and no return value.
- EcuM\_WakeupReactionType is not supported.
- EcuM\_GetStatusOfWakeupSource is not supported.
- The following APIs are not available if EcuM flex and EcuM fixed are both configured:
  - > EcuM GoHalt
  - > EcuM\_GoPoll
  - > EcuM\_GoDown
  - > EcuM\_GoToSelectedShutdownTarget



# 7 Glossary and Abbreviations

# 7.1 Glossary

Term	Description
Configuration Tool	Tool for generation like DaVinci Configurator Pro
MSN	Module Short Name, the AUTOSAR short name of the module, e.g. Can, CanIf, EcuM, etc.

Table 7-1 Glossary

# 7.2 Abbreviations

Abbreviation	Description	
API	Application Programming Interface	
AUTOSAR	Automotive Open System Architecture	
BSW	Basis Software	
BSWMD	Basic Software Module Description	
BswM	Basis Software Mode Manager	
CAN	Controller Area Network	
ComM	Communication Manager	
DEM	Diagnostic Event Manager	
DET	Development Error Tracer	
ECU	Electronic Control Unit	
EcuC	ECU configuration description	
HIS	Hersteller Initiative Software	
Gpt	General Purpose Timer	
ICU	Input Capture Unit	
ISR	Interrupt Service Routine	
MCU	Microcontroller Unit	
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)	
MSN	Module Short Name	
PLL	Phase Locked Loop	
RTE	Runtime Environment	
SchM	Scheduling Manager	
SRS	Software Requirement Specification	
SWC	Software Component	
SWS	Software Specification	

Table 7-2 Abbreviations



# 8 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com