

XCP Protocol Layer

Technical Reference

Version 1.19.00

Version: Status: 1.19.00 released



1 History

Date	Version	Remarks
2005-01-17	1.00.00	ESCAN00009143: Initial draft Warning Text added
2005-06-22	1.01.00	FAQ extended: ESCAN00012356, ESCAN00012314 ESCAN00012617: Add service to retrieve XCP state
2005-12-20	1.02.00	ESCAN00013883: Revise Resume Mode
2006-03-09	1.03.00	ESCAN00015608: Support command TRANSPORT_LAYER_CMD ESCAN00015609: Support XCP on FlexRay Transport Layer
2006-04-24	1.04.00	ESCAN00015913: Correct filenames Data page banking support of application callback template added
2006-05-08	1.05.00	ESCAN00016263: Describe support of reflected CRC16 CCITT ESCAN00016159: Add demo disclaimer to XCP Basic
2006-05-29	1.06.00	ESCAN00016226: Support XCP on LIN Transport Layer
2006-07-20	1.07.00	ESCAN00012636: Add configuration with GENy ESCAN00016956: Support AUTOSAR CRC module
2006-10-26	1.08.00	ESCAN00018115: DPRAM Support only available in XCP Basic ESCAN00017948: Add paging support ESCAN00017221: Documentation of reentrant capability of all functions
2007-01-18	1.09.00	ESCAN00018809: Support data paging on Star12X / Cosmic
2007-05-07	1.10.00	Description of new features added
2007-09-14	1.11.00	Segment freeze mode now supported
2008-07-23	1.12.00	ESCAN00028586: Support of Program_Start callback ESCAN00017955: Support MIN_ST_PGM ESCAN00017952: Open Interface for command processing
2008-09-10	1.13.00	Additional pending return value of call backs added MIN_ST configuration added
2008-12-01	1.14.00	ESCAN00018157: SERV_RESET is not supported ESCAN00032344: Update of XCP Basic Limitations
2009-05-14	1.15.00	ESCAN00033909: New features implemented: Prog Write Protection, Timestamps, Calibration activation
2009-07-30	1.15.01	Fixed some editorial errors
2009-11-17	1.15.02	ESCAN00037907: XCP Memory in far RAM
2009-12-17	1.16.00	Support of a2l export
2012-02-20	1.16.01	ESCAN00055216: DAQ Lists can be extended after START_STOP_SYNCH
2012-08-13	1.17.00	ESCAN00060779: Support for address doubling in XCP for DSP micros
2013-06-18	1.17.01	ESCAN00068051: Provide an API to detect XCP state and usage
2013-12-10	1.18.00	ESCAN00072503 Support custom CRC Cbk



		ESCAN00072505 Support Generic GET_ID
2015-03-26	1.19.00	ESCAN00082098 Time Check for DAQ lists
		ESCAN00081839 Wrong prototype description for ApplXcpCheckReadAccess



Please note

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Note for XCP Basic

Please note, that the demo and example programs only show special aspects of the software. With regard to the fact that these programs are meant for demonstration purposes only, Vector Informatik's liability shall be expressly excluded in cases of ordinary negligence, to the extent admissible by law or statute.

©2015, Vector Informatik GmbH Version: 1.19.00 3 / 105



Contents

1	Histor	у		2	
2	Overview				
	2.1	Abbrevi	ations and Items used in this paper	10	
	2.2	Naming	Conventions	12	
3	Funct	ional Des	cription	13	
	3.1	Overvie	w of the Functional Scope	13	
	3.2	Commu	nication Mode Info	13	
	3.3	Block Tr	ransfer Communication Model (XCP Professional only)	13	
	3.4	Slave D	evice Identification	13	
		3.4.1	XCP Station Identifier	13	
		3.4.2	XCP Generic Identification	14	
	3.5	Seed &	Key	14	
	3.6	Checks	um Calculation	16	
		3.6.1	Custom CRC calculation	16	
	3.7	Memory	Protection (XCP Professional only)	16	
	3.8	Event C	odes	16	
	3.9	Service	Request Messages (XCP Professional only)	17	
	3.10	User De	efined Command	17	
	3.11	Transpo	ort Layer Command	18	
	3.12	Synchro	onous Data Transfer	18	
		3.12.1	Synchronous Data Acquisition (DAQ)	18	
		3.12.2	DAQ Timestamp	18	
		3.12.3	Power-Up Data Transfer (XCP Professional only)	19	
		3.12.4	Data Stimulation (STIM) (XCP Professional only)	19	
		3.12.5	Bypassing (XCP Professional only)	19	
		3.12.6	Data Acquisition Plug & Play Mechanisms	19	
		3.12.7	Event Channel Plug & Play Mechanism	20	
		3.12.8	Runtime Supervision of DAQ Measurement	20	
	3.13	The Onl	line Data Calibration Model	20	
		3.13.1	Page Switching	20	
		3.13.2	Page Switching Plug & Play Mechanism	21	
		3.13.3	Calibration Data Page Copying	21	
		3.13.4	Freeze Mode Handling	21	
	3.14	Flash P	rogramming (XCP Professional only)	21	
		3.14.1	Flash Programming by the ECU's Application	22	
		3.14.2	Flash Programming with a Flash Kernel	22	
		3.14.3	Flash Programming Write Protection	23	

Version: 1.19.00



	3.15	EEPRO	M Access (XCP Professional only)	23
	3.16	Parame	ter Check	24
	3.17	Perform	ance Optimizations	24
	3.18	Interrupt	t Locks	24
	3.19	Accessi	ng internal data	24
	3.20	En- / Dis	sabling the XCP module	25
	3.21	Support	for address doubling in XCP for DSP micros	25
4	Integ	ration into	the Application	27
	4.1	Files of	XCP Professional	27
	4.2	Files of	XCP Basic	27
	4.3	Version	changes	28
	4.4	Integrati	on of XCP into the Application	28
		4.4.1	Integration of XCP on CAN (XCP Professional only)	28
		4.4.2	Integration with a Proprietary XCP Transport Layer	29
		4.4.3	Motorola HC12 with CAN Transport Layer	31
5	Featu	re List		32
6	Desci	ription of t	the API	34
	6.1	Version	of the Source Code	34
	6.2	XCP Se	rvices called by the Application	35
		6.2.1	XcpInit: Initialization of the XCP Protocol Layer	35
		6.2.2	XcpEvent: Handling of a data acquisition event channel	35
		6.2.3	XcpStimEventStatus: Check data stimulation events	36
		6.2.4	XcpBackground: Background calculation of checksum	37
		6.2.5	XcpSendEvent: Transmission of event codes	37
		6.2.6	XcpPutchar: Put a char into a service request packet	38
		6.2.7	XcpPrint: Transmission of a service request packet	38
		6.2.8	XcpDisconnect: Disconnect from XCP master	39
		6.2.9	XcpSendCrm: Transmit response or error packet	39
		6.2.10	XcpGetXcpDataPointer: Request internal data pointer	40
		6.2.11	XcpControl: En- / Disable the XCP module	41
		6.2.12	XcpGetVersionInfo: Request module version information	41
	6.3	XCP Pro	otocol Layer Functions, called by the XCP Transport Layer	42
		6.3.1	XcpCommand: Evaluation of XCP packets and command interpreter	42
		6.3.2	XcpSendCallBack: Confirmation of the successful transmission of a XCP packet	
		6.3.3	XcpGetState: Get connection state of XCP	
	6.4		ansport Layer Services called by the XCP Protocol Layer	



	6.4.1	ApplXcpSend: Request for the transmission of a DTO or CTO message	. 44
	6.4.2	ApplXcpInit: Perform XCP Transport Layer initialization	
	6.4.3	ApplXcpBackground: XCP Transport Layer background operations	
	6.4.4	ApplXcpInterruptEnable: Enable interrupts	. 46
	6.4.5	ApplXcpInterruptDisable: Disable interrupts	
	6.4.6	ApplXcpTLService: Transport Layer specific commands	
6.5	Application	on Services called by the XCP Protocol Layer	
	6.5.1	ApplXcpGetPointer: Pointer conversion	. 48
	6.5.2	ApplXcpGetIdData: Get Identification	
	6.5.3	ApplXcpGetSeed: Generate a seed	. 49
	6.5.4	ApplXcpUnlock: Valid key and unlock resource	. 50
	6.5.5	ApplXcpCheckReadEEPROM: Check read access from EEPROM	
	6.5.6	ApplXcpCheckWriteEEPROM: Check write access to the EEPROM	. 51
	6.5.7	ApplXcpCheckWriteAccess: Check address for valid write access	. 52
	6.5.8	ApplXcpCheckReadAccess: Check address for valid read access	. 52
	6.5.9	ApplXcpCheckDAQAccess: Check address for valid read or write	
		access	. 53
	6.5.10	ApplXcpCheckProgramAccess: Check address for valid write access	. 53
	6.5.11	ApplXcpUserService: User defined command	. 54
	6.5.12	ApplXcpOpenCmdIf: XCP command extension interface	. 55
	6.5.13	ApplXcpSendStall: Resolve a transmit stall condition	. 55
	6.5.14	ApplXcpSendFlush: Flush transmit buffer	. 56
	6.5.15	ApplXcpDisableNormalOperation: Disable normal operation of the ECU	. 56
	6.5.16	ApplXcpStartBootLoader: Start of boot loader	. 57
	6.5.17	ApplXcpReset: Perform ECU reset	. 57
	6.5.18	ApplXcpProgramStart: Prepare flash programming	. 58
	6.5.19	ApplXcpFlashClear: Clear flash memory	. 58
	6.5.20	ApplXcpFlashProgram: Program flash memory	. 59
	6.5.21	ApplXcpDaqResume: Resume automatic data transfer	. 60
	6.5.22	ApplXcpDaqResumeStore: Store DAQ lists for resume mode	. 60
	6.5.23	ApplXcpDaqResumeClear: Clear stored DAQ lists	. 61
	6.5.24	ApplXcpCalResumeStore: Store Calibration data for resume mode.	. 61
	6.5.25	ApplXcpGetTimestamp: Returns the current timestamp	. 62
	6.5.26	ApplXcpRtsStart: Start Trigger for DAQ runtime supervision	. 62
	6.5.27	ApplXcpRtsSnapshot: Trigger for DAQ runtime supervision	. 63
	6.5.28	ApplXcpGetCalPage: Get calibration page	. 64
	6.5.29	ApplXcpSetCalPage: Set calibration page	. 64
	6 5 30	ApplYcnConvCalPage: Conving of calibration data pages	65



		6.5.31	ApplXcpSetFreezeMode: Setting the freeze mode of a segment	66
		6.5.32	ApplXcpGetFreezeMode: Reading the freeze mode of a segment	66
		6.5.33	ApplXcpReadChecksumValue: Read a single byte from memory for checksum creation	67
		6.5.34	ApplXcpRead: Read a single byte from memory	
		6.5.35	ApplXcpWrite: Write a single byte to RAM	
		6.5.36	ApplXcpCalculateChecksum: Custom checksum calculation	
	6.6	XCP Pro	otocol Layer Functions that can be overwritten	
		6.6.1	XcpMemCpy: Copying of a memory range	
		6.6.2	XcpMemSet: Initialization of a memory range	
		6.6.3	XcpMemClr: Clear a memory range	
		6.6.4	XcpSendDto: Transmission of a data transfer object	71
	6.7		AR CRC Module Services called by the XCP Protocol Layer (XCP ional Only)	
7	Config	guration o	of the XCP Protocol Layer	73
	7.1	Configu	ration with GENy (XCP Professional only)	73
		7.1.1	Component Configuration	73
	7.2	Configu	ration without Generation Tool	84
		7.2.1	Compiler Switches	84
		7.2.2	Configuration of Constant Definitions	87
		7.2.3	Definition of Memory Qualifiers	89
		7.2.4	Configuration of the CPU Type	89
		7.2.5	Configuration of Slave Device Identification	90
		7.2.6	Configuration of the Event Channel Plug & Play Mechanism	91
		7.2.7	Configuration of the DAQ Time Stamped Mode	93
		7.2.8	Configuration of the Flash Programming Plug & Play Mechanism.	94
		7.2.9	Configuration of the Page Switching Plug & Play Mechanism	94
8	Resou	ırce Requ	uirements	96
9	Limita	itions		97
	9.1	General	Limitations	97
	9.2	Limitatio	ons of XCP Basic	98
	9.3	Limitatio	ons Regarding Platforms, Compilers and Memory Models	99
10	FAQ			. 100
	10.1	Connect	tion to MCS Not Possible	. 100
	10.2		ime Stamp Unit	
	10.3	Support	of small and medium memory model	. 100
	10.4	Small m	emory model on ST10 / XC16X / C16X with Tasking Compiler	. 101
	10.5	Data Pa	ge Banking on Star12X / Metrowerks	. 101



	10.6	Memory model banked on Star12X / Cosmic	102
	10.7	Can XCP memory be placed in far RAM?	102
	10.8	Reflected CRC16 CCITT Checksum Calculation Algorithm	102
11	Biblio	graphygraphy	104
12	Conta	rt	105



Illustrations

Figure 4-1	Integration of XCP on CAN into the application	28
Figure 4-2	Integration of XCP with a proprietary XCP Transport Layer	
Figure 7-1	Component configuration – General settings	
Figure 7-2	Component configuration – Synchronous Data Acquisition	
Figure 7-3	Component configuration – Standard Commands	79
Figure 7-4	Component configuration – Checksum	80
Figure 7-5	Component configuration – Page Switching	
Figure 7-6	Component configuration – Programming	



2 Overview

This document describes the features, API, configuration and integration of the XCP Protocol Layer. Both XCP versions: XCP Professional and XCP Basic are covered by this document. Chapters that are only relevant for XCP Professional are marked.

This document does not cover the XCP Transport Layers for CAN, FlexRay and LIN, which are available at Vector Informatik.

Please refer to [IV] for further information about XCP on CAN and the integration of XCP on CAN with the Vector CANbedded software components. Further information about XCP on FlexRay Transport Layer and XCP on LIN Transport Layer can be found in its documentation.

Please also refer to "The Universal Measurement and Calibration Protocol Family" specification by ASAM e.V.

The XCP Protocol Layer is a hardware independent protocol that can be ported to almost any hardware. Due to there are numerous combinations of micro controllers, compilers and memory models it cannot be guaranteed that it will run properly on any of the above mentioned combinations.

Please note that in this document the term Application is not used strictly for the user software but also for any higher software layer, like e.g. a Communication Control Layer. Therefore, Application refers to any of the software components using XCP.

The API of the functions is described in a separate chapter at the end of this document. Referred functions are always shown in the single channel mode.



Info

The source code of the XCP Protocol Layer, configuration examples and documentation are available on the Internet at www.vector-informatik.de in a functional restricted form.

2.1 Abbreviations and Items used in this paper

Abbreviations	Complete expression		
A2L	File Extension for an A SAM 2 MC L anguage File		
AML	ASAM 2 Meta Language		
API	Application Programming Interface		
ASAM	Association for Standardization of Automation and Measuring Systems		
BYP	BYP assing		
CAN	Controller Area Network		
CAL	CALibration		
CANape	Calibration and Measurement Data Acquisition for Electronic Control Systems		



CMD Command

CTO Command Transfer Object

DAQ Synchronous Data Acquistion

Data Length Code (Number of data bytes of a CAN message)

DLL Data link layer

DTO Data Transfer Object
ECU Electronic Control Unit

ERR Error Packet
EV Event packet

IDIdentifier (of a CAN message)IdentifierIdentifies a CAN messageISRInterrupt Service RoutineMCSMaster Calibration System

Message One or more signals are assigned to each message.

ODT Object Descriptor Table

OEM Original equipment manufacturer (vehicle manufacturer)

PAG PAGing

PID Packet Identifier
PGM Programming

RAM Random Access Memory
RES Command Response Packet

ROM Read Only Memory

SERV Service Request Packet

STIM Stimulation

TCP/IP Transfer Control Protocol / Internet Protocol
UDP/IP Unified Data Protocol / Internet Protocol

USB Universal Serial Bus

XCP Universal Measurement and Calibration Protocol

VI Vector Informatik GmbH

Also refer to 'AN-AND-1-108 Glossary of CAN Protocol Terminology.pdf', which can be found in the download area of http://www.vector-informatik.de.



2.2 Naming Conventions

The names of the access functions provided by the XCP Protocol Layer always start with a prefix that includes the characters x_{CP} . The characters x_{CP} are surrounded by an abbreviation which refers to the service or to the layer which requests a XCP service. The designation of the main services is listed below:

Naming conventions

Xcp... It is mandatory to use all functions beginning with Xcp...

These services are called by either the data link layer or the application. They are e.g. used for the initialization of the XCP Protocol Layer and for the

cyclic background task.

ApplXcp... The functions, starting with ApplXcp... are functions that are provided

either by any XCP Transport Layer or the application and are called by the

XCP Protocol Layer.

These services are user callback functions that are application specific and have to be implemented depending on the application.

©2015, Vector Informatik GmbH Version: 1.19.00 12 / 105



3 Functional Description

3.1 Overview of the Functional Scope

The Universal Measurement and Calibration Protocol (XCP) is standardized by the European ASAM working committee for standardization of interfaces used in calibration and measurement data acquisition. XCP is a higher level protocol used for communication between a measurement and calibration system (MCS, i.e. CANape) and an electronic control unit (ECU).

3.2 Communication Mode Info

In order to gather information about the XCP Slave device, e.g. the implementation version number of the XCP Protocol Layer and supported communications models, the communication mode info can be enabled by the switch XCP ENABLE COMM MODE INFO.

3.3 Block Transfer Communication Model (XCP Professional only)

In the standard communication model, each request packet is responded by a single response packet or an error packet. To speed up memory uploads, downloads and flash programming the XCP commands UPLOAD, DOWNLOAD and PROGRAM support a block transfer mode similar to ISO/DIS 15765-2.

In the Master Block Transfer Mode can the master transmit subsequent (up to the maximum block size MAX_BS) request packets to the slave without getting any response in between. The slave responds after transmission of the last request packet of the block.

In Slave Block Transfer Mode can the slave respond subsequent (there is no limitation) to a request without any more requests in between.

Refer to chapter 7.2.1 for configuration details.

3.4 Slave Device Identification

3.4.1 XCP Station Identifier

The XCP station identifier is an ASCII string that identifies the ECU's software program version.

The MCS can interpret this identifier as file name for the ECU database. The ECU developer should change the XCP station identifier with each program change. This will prevent database mix-ups and grant the correct access of measurement and calibration objects from the MCS to the ECU. Another benefit of the usage of the XCP station identifier is the automatic assignment of the correct ECU database at program start of the MCS via the plug & play mechanism. The plug & play mechanism prevents the user from selecting the wrong ECU database.

Refer to chapter 7.2.5.1 (Identification by ASAM-MC2 Filename without Path and Extension) for configuration details.



3.4.2 XCP Generic Identification

The XCP provides a generic mechanism for identification by the GET_ID command. For this purpose a call-back exist which can be implemented by the user to provide the requested information. The following function

```
vuint32 ApplXcpGetIdData( MTABYTEPTR *pData, vuint8 id ) (6.5.2)
```

has to set a pointer to the identification information based on the requested id and return the length of this information.

Refer to chapter 7.2.5.2 for an example implementation.

3.5 Seed & Key

The seed and key feature allows individual access protection for calibration, flash programming, synchronous data acquisition and data stimulation. The MCS requests a seed (a few data bytes) from the ECU and calculates a key based on a proprietary algorithm and sends it back to the ECU.

The seed & key functionality can be enabled with the switch <code>XCP_ENABLE_SEED_KEY</code> and disabled <code>XCP_DISABLE_SEED_KEY</code> in order to save ROM. Also refer to chapter 7.2.1.

The application callback function

```
vuint8 ApplXcpGetSeed( MEMORY_ROM vuint8 resourceMask, BYTEPTR
seed) (6.5.3)
```

return a seed that is transferred to the MCS. The callback function

```
vuint8 ApplXcpUnlock( MEMORY_ROM vuint8 *key, MEMORY_ROM vuint8
length )
(6.5.4)
```

has to verify a received key and if appropriate return the resource that shall be unlocked.

Annotation for the usage of CANape

The calculation of the key is done in a DLL named SEEDKEY1.DLL, which is developed by the ECU manufacturer and which must be located in the EXEC directory of CANape. CANape can access the ECU only if the ECU accepts the key. If the key is not valid, the ECU is locked.

Example Implementation for SEEDKEY1.DLL

The function call of ASAP1A_XCP_ComputeKeyFromSeed() is standardized by the ASAM committee.



Example

```
#IFILE SEEDKEY1.H

#ifindef _SEEDKEY_H_

#define _SEEDKEY_H_
#ifindef DllImport
#define DllImport __declspec(dllimport)
#endif
#ifindef DllExport
#define DllExport
#define DllExport declspec(dllexport)
```



```
#endif
#ifdef SEEDKEYAPI IMPL
#define SEEDKEYAPI DllExport cdecl
#define SEEDKEYAPI DllImport cdecl
#endif
#ifdef cplusplus
extern "C" {
#endif
BOOL SEEDKEYAPI ASAP1A XCP ComputeKeyFromSeed(BYTE *seed,
  unsigned short sizeSeed,
  BYTE *key,
  unsigned short maxSizeKey,
  unsigned short *sizeKey
  );
#ifdef cplusplus
#endif
#endif
FILE SEEDKEY1.C
#include <windows.h>
#define SEEDKEYAPI IMPL
#include "SeedKey1.h"
extern "C" {
BOOL SEEDKEYAPI ASAP1A XCP ComputeKeyFromSeed( BYTE *seed,
  unsigned short sizeSeed,
  BYTE *key,
  unsigned short maxSizeKey,
  unsigned short *sizeKey
{ // in that example sizeSeed == 4 is expected only
 if( sizeSeed != 4 ) return FALSE;
   if( maxSizeKey < 4 ) return FALSE;</pre>
   *((unsigned long*)key) *= 3;
   *((unsigned long*)key) &= 0x55555555;
   *((unsigned long*)key) *= 5;
   *sizeKey = 4;
   return TRUE;
  }
}
```



3.6 Checksum Calculation

The XCP Protocol Layer supports calculation of a checksum over a specific memory range. The XCP Protocol Layer supports all XCP ADD algorithms and the CRC16CCITT checksum calculation algorithm.

XCP Professional allows the usage of the AUTOSAR CRC Module [VII]. If the AUTOSAR CRC Module is used also the XCP CRC32 algorithm can be used.

Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'.

If checksum calculation is enabled the background task

```
vuint8 XcpBackground (void) (6.2.4)
```

has to be called cyclically.

3.6.1 Custom CRC calculation

The Protocol Layer also allows the calculation of the CRC by the application. For this the call-back:

```
vuint8 ApplXcpCalculateChecksum( ROMBYTEPTR pMemArea, BYTEPTR
pRes, vuint32 length)
```

is called. This call-back can either calculate the checksum synchronously and return XCP_CMD_OK or it can trigger the calculation and return XCP_CMD_PENDING for asynchronous calculation of the checksum. In every case the response frame has to be assembled.

3.7 Memory Protection (XCP Professional only)

If XCP_ENABLE_WRITE_PROTECTION is defined write access of specific RAM areas can be checked with the function

```
vuint8 ApplXcpCheckWriteAccess ( MTABYTEPTR addr, vuint8 size ) (6.5.7)
```

It should only be used, if write protection of memory areas is required.

If XCP_ENABLE_READ_PROTECTION is defined read access of specific RAM areas can be checked with the function

```
vuint8 ApplXcpCheckReadAccess ( MTABYTEPTR addr, vuint32 size ) (6.5.8)
```

It should only be used, if read protection of memory areas is required.

While the first two functions are used during polling, the following function is used for DAQ/STIM access:

```
vuint8 ApplXcpCheckDAQAccess ( DAQBYTEPTR addr, vuint8 size ) (6.5.9)
```

These functions can be used to protect memory areas that are not allowed to be accessed, e.g. memory mapped registers or the xcp memory itself.

3.8 Event Codes

The slave device may report events to the master device by sending asynchronous event packets (EV), which contain event codes, to the master device. The transmission is not guaranteed due to these event packets are not acknowledged.



The transmission of event codes is enabled with <code>XCP_ENABLE_SEND_EVENT</code>. The transmission is done by the service

The event codes can be found in the following table.

Event	Code	Description
EV_RESUME_MODE	0x0	The slave indicates that it is starting in RESUME mode.
EV_CLEAR_DAQ	0x01	The slave indicates that the DAQ configuration in non-volatile memory has been cleared.
EV_STORE_DAQ	0x02	The slave indicates that the DAQ configuration has been stored into non-volatile memory.
EV_STORE_CAL	0x03	The slave indicates that the calibration data has been stored.
EV_CMD_PENDING	0x05	The slave requests the master to restart the time-out detection.
EV_DAQ_OVERLOAD	0x06	The slave indicates an overload situation when transferring DAQ lists.
EV_SESSION_TERMINATED	0x07	The slave indicates to the master that it autonomously decided to disconnect the current XCP session.
EV_USER	0xFE	User-defined event.
EV_TRANSPORT	0xFF	Transport layer specific event.

3.9 Service Request Messages (XCP Professional only)

The slave device may request some action to be performed by the master device. This is done by the transmission of a Service Request Packet (SERV) that contains the service request code. The transmission of service request packets is asynchronous and not guaranteed due to these packets are not being acknowledged.

The service request messages can be sent by the following functions

Refer to 7.2.1 for the configuration of the service request message.

3.10 User Defined Command

The XCP Protocol allows having a user defined command with an application specific functionality. The user defined command is enabled by setting XCP_ENABLE_USER_COMMAND and upon reception of the user command the following callback function is called by the XCP command processor:

©2015, Vector Informatik GmbH Version: 1.19.00 17 / 105



3.11 Transport Layer Command

The transport layer commands are received by the XCP Protocol Layer and processed by the XCP Transport Layer. The XCP Protocol Layer transmits the XCP response packets (RES) or XCP error packets (ERR).

The transport layer command is enabled by setting <code>XCP_ENABLE_TL_COMMAND</code>. Upon reception of any transport layer command the following callback function is called by the XCP command processor:

3.12 Synchronous Data Transfer

3.12.1 Synchronous Data Acquisition (DAQ)

The synchronous data transfer can be enabled with the compiler switch <code>XCP_ENABLE_DAQ</code>. In this mode, the MCS configures tables of memory addresses in the XCP Protocol Layer. These tables contain pointers to measurement objects, which have been configured previously for the measurement in the MCS. Each configured table is assigned to an event channel.

The function XcpEvent(x) has to be called cyclically for each event channel with the corresponding event channel number as parameter. The application has to ensure that XcpEvent is called with the correct cycle time, which is defined in the MCS. Note that the event channel numbers have to start at 0 and have to be continuous.

The ECU automatically transmits the current value of the measurement objects via messages to the MCS, when the function xcpEvent is executed in the ECU's code with the corresponding event channel number. This means that the data can be transmitted at any particular point of the ECU code when the data values are valid.

The data acquisition mode can be used in multiple configurations that are described within the next chapters.

Annotation for the usage of CANape

It is recommended to enable both data acquisition plug & play mechanisms to detect the DAQ settings.

3.12.2 DAQ Timestamp

There are two methods to generate timestamps for data acquisition signals.

- 1. By the MCS tool on reception of the message
- 2. By the ECU (XCP slave)

The time precision of the MCS tool is adequate for the most applications; however, some applications like the monitoring of the OSEK operating system require higher precision timestamps. In such cases, ECU generated timestamps are recommended.

For the configuration of the DAQ time stamped mode refer to chapter 7.2.7 (Configuration of the DAQ Time Stamped Mode).



3.12.3 Power-Up Data Transfer (XCP Professional only)

Power-up data transfer (also called resume mode) allows automatic data transfer (DAQ, STIM) of the slave directly after power-up. Automotive applications would e.g. be measurements during cold start.

The slave and the master have to store all the necessary communication parameters for the automatic data transfer after power-up. Therefore the following functions have to be implemented in the slave.

```
vuint8 ApplXcpDaqResume ( tXcpDaq * daq )
void ApplXcpDaqResumeStore ( MEMORY_ROM tXcpDaq * daq )
void ApplXcpDaqResumeClear ( void )
vuint8 ApplXcpCalResumeStore ( void )
(6.5.21)
(6.5.22)
(6.5.23)
```

To use the resume mode the compiler switches <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENBALE_DAQ</code> are <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENBALE_DAQ</code> are <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENBALE_DAQ</code> are <code>XCP_ENBALEDAQ</code> and <code>XCP_ENBALEDAQ</code> are <code>XCP_ENBALED</code>

Annotation for the usage of CANape

Start the resume mode with the menu command Measurement|Start and push the button "Measure offline" on the dialog box.

3.12.4 Data Stimulation (STIM) (XCP Professional only)

Synchronous Data Stimulation is the inverse mode of Synchronous Data Acquisition.

The STIM processor buffers incoming data stimulation packets. When an event occurs (XcpEvent is called), which triggers a DAQ list in data stimulation mode, the buffered data is transferred to the slave device's memory.

To use data stimulation the compiler switches <code>XCP_ENBALE_DAQ</code> and <code>XCP_ENABLE_STIM</code> have to be defined.

3.12.5 Bypassing (XCP Professional only)

Bypassing can be realized by making use of Synchronous Data Acquisition (DAQ) and Synchronous Data Stimulation (STIM) simultaneously.

State-of-the-art Bypassing also requires the administration of the bypassed functions. This administration has to be performed in a MCS like e.g. CANape.

Also the slave should perform plausibility checks on the data it receives through data stimulation. The borders and actions of these checks are set by standard calibration methods. No special XCP commands are needed for this.

3.12.6 Data Acquisition Plug & Play Mechanisms

The XCP Protocol Layer comprises two plug & play mechanisms for data acquisition:

- general information on the DAQ processor (enabled with XCP ENABLE DAQ PROCESSOR INFO)
- general information on DAQ processing resolution (enabled with XCP ENABLE DAQ RESOLUTION INFO)

The general information on the DAQ processor contains:

general properties of DAQ lists



> total number of available DAQ lists and event channels

The general information on the DAQ processing resolution contains:

- > granularity and maximum size of ODT entries for both directions
- > information on the time stamp mode

3.12.7 Event Channel Plug & Play Mechanism

The XCP Protocol Layer supports a plug & play mechanism that allows the MCS to automatically detect the available event channels in the slave.

Please refer to chapter 7.2.6 (Configuration of the Event Channel Plug & Play Mechanism) for details about the configuration of this plug & play mechanism.

Annotation for the usage of CANape

If the plug & play mechanism is not built-in, you must open the dialog XCP Device Setup with the menu command Tools|Driver parameters. Go to the Event tab. Make one entry for each event channel. An event channel is an XcpEvent(x) function call in ECU source code.

3.12.8 Runtime Supervision of DAQ Measurement

To prevent OS timeouts caused by huge runtime of the XcpEvent function due to extensive DAQ lists it is possible to enable a Runtime Supervision feature. If this feature is enabled the following application call-backs are called during DAQ assembly:

```
void ApplXcpRtsStart ( void ) (6.5.26)
vuint8 ApplXcpRtsSnapshot ( void ) (6.5.27)
```

The first function is called to catch the initial timer value at measurement start. The second function is called for each ODT during DAQ assembly to check whether a timer threshold is exceeded. Depending on the return value of this function the current operation is either continued or aborted. In case it is aborted a DAQ overrun is memorized to be sent to the XCP Master with the next valid ODT.

The given examples, located in xcp_appl.c, are based on a 16bit timer and must be adapted by the user.

3.13 The Online Data Calibration Model

3.13.1 Page Switching

The MCS can switch between a flash page and a RAM page. The XCP command SET_CAL_PAGE is used to activate the required page. The page switching is enabled with the XCP_ENABLE_CALIBRATION_PAGE definition.

The following application callback functions have to be implemented:

©2015, Vector Informatik GmbH Version: 1.19.00 20 / 105



Annotation for the usage of CANape

Open the dialog XCP Device Setup with the menu command Tools|Driver Configuration. Go to the tab "FLASH". Activate page switching. Enter a flash selector value e.g. 1 and a Ram selector e.g. 0.

3.13.2 Page Switching Plug & Play Mechanism

The MCS can be automatically configured if the page switching plug & play mechanism is used. This mechanism comprises

yeneral information about the paging processor

Also refer to chapter 7.2.9 (Configuration of the Page Switching Plug & Play Mechanism) and to the XCP Specification [II].

The page switching plug & play mechanism is enabled with the switch XCP ENBALE PAGE INFO.

3.13.3 Calibration Data Page Copying

Calibration data page copying is performed by the XCP command COPY_CAL_PAGE. To enable this feature the compiler switch XCP_ENABLE_PAGE_COPY has to be set.

For calibration data page copying the following application callback function has to be provided by the application:

3.13.4 Freeze Mode Handling

Freeze mode handling is performed by the XCP commands SET_SEGMENT_MODE and GET_SEGMENT_MODE. To enable this feature the compiler switch XCP ENABLE PAGE FREEZE has to be set.

For freeze mode handling the following application callback functions have to be provided by the application:

```
void ApplXcpSetFreezeMode( vuint8 segment, vuint8 mode ) (6.5.31)
vuint8 ApplXcpGetFreezeMode( vuint8 segment ) (6.5.32)
```

3.14 Flash Programming (XCP Professional only)

There are two methods available for the programming of flash memory.

- Flash programming by the ECU's application
- Flash programming with a flash kernel

Depending on the hardware it might not be possible to reprogram an internal flash sector, while a program is running from another sector. In this case the usage of a special flash kernel is necessary.



3.14.1 Flash Programming by the ECU's Application

If the internal flash has to be reprogrammed and the microcontroller allows to simultaneously reprogram and execute code from the flash the programming can be performed with the ECU's application that contains the XCP. This method is also used for the programming of external flash.

The flash programming is done with the following XCP commands PROGRAM_START, PROGRAM_RESET, PROGRAM_CLEAR, PROGRAM, PROGRAM_NEXT, PROGRAM MAX, PROGRAM RESET, PROGRAM FORMAT¹, PROGRAM VERIFY².

The flash prepare, flash program and the clear routines are platform dependant and therefore have to be implemented by the application.

The flash programming is enabled with the switch XCP ENABLE PROGRAM.

Annotation for the usage of CANape

Open the dialog XCP Device Setup with the menu command Tools|Driver Configuration. Go to the tab "FLASH" and select the entry "Direct" in the flash kernel drop down list.

3.14.1.1 Flash Programming Plug & Play Mechanism

The MCS (like e.g. CANape) can get information about the Flash and the Flash programming process from the ECU. The following information is provided by the ECU:

- number of sectors, start address or length of each sector
- > the program sequence number, clear sequence number and programming method
- additional information about compression, encryption

Also refer to chapter 7.2.8 (Configuration of the Flash Programming Plug & Play Mechanism) and to the XCP Specification [II].

The flash programming plug & play mechanism is enabled with the switch XCP_ENABLE_PROGRAM_INFO.

3.14.2 Flash Programming with a Flash Kernel

A flash kernel has to be used for the flash programming if it is not possible to simultaneously reprogram and execute code from the flash. Even though the reprogrammed sector and the sector the code is executed from are different sectors.

The application callback function

is called prior to the flash kernel download in the RAM. Within this function the normal operation of the ECU has to be stopped and the flash kernel download can be prepared.

² Command not supported

1

¹ Command not supported



Due to the flash kernel is downloaded in the RAM typically data gets lost and no more normal operation of the ECU is possible.

The flash programming with a flash kernel is enabled with the switch XCP ENABLE BOOTLOADER DOWNLOAD.

Annotation for the usage of CANape

The flash kernel is loaded by CANape Graph into the microcontroller's RAM via XCP whenever the flash memory has to be reprogrammed. The flash kernel contains the necessary flash routines, its own CAN-Driver and XCP Protocol implementation to communicate via the CAN interface with CANape Graph.

Every flash kernel must be customized to the microcontroller and the flash type being used. CANape already includes some flash kernels for several microcontrollers. There is also an application note available by Vector Informatik GmbH that describes the development of a proprietary flash kernel.

Open the dialog XCP Device Setup with the menu command Tools|Driver Configuration. Go to the tab "FLASH", and select in the 'flash kernel' drop down list, the corresponding *fkl* file for the microcontroller being used.

3.14.3 Flash Programming Write Protection

If XCP_ENABLE_PROGRAMMING_WRITE_PROTECTION is defined write access of specific FLASH areas can be checked with the function

```
vuint8 ApplXcpCheckProgramAccess ( MTABYTEPTR addr, vuint8 size ) (6.5.10)
```

It should only be used, if write protection of flash areas is required.

3.15 EEPROM Access (XCP Professional only)

For uploading data from the ECU to a MCS the XCP commands SHORT_UPLOAD and UPLOAD are used. The switch XCP_ENABLE_READ_EEPROM allows EEPROM access for these commands.

Before reading from an address it is checked within the following callback function whether EEPROM or RAM is accessed:

The EEPROM access is directly performed within this function.

For downloading data from the MCS to the ECU the XCP commands SHORT_DOWNLOAD, DOWNLOAD, DOWNLOAD_NEXT and DOWNLOAD_MAX can be used. The switch XCP_ENABLE_WRITE_EEPROM allows the EEPROM access for these commands.

Also before writing to an address within the following callback function it is checked whether EEPROM or RAM is accessed



3.16 Parameter Check

As long as the XCP Protocol Layer is not thoroughly tested together with the XCP Transport Layer and the application, the parameter check should be enabled. This is done by setting the compiler switch XCP ENABLE PARAMETER CHECK.

The parameter check should be removed in order to save code space.

3.17 Performance Optimizations

The XCP Protocol Layer is a platform comprehensive higher software layer and therefore platform specific optimizations are not implemented. However it is possible to apply platform specific optimizations.

The memory following memory access functions can be overwritten by either macros or functions:

It is recommended to use DMA access as far as possible for faster execution of these services.

The transmission of data transfer objects (DTO) could also be optimized e.g. by using DMA. Therefore the following function has to be overwritten

The above listed functions can be overwritten by defining a macro with the functions name that is included in the XCP Protocol Layer component.

3.18 Interrupt Locks

The functions <code>XcpEvent</code>, <code>XcpSendCallBack</code>, <code>XcpBackground</code> and <code>XcpCommand</code> are not reentrant. If one of these functions may interrupt one of the others, the functions or <code>macros ApplXcpInterruptEnable</code> (6.4.4) and <code>ApplXcpInterruptDisable</code> (6.4.5) have to be defined to protect critical sections in the code from being interrupted. The <code>XCP Protocol Layer</code> will not nest the sections with disabled interrupts. The time periods are as short as possible, but note that <code>ApplXcpSend</code> is called with disabled interrupts!

3.19 Accessing internal data

The function

provides access to the internal data structure of the XCP module. By means of this function the internal data can be preset to a certain value. This can be used to process a measurement further that has been started in application mode but is finished in boot mode.



As the whole data can be accessed, it must be handled with care.

3.20 En-/ Disabling the XCP module

The function

```
void XcpControl (vuint8 command) (6.2.11)
```

can be used to en- or disable the XCP module during run time. Thus the XCP functionality can be controlled by the application. The parameter "command" is either kxcpControl Disable to disable the Xcp or kxcpControl Enable to enable it again.

Note

Please note that when XcpControl is called all APIs are disabled but the state of the XCP remains. Thus a running DAQ list is continued after the XCP is enabled again. If you want to prevent this, don't use XcpControl to enable the XCP again but use the Xcp_Init and <BusXcp>_Init functions to initialize the XCP.

3.21 Support for address doubling in XCP for DSP micros

In order to support DSP μ C that do not support Byte access the XCP provides a mechanism called "address doubling". If this feature is used all addresses received from the tool must be doubled in order to access the physical address. CANape does this automatically if a coff file for TMS320 is used as map file. If other tools are used this must be done manually in the a2l file. This also means that the addresses for user callbacks are doubled and must be divided by 2 to access the physical address. With an even virtual address the high byte of the physical address is accessed. With an odd virtual address the low byte of the physical address is accessed.

The affected APIs are:

- ApplXcpFlashClear (6.5.19)
- ApplXcpFlashProgram (6.5.20)
- ApplXcpCheckReadAccess (6.5.8)
- ApplXcpCheckProgramAccess (6.5.10)
- ApplXcpDisableNormalOperation (6.5.15)
- ApplXcpCheckWriteAccess (6.5.7)
- ApplXcpCheckReadEEPROM (6.5.5)
- ApplXcpCheckWriteEEPROM (6.5.6)
- ApplXcpCheckDAQAccess (6.5.9)



APIs which are not affected:

- ApplXcpReadChecksumValue (6.5.33)
- ApplXcpGetSeed (6.5.3)
- ApplXcpUnlock (6.5.4)
- ApplXcpGetIdData (6.5.2)
- ApplXcpUserService (6.5.11)
- ApplXcpOpenCmdIf (6.5.12)
- ApplXcpWrite (6.5.35)
- ApplXcpRead (6.5.34)

The following features/switches are not supported if "address doubling is used":

- XCP_ENABLE_CALIBRATION_MEM_ACCESS_BY_APPL
- XCP ENABLE MODIFY BITS

Also character arrays can not be measured as there is no way for XCP to know that it is reading a character array.



4 Integration into the Application

This chapter describes the steps for the integration of the XCP Protocol Layer into an application environment of an ECU.

4.1 Files of XCP Professional

The XCP Protocol Layer consists of the following files.

Files of the XCP	Protocol Layer	
XcpProf.c	XCP Professional source code. This file must not be changed by the user!	
XcpProf.h	API of XCP Professional. This file must not be changed by the user!	
_xcp_appl.c	Template that contains the application callback functions of the XCP Protocol Layer. It is just an example and has to be customized.	
v_def.h	General Vector definitions of memory qualifiers and types. This file must not be changed by the application!	®

Additionally the following files are generated by the generation tool GENy. If no generation tool or if CANgen is used the XPC Protocol Layer has to be customized manually. In this case the following files will be available as template.

Files generated	by GENy	
xcp_cfg.h	XCP Protocol Layer configuration file.	
xcp_par.c	Parameter definition for the XCP Protocol Layer.	
xcp_par.h	External declarations for the parameters.	Ø
v_cfg.h	General Vector configuration file for platform specifics.	Ø
v_inc.h	General header for including the Vector CANbedded stacks headers.	Ø

Note that all files of XCP Professional **must not** be changed manually!

4.2 Files of XCP Basic

The XCP Protocol Layer consists of the following files:

Files of the XCP Protocol Layer		
XcpBasic.c	XCP Basic source code. This file must not be changed by the application!	(%)
XcpBasic.h	API of XCP Basic. This file must not be changed by the application!	(A)

©2015, Vector Informatik GmbH Version: 1.19.00 27 / 105



xcp_cfg.h	Configuration file template for the XCP Protocol Layer. It is just an example and has to be customized.	
xcp_par.c	Template with parameter definitions for the XCP Protocol Layer. It is just an example and has to be customized	
xcp_par.h	Template with external declarations for the parameters. It is just an example and has to be customized	

4.3 Version changes

Changes and the release versions of the XCP Protocol Layer are listed at the beginning of the header and source code.

4.4 Integration of XCP into the Application

4.4.1 Integration of XCP on CAN (XCP Professional only)

The Vector CANbedded stack includes optionally XCP on CAN, which comprises the XCP Protocol Layer in conjunction with the XCP on CAN Transport Layer and the CAN-Driver. Note that the CAN-Driver, which is distributed as a separate product, is only partly part of XCP on CAN.

The following figure shows the interface between XCP on CAN and the application:

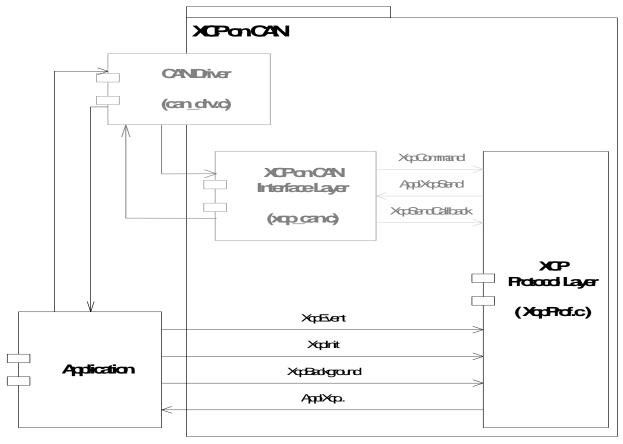


Figure 4-1 Integration of XCP on CAN into the application

©2015, Vector Informatik GmbH Version: 1.19.00 28 / 105





Practical Procedure

The integration of XCP on CAN can be done by following these steps:

- 1. Configure XCP on CAN in the generation tool GENy and generate.
- 2. Include the include header file v_inc.h into all modules that access the XCP on CAN services or provide services that XCP on CAN uses.
- 3. Add all source files and generated source files in the make file and link it together with the data link layer and the application.
- 4. Initialize the data link layer after each reset during start-up before initializing XCP on CAN (interrupts have to be disabled until the complete initialization procedure is done) by calling XcpInit.
- 5. If required call the background function XcpBackground cyclically.
- 6. Integrate the desired XCP on CAN services into your application. Call especially the function <code>XcpEvent(channel)</code> cyclic with the appropriate cycle time and channel number.

The XCP on CAN sources must not be changed for the integration into the application.

4.4.2 Integration with a Proprietary XCP Transport Layer

The XCP Protocol Layer needs a XCP Transport Layer to transmit and receive XCP protocol messages on the communication link (CAN, FlexRay, Ethernet, SxI, ...) that is used. The free Vector XCP Protocol Layer implementation does not include the XCP Transport Layer, which typically is strongly ECU dependant. However the Vector XCP on CAN software components already includes the XCP Transport Layer for CAN.

The following figure shows the interface between the transport layer and the protocol layer.

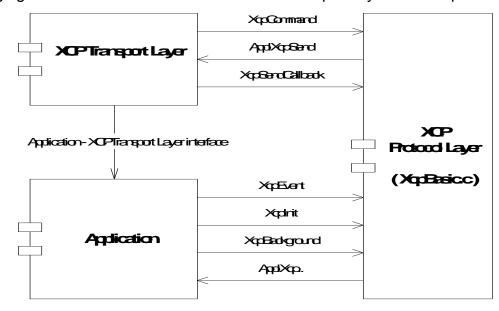


Figure 4-2 Integration of XCP with a proprietary XCP Transport Layer

The transport layer driver has to notify the protocol layer after reception of a XCP protocol message by calling the protocol layer function XcpCommand().

©2015, Vector Informatik GmbH Version: 1.19.00 29 / 105



The protocol layer will use the function ApplXcpSend() of the transport layer to transmit a command response message or a data acquisition message.

After the message has been transmitted successfully, the transport layer has to call the function XcpSendCallBack() of the protocol layer to indicate this.

The functions <code>XcpInit()</code>, <code>XcpEvent()</code> and <code>XcpBackground()</code> are called from the ECU's application program.

The function ApplXcpGetPointer() is used by the protocol layer to convert a 32 Bit address with an address extension to a valid pointer.

Depending on the optional features that can be enabled upon demand further application callback functions are necessary. All application functions are indicated in Figure 4-2 by their prefix ApplXcp....



Example

The following C pseudo code example shows the required software handshake between the protocol layer and the transport layer. The example uses a simple transport layer definition where the length of the protocol message is transmitted in the first byte of the protocol packet:

```
/* Initialization */
XcpInit();
/* Main Loop */
for (;;) {
 /* Packet received */
 if (Message received) {
   XcpCommand(&ReceiveBuffer[1]);
 /* Transmit Message Buffer available */
 if (Message transmitted) {
   XcpSendCallBack();
 /* Background Processing */
 XcpBackground();
/* Transmit Function */
void ApplXcpSend(vuint8 len, MEMORY ROM BYTEPTR msg ) {
  TransmitBuffer[0] = len; /* This is transport layer
specific */
  memcpy(&TransmitBuffer[1],msq,len);
  Transmit(TransmitBuffer);
}
/* Pointer Conversion */
MTABYTEPTR ApplXcpGetPointer( vuint8 addr ext, vuint32 addr ) {
  Return (BYTE*)addr;
```



)		
}		
1		

4.4.3 Motorola HC12 with CAN Transport Layer

See the application note "AN-IMC-1-007_Integration_of_the_Vector_XCP_Driver with_a_free_CAN_Driver_v1.0.0_EN.pdf" which explains in detail how to integrate the Vector basic XCP driver into an HC12 microcontroller with an existing CAN driver.

©2015, Vector Informatik GmbH Version: 1.19.00 31 / 105



5 Feature List

This general feature list describes the overall feature set of the XCP Protocol Layer. Not all of these features are available in XCP Basic. Please also refer to 9.2 "Limitations of XCP Basic".

Description of the XCP functionality	Version	Functions
Initialization		
Initialization	Prof, Basic	XcpInit ApplXcpInit
Task		
Background task	Prof, Basic	ApplXcpBackground XcpBackground
XCP Command Processor		
Command Processor	Prof, Basic	XcpCommand
Transmission and Confirmation of XCP Packets	Prof, Basic	ApplXcpSend XcpSendCallBack
Transmission of Response packets	Prof, Basic	XcpSendCrm
Transmission of XCP Packets	Prof, Basic	ApplXcpSendStall ApplXcpSendFlush
XCP Commands	Doof Doois	Anna I Vana Carl Talbarra
Get Identification	Prof, Basic	ApplXcpGetIdData
Seed & Key	Prof, Basic	ApplXcpGetSeed ApplXcpUnlock
Short Download	Prof	-
Modify Bits	Prof	-
Write DAQ Multiple	Prof	ApplXcpCheckDAQAccess
Transport Layer Command	Prof	-
Open Command Interface	Prof	-
User command	Prof, Basic	ApplXcpUserService
Data Acquisition (DAQ)		
Synchronous Data Acquisition and Stimulation	Prof, Basic	XcpEvent ApplXcpCheckDAQAccess
DAQ Timestamp	Prof, Basic	ApplXcpGetTimestamp
Resume Mode	Prof	ApplXcpDaqResume ApplXcpDaqResumeStore ApplXcpDaqResumeClear ApplXcpCalResumeStore
Online Data Calibration		
Calibration page switching	Prof, Basic	ApplXcpGetCalPage ApplXcpSetCalPage
Copy calibration page	Prof, Basic	ApplXcpCopyCalPage
Freeze Mode	Prof, Basic	ApplXcpSetFreezeMode ApplXcpGetFreezeMode

©2015, Vector Informatik GmbH Version: 1.19.00 32 / 105



Boot loader Download

Disable normal operation of ECU	Prof	ApplXcpDisableNormalOpera tion
Start of the boot loader	Prof	ApplXcpStartBootLoader
Flash Programming		
Reset of ECU	Prof	ApplXcpReset
Clear flash memory	Prof	ApplXcpFlashClear
Prepare flash programming	Prof	ApplXcpProgramStart
Program flash memory	Prof	ApplXcpFlashProgram
Special Features		
Interrupt Control	Prof, Basic	ApplXcpInterruptEnable
Event Codes	Prof	ApplXcpInterruptDisable XcpSendEvent
	Prof	-
Service Request Packets	PIOI	XcpPutchar XcpPrint
Disconnect XCP	Prof, Basic	ApplXcpDisconnect
Pointer conversion	Prof, Basic	ApplXcpGetPointer
EEPROM access	Prof	ApplXcpCheckReadEEPROM ApplXcpCheckWriteEEPROM
Write protection	Prof	ApplXcpCheckWriteAccess
Read protection	Prof	ApplXcpCheckReadAccess
Overwriteable macros		
Overwriteable macros	Prof, Basic	XcpMemCpy XcpMemSet
		XcpMemClr
		XcpSendDto
En- / Disabling XCP module	Prof	XcpControl
Access to internal data	Prof	XcpGetXcpDataPointer
En-/Disable Calibration	Prof	-
Programming Write Protection	Prof	ApplXcpCheckProgramAccess

©2015, Vector Informatik GmbH Version: 1.19.00 33 / 105



6 Description of the API

The XCP Protocol Layer application programming interface consists of services, which are realized by function calls. These services are called wherever they are required. They transfer information to- or take over information from the XCP Protocol Layer. This information is stored in the XCP Protocol Layer until it is not required anymore, respectively until it is changed by other operations.

Examples for calling the services of the XCP Protocol Layer can be found in the description of the services.

6.1 Version of the Source Code

The source code version of the XCP Protocol Layer is provided by three BCD coded constants:



Example

Version 1.00.00 is registered as:

```
kCp_XcpMainVersion = 0x01;
kCp_XcpSubVersion = 0x00;
kCp_XcpReleaseVersion = 0x00;
```

These constants are declared as external and can be read by the application at any time.

Alternatively the Version can be obtained with the GetVersionInfo API if enabled:

```
void XcpGetVersionInfo (Std VersionInfoType *XcpVerInfoPtr) (6.2.12)
```

©2015, Vector Informatik GmbH Version: 1.19.00 34 / 105



6.2 XCP Services called by the Application

The following XCP services that are called by the application are all not reentrant. If they are called within interrupt context at least the CAN-Interrupts have to be disabled.

6.2.1 Xcplnit: Initialization of the XCP Protocol Layer

XcpInit

Prototype		
Single Channel		
Single Receive Channel	void Xcplnit (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	
E - C - I B I C -		

Functional Description

This service initializes the XCP Protocol Layer and its internal variables. It must be called from the application program before any other XCP function is called.

Particularities and Limitations

- > Call context: Task and interrupt level
- > This service function has to be called after the initialization of XCP Transport Layer.
- > The global interrupts have to be disabled while this service function is executed. This function should be called during initialization of the ECU before the interrupts have been enabled before.

6.2.2 XcpEvent: Handling of a data acquisition event channel

XcpEvent

Prototype			
Single Channel			
Single Receive Channel	vuint8 XcpEvent (vuint8 event)		
Multi Channel	Multi Channel		
Indexed	not supported		
Code replicated	not supported		
Parameter			
event	Number of event channels to process The event channel numbers have to start at 0 and have to be continuous. The range is: 0x		

©2015, Vector Informatik GmbH Version: 1.19.00 35 / 105



Return code	
vuint8	XCP_EVENT_NO: Inactive (DAQ not running, Event not configured)
	XCP_EVENT_DAQ: DAQ active */
	XCP_EVENT_DAQ_OVERRUN: DAQ queue overflow
	XCP_EVENT_STIM : STIM active
	XCP_EVENT_STIM_OVERRUN : STIM data not available

Functional Description

Calling XcpEvent with a particular event channel number triggers the sampling and transmission of all DAQ lists that are assigned to this event channel.

The event channels are defined by the ECU developer in the application program. An MCS (e.g. CANape) must know about the meaning of the event channel numbers. These are usually described in the tool configuration files or in the interface specific part of the ASAM MC2 (ASAP2) database.

Example:

A motor control unit may have a 10ms, a 100ms and a crank synchronous event channel. In this case, the three XcpEvent calls have to be placed at the appropriate locations in the ECU's program:

xcpEvent (0); /* 10ms cycle */
xcpEvent (1); /* 100ms cycle */

xcpEvent (2); /* Crank synchronous cycle */

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > Data acquisition has to be enabled: XCP_ENABLE_DAQ has to be defined
- > Call context: Task and interrupt level (not reentrant)

6.2.3 XcpStimEventStatus: Check data stimulation events

XcpStimEventStatus

	•
Prototype	
Single Channel	
Single Receive Channel	vuint8 XcpStimEventStatus (vuint8 event, vuint8 action)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
event	Event channel number
action	STIM_CHECK_ODT_BUFFER: check ODT buffer
	STIM_RESET_ODT_BUFFER: reset ODT buffer
Return code	
vuint8	stimulation data not available new stimulation data is available

©2015, Vector Informatik GmbH Version: 1.19.00 36 / 105



Check if data stimulation (STIM) event can perform or delete the buffers.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > Data acquisition has to be enabled: XCP ENABLE STIM has to be defined
- > Call context: Task and interrupt level (not reentrant)

6.2.4 XcpBackground: Background calculation of checksum

XcpBackground

Prototype	
Single Channel	
Single Receive Channel	vuint8 XcpBackground (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
vuint8	background calculation finished background calculation is still in progress

Functional Description

If the XCP command for the calculation of the memory checksum has to be used for large memory areas, it might not be appropriate to block the processor for a long period of time. Therefore, the checksum calculation is divided into smaller sections that are handled in XcpBackground.

Therefore XcpBackground should be called periodically whenever the ECU's CPU is idle.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly
- > Call context: Task level

6.2.5 XcpSendEvent: Transmission of event codes

XcpSendEvent

Prototype	
Single Channel	
Single Receive Channel	void XcpSendEvent (vuint8 evc, MEMORY_ROM BYTEPTR c, vuint8 len)
Multi Channel	
Indexed	not supported
Code replicated	not supported

©2015, Vector Informatik GmbH Version: 1.19.00 37 / 105



Parameter	
evc	event code
С	pointer to event data
len	event data length
Return code	
-	-

Transmission of event codes via event packets (EV).

Please refer to chapter 3.8 Event Codes.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > Data acquisition has to be enabled: XCP_ENABLE_SEND_EVENT has to be defined
- Call context: Task and interrupt level

6.2.6 XcpPutchar: Put a char into a service request packet

XcpPutchar

Prototype	
Single Channel	
Single Receive Channel	void XcpPutchar (MEMORY_ROM vuint8 c)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
С	character that is put in a service request packet
Return code	
-	-
Fti	

Functional Description

Put a char into a service request packet (SERV).

The service request packet is transmitted if either the maximum packet length is reached (the service request message packet is full) or the character 0x00 is out in the service request packet.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > The switch XCP ENABLE SERV TEXT PUTCHAR has to be defined
- Call context: Task and interrupt level (not reentrant)

6.2.7 XcpPrint: Transmission of a service request packet

XcpPrint

Pro	tot	У	pe

Single Channel

©2015, Vector Informatik GmbH Version: 1.19.00 38 / 105



Single Receive Channel	void XcpPrint (MEMORY_ROM vuint8 *str)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
str	pointer to a string that is terminated by 0x00	
Return code		
-	-	

Transmission of a service request packet (SERV).

The string str is sent via service request packets. The string has to be terminated by 0x00.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > The switch XCP ENABLE SERV TEXT PRINT has to be defined
- > Call context: Task and interrupt level (not reentrant)

6.2.8 XcpDisconnect: Disconnect from XCP master

XcpDisconnect

Prototype		
Single Channel		
Single Receive Channel	void XcpDisconnect (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	

Functional Description

If the XCP slave is connected to a XCP master a call of this function discontinues the connection (transition to disconnected state). If the XCP slave is not connected this function performs no action.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- Call context: Task and interrupt level (not reentrant)

6.2.9 XcpSendCrm: Transmit response or error packet

XcpSendCrm

©2015, Vector Informatik GmbH Version: 1.19.00 39 / 105



Prototype		
Single Channel		
Single Receive Channel	void XcpSendCrm (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	
F		

Transmission of a command response packet (RES), or error packet (ERR) if no other packet is pending.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly, XCP is in connected state and a command packet (CMD) has been received.
- > Call context: Task and interrupt level (not reentrant)

6.2.10 XcpGetXcpDataPointer: Request internal data pointer

XcpGetXcpDataPointer

Prototype	
Single Channel	
Single Receive Channel	void XcpGetXcpDataPointer (RAM tXcpData ** pXcpData)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
pXcpData	pointer to store the pointer to the module internal data
Return code	
-	-

Functional Description

With this function the pointer to the module internal data can be received. With this pointer the internal variable can be set to a certain configuration (e.g. after entering a boot mode where no connection shall be established again). As this pointer allows the access to all internal data it must be handled with care.

Particularities and Limitations

> The switch XCP ENABLE GET XCP DATA POINTER has to be defined

©2015, Vector Informatik GmbH Version: 1.19.00 40 / 105



6.2.11 XcpControl: En- / Disable the XCP module

XcpControl

Prototype		
Single Channel		
Single Receive Channel	void XcpControl (vuint8 command)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
command	parameter to either en- or disable the module	
	kXcpControl_Disable: disable the module	
	kXcpControl_Enable: enable the module	
Return code		
-	-	
Functional Description		
With this function the whole module can be en- or disabled. After initialization the module is enabled. A call with parameter kXcpControl_Enable does not lead to any changed behavior. After		

call with parameter kXcpControl_Disable each function either called by the application or by the transport layer is directly left without any handling.

Thus this function can be used to disable the XCP functionality during runtime.

Particularities and Limitations

> The switch XCP_ENABLE_CONTROL has to be defined

6.2.12 XcpGetVersionInfo: Request module version information

XcpGetVersionInfo

	- Production of the second of
Prototype	
Single Channel	
Single Receive Channel	void XcpGetVersionInfo (Std_VersionInfoType *XcpVerInfoPtr)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
XcpVerInfoPtr	Pointer to the location where the Version information shall be stored.
Return code	
-	-
Functional Description	
With this service it is possible to get the version information of this software module.	

41 / 105 ©2015, Vector Informatik GmbH Version: 1.19.00



Particularities and Limitations

- The switch XCP ENABLE VERSION INFO API has to be defined
- Call context: task level (Re-entrant)

6.3 XCP Protocol Layer Functions, called by the XCP Transport Layer

For using the following functions there are some limitations which have to be taken into consideration – especially when using an operation system like, i.e. OSEK OS:

- > The ISR level for the transmission and reception of CAN messages has to be the same.
- > Interrupts must be mutually
- > No nested calls of these functions are allowed. (i.e. these functions are not reentrant)

All functions provided by the application must match the required interfaces. This can be ensured by including the header file in the modules which provide the required functions. If these interfaces do not match unexpected run-time behavior may occur.

6.3.1 XcpCommand: Evaluation of XCP packets and command interpreter

XcpCommand

Prototype	
Single Channel	
Single Receive Channel	void XcpCommand (MEMORY_ROM vuint32* pCommand)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
pCommand	Pointer to the XCP protocol message, which must be extracted from the XCP protocol packet.
Return code	
-	-

Functional Description

Every time the XCP Transport Layer receives a XCP CTO Packet this function has to be called. The parameter is a pointer to the XCP protocol message, which must be extracted from the XCP protocol packet.

Particularities and Limitations

- > The XCP Protocol Layer has to be initialized correctly.
- Call context: Task and interrupt level (not reentrant)



6.3.2 XcpSendCallBack: Confirmation of the successful transmission of a XCP packet

XcpSendCallBack

Prototype	
Single Channel	
Single Receive Channel	vuint8 XcpSendCallBack (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
vuint8	0 : if the XCP Protocol Layer is idle (no transmit messages are pending)
Formational December	

Functional Description

The XCP Protocol Layer does not call ApplXcpSend again, until XcpSendCallBack has confirmed the successful transmission of the previous message. XcpSendCallBack transmits pending data acquisition messages by calling ApplXcpSend again.

Note that if XcpSendCallBack is called from inside ApplXcpSend a recursion occurs, which assumes enough space on the call stack.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly.
- > Call context: Task and interrupt level (not reentrant)

6.3.3 XcpGetState: Get connection state of XCP

XcpGetState

Prototype	
Single Channel	
Single Receive Channel	vuint8 XcpGetState (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
XCP_CONNECTED	XCP is connected

©2015, Vector Informatik GmbH Version: 1.19.00 43 / 105



Get the connection state of the XCP Protocol Layer.

E.g. this service is used by the XCP on CAN Transport Layer to determine the connection state in case multiple CAN channels are used.

Particularities and Limitations

- > The XCP Protocol Layer has to be initialized correctly.
- > Call context: Task and interrupt level (not reentrant)
- > Enabled/Disabled by XCP XXX GET CONNECTION STATE

6.4 XCP Transport Layer Services called by the XCP Protocol Layer

The prototypes of the functions that are required by the XCP Protocol Layer can be found in the component's header.

6.4.1 ApplXcpSend: Request for the transmission of a DTO or CTO message

ApplXcpSend

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpSend (vuint8 len, MEMORY_ROM BYTEPTR msg)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
len	Length of message data
msg	Pointer to message
Return code	
vuint8	0 : if the XCP Protocol Layer is idle (no transmit messages are pending)

Functional Description

Requests for the transmission of a command transfer object (CTO) or data transfer object (DTO). XcpSendCallBack must be called after the successful transmission of any XCP message. The XCP Protocol Layer will not request further transmissions, until XcpSendCallBack has been called.

Particularities and Limitations

- > Call context: Task and interrupt level (not reentrant)
- > ApplXcpSend is not defined as macro

©2015, Vector Informatik GmbH Version: 1.19.00 44 / 105



6.4.2 ApplXcpInit: Perform XCP Transport Layer initialization

ApplXcpInit

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpInit (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
-	-
Functional Description	
Initializations of the XCP Transport Layer.	
This function is required b	y XCP on CAN if no CAN transmit queue is used.
Particularities and Limitations	
I .	

6.4.3 ApplXcpBackground: XCP Transport Layer background operations

ApplXcpBackground

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpBackground (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
-	-
Functional Description	

Performs background operations of the XCP Transport Layer.

> Call context: Task and interrupt level (context of XcpInit)

> ApplXcpInit is not defined as macro

This function is required by XCP on CAN if no CAN transmit queue is used.

Particularities and Limitations

- > Call context: Task and interrupt level (context of XcpBackground)
- > ApplXcpBackground is not defined as macro

©2015, Vector Informatik GmbH Version: 1.19.00 45 / 105



6.4.4 ApplXcpInterruptEnable: Enable interrupts

ApplXcpInterruptEnable

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpInterruptEnable (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
-	-
Functional Description	

Particularities and Limitations

Enabling of the global interrupts.

- > XCP is initialized correctly
- > Call context: Task and interrupt level
- > This function is reentrant!
- > The function ApplXcpInterruptEnable can be overwritten by the macro ApplXcpInterruptEnable.

6.4.5 ApplXcpInterruptDisable: Disable interrupts

ApplXcpInterruptDisable

Prototype		
Single Channel		
Single Receive Channel	void ApplXcpInterruptDisable (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	
Functional Description		
Disabling of the global interrupts.		

©2015, Vector Informatik GmbH Version: 1.19.00 46 / 105



Particularities and Limitations

- > XCP is initialized correctly
- > Call context: Task and interrupt level
- > This function is reentrant!
- > The function ApplXcpInterruptDisable can be overwritten by the macro ApplXcpInterruptDisable.

6.4.6 ApplXcpTLService: Transport Layer specific commands

ApplXcpTLService

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpTLService (MEMORY_ROM BYTEPTR pCmd)
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
pCmd	Pointer to COMMAND that ha	as been received by the XCP Slave.
Return code		
vuint8	XCP_CMD_OK :	Done
	XCP_CMD_PENDING:	Call XcpSendCrm() when done
	XCP_CMD_SYNTAX:	Error
	XCP_CMD_BUSY:	not executed
	XCP_CMD_UNKNOWN:	not implemented optional command
	XCP_CMD_OUT_OF_RANGE :	command parameters out of range
Functional Description		

Transport Layer specific command that is processed within the XCP Transport Layer.

Particularities and Limitations

- > XCP is initialized correctly
- > Call context: Task and interrupt level
- The switch XCP ENABLE TL COMMAND has to be defined

6.5 Application Services called by the XCP Protocol Layer

The prototypes of the functions that are required by the XCP Protocol Layer can be found in the header.

The XCP Protocol Layer provides application callback functions in order to perform application and hardware specific tasks.

Note: All services within this chapter are called from task or interrupt level. All services are not reentrant

©2015, Vector Informatik GmbH Version: 1.19.00 47 / 105



6.5.1 ApplXcpGetPointer: Pointer conversion

ApplXcpGetPointer

Prototype	
Single Channel	
Single Receive Channel	MTABYTEPTR ApplXcpGetPointer (vuint8 addr_ext, vuint32 addr)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
addr_ext	8 bit address extension
addr	32 bit address
Return code	
MTABYTEPTR	Pointer to the address specified by the parameters

Functional Description

This function converts a memory address from XCP format (32-bit address plus 8-bit address extension) to a C style pointer. An MCS like CANape usually reads this memory addresses from the ASAP2 database or from a linker map file.

The address extension may be used to distinguish different address spaces or memory types. In most cases, the address extension is not used and may be ignored.

This function is used for memory transfers like DOWNLOAD and UPLOAD.

Example:

The following code shows an example of a typical implementation of ApplXcpGetPointer:

```
MTABYTEPTR ApplXcpGetPointer( vuint8 addr_ext, vuint32 addr )
{
  return (MTABYTEPTR) addr;
}
```

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > This function can be overwritten by defining ApplXcpGetPointer as macro.

6.5.2 ApplXcpGetIdData: Get Identification

ApplXcpGetIdData

Prototype	
Single Channel	
Single Receive Channel	vuint32 ApplXcpGetIdData (MTABYTEPTR *pData, vuint8 id)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
pData	Returns to identification information



id	Id of requested information	
Return code		
vuint32	length of the identification information	
Functional Description		
Returns a pointer to a pointer of MAP file names.		
Particularities and Limitations		
> XCP is initialized correctly and in connected state		
> The switch XCP ENABLE GET ID GENERIC has to be defined		

6.5.3 ApplXcpGetSeed: Generate a seed

	ApplXcpGetSeed	
Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpGetSeed (MEMORY_ROM vuint8 resource, BYTEPTR seed)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
Resource	Resource for which the seed has to be generated XCP Professional and XPC Basic RM_CAL_PAG: to unlock the resource calibration/paging RM_DAQ: to unlock the resource data acquisition	
Seed	XCP Professional only RM_STIM: to unlock the resource stimulation RM_PGM: to unlock the resource programming Pointer to RAM where the seed has to be generated to.	
Return code		
vuint8	The length of the generated seed that is returned by seed.	
Functional Description		
Generate a seed for the appropriate resource. The seed has a maximum length of MAX_CTO-2 bytes.		
Particularities and Limitations		
 XCP is initialized correctly and in connected state The switch XCP_ENABLE_SEED_KEY has to be defined 		

49 / 105 ©2015, Vector Informatik GmbH Version: 1.19.00



6.5.4 ApplXcpUnlock: Valid key and unlock resource

ApplXcpUnlock

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpUnlock (MEMORY_ROM vuint8 *key, MEMORY ROM vuint8 length)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
key	Pointer to the key	y .
length	Length of the key.	
Return code		
vuint8	XCP Professional and XPC Basic	
	0:	if the key is not valid
	RM_CAL_PAG:	to unlock the resource calibration/paging
	RM_DAQ:	to unlock the resource data acquisition
	XCP Professional only	
	RM_STIM:	to unlock the resource stimulation
	RM_PGM:	to unlock the resource programming
Functional Description		
Check the key and return the resource that has to be unlocked.		

Only one resource may be unlocked at one time.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE SEED KEY has to be defined

6.5.5 ApplXcpCheckReadEEPROM: Check read access from EEPROM

ApplXcpCheckReadEEPROM

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpCheckReadEEPROM (MTABYTEPTR addr, vuint8 size, BYTEPTR data)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
addr	Address that is checked	
size	Number of bytes	

©2015, Vector Informatik GmbH Version: 1.19.00 50 / 105



data	Pointer to data (if the address is on the EEPROM the data is written here)
Return code	
vuint8	0 : This is not EEPROM
	1 : Read from EEPROM

Checks whether the address lies within the EEPROM memory or in the RAM area.

If the area is within the EEPROM area size data byte are read from addr and written to data.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE READ EEPROM has to be defined

6.5.6 ApplXcpCheckWriteEEPROM: Check write access to the EEPROM

ApplXcpCheckWriteEEPROM

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpCheckWriteEEPROM (MTABYTEPTR addr, vuint8 size, MEMORY_ROM BYTEPTR data)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
addr	Address that is checked
size	number of bytes
data	pointer to data (if addr is on the EEPROM this data is written to addr)
Return code	
vuint8	XCP_CMD_OK: EEPROM written XCP_CMD_DENIED: This is not EEPROM XCP_CMD_PENDING: EEPROM write in progress, call XcpSendCrm when done

Functional Description

Checks whether the address addr is within the EEPROM memory. If not, the function returns $\texttt{XCP_CMD_DENIED}$. If it lies within, EEPROM programming is performed. The function may return during programming with $\texttt{XCP_CMD_PENDING}$ or may wait until the programming sequence has finished and then returns with $\texttt{XCP_CMD_PENDING}$ OK.

If the programming sequence has finished, the <code>XcpSendCrm</code> function must be called. <code>XcpSendCrm</code> is an internal function of the XCP Protocol Layer.

©2015, Vector Informatik GmbH Version: 1.19.00 51 / 105



Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE WRITE EEPROM has to be defined

6.5.7 ApplXcpCheckWriteAccess: Check address for valid write access

ApplXcpCheckWriteAccess

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpCheckWriteAccess (MTABYTEPTR address, vuint8 size)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
address	address	
size	number of bytes	
Return code		
vuint8	0 : if access is denied	
	>= 1: if access is granted	

Functional Description

Check addresses for valid write access. A write access is enabled with the XCP_ENABLE_WRITE_PROTECTION, it should be only used, if write protection of memory areas is required

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE WRITE PROTECTION has to be defined
- > Can be overwritten by the macro ApplXcpCheckWriteAccess

6.5.8 ApplXcpCheckReadAccess: Check address for valid read access

ApplXcpCheckReadAccess

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpCheckReadAccess (MTABYTEPTR address, vuint32 size)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
address	address	
size	number of bytes	

©2015, Vector Informatik GmbH Version: 1.19.00 52 / 105



Return code		
vuint8	0:	if access is denied
	>= 1:	if access is granted

Check addresses for valid read access. A read access is enabled with the $\texttt{XCP_ENABLE_READ_PROTECTION}$, it should be only used, if read protection of memory areas is required

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE READ PROTECTION has to be defined
- > Can be overwritten by the macro ApplXcpCheckReadAccess

6.5.9 ApplXcpCheckDAQAccess: Check address for valid read or write access

ApplXcpCheckDAQAccess

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpCheckDAQAccess (DAQBYTEPTR address, vuint8 size)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
address	address
size	number of bytes
Return code	
vuint8	XCP_CMD_DENIED: if access is denied XCP_CMD_OK: if access is granted

Functional Description

Check addresses for valid read or write access. This callback is called when a WRITE_DAQ command is performed. Therefore it is not possible to know whether this is a read or write access. Out of this reason this unified function is called.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP_ENABLE_READ_PROTECTION or XCP_ENABLE_WRITE_PROTECTION has to be defined

6.5.10 ApplXcpCheckProgramAccess: Check address for valid write access

ApplXcpCheckProgramAccess

Prototype	
Single Channel	

©2015, Vector Informatik GmbH Version: 1.19.00 53 / 105



Single Receive Channel	vuint8 ApplXcpChec	kProgramAccess (MTABYTEPTR address, vuint8 size)		
Multi Channel	Multi Channel			
Indexed	not supported			
Code replicated	not supported			
Parameter				
address	address			
size	number of bytes			
Return code				
vuint8	0 :	if access is denied		
	>= 1:	if access is granted		

Check addresses for valid write access. A write access is enabled with the $\texttt{XCP_ENABLE_PROGRAMMING_WRITE_PROTECTION}$, it should be only used, if write protection of memory areas is required

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE PROGRAMMING WRITE PROTECTION has to be defined
- > Can be overwritten by the macro ApplXcpCheckWriteAccess

6.5.11 ApplXcpUserService: User defined command

ApplXcpUserService

	Applicouserservice
Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpUserService (MEMORY_ROM BYTEPTR pCmd)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
pCmd	Pointer to XCP command packet
Return code	
vuint8	XCP_CMD_OK: positive response XCP_CMD_PENDING: Call XcpSendCrm() when done XCP_CMD_SYNTAX: negative response
Functional Description	
Application specific user command. Please refer to 3.10 User Defined Command.	

©2015, Vector Informatik GmbH Version: 1.19.00 54 / 105



Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE USER COMMAND has to be defined

6.5.12 ApplXcpOpenCmdlf: XCP command extension interface

ApplXcpOpenCmdIf

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpOpenCmdlf (MEMORY_ROM BYTEPTR pCmd	
	BYTEPTR pRes, BYTEPTR pLength)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
pCmd	Pointer to COMMAND that has been received by the XCP Slave.	
pRes	Pointer to response buffer that will be sent by the XCP Slave.	
pLength	Number of bytes that will be sent in the response.	
Return code		
vuint8	XCP_CMD_OK: Done	
	XCP_CMD_PENDING: Call XcpSendCrm() when done	
	XCP_CMD_ERROR: Error	

Functional Description

Call back that can be used to extend the XCP commands of the XCP protocol layer.

Particularities and Limitations

- > XCP is initialized correctly
- > Call context: Task and interrupt level
- > The switch XCP ENABLE OPENCMDIF has to be defined

6.5.13 ApplXcpSendStall: Resolve a transmit stall condition

ApplXcpSendStall

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpSendStall (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	

©2015, Vector Informatik GmbH Version: 1.19.00 55 / 105



Return code

vuint8 0: if not successful

> 0 : successful

Functional Description

Resolve a transmit stall condition in XcpPutchar or XcpSendEvent.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP_ENABLE_SEND_EVENT or XCP_ENABLE_SERV_TEXT_PUTCHAR and XCP_ENABLE_SEND_QUEUE are defined
- > The function can be overwritten by the macro ApplXcpSendStall()

6.5.14 ApplXcpSendFlush: Flush transmit buffer

ApplXcpSendFlush

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpSendFlush (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	
Functional Description		
Flush the transmit buffer if there is one implemented in ApplXcpSend.		
This function can be overwritten by a macro.		
Particularities and Limitations		
> The function can be overwritten by the macro ApplXcpSendFlush()		

6.5.15 ApplXcpDisableNormalOperation: Disable normal operation of the ECU

ApplXcpDisableNormalOperation

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpDisableNormalOperation (MTABYTEPTR a, vuint16 size)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	

©2015, Vector Informatik GmbH Version: 1.19.00 56 / 105



Parameter		
a	Address (where the flash kernel is downloaded to)	
size	Size (of the flash kernel)	
Return code		
vuint8	XCP_CMD_OK: download of flash kernel confirmed	
	XCP_CMD_DENIED: download of flash kernel refused	

Prior to the flash kernel download has the ECU's normal operation to be stopped in order to avoid misbehavior due to data inconsistencies.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE BOOTLOADER DOWNLAOD has to be defined

6.5.16 ApplXcpStartBootLoader: Start of boot loader

ApplXcpStartBootLoader

		AppinopotalibootEoadel
Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpStartI	BootLoader (void)
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
vuint8	This function should r	not return.
	0:	negative response
	> 0 :	positive response
Functional Description		
Start of the boot loader.		
Particularities and Limitations		
> XCP is initialized correctly and in connected state		
> The switch XCP_ENABLE_BOOTLOADER_DOWNLAOD has to be defined		

6.5.17 ApplXcpReset: Perform ECU reset

ApplXcpReset

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpReset (void)

©2015, Vector Informatik GmbH Version: 1.19.00 57 / 105



Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	
Functional Descripti	on	

Perform an ECU reset after reprogramming of the application.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE PROGRAM has to be defined

6.5.18 ApplXcpProgramStart: Prepare flash programming

ApplXcpProgramStart

	11 1 0	
Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpProgramStart (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
vuint8	XCP_CMD_OK: Preparation done	
	XCP_CMD_PENDING: Call XcpSendCrm() when done	
	XCP_CMD_ERROR: Flash programming not possible	
Functional Description		
Prepare the ECU for flash programming.		
Particularities and Limitations		
> XCP is initialized correctly and in connected state		
> The switch XCP_ENABLE_PROGRAM has to be defined		

6.5.19 ApplXcpFlashClear: Clear flash memory

ApplXcpFlashClear

©2015, Vector Informatik GmbH Version: 1.19.00 58 / 105



Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpFlashClear (MTABYTEPTR address, vuint32 size)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
address	Address
size	Size
Return code	
vuint8	XCP_CMD_OK: Flash memory erase done XCP_CMD_PENDING: Call XcpSendCrm() when done XCP_CMD_ERROR: Flash memory erase error
Functional Description	
Clear the flash memory, b	efore the flash memory will be reprogrammed.
Particularities and Limit	ations
> XCP is initialized corre	ctly and in connected state

6.5.20 ApplXcpFlashProgram: Program flash memory

The switch XCP ENABLE PROGRAM has to be defined

ApplXcpFlashProgram

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpFlashProgram (MEMORY_ROM BYTEPTR data, MTABYTEPTR address, vuint8 size)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
data	Pointer to data
address	Address
size	Size
Return code	
vuint8	XCP_CMD_OK: Flash memory programming finished XCP_CMD_PENDING: :Flash memory programming in progress. XcpSendCrm has to be called when done.

©2015, Vector Informatik GmbH Version: 1.19.00 59 / 105



Program the cleared flash memory.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switch XCP ENABLE PROGRAM has to be defined

6.5.21 ApplXcpDaqResume: Resume automatic data transfer

ApplXcpDaqResume

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpDaqR	Resume (tXcpDaq * daq)
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
daq	Pointer to dynamic DAQ list structure	
Return code		
vuint8		failed Ok

Functional Description

Resume the automatic data transfer.

The whole dynamic DAQ list structure that had been stored in non-volatile memory within the service <code>ApplXcpDaqResumeStore(..)</code> has to be restored to RAM.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ RESUME are defined

6.5.22 ApplXcpDaqResumeStore: Store DAQ lists for resume mode

ApplXcpDaqResumeStore

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpDaqResumeStore (MEMORY_ROM tXcpDaq * daq)
Multi Channel	
Indexed	not supported
Code replicated	not supported

©2015, Vector Informatik GmbH Version: 1.19.00 60 / 105



Parameter		
daq	Pointer to dynamic DAQ list structure.	
Return code		
-	-	

This application callback service has to store the whole dynamic DAQ list structure in non-volatile memory for the DAQ resume mode. Any old DAQ list configuration that might have been stored in non-volatile memory before this command, must not be applicable anymore. After a cold start or reset the dynamic DAQ list structure has to be restored by the application callback service <code>ApplXcpDaqResume(..)</code>.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ RESUME are defined

6.5.23 ApplXcpDaqResumeClear: Clear stored DAQ lists

ApplXcpDaqResumeClear

	11 1 1
Prototype	
Single Channel	
Single Receive Channel	void ApplXcpDaqResumeClear (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
-	-
Formational December	

Functional Description

The whole dynamic DAQ list structure that had been stored in non-volatile memory within the service <code>ApplXcpDagResumeStore(..)</code> has to be cleared.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ RESUME are defined

6.5.24 ApplXcpCalResumeStore: Store Calibration data for resume mode

ApplXcpCalResumeStore

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpCalResumeStore (void)
Multi Channel	

©2015, Vector Informatik GmbH Version: 1.19.00 61 / 105



Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
vuint8	0 : Storing not yet finished (STORE_CAL_REQ flag kept) >0 : Storing finished (STORE_CAL_REQ flag cleared)

This application callback service has to store the current calibration data in non-volatile memory for the resume mode.

After a cold start or reset the calibration data has to be restored by the application.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ RESUME are defined

6.5.25 ApplXcpGetTimestamp: Returns the current timestamp

ApplXcpGetTimestamp

Prototype		
Single Channel		
Single Receive Channel	XcpDaqTimestampType ApplXcpGetTimestamp (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
XcpDaqTimestampType	timestamp	

Functional Description

Returns the current timestamp.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ TIMESTAMP are defined
- > The parameter kXcpDaqTimestampSize defines the timestamp size. It can either be DAQ TIMESTAMP BYTE, DAQ TIMESTAMP WORD, DAQ TIMESTAMP DWORD

6.5.26 ApplXcpRtsStart: Start Trigger for DAQ runtime supervision

ApplXcpRtsStart

©2015, Vector Informatik GmbH Version: 1.19.00 62 / 105



Prototype		
Single Channel		
Single Receive Channel	void ApplXcpRtsStart (void)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
-	-	
Return code		
-	-	

Function is used to trigger start of DAQ runtime supervision. This function must store a current timestamp to be used for comparison later on.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ RUNTIME SUPERVISION are defined

6.5.27 ApplXcpRtsSnapshot: Trigger for DAQ runtime supervision

ApplXcpRtsSnapshot

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpRtsSnapshot (void)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
-	-
Return code	
uint8	Returns either XCP_OK or XCP_NOT_OK depending on whether current measurement shall be continued or aborted.
Functional Description	

Function is used to perform DAQ runtime supervision. This function must compare the current time stamp to the one stored in ApplXcpRtsStart and determine whether runtime is exceeded.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- The switches XCP ENABLE DAQ and XCP ENABLE DAQ RUNTIME SUPERVISION are defined

©2015, Vector Informatik GmbH Version: 1.19.00 63 / 105



6.5.28 ApplXcpGetCalPage: Get calibration page

ApplXcpGetCalPage

Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpGetCalPage (vuint8 segment, vuint8 mode)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
segment	Logical data segment number
mode	Access mode
	The access mode can be one of the following values:
	CAL_ECU: ECU access
	CAL_XCP: XCP access
Return code	
vuint8	Logical data page number
E C I B C	

Functional Description

This function returns the logical number of the calibration data page that is currently activated for the specified access mode and data segment.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ TIMESTAMP are defined

6.5.29 ApplXcpSetCalPage: Set calibration page

ApplXcpSetCalPage

Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpSetCalPage (vuint8 segment, vuint8 page, vuint8 mode)	
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
segment	Logical data segment number	
Page	Logical data page number	

©2015, Vector Informatik GmbH Version: 1.19.00 64 / 105



mode	Access mode CAL_ECU: the given page will be used by the slave device application CAL_XCP: the slave device XCP driver will access the given page Both flags may be set simultaneously or separately.	
Return code		
vuint8	O: CRC_OUT_OF_RANGE: CRC_PAGE_NOT_VALID: CRC_PAGE_MODE_NOT_VALID	Ok segment out of range (only one segment supported) Selected page not available : Selected page mode not available
Functional Description		

Set the access mode for a calibration data segment.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE DAQ and XCP ENABLE DAQ TIMESTAMP are defined

6.5.30 ApplXcpCopyCalPage: Copying of calibration data pages

ApplXcpCopyCalPage

		/ ippi//opeopy can ago
Prototype		
Single Channel		
Single Receive Channel	vuint8 ApplXcpCopyCalPag	e(vuint8 srcSeg, vuint8 srcPage vuint8 destSeg, vuint8 destPage)
Multi Channel		
Indexed	not supported	
Code replicated	not supported	
Parameter		
srcSeg	Source segment	
srcPage	Source page	
destSeg	Destination segment	
destPage	Destination page	
Return code		
vuint8	<pre>0: XCP_CMD_PENDING: CRC_PAGE_NOT_VALID: CRC_SEGMENT_NOT_VALID CRC_WRITE_PROTECTED:</pre>	: Segment not available
Functional Description		
Copying of calibration data pages. The pages are copied from source to destination.		

©2015, Vector Informatik GmbH Version: 1.19.00 65 / 105



Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE PAGE COPY and XCP ENABLE DAQ TIMEOUT are defined

6.5.31 ApplXcpSetFreezeMode: Setting the freeze mode of a segment

ApplXcpSetFreezeMode

Prototype	
Single Channel	
Single Receive Channel	void ApplXcpSetFreezeMode (vuint8 segment, vuint8 mode)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
segment	Segment to set freeze mode
mode	New freeze mode
Return code	
_	-
Functional Description	

Setting the freeze mode of a certain segment. Application must store the current freeze mode of each segment.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- The switches XCP ENABLE PAGE FREEZE is defined

6.5.32 ApplXcpGetFreezeMode: Reading the freeze mode of a segment

ApplXcpGetFreezeMode

	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Prototype	
Single Channel	
Single Receive Channel	vuint8 ApplXcpGetFreezeMode (vuint8 segment)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
segment	Segment to read freeze mode
Return code	
vuint8	Return the current freeze mode, set by ApplXcpSetFreezeMode().
Functional Description	
Reading the freeze mode of a certain segment. Application must store the current freeze mode of each segment and report it by the return value of this function.	

©2015, Vector Informatik GmbH Version: 1.19.00 66 / 105



Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE PAGE FREEZE is defined

6.5.33 ApplXcpReadChecksumValue: Read a single byte from memory for checksum creation

ApplXcpReadChecksumValue

Prototype	
Single Channel	
Single Channel	tXcpChecksumAddType ApplXcpRead (vuint32 addr)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
addr	32 Bit address
Return code	
tXcpChecksumAddType	Value used to create checksum.
Functional Description	
Read from the memory to create checksum	

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP_ENABLE_MEM_ACCESS_BY_APPL and XCP_ENABLE_CHECKSUM is defined

6.5.34 ApplXcpRead: Read a single byte from memory

ApplXcpRead

Prototype	
Single Channel	
Single Channel	vuint8 ApplXcpRead (vuint32 addr)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
addr	32 Bit address
Return code	
vuint8	Pointer to the address specified by the parameters

©2015, Vector Informatik GmbH Version: 1.19.00 67 / 105



Read a single byte from the memory.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE MEM ACCESS BY APPL is defined

6.5.35 ApplXcpWrite: Write a single byte to RAM

ApplXcpWrite

Prototype	
Single Channel	
Single Channel	void ApplXcpWrite (vuint32 addr, vuint8 data)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
addr	32 Bit address
data	data to be written to memory
Return code	
-	-
Functional Description	
Write a single byte to RAM.	

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE MEM ACCESS BY APPL is defined

6.5.36 ApplXcpCalculateChecksum: Custom checksum calculation

ApplXcpCalculateChecksum

Prototype	
Single Channel	
Single Channel	vuint8 ApplXcpCalculateChecksum (ROMBYTEPTR pMemArea, BYTEPTR pRes, vuint32 length)
Multi Channel	
Indexed	not supported
Code replicated	not supported

©2015, Vector Informatik GmbH Version: 1.19.00 68 / 105



Address pointer
Pointer to response string
Length of mem area, used for checksum calculation
XCP_CMD_OK/XCP_CMD_PENDING

Normally the XCP uses internal checksum calculation functions. If the internal checksum calculation does not fit the user requirements this call-back can be used to calculate the checksum by the application.

Particularities and Limitations

- > XCP is initialized correctly and in connected state
- > The switches XCP ENABLE CHECKSUM and XCP ENABLE CUSTOM CRC is defined

6.6 XCP Protocol Layer Functions that can be overwritten

The following functions are defined within the XCP Protocol Layer and can be overwritten for optimization purposes.

Note: All services within this chapter are called from task or interrupt level. All services are not reentrant.

6.6.1 XcpMemCpy: Copying of a memory range

XcpMemCpy

Prototype	
Single Channel	
Single Receive Channel	void XcpMemCpy (DAQBYTEPTR dest, MEMORY_ROM DAQBYTEPTR src, vuint8 n)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
dest	pointer to destination address
src	pointer to source address
n	number of data bytes to copy
Return code	
_	-

©2015, Vector Informatik GmbH Version: 1.19.00 69 / 105



General memory copy function that copies a memory range from source to destination.

This function is used in the inner loop of XcpEvent for data acquisition sampling.

This function is already defined in the XCP Protocol Layer, but can be overwritten by a macro or function for optimization purposes. E.g. it would be possible to use DMA for faster execution.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly.
- > This function can be overwritten XcpMemCpy is defined.

6.6.2 XcpMemSet: Initialization of a memory range

XcpMemSet

Prototype	
Single Channel	
Single Receive Channel	void XcpMemSet (BYTEPTR p, vuint16 n, vuint8 b)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
р	pointer to start address
n	number of data bytes
b	data byte to initialize with
Return code	
-	-

Functional Description

Initialization of n bytes starting from address p with b.

This function is already defined in the XCP Protocol Layer, but can be overwritten by a macro or function for optimization purposes. E.g. it would be possible to use DMA for faster execution.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly.
- > This function can be overwritten if XcpMemSet is defined.

6.6.3 XcpMemClr: Clear a memory range

XcpMemCIr

Prototype	
Single Channel	
Single Receive Channel static void XcpMemCIr (BYTEPTR p, vuint16 n)	
Multi Channel	
Indexed	not supported
Code replicated	not supported

©2015, Vector Informatik GmbH Version: 1.19.00 70 / 105



Parameter	
р	pointer to start address
n	number of data bytes
Return code	
-	-

Initialize n data bytes starting from address p with 0x00.

This function is already defined in the XCP Protocol Layer, but can be overwritten by a macro or function for optimization purposes. E.g. it would be possible to use DMA for faster execution.

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly.
- > This function can be overwritten if XcpMemClr is defined.

6.6.4 XcpSendDto: Transmission of a data transfer object

XcpSendDto

Prototype	
Single Channel	
Single Receive Channel	void XcpSendDto (MEMORY_ROM xcpDto_t *dto)
Multi Channel	
Indexed	not supported
Code replicated	not supported
Parameter	
dto	pointer to data transfer object
Return code	
-	-
Functional Description	

Functional Description

Transmit a data transfer object (DTO).

Particularities and Limitations

- > The XCP Protocol Layer has been initialized correctly and XCP is in connected state.
- > The switch XCP ENABLE DAQ is defined
- > This function can be overwritten by defining XcpSendDto.

6.7 AUTOSAR CRC Module Services called by the XCP Protocol Layer (XCP Professional Only)

The following services of the AUTOSAR CRC Module are called by the XCP Protocol Layer:

Technical Reference XCP Protocol Layer



Crc_CalculateCRC16(...)
Crc CalculateCRC32(...)

A detailed description of the API can be found in the software specification of the CRC Module [VII].



7 Configuration of the XCP Protocol Layer

This chapter describes the common options for configuring (customizing) the XCP Protocol Layer. Please note that the XCP Professional can conveniently be configured with GENy (chapter 7.1). In this case no manual configuration has to be applied to the configuration files.

The configuration of the XCP Protocol Layer without GENy can be found in chapter 7.2.It is mainly applicable for the configuration of XCP Basic.

7.1 Configuration with GENy (XCP Professional only)

The XCP Protocol Layer is a higher software layer that can be configured independent of the communication system channels. Therefore in GENy the Protocol Layer component is attached to the ECU. I.e. it can be configured without associating any XCP Transport Layer in GENy.

Therefore there are no database attributes defined for the XCP Protocol Layer.

7.1.1 Component Configuration

7.1.1.1 General Settings

Configurable Options	Хср		
_ General Settings			
XCP Station Identifier	XCP		
Command Parameter Check	▽ *		
Enable Calibration	▽ *		
Event Codes	*		
Bootloader Download	*		
Memory Write Protection	*		
Memory Read Protection	*		
XCP Control	*		
Get Xcp Data Pointer	*		
Version Info API Support	*		
Open Command Interface	*		
User Config File	•		
Session Status API	*		
Address Doubling	*		
_ EEPROM Access			
Read Access	*		
Write Access	*		
 Service Request Message 			
Service Request Message	*		
Print	*		
Synchronous Data Acquisition (DAQ)			
Synchronous Data Acquisition (DAQ)	V		

©2015, Vector Informatik GmbH Version: 1.19.00 73 / 105



Figure 7-1 Component configuration – General settings

Configuration option	Description of configuration option
XCP Station Identifier	The 'XCP Station Identifier' is an ASAM-MC2 filename without path and extension that identifies the ECU's software program version. It is used for slave device identification and automatic session configuration.
	The Master Control System (MCS) can interpret this identifier as file name for the ECU database. The ECU developer should change the XCP station identifier with each program change. This will prevent database mix-ups and grant the correct access of measurement and calibration objects from the MCS to the ECU.
	Another benefit of the usage of the XCP station identifier is the automatic assignment of the correct ECU database at program start of the MCS via the Plug&Play mechanism. The Plug&Play mechanism prevents the user to choose the wrong ECU database.
Command Parameter Check	Checks of the range and validity of Command Transfer Object (CTO) and Data Transfer Object (DTO) parameters.
Enable Calibration	The option 'Enable Calibration' unlocks the commands - DOWNLOAD - DOWNLOAD_NEXT - DOWNLOAD_MAX - SHORT_DOWNLOAD - MODIFY_BITS
	If this option is disabled, these commands will return an ERR_ACCESS_DENIED error and calibration of parameters will not be possible!
Event Codes	'Event Codes' are transmitted within event packets (EV) from the slave device to the master device. The transmission is not guaranteed since event packets are not acknowledged.
	Please refer to the XCP Protocol Layer specification for the 'Table of Event codes'.
Bootloader Download	In order to reprogram the internal flash of some microcontrollers it is necessary to use a bootloader, because code cannot be executed from flash while programming flash.
Memory Write Protection	The option 'Memory Write Protection' enables write access to memory areas.
	I.e. prior to carrying out write access to RAM an application callback function is called and the memory address is passed as parameter. The application has to either grant or deny the memory access.
Memory Read Protection	The option 'Memory Read Protection' enables read access to memory areas.
	I.e. prior to carrying out read access to RAM an application callback function is called and the memory address is passed as parameter. The application has to either grant or deny the memory access.



XCP Control The option 'XCP Control' enables an API to en- or disable the XCP

module (s. 3.20).

Get Xcp Data Pointer The option 'Get Xcp Data Pointer' enables an API to retrieve the

pointer to the internal data of the XCP module (s. 3.19)

Version Info API Support The 'Version Info Api' option provides access to the version

information of the XCP Protocol Layer module. Provided informations are Module identifier, Vendor identifier and vendor specific Version

numbers.

Open Command

Interface

The 'Open Command Interface' can be used to add unsupported XCP

commands. A user call back is made available which must be

implemented in the application.

Session Status API This option enables the API XcpGetState which can be used to

determine whether the XCP is in state XCP_CONNECTED or in state

XCP_DISCONNECTED

Address Doubling Address Doubling allows byte addressing on word addressable

CPUs. For this purpose the Tool must double all addresses. If the Tool does not support this automatically all addresses in the a2l file

must be doubled manually.

User Config File The configuration file xcp cfg.h is generated by GENy. If you want

to overwrite settings in the generated configuration file, you can

specify a path to a user defined configuration file.

The user defined configuration file will be included at the end of the generated file. Therefore definitions in the user defined configuration file can overwrite definitions in the generated configuration file.

EEPROM Access

Read Access The option 'Read Access' allows read access to EEPROM.

The routines for accessing the EEPROM have to be implemented in

the application.

Write Access The option 'Write Access' allows write access to EEPROM.

The routines for accessing the EEPROM have to be implemented in

the application.

Service Request Message

Service Request

Message

'Service Request Messages' are always transmitted within service

request packets (SERV) by the slave device, in order to request the

master device to perform some action.

The transmission is not guaranteed since service request packets are

not acknowledged by the master device.

Please also refer to the XCP Protocol Layer specification for the

'Table of service request codes

Print The function XcpPrint (...) can be used for the transmission of

service request packets that contain text.

Table 7-1 Component configuration – General settings



7.1.1.2 Synchronous Data Acquisition

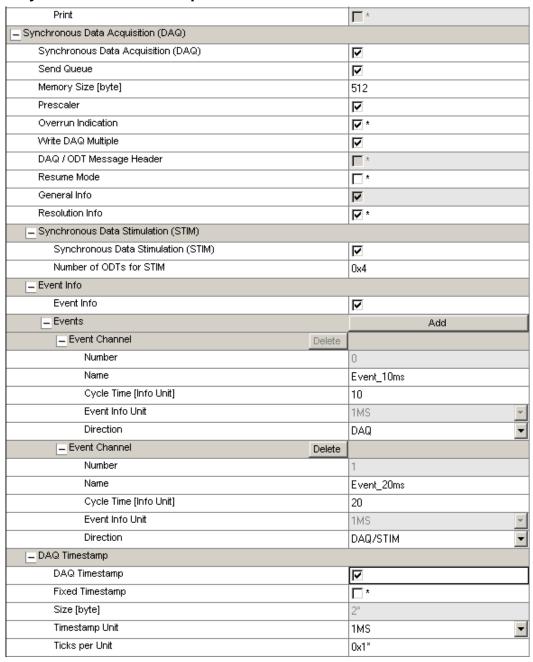


Figure 7-2 Component configuration – Synchronous Data Acquisition

Configuration option	Description of configuration option
Synchronous Data Acquisition (DAQ)	Data elements located in the slave's memory are transmitted in Data Transfer Objects (DTOs) from slave to master (DAQ) and from master to slave (STIM). The Object Description Table (ODT) describes the mapping
	between the synchronous data transfer objects and the slave's memory.

©2015, Vector Informatik GmbH Version: 1.19.00 76 / 105



Send Queue The 'Send Queue' should be enabled if more than one ODT

(Object Description Table) is used and if the Transport Layer

does not support data queuing or data buffering.

It has to be enabled if the Vector XCP Transport Layer for CAN

is enabled.

Memory Size [byte] A memory area has to be reserved for the dynamic allocation of

DAQ and ODT (Object Description Table) lists and for the

transmit queue.

Prescaler If the option 'Prescaler' is enabled all DAQ lists support the

prescaler for reducing the transmission period.

Overrun Indication Overrun situations are indicated to the Master Control System.

An overrun situation is e.g. an overflow of the transmit queue.

Write DAQ Multiple This command allows downloading multiple DAQ list entries in

one CMD frame. This option only works if:

1. MAX_CTO is at least 16 bytes big

2. This feature is enabled in CANape (Extended driver

settings)

DAQ / ODT Message Header If the option 'DAQ/ODT message header' is enabled the 2 byte

DAQ/ODT XCP Packet Identification is used: Relative ODT

number (1 byte), absolute DAQ list number (1 byte).

If the option 'DAQ/ODT message header' is disabled a 1 byte Packet Identification (PID) is used: Absolute ODT number. Attention: The 'DAQ/ODT Message Header' must not be enabled if the XCP Transport Layer for CAN or FlexRay is

enabled.

Resume Mode The option 'Resume Mode' or often also called 'Cold Start

Measurement' allows automatic data transfer (DAQ, STIM) directly after power-up of the slave without prior connection to the master calibration system. Also prior set calibration data can

be restored.

General Info The option 'General Info' enables the XCP command

GET_DAQ_PROCESSOR_INFO, which provides general

information on DAQ lists.

Resolution Info The option 'Resolution Info' enables the command

GET_DAQ_RESOLUTION_INFO, which provides information

on the resolution of DAQ lists.

Synchronous Data Stimulation (STIM)

Synchronous Data Stimulation

(STIM)

'Synchronous Data Stimulation (STIM)' is the inverse mode of

'Synchronous Data Acquisition (DAQ)'.

Data elements located in the slave's memory are transmitted in Data Transfer Objects from the master device to the slave

device.

These data elements are written to RAM upon XCP events.

Number of ODTs for STIM The maximum number of Object Descriptor Tables (ODTs) for

Synchronous Data Stimulation (STIM) has to be configured.

Event Info



Event Info	The option 'Event Info' enables the XCP command GET_DAQ_EVENT_INFO, which provides the following information about event channels:
	> Number of event channel
	> Name of event channel
	> Measurement cycle time of event channel
	 Direction of event channel: DAQ, STIM, DAQ&STIM
Events	The information about event channels, which is transferred from the slave device to the master device, can be configured. Attention: The number of the event channels has to be dense and zero-based
Event Channel	For each 'Event Channel' information can be configured. This information is transferred from the slave device to the master device.
Number	The event channel numbers have to be dense and zero-based. Therefore this number can not be entered manually. The event channel number is passed as a argument to the function <code>XcpEvent()</code> .
Name	The name of the event channel is used to identify an event within the master control system.
Cycle Time [Event Info Unit]	The 'Cycle Time' of the event channel is transferred to the master control system and used to set up the master control system.
Event Info Unit	Select the resolution of the time stamp ticks.
Direction	The following data acquisition 'Directions' of event channels are possible:
	DAQ: send cyclic data transfer packets from the slave device to the master control system
	STIM: send cyclic data transfer packets from the master control system to the slave device
	 DAQ/STIM: both directions are possible, but not simultaneously
DAQ Timestamp	
DAQ Timestamp	Timestamps can be attached to Data Transfer Object (DTO) Packets, to avoid measurement errors due to bus latency. The timestamp unit and ticks per unit have to be defined if timestamps are used.
Fixed Timestamp	If the 'Fixed Timestamp' option is selected the slave always sends Data Transfer Object (DTO) Packets in time stamped mode.
	Otherwise timestamps are dynamically and individually enabled for each DAQ list.
Size [byte]	Size of Timestamp. Possible timestamp sizes are 1Byte, 2Bytes and 4Bytes.
Timestamp Unit	Select the resolution of the time stamp ticks.

©2015, Vector Informatik GmbH Version: 1.19.00 78 / 105



Ticks per Unit

The timestamp will increment per unit by the value specified here and wrap around if an overflow occurs.

Table 7-2 Component configuration – Synchronous Data Acquisition

7.1.1.3 Standard Commands

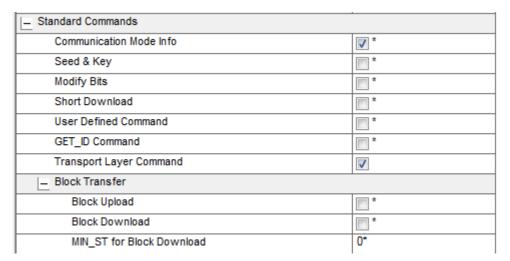


Figure 7-3 Component configuration – Standard Commands

Configuration option	Description of configuration option
Communication Mode Info	The XCP command 'GET_COMM_MODE_INFO' returns optional information on different Communication Modes supported by the slave and also the version number of the Protocol Layer implementation. If the master block mode is supported, also the maximum allowed block size and the minimum separation time are returned. The XCP Protocol Layer supports the Standard Communication model and also the Master Block Transfer Mode and the Slave Block Transfer Mode.
Seed & Key	Resources within the slave device can be protected by a 'Seed & Key' mechanism. The following resources can be protected:
	Synchronous data acquisition (DAQ)
	> Synchronous data stimulation (STIM)
	> Online calibration (CAL)
	> Programming (PGM)
Modify Bits	This command can be en- or disabled.
Short Download	This command can be en- or disabled. For bus systems with maximum data length less equal eight (e.g. CAN, LIN) this command make no sense as no data can be transported in addition to the address information.

©2015, Vector Informatik GmbH Version: 1.19.00 79 / 105



User Defined Command The 'User Defined Command' is optional and can be

implemented within the application.

However it must not be used to implement functionalities done

by other services.

The application callback function ApplXcpUserService() is

provided to perform application specific actions. Slave identification via GET ID Command.

This option enables a call-back that is called when the XCP Master sends the GET ID command and can be used to return

the requested information (e.g. Map Filename, EPK Number, ...)

The option 'Transport Layer Command' has to be enabled if **Transport Layer Command**

transport layer specific commands are used and supported by

the transport layer component.

Block Transfer

GET ID Command

Block Upload The Slave Block Transfer Mode speeds up memory upload by

> transmitting an entire block of continuous response packets. There is only a response packet before and after transmission

of the entire block.

There are no limitations allowed for the master device. The slave returns whether it supports Slave Block Transfer

Model in the response of the request CONNECT.

Block Download The Master Block Transfer Mode speeds up memory download

> by transmitting an entire block of continuous request packets. There is only one response packet after transmission of the

entire block.

The XCP Master has to meet the slave's limitations of the maximum block size and the minimum separation time. These communication parameters are responded within the response

to GET COMM MODE INFO.

MIN ST for Block Download MIN ST indicates the required minimum separation time

between the packets of a block transfer from the master device

to the slave device in units of 100 microseconds.

The value given in GENy is transmitted within the response to

the command GET COMM MODE INFO.

Table 7-3 Component configuration – Standard Commands

7.1.1.4 Checksum

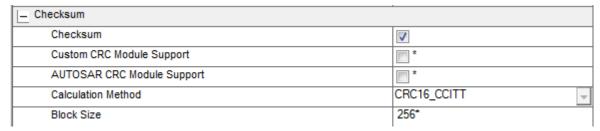


Figure 7-4 Component configuration – Checksum



Configuration option	Description of configuration option
Checksum	The XCP command BUILD_CHECKSUM returns a checksum that is calculated over the memory block defined by the Memory Transfer Address (MTA) and block size. The MTA will be post-incremented by the block size. The checksum type (size of the checksum) and the calculation method can be configured.
Custom CRC Module Support	Support a custom CRC module by calling a user call-back. Internal CRC calculation is deactivated.
AUTOSAR CRC Module Support	If 'AUTOSAR CRC Module Support' is enabled only the following checksum calculation methods are available:
	> CRC16_CCITT: CRC16 CCITT algorithm
	> CRC32: CRC32 algorithm
	The CRC32 algorithm is only supported if the AUTOSAR CRC Module is used.
Calculation Method	The following checksum calculation methods are supported:
	> ADD_11: add a BYTE into a BYTE checksum
	> ADD_12: add a BYTE into a WORD checksum
	> ADD_14: add a BYTE into a DWORD checksum
	> ADD_22: add a WORD into a WORD checksum
	> ADD_24: add a WORD into a DWORD checksum
	> ADD_44: add a DWORD into a DWORD checksum
	> CRC16_CCITT: CRC16 CCITT algorithm
	> CRC32: CRC32 algorithm
	The CRC32 algorithm is only supported if the AUTOSAR CRC Module is used.
	All checksum calculation algorithms except of the CRC algorithms ignore overflows. The block size has to be a multiple of the size of the type that is added.
Block Size	Please refer to the help of 'Checksum'.
	Table 7-4 Component configuration – Checksum

7.1.1.5 Page Switching

_ Page Switching	
Page Switching	▽
General Paging Info	▽ *
Copy Page	
Freeze Mode	

Figure 7-5 Component configuration – Page Switching



Configuration option	Description of configuration option
Page Switching	If calibration page switching (PAG) is enabled the access mode calibration data segments can be set. Calibration data segments and their pages are specified by logical numbers.
General Paging Info	If 'General Paging Info' is enabled the XCP command 'GET_PAG_PROCESSOR_INFO' returns general information on paging. The following information is transferred from the slave device to the master device:
	> The total number of segments
	> Whether the freeze mode is supported
	Specific information for segments or pages is so far not supported.
Copy Page	If more than one calibration page is defined, the slave can copy a calibration page into another. In principle any page of any segment can be copied to any page
	of any segment. However, restrictions might be possible.
Freeze Mode	If enabled the commands SET_SEGMENT_MODE and GET_SEGMENT_MODE are enabled and forwarded to the application.
	Enabling this feature also set the Freeze Mode Supported bit in General Paging Info
	Table 7-5 Component configuration – Page Switching

7.1.1.6 Programming

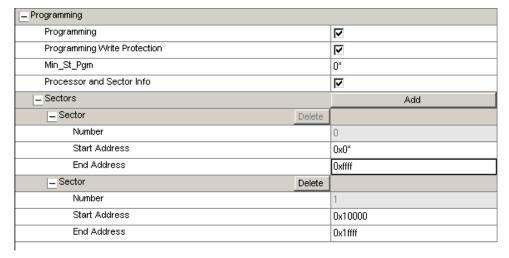


Figure 7-6 Component configuration – Programming

©2015, Vector Informatik GmbH Version: 1.19.00 82 / 105



Configuration option	Description of configuration option
Programming	The option 'Programming' enables the programming of non-volatile memory. If the internal flash of the microcontroller cannot be programmed while execution of code from the flash, the 'bootloader download' functionality has to be used instead.
Programming Write Protection	The option 'Programming Write Protection' enables the programming write protection of non-volatile memory. I.e. prior to carrying out write access to non-volatile memory an application callback function (see 6.5.10) is called and the memory address is passed as parameter. The application has to either grant or deny the memory access.
Min_St_Pgm	This parameter defines the delay the Master should insert between two consecutive PROGRAM_NEXT commands. This parameter is only relevant if Block Mode is used.
Processor and Sector Info	The option 'Processor and Sector Info' enables the commands:
	> GET_PGM_PROCESSOR_INFO Transfers the general properties for programming and the total number of available sectors from the slave device to the master device.
	SET_SECTOR_INFO Transfers information on a specific sector from the slave device to the master device.
Sectors	The information for sectors, which is transferred from the slave device to the master device, can be configured. Attention: The sector number has to be dense and zero-based!
Sector	For each 'Sector' information can be configured. This information is transferred from the slave device to the master device.
Number	The sector numbers have to be dense and zero-based. Therefore this number can not be entered manually.
Start Address	The 'Start Address' of each sector is individually configured in the slave device and transferred to the master device.
End Address	The 'End Address' of each sector is individually configured in the slave device and transferred to the master device.
	Table 7-6 Component configuration – Programming

Table 7-6 Component configuration – Programming

7.1.1.7 Generated a2l files

GENy also generates multiple a2l files which can be used in the Master tool for easier integration. The following files are generated:

- XCP.a2l (general protocol layer settings)
- XCP_daq.a2l (DAQ specific settings)
- XCP_events.a2l (DAQ event info)

©2015, Vector Informatik GmbH Version: 1.19.00 83 / 105





Example Master.a2l:

```
/begin IF_DATA XCP
/include XCP.a21
/begin DAQ
/include XCP_daq.a21
/include XCP_events.a21
...
/end DAQ
/include CanXCPAsr.a21
/end IF_DATA
...
/include bsw.a21
...
```

7.2 Configuration without Generation Tool

The configuration of the configuration switches and constants is done in the file $xcp_cfg.h.$ An example that contains the default configuration of XCP Basic is distributed together with XCP Basic. It is recommended to use this example as a template for the individual configuration.

7.2.1 Compiler Switches

Compiler switches are used to enable/disable optional functionalities in order to save code space and RAM.

In the following table you will find a complete list of all configuration switches, used to control the functional units that common of XCP Basic and XCP Professional. The default values are bold.

Configuration switches	Value		Description
XCP_xxx_DAQ	ENABLE,	DISABLE	Enables/disables synchronous data acquisition.
XCP_xxx_DAQ_PRESCALER	ENABLE,	DISABLE	Enables/disables the DAQ prescaler.
XCP_xxx_DAQ_OVERRUN_INDICATION	ENABLE,	DISABLE	Enables/disables the DAQ overrun detection.

©2015, Vector Informatik GmbH Version: 1.19.00 84 / 105



XCP_xxx_DAQ_HDR_ODT_DAQ3	ENABLE,	DISABLE	The 2 Byte DAQ/ODT XCP Packet identification is used instead of the PID. Enabled: Relative ODT number, absolute list number (BYTE) Disabled: Absolute ODT number
XCP_xxx_DAQ_PROCESSOR_INFO	ENABLE,	DISABLE	Plug & play mechanism for the data acquisition processor.
XCP_xxx_DAQ_RESOLUTION_INFO	ENABLE,	DISABLE	Plug & play mechanism for the data acquisition resolution.
XCP_xxx_DAQ_EVENT_INFO	ENABLE,	DISABLE	Plug & play mechanism for the event definitions.
XCP_xxx_DAQ_TIMESTAMP	ENABLE,	DISABLE	DAQ timestamps
XCP_xxx_DAQ_TIMESTAMP_FIXED	ENABLE,	DISABLE	Slave always sends DTO Packets in time stamped mode. Otherwise are timestamps used individual by each DAQ-list.
kXcpDaqTimestampSize	DAQ_TIMES	STAMP_BYTE, STAMP_WORD,	The size of timestamps which can either be 1Byte, 2Bytes or
	DAQ_TIMES	STAMP_DWORD	4Bytes.
XCP_xxx_SEED_KEY	_	DISABLE	
XCP_xxx_SEED_KEY XCP_xxx_CHECKSUM	ENABLE,	_	4Bytes.
	ENABLE,	DISABLE	4Bytes. Seed & key access protection
XCP_xxx_CHECKSUM	ENABLE, ENABLE, ENABLE,	DISABLE DISABLE	4Bytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation
XCP_xxx_CHECKSUM XCP_xxx_CRC16CCITT_REFLECTED	ENABLE, ENABLE, ENABLE,	DISABLE DISABLE DISABLE	4Bytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'. Usage of CRC algorithms of
XCP_xxx_CHECKSUM XCP_xxx_CRC16CCITT_REFLECTED XCP_xxx_AUTOSAR_CRC_MODULE	ENABLE, ENABLE, ENABLE, ENABLE,	DISABLE DISABLE DISABLE	4Bytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'. Usage of CRC algorithms of AUTOSAR CRC module.
XCP_xxx_CHECKSUM XCP_xxx_CRC16CCITT_REFLECTED XCP_xxx_AUTOSAR_CRC_MODULE XCP_xxx_PARAMETER_CHECK	ENABLE, ENABLE, ENABLE, ENABLE, ENABLE,	DISABLE DISABLE DISABLE DISABLE	4Bytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'. Usage of CRC algorithms of AUTOSAR CRC module. Parameter check Transmission send queue (shall be used in conjunction with synchronous data
XCP_xxx_CHECKSUM XCP_xxx_CRC16CCITT_REFLECTED XCP_xxx_AUTOSAR_CRC_MODULE XCP_xxx_PARAMETER_CHECK XCP_xxx_SEND_QUEUE	ENABLE, ENABLE, ENABLE, ENABLE, ENABLE, ENABLE,	DISABLE DISABLE DISABLE DISABLE DISABLE DISABLE	ABytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'. Usage of CRC algorithms of AUTOSAR CRC module. Parameter check Transmission send queue (shall be used in conjunction with synchronous data acquisition and stimulation). Transmission of event packets
XCP_xxx_CHECKSUM XCP_xxx_CRC16CCITT_REFLECTED XCP_xxx_AUTOSAR_CRC_MODULE XCP_xxx_PARAMETER_CHECK XCP_xxx_SEND_QUEUE XCP_xxx_SEND_EVENT	ENABLE, ENABLE, ENABLE, ENABLE, ENABLE, ENABLE,	DISABLE DISABLE DISABLE DISABLE DISABLE DISABLE	ABytes. Seed & key access protection Calculation of checksum Enable/disable reflected CRC16 CCITT checksum calculation algorithm. Also refer to 7.2.2.1 'Table of Checksum Calculation Methods'. Usage of CRC algorithms of AUTOSAR CRC module. Parameter check Transmission send queue (shall be used in conjunction with synchronous data acquisition and stimulation). Transmission of event packets (EV)

³ The XCP Protocol allows three identification field types for DTOs: 'absolute ODT number', 'relative ODT number and absolute DAQ list number', 'empty identification field' (not supported)

©2015, Vector Informatik GmbH Version: 1.19.00 85 / 105



XCP_xxx_CALIBRATION_PAGE	ENABLE,	DISABLE	Calibration data page switching
XCP_xxx_PAGE_INFO	ENABLE,	DISABLE	Calibration data page plug & play mechanism
XCP_xxx_PAGE_COPY	ENABLE,	DISABLE	Calibration data page copying
XCP_xxx_PAGE_FREEZE	ENABLE,	DISABLE	Segment freeze mode handling
XCP_xxx_DPRAM4	ENABLE,	DISABLE	Supports the usage of dual port RAM
XCP_xxx_GET_CONNECTION_STATE	ENABLE,	DISABLE	Get connection state of XCP

The following table contains an additional list of all configuration switches, used to control the functional units that are only available in XCP Professional. The default values are bold.

Configuration switches	Value	Description
XCP_xxx_BLOCK_UPLOAD	ENABLE, DISABLE	
XCP_xxx_BLOCK_DOWNLOAD	ENABLE, DISABLE	Enabled alcabide the macter block
XCP_xxx_WRITE_PROTECTION	ENABLE, DISABLE	Write access to RAM
XCP_xxx_READ_PROTECTION	ENABLE, DISABLE	Read access to RAM
XCP_xxx_READ_EEPROM	ENABLE, DISABLE	Read access to EEPROM
XCP_xxx_WRITE_EEPROM	ENABLE, DISABLE	Write access to EEPROM
XCP_xxx_PROGRAMMING_WRITE_PROTECTION	ENABLE, DISABLE	Write access to flash
XCP_xxx_PROGRAM	ENABLE, DISABLE	Flash programming
XCP_xxx_PROGRAM_INFO	ENABLE, DISABLE	Flash programming plug & play mechanism
XCP_xxx_BOOTLOADER_DOWNLOAD	ENABLE, DISABLE	r ising programming interest
XCP_xxx_STIM	ENABLE, DISABLE	Enables/disables data stimulation. (also XCP_ENABLE_DAQ has to be defined in order to use data stimulation)
XCP_xxx_DAQ_RESUME	ENABLE, DISABLE	Data acquisition resume mode.
XCP_xxx_SERV_TEXT	ENABLE, DISABLE	Transmission of service request codes

⁴ Not supported by XCP Professional

©2015, Vector Informatik GmbH Version: 1.19.00 86 / 105



XCP_xxx_SERV_TEXT_PUTCHAR		Putchar function for the transmission of service request messages
XCP_xxx_SERV_TEXT_PRINTF	ENABLE, DISABLE	
XCP_xxx_MEM_ACCESS_BY_APPL	ENABLE, DISABLE	Memory access by application
XCP_xxx_MODEL_PAGED	ENABLE, DISABLE	Support for paging / banking
XCP_xxx_SHORT_DOWNLOAD	ENABLE, DISABLE	54pport 101 5115111_55111125715
XCP_xxx_MODIFY_BITS	ENABLE, DISABLE	Support for MODIFY_BITS command
XCP_xxx_WRITE_DAQ_MULTIPLE	ENABLE, DISABLE	Write DAQ multiple command
XCP_xxx_GET_XCP_DATA_POINTER	ENABLE, DISABLE	Enable API for internal data access
XCP_xxx_CONTROL	ENABLE, DISABLE	Enable API for en- / disable XCP module
XCP_xxx_GET_SESSION_STATUS_API	ENABLE, DISABLE	Enable API to acquire the current session status
XCP_xx_CUSTOM_CRC		Enable call-back for custom CRC calculation
XCP_xxx_GET_ID_GENERIC	ENABLE, DISABLE	ECU identification

The following table contains an additional list of all configuration switches, used to control the functional units that are only available in XCP basic. The default values are bold.

Configuration switches	Value	Description
XCP_ENABLE_TESTMODE ⁵	ENABLE, DISABLE	Test mode that allows the output of debugging information.
		Not included in XCP Professional due to multiple MISRA rule violations!

7.2.2 Configuration of Constant Definitions

The configuration of constant definitions is done as described below. The default values are bold.

Constant definitions	Range	Default	Description
kXcpMaxCTO	8255	8	Maximum length of XCP command transfer objects (CTO). The length of the CTO can be variable. However it has to be configured according to the used XCP Transport Layer.

⁵ Not supported by XCP Professional

©2015, Vector Informatik GmbH Version: 1.19.00 87 / 105



kXcpMaxDTO	8255 ⁶	8	Maximum length of XCP data transfer objects (DTO). The length of the DTO can be variable. However it has to be configured according to the used XCP Transport Layer.
kXcpDaqMemSize	0 0xffff	256	Define the amount of memory used for the DAQ lists and buffers. Also refer to chapter 8 (Resource Requirements).
kXcpSendQueueMinSize	10x7F	-	The minimum queue size required for DAQ. The queue size is the unallocated memory reserved by kxcpDaqMemSize.
kXcpMaxEvent	00xFF ⁷	-	Number of available events in the slave (part of event channel plug & play mechanism) Also refer to chapter 7.2.6.
kXcpStimOdtCount	00xC0	0xC0	Maximum number of ODTs that may be used for Synchronous Data Stimulation.
kXcpChecksumMethod	-	-	Checksum calculation method. Refer to chapter 7.2.2.1 'Table of Checksum Calculation Methods' for valid values.
kXcpChecksumBlockSize	1 0xFFFF	256	Each call of XcpBackground calculates the checksum on the amount of bytes specified by kXcpChecksumBlockSize.
XCP_TRANSPORT_LAYER_V ERSION	0 0xffff	-	Version of the XCP Transport Layer that is used. (this version gets transferred to the MCS)
kXcpMaxSector	10xFF	-	Number of flash sectors Also refer to chapter 7.2.8
kXcpMaxSegment	1	1	Number of memory segments Also refer to chapter 7.2.9.
kXcpMaxPages	12	2	Number of pages Also refer to chapter 7.2.9.

7.2.2.1 **Table of Checksum Calculation Methods**

Constant	Checksum calculation method
XCP_CHECKSUM_TYPE_ADD11	Add BYTE into a BYTE checksum, ignore overflows.
XCP_CHECKSUM_TYPE_ADD12	Add BYTE into a WORD checksum, ignore overflows
XCP_CHECKSUM_TYPE_ADD14	Add BYTE into a DWORD checksum, ignore overflows
XCP_CHECKSUM_TYPE_ADD22	Add WORD into a WORD checksum, ignore overflows, block size must be modulo 2
XCP_CHECKSUM_TYPE_ADD24	Add WORD into a DWORD checksum, ignore overflows, block size must be modulo 2

⁶ Implementation specific range. The range is 8..0xFFFF according to XCP specification [I], [II]. ⁷ Implementation specific range. The range is 0..0xFFFE according to XCP specification [I], [II].

88 / 105 ©2015, Vector Informatik GmbH Version: 1.19.00



XCP_CHECKSUM_TYPE_ADD44	Add DWORD into DWORD, ignore overflows, block size must be modulo 4
XCP_CHECKSUM_TYPE_CRC16CCITT	CRC16 CCITT checksum calculation algorithm
	Both the standard and the reflected algorithm are supported. Please refer to chapter 10.8 'Reflected CRC16 CCITT Checksum Calculation Algorithm'. The CRC16 CCITT algorithm of the AUTOSAR CRC module is only supported by XCP Professional.
XCP_CHECKSUM_TYPE_CRC32	CRC32 checksum calculation algorithm
	The CRC32 algorithm is only supported in XCP Professional if the AUTOSAR CRC module is used.

7.2.3 Definition of Memory Qualifiers

The definition of the memory qualifiers has to be customized depending on the controller and memory model.

Туре	Default	Description
vuint8	unsigned char	Unsigned 8-bit identifier
vuint16	unsigned short	Unsigned 16-bit identifier
vuint32	unsigned long	Unsigned 32-bit identifier
V_MEMROM0		Addition qualifier to access data in ROM
MEMORY_ROM_NEAR	const	Fast data access in ROM
MEMORY_ROM	const	Default according to memory model in ROM
MEMORY_ROM_FAR	const	Slow addressing mode in ROM
MEMORY_NEAR		Short addressed RAM
MEMORY_NORMAL		Default addressed RAM
MEMORY_FAR		Far addressed RAM
P_MEM_ROM		Pointer to ROM
P_MEM_RAM		Pointer to RAM

7.2.4 Configuration of the CPU Type

To provide platform independent code platform, the CPU type has to be defined.

Configuration switches	Value	Description
C_CPUTYPE_xxxENDIAN	LITTLE, BIG	Definition whether the CPU is little endian (Intel format) or big endian (Motorola format).
XCP_xxx_UNALIGNED_MEM_ACCESS	ENABLE, DISABLE	9

©2015, Vector Informatik GmbH Version: 1.19.00 89 / 105



7.2.5 Configuration of Slave Device Identification

The configuration of the slave device identification and automatic session configuration is described within this chapter. Only one of the following options can be used at one time.

7.2.5.1 Identification by ASAM-MC2 Filename without Path and Extension

If the slave device identification is done by identification with an ASAM-MC2 filename without path and extension the filename length has to be defined:

```
#define kXcpStationIdLength length
```

and the station ID itself has to be defined as string:

```
V MEMROMO vuint8 MEMORY ROM kXcpStationId[] = "station ID"
```

The range of kXcpStationIdLength is 0..0xFF.

7.2.5.2 Automatic Session Configuration with MAP Filenames

The automatic session configuration by transferring MAP filenames is a Vector specific extension that works with CANape and can be enabled by the "XcpGetIdGeneric" attribute

When this feature is enabled the API as described in 3.4.2 is enabled. This API will be called, should CANape request the MAP filename, and must be implemented by the user accordingly. This feature must explicitly be enabled in CANape as well!



Example

```
#define MAP FORMAT 29
#define MAP NAME "xcpsim"
uint8 MapTest[500];
uint32 MapTestSize;
uint32 XcpAppl GetIdData( MTABYTEPTR *pData, uint8 id )
  if( id == IDT VECTOR MAPNAMES )
   MapTestSize =
sprintf((char*)MapTest, "%c%c%s.map", MAP FORMAT, 0, MAP NAME);
    /* Result: MapTest = "290xcpsim.map" */
    *pData = MapTest;
    return MapTestSize;
  }
  else
    return 0; /* Id not available */
  }
}
```

'MAP FORMAT' represents the format of the MAP file. (See table below)

'0' is a counter that is used as address extension. Please set this parameter to 0.

©2015, Vector Informatik GmbH Version: 1.19.00 90 / 105



```
Table of MAP file formats:
```

```
1 = "BorlandC 16 Bit"
                                 29 = "Microsoft standard"
2 = "M166"
                                 30 = "ELF/DWARF 16 Bit"
                                31 = "ELF/DWARF 32 Bit"
3 = "Watcom"
4 = "HiTech HC05"
                                32 = "Fujitsu Softune 3..8(.mps)"
6 = "IEEE"
                                 33 = "Microware Hawk"
                                34 = "TI C6711"
7 = "Cosmic"
8 = "SDS"
                                 35 = "Hitachi H8S"
9 = "Fujitsu Softune 1(.mp1)"
                                36 = "IAR HC12"
10 = "GNU"
                                37 = "Greenhill Multi 2000"
11 = "Keil 16x"
                                38 = "LN308 (MITSUBISHI) for M16C/80"
12 = "BorlandC 32 Bit"
                                39 = "COFF settings auto detected"
13 = "Keil 16x (static)"
                                 40 = "NEC CC78K/0 v35"
14 = "Keil 8051"
                                 41 = "Microsoft extended"
15 = "ISI"
                                 42 = "ICCAVR"
16 = "Hiware HC12"
                                 43 = "Omf96 (.m96)"
17 = "TI TMS470"
                                44 = "COFF/DWARF"
18 = "Archimedes"
                                 45 = "OMF96 Binary (Tasking C196)"
19 = "COFF"
                                 46 = "OMF166 Binary (Keil C166)"
20 = "IAR"
                                 47 = "Microware Hawk Plug&Play ASCII"
21 = "VisualDSP"
                                48 = "UBROF Binary (IAR)"
22 = "GNU 16x"
                                 49 = "Renesas M32R/M32192 ASCII"
23 = "GNU VxWorks"
                                50 = "OMF251 Binary (Keil C251)"
24 = "GNU 68k"
                                51 = "Microsoft standard VC8"
25 = "DiabData"
                                 52 = "Microsoft VC8 Release Build (MATLAB DLL)"
26 = "VisualDSP DOS"
                                53 = "Microsoft VC8 Debug Build (MATLAB DLL)"
27 = "HEW SH7055"
                                54 = "Microsoft VC8 Debug file (pdb)"
28 = "Metrowerks"
```

7.2.6 Configuration of the Event Channel Plug & Play Mechanism

The event channel plug & play mechanism is enabled with the switch

A prerequisite for the event channel plug & play mechanism is the general data acquisition plug & play mechanism. If the mechanism is enabled the following configurations items have top be defined as described below:

Constant	Range	Description
kXcpMaxEvent	00xff ⁸	Number of available events in the slave (part of event channel plug & play mechanism) If the event numbers do not start at 0 or are not continuous this is the maximum used event channel number plus 1.

⁸ Implementation specific range. The range is 0..0xFFFE according to XCP specification [I], [II].

©2015, Vector Informatik GmbH Version: 1.19.00 91 / 105



```
kXcpEventName[]
                          kXcpMaxEvent
                                          List with pointers to the event channel names that are
                                          defined as strings.
kXcpEventNameLength[] kXcpMaxEvent
                                          Length of the event channel names without the
                                          terminating char.
                          kXcpMaxEvent
kXcpEventCycle[]
                                          Cycle time of the event channels in milliseconds.
                          kXcpMaxEvent
kXcpEventDirection[]
                                          Direction of the event channels.
                                          For XCP Basic valid values are:
                                                 kXcpEventDirectionDag
```

For XCP Professional valid values are:

- kXcpEventDirectionDag
- kXcpEventDirectionStim
- kXcpEventDirectionDagStim



Example

```
#define XCP ENABLE DAQ EVENT INFO
#define kXcpMaxEvent 3
V MEMROMO static vuint8
                           MEMORY ROM kXcpEventName 0[]
"10ms";
V MEMROMO static vuint8
                          MEMORY ROM kXcpEventName 1[]
"100ms DAO";
V MEMROMO
           static vuint8 MEMORY ROM kXcpEventName 2[]
"100ms STIM";
V MEMROMO MEMORY ROM vuint8* MEMORY ROM kXcpEventName[] =
  &kXcpEventName 0[0],
  &kXcpEventName 1[0],
  &kXcpEventName 2[0]
};
V MEMROMO vuint8 MEMORY ROM kXcpEventNameLength[] =
  4,
  9,
  10
};
V MEMROMO vuint8 MEMORY ROM kXcpEventCycle[] =
```

©2015, Vector Informatik GmbH Version: 1.19.00 92 / 105



```
{
   10,
   100,
   100
};

V_MEMROMO vuint8 MEMORY_ROM kXcpEventDirection[] =
   {
    kXcpEventDirectionDaq,
    kXcpEventDirectionDaq,
    kXcpEventDirectionStim
};
```

7.2.7 Configuration of the DAQ Time Stamped Mode

Transmission of DAQ timestamps is enabled with $\texttt{XCP_ENABLE_DAQ_TIMESTAMP}$. If $\texttt{XCP_ENABLE_DAQ_TIMESTAMP_FIXED}$ is defined all DTO Packets will be transmitted in time stamped mode.

Constant	Range	Description
kXcpDaqTimestampSize	DAQ_TIMESTAMP_BYTE, DAQ_TIMESTAMP_WORD, DAQ_TIMESTAMP_DWORD	This parameter defines the size of timestamps. It can either be 1 byte, 2 bytes or 4 bytes.
XcpDaqTimestampType	vuint8, vuint16 or vuint32	Type of the timestamp depends on the parameter kXcpDaqTimestampSize.
kXcpDaqTimestampUnit	DAQ_TIMESTAMP_UNIT_1NS	Unit of the timestamp
	DAQ_TIMESTAMP_UNIT_10NS	(1 ns, 10 ns 1 s)
	DAQ_TIMESTAMP_UNIT_100NS	
	DAQ_TIMESTAMP_UNIT_1US	
	DAQ_TIMESTAMP_UNIT_10US	
	DAQ_TIMESTAMP_UNIT_100US	
	DAQ_TIMESTAMP_UNIT_1MS	
	DAQ_TIMESTAMP_UNIT_10MS	
	DAQ_TIMESTAMP_UNIT_100MS	
	DAQ_TIMESTAMP_UNIT_1S	
kXcpDaqTimestampTicksPerUnit	00xFFFF	Time stamp ticks per unit

©2015, Vector Informatik GmbH Version: 1.19.00 93 / 105



7.2.8 Configuration of the Flash Programming Plug & Play Mechanism

The flash programming plug & play mechanism is enabled with the switch

```
XCP ENABLE PROGRAM INFO
```

If the plug & play mechanism is enabled the number of sectors and the start address and end address of each sector has to be defined. The constants that have to be defined can be found in the following table.

Constant	Range	Description
kXcpMaxSector	00xFF	Number of available flash sectors in the slave
kXcpProgramSectorStart[]	kXcpMaxSector	List with the start addresses of the sectors
kXcpProgramSectorEnd[]	kXcpMaxSector	List with the end address of the sectors



Example

```
#define XCP_ENABLE_PROGRAM_INFO
#define kXcpMaxSector 2

V_MEMROMO vuint32 MEMORY_ROM kXcpProgramSectorStart [] =
{
    (vuint32) 0x000000u,
    (vuint32) 0x010000u,
};

V_MEMROMO vuint32 MEMORY_ROM kXcpProgramSectorEnd [] =
{
    (vuint32) 0x00FFFFu,
    (vuint32) 0x01FFFFu,
};
```

7.2.9 Configuration of the Page Switching Plug & Play Mechanism

The page switching plug & play mechanism is enabled with the switch

```
XCP ENABLE PAGE INFO
```

If the plug & play mechanism is enabled the following configurations items have top be defined as described below:

Constant	Range	Description
kXcpMaxSegment	0x01	Number of memory segments
kXcpMaxPages	0x010x02	Number of pages

©2015, Vector Informatik GmbH Version: 1.19.00 94 / 105

Technical Reference XCP Protocol Layer





8 Resource Requirements

The resource requirements of the XCP Protocol Layer mainly depend on the micro controller, compiler options and configuration. Within this chapter only the configuration specific resource requirements are taken in consideration.

©2015, Vector Informatik GmbH Version: 1.19.00 96 / 105



9 Limitations

9.1 General Limitations

The functional limitations of the XCP Professional Version are listed below:

- Bit stimulation is not supported
- > Only dynamic DAQ list allocation supported
- > The interleaved communication model is not supported
- Only default programming data format is supported
- > GET_SECTOR_INFO does not return sequence numbers
- Program Verify and Program Format are not supported
- > DAQ and events numbers are limited to byte size
- > DAQ does not support address extension
- DAQ-list and event channel prioritization is not supported
- Event channels contain one DAQ-list
- > ODT optimization not supported
- > Assignments of CAN identifiers to DAQ lists is not supported
- > MAX DTO is limited to 0xFF
- > The resume bits in DAQ lists are not set
- > STORE DAQ, CLEAR DAQ and STORE CAL do not send an event message
- > Entering resume mode does not send an event message
- Overload indication by an event is not supported
- SERV RESET is not supported
- > The following checksum types are not supported
 - > XCP CRC 16
 - > XCP_CRC_32
 - > XCP USER DEFINED
- Maximum checksum block size is 0xFFFF
- Page Info and Segment Info is not supported
- Only one segment and two pages are supported
- > The seed size and key size must be equal or less MAX CTO-2

Planned:



- User defined checksum calculations
- > CRC16 and CRC32

9.2 Limitations of XCP Basic

The XCP Protocol Layer is available in two variants:

- XCP Professional Version
- XCP Basic Version

The XCP Professional Version is the 'full version', which is also supported by the Vector generation tool GENy. The XCP Basic Version is a subset of the 'full version', which is distributed freely via the internet and which has to be configured manually.

The XCP features that are available by the XCP Professional version but not by the XCP Basic version are listed below:

Version: 1.19.00

- > Stimulation (Bypassing)
- Bit stimulation⁹
- > Atomic bit manipulation
- > SHORT_DOWNLOAD
- FLASH and EEPROM Programming
- > The block transfer communication mode
- > Resume mode
- > The transmission of service request packets
- > Memory write protection
- > Memory read protection
- > Programming write protection
- > Support of AUTOSAR CRC module
- > Access to internal data pointer
- XCP deactivation
- > Open Command Interface
- > Transport Layer Commands
- > Configurable timestamp size
- Disable Calibration

-

⁹ Not yet supported by XCP Professional



9.3 Limitations Regarding Platforms, Compilers and Memory Models

Even though XCP Professional and XCP Basic are Protocol Layers and therefore higher software layers, they manipulate memory addresses and directly access the memory with these addresses.

This might cause issues for some combinations of platforms, compilers and memory models. The following list provides all known restrictions on platforms, compilers and linkers:

CANoeOSEK Emulation is not supported



10 FAQ

10.1 Connection to MCS Not Possible



FAQ

After integration of XCP on CAN or integration of XCP Basic with a proprietary CAN-Driver does the MCS (e.g. CANape) not connect with the XCP slave, even though the CAN communication is working properly.

The XCP protocol allows transmitting XCP packets with a variable data length. However many OEMs require that all CAN messages sent within their automotive networks have to have a static DLC. Therefore messages sent by the MCS with a DLC of less than 8 (e.g. CONNECT has a DLC of 2) might be discarded by the ECU's CAN-Driver and the connection is not possible.

Check whether your MCS supports transmission with static DLC. This is supported by CANape since Version 5.5.

10.2 Invalid Time Stamp Unit



FAQ

If using data acquisition CANape reports an error due to an invalid timestamp

If you are using CANape 5.5.x or an earlier version please define

#define XCP_ENABLE_CANAPE_5_5_X_SUPPORT

in your user config file.

10.3 Support of small and medium memory model



FAQ

How is the XCP Protocol Layer configured in order to access the whole memory in the small and medium memory model?

By default The XCP Protocol Layer accesses the memory with a default pointer. I.e. in small and medium memory model a near pointer is used. If the far memory (e.g. code or read-only sections) needs to be accessed via the XCP Protocol the memory qualifiers have to be defined as far pointers by the user within the user config file.

Two memory qualifiers are used to access the memory:



#define MTABYTEPTR vuint8 XCP MEMORY FAR *

This pointer is used to access memory for standard read and write operations

#define DAQBYTEPTR vuint8 XCP MEMORY FAR *

This pointer is used to access memory for the Synchronous Data Acquisition

Depending on the use case, microcontroller, memory model and compiler either XCP_MEMORY_FAR or both memory qualifiers (DAQBYTEPTR and MTABYTEPTR) have to be defined by the user.

10.4 Small memory model on ST10 / XC16X / C16X with Tasking Compiler



FAQ

How has XCP Protocol Layer to be configured in order to support small memory model on the following microcontrollers: ST10, XC16X, C16X with Tasking Compiler?

If the small memory model is used and the two least significant bits of the DPP register where the data of XCP is located is not equal the default DPP register value (i.e. the two least significant bits of DPPx are unequal x, x=0...3) the configuration of the XCP Protocol Layer has to be adapted.

There are two options available. Both have to be configured within the user config file:

Far access to the internal data of XCP:

#define FAR far

Disable type casts from pointers to integers:

#define XCP ENABLE NO P2INT CAST

10.5 Data Page Banking on Star12X / Metrowerks



FAQ

How has the XCP Protocol Layer to be configured in order to support data page banking on the Star12X with Metrowerks compiler?

In order to use data page banking the following definition has to be added to the user config file:

```
#define XCP MEMORY MODEL PAGED
```

If this option is enabled far pointers are used for memory access, and address conversions are carried out in the in the application callback template <code>_xcp_appl.c</code>. These address conversions have to adapted to the used derivative.

©2015, Vector Informatik GmbH Version: 1.19.00 101 / 105





Please note

The data page banking support is implemented in the template <code>_xcp_appl.c</code> for the MC9S12XDP512. For other Star12X derivatives the template has to be adapted.

10.6 Memory model banked on Star12X / Cosmic



FAQ

How has the XCP Protocol Layer to be configured in order to support the access to far pages in the banked memory model on the Star12X with Cosmic compiler?

In order to access far pages or support data page banking the following definitions have to be added to the user config file:

```
#define XCP_MEMORY_MODEL_PAGED
#define XCP ENABLE MEM ACCESS BY APPL
```

If this option is enabled far pointers are used for memory access, and address conversions are carried out in the in the application callback template $_xcp_appl.c$. These address conversions have to adapted to the used derivative.



Please note

The data page banking support is implemented in the template $_xcp_appl.c$ for the MC9S12XDP512. For other Star12X derivatives the template has to be adapted.

10.7 Can XCP memory be placed in far RAM?



FAQ

How can the internal XCP memory be placed in far RAM?

The current implementation does not allow the XCP memory to be easily placed in far RAM. What you can do is to compile the whole component in the respective memory model to allow far memory access.

10.8 Reflected CRC16 CCITT Checksum Calculation Algorithm



FAQ

How is the reflected CRC16 CCITT checksum calculation algorithm configured?

©2015, Vector Informatik GmbH Version: 1.19.00 102 / 105



The XCP Protocol Layer supports both the standard CRC16 CCITT algorithm and the reflected CRC16 CCITT algorithm. In order to use the reflected algorithm the following definition has to be added to the user config file:

#define XCP ENABLE CRC16CCITT REFLECTED



Please note

Up to CANape version 5.6.30.3 (SP3) the standard CRC16 CCITT algorithm is not supported, but the reflected one.

However a user checksum calculation DLL can be used in order to use the standard algorithm with former versions of CANape.

©2015, Vector Informatik GmbH Version: 1.19.00 103 / 105



11 Bibliography

This manual refers to the following documents:

- [I] XCP -Part 1 Overview Version 1.0 of 2003-04-08
- [II] XCP -Part 2- Protocol Layer Specification Version 1.0 of 2003-04-08
- [III] XCP -Part 5- Example Communication Sequences Version 1.0 of 2003-04-08
- [IV] Technical Reference XCP on CAN Transport Layer Version 1.4 of 2006-04-24
- [V] Technical Reference XCP on FlexRay Transport Layer Version 1.0 of 2005-12-21
- [VI] Technical Reference XCP on LIN Transport Layer Version 1.0 of 2006-05-30
- [VII] AUTOSAR Specification of CRC Routines Release 2.0.0 of 2006-04-28



12 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector-informatik.com