

CANdesc

Technical Reference

Version 3.09.00

Authors	Oliver Garnatz, Mishel Shishmanyan, Stefan Hübner, Matthias Heil, Katrin Thurow, Patrick Rieder, Amr Elazhary
Status	Released

©2015, Vector Informatik GmbH Version: 3.09.00 1 / 158



1 History

Author	Date	Version	Remarks
Oliver Garnatz	2003-11-12	2.00.00	Splitting into separate documents and general revision
Oliver Garnatz	2004-01-13	2.00.01	Added chapter 'Application interface flow' Updated format template
Mishel Shishmanyan	2004-03-09	2.01.00	New application callback convention (from CANdesc 2.09.00)
Mishel Shishmanyan	2004-03-29	2.02.00	New APIs: DescGetActivityState (from CANdesc 2.10.00) DescSchedulerTask() (from CANdesc 2.09.00)
Mishel Shishmanyan	2004-04-26	2.03.00	Added more information and limitations about the ring-buffer mechanism (12.6.9 "Ring Buffer Mechanism") New feature: Support for generic user service (from CANdesc 2.11.00) Force CANdesc to send RCR-RP response (from CANdesc 2.11.00)
Stefan Hübner	2004-07-16	2.03.01	Editorial revision
Oliver Garnatz	2004-08-12	2.04.00	Added chapter 4.2 ReadDataByldentifier (SID \$22) within the Single- and the Multiple PID mode is described
Oliver Garnatz	2004-10-08	2.05.00	ESCAN0000982: Description of MainHandler structure is not readable ROE transmission unit is described in detail
Stefan Hübner Oliver Garnatz	2004-10-15	2.06.00	Some additional information are provided
Peter Herrmann Klaus Emmert	2005-06-22	2.07.00	Added: Service \$2C description. Added: Warning Text added
Mishel Shishmanyan Oliver Garnatz	2005-08.03	2.08.00	API added: DescStateTask, DescTimerTask, DescMayCallStateTaskAgain. ApplDescFatalError API modified: DescTask, ApplDescCheckSessionTransition, DescGetActivityState, DescGetStateSession. API removed:



			DescSchedulerTask Modified description for ReadDataByldentifier with long data and negative response in main-handler.
Oliver Garnatz	2006-03-02	2.09.00	Added: prevent the ECU going to sleep while diagnostic is active
Mishel Shishmanyan	2006-03-24	2.10.00	Added: document overview
Mishel Shishmanyan	2006-04-27	2.11.00	Modified: -12.6.13 DynamicallyDefineDataIdentifier (\$2C) (UDS) functions -12.6.13.1 DescMayCallStateTaskAgain()
Mishel Shishmanyan	2007-02-22	2.12.00	Added: - 12.6.9.3 "DescRingBufferCancel()"
Matthias Heil	2008-01-03	2.13.00	Added: Caution concerning user main handler on protocol level I
Matthias Heil	2008-02-29	2.14.00	Added: Handling of read/write memory by address: - 9.5 "Read/Write Memory by Address" - 12.6.8.2 "DescStartMemByAddrRepeatedCall()" - 12.6.14 "Memory Access Callbacks"
Mishel Shishmanyan	2008-06-06	2.15.00	Removed: Chapter "ResponseOnEvent Transmission Unit" Added: - 12.6.13.3 "Non-volatile memory support"
Mishel Shishmanyan	2008-11-09	2.16.00	Modified: - 12.6.9 and 12.6.9.1: Added limitation for UDS and SPRMIB with the ring buffer usage 13.6work with the ring-buffer mechanism Added: - 12.6.15 Flash Boot Loader Support - 13.8send a positive response without request after FBL flash job
Mishel Shishmanyan	2009-05-18	2.17.00	Modified: 12.6.6.1ApplDescCheckSessionTransition() Added: 12.6.6.3DescIsSuppressPosResBitSet ()
Mishel Shishmanyan	2009-08-11	2.18.00	Modified: Minor editorial changes 5.2 Configure Handlers using CANdela attributes – added new data object attributes



			Added: 13.9enforce CANdesc to use ANSI C instead of hardware optimized bit type 5.1 Configure DBC attributes for diagnostics
Mishel Shishmanyan	2009-09-17	3.00.00	Added: 6 CANdesc Configuration in GENy 8 Multi Identity 12.6.2 Multi Variant Configuration Functions
Mishel Shishmanyan	2010-01-26	3.01.00	Added: 7 CANdescBasic Configuration in GENy
Mishel Shishmanyan	2010-12-21	3.02.00	Modified: 12.6.14.1 ApplDescReadMemoryByAddress() 12.6.14.2 ApplDescWriteMemoryByAddress() 12.6.9.2 DescRingBufferWrite()
Katrin Thurow	2011-08-25	3.03.00	Added: 8.1 Single Identity Mode 8.3 Multi Identity Mode 13.10configure Extended Addressing 13.11use Multiple Addressing 12.6.6.7 DescGetSessionIdOfSessionState Modified: 8 Multi Identity Support 13.8send a positive response without request after FBL flash job
Katrin Thurow	2011-09-19	3.04.00	Added: 13.12use "Dynamic Normal Addressing Multi TP" with multiple tester Modified: 13.11use Multiple Addressing
Katrin Thurow	2011-11-27	3.05.00	Added: 12.6.17 "Spontaneous Response" transmission Modified: 6.2.1 Global CANdesc Settings
Patrick Rieder	2013-01-23	3.06.00	Added: 10 Generic Processing Notifications 12.6.18 Generic Processing Notifications Modified: 6.2.1 Global CANdesc Settings 12.6.4 Service callback functions 12.6.9 Ring Buffer Mechanism Small fixes



Patrick Rieder	2013-05-27	3.07.00	Added: 11 Busy Repeat Responder Support Modified:
			13.12use "Dynamic Normal Addressing Multi TP" with multiple tester
Patrick Rieder	2014-07-19	3.08.00	 Added: 5.2 Configure the default session state in the CDD Modified: 12.6.5 Unknown (User) Service Handling Consistent naming of the Unknown Service Handling 12.6.17.1 DescSendApplSpontaneousResponse () Correct API name Added missing pre-condition Correct spelling and formatting issues
Patrick Rieder	2014-11-27	3.08.01	 Added: 5.3 Configuration of Mode 0x06 in the CDD file 9.1 ReadDTCInformation (SID \$19) Modified: Table 6-1 Setting "Faultmemory Iteration Limiter" is dependent on OEM
Amr Elazhary	2015-07-31	3.09.00	 Added: 9.1 Clear Diagnostic Information (SID \$14) (UDS2012) Modified: 12.6.6.1 ApplDescCheckSessionTransition() Added new signature, full message context, to the callback.



Contents

1	History						
2	Intro	duction			12		
3	Docu	ments thi	s one refer	s to	13		
4	Archi	itecture O	verview		14		
	4.1	CANde	sc – Internal	processing	14		
		4.1.1	Diagnosti	c protocol	14		
		4.1.2	How does	s this flow actually work?	15		
	4.2	Applica	tion interface	e flow	17		
		4.2.1	Session-	and CommunicationControl	17		
5	Adva	nced Con	figuration		19		
	5.1	Configu	ire DBC attri	butes for diagnostics	19		
	5.2	Configu	ire the defau	Ilt session state in the CDD	19		
	5.3	Configu	ration of Mo	de 0x06 in the CDD file	20		
6	CAN	desc Conf	iguration ir	n GENy	21		
	6.1	6.1 Step One – Importing an ECU Diagnostic Description					
	6.2	Step Tv	vo – ECU Di	agnostic Configuration in GENy	22		
		6.2.1	Global C	ANdesc Settings	23		
			6.2.1.1	Generic Processing Notifications (UDS2012)	28		
		6.2.2	Service S	Specific Settings	29		
			6.2.2.1	Generic Service Settings	29		
			6.2.2.2	Predefined (implemented) Services in CANdesc	30		
			6.2.2.3	Signal Access Enabled Services	32		
		6.2.3	Timing Se	ettings	35		
		6.2.4	Security A	Access Settings (UDS2006)	36		
		6.2.5	Security A	Access Settings (UDS2012)	38		
		6.2.6	Schedule	r Settings	39		
7	CAN	descBasic	: Configura	tion in GENy	42		
	7.1	Global	CANdescBa	sic Settings	42		
	7.2	Service	Specific Se	ttings	42		
	7.3	Timing	Settings		43		
	7.4	Diagnos	stic State Co	onfiguration	43		
8	Multi	Identity S	Support		47		
	8.1	Single I	dentity Mode	e	47		

based on template version 5.1.0



			8.1.1.1	Configurat	ion in CANdela	47
			8.1.1.2	Configurat	ion in GENy	47
	8.2	VSG M	ode			47
		8.2.1	Impleme	ntation Limita	tions	48
		8.2.2	Configura	ation in CANd	ela	49
		8.2.3	Configura	ation in CANd	ela	50
		8.2.4	Configura	ation in GENy	[,]	51
	8.3	Multi Id	entity Mode			51
9	Diagn	ostic Ser	vice Impler	mentation Sp	pecifics	52
	9.1	Clear D	iagnostic In	formation (SII	D \$14) (UDS2012)	52
		9.1.1	Tasks pe	rformed by C	ANdesc	52
		9.1.2	Task to b	e performed l	by the Application	52
	9.2	ReadD	TCInformation	on (SID \$19).		52
		9.2.1	Limitation	ns of the serv	ice	52
	9.3	ReadDa	ataByldentif	ier (SID \$22).		52
		9.3.1	Limitation	ns of the serv	ice	54
		9.3.2	Single PI	D mode		55
			9.3.2.1		positive response using linear buffer	55
			9.3.2.2		positive response using ring buffer acces	
			9.3.2.3	•	negative response	
		9.3.3	Multiple F	•		
			9.3.3.1		buffer configuration	
				9.3.3.1.1	Sending a positive response	
				9.3.3.1.2	Sending a negative response	
			9.3.3.2	Ring buffe	r active configuration	
				_	Sending a positive response	
				9.3.3.2.2	Sending a negative response	
				9.3.3.2.3	PostHandler execution rule	
	9.4	Dynami	callyDefinel	Dataldentifier	(SID \$2C) (UDS)	63
		9.4.1	Feature s	set		64
		9.4.2	API Fund	tions		64
		9.4.3	Sequenc	e Charts		65
	9.5	Read/W	/rite Memor	y by Address	(SID \$23/\$3D) (UDS)	67
		9.5.1		-	ANdesc	
		9.5.2	Task to b	e performed	by the Application	68
		9.5.3			S	
10	Gener	ic Proces	ssing Notifi	ications		69
	10.1	Usina d	vnamically o	defined data I	dentifier	70



11	Busy	Repeat Re	esponder S	support (UDS2006 and UDS2012)	71
	11.1	Configu	ration in GE	Ny	72
12	CANd	esc API			73
	12.1	API Cate	egories		73
		12.1.1	_	ntext	
		12.1.2	Multiple C	Context (only CANdesc)	73
	12.2	Data Ty	pes		73
	12.3	Global V	/ariables		73
	12.4	Constan	nts		73
		12.4.1	Compone	nt Version	73
	12.5	Macros.			74
		12.5.1	Data exch	nange	74
			12.5.1.1	Splitting 16 bit data	74
			12.5.1.2	Splitting 32 bit data	74
			12.5.1.3	Assembling 16 bit data	74
			12.5.1.4	Assembling 32 bit data	75
	12.6	Function	าร		75
		12.6.1	Administra	ative Functions	75
			12.6.1.1	DescInitPowerOn()	75
			12.6.1.2	DescInit()	76
			12.6.1.3	DescTask()	76
			12.6.1.4	DescStateTask()	77
			12.6.1.5	DescTimerTask()	78
			12.6.1.6	DescGetActivityState()	79
		12.6.2	Multi Varia	ant Configuration Functions	80
			12.6.2.1	DescInitConfigVariant()	80
			12.6.2.2	DescGetConfigVariant()	81
		12.6.3	Service F	unctions	82
			12.6.3.1	DescSetNegResponse()	82
			12.6.3.2	DescProcessingDone()	83
		12.6.4	Service ca	allback functions	84
			12.6.4.1	Service PreHandler	86
			12.6.4.2	Service MainHandler	87
			12.6.4.3	Service PostHandler	89
		12.6.5	Unknown	(User) Service Handling	89
			12.6.5.1	How it works	90
			12.6.5.2	ApplDescCheckUserService()	90
			12.6.5.3	DescGetServiceId()	91
			12.6.5.4	Unknown (User) Service MainHandler	92
			12.6.5.5	Unknown (User) Service PostHandler	93



12.6.6	Session H	andling	93
	12.6.6.1	ApplDescCheckSessionTransition()	93
	12.6.6.2	DescSessionTransitionChecked()	95
	12.6.6.3	DescIsSuppressPosResBitSet ()	95
	12.6.6.4	ApplDescOnTransitionSession()	96
	12.6.6.5	DescSetStateSession()	97
	12.6.6.6	DescGetStateSession()	98
	12.6.6.7	DescGetSessionIdOfSessionState	99
12.6.7	Communic	cationControl Handling	99
	12.6.7.1	ApplDescCheckCommCtrl()	100
	12.6.7.2	DescCommCtrlChecked()	100
12.6.8	Periodic ca	all of 'Service MainHandler'	101
	12.6.8.1	DescStartRepeatedServiceCall()	101
	12.6.8.2	DescStartMemByAddrRepeatedCall()	103
12.6.9	Ring Buffe	r Mechanism	103
	12.6.9.1	DescRingBufferStart()	104
	12.6.9.2	DescRingBufferWrite()	105
	12.6.9.3	DescRingBufferCancel()	106
	12.6.9.4	DescRingBufferGetFreeSpace()	107
	12.6.9.5	DescRingBufferGetProgress()	108
12.6.10	Signal Inte	erface of CANdesc	108
	12.6.10.1	ApplDesc <signal-handler>()</signal-handler>	109
	12.6.10.2	Configuration of direct signal access	109
12.6.11	State Hand	dling (CANdesc only)	110
	12.6.11.1	DescGetState <stategroup>()</stategroup>	110
	12.6.11.2	DescSetState <stategroup>()</stategroup>	111
	12.6.11.3	ApplDescOnTransition«StateGroup»()	112
12.6.12	Force "Restransmission	sponse Correctly Received - Response Pending" on	113
	12.6.12.1	DescForceRcrRpResponse()	113
	12.6.12.2	ApplDescRcrRpConfirmation()	114
12.6.13	Dynamical	llyDefineDataIdentifier (\$2C) (UDS) functions	114
	12.6.13.1	DescMayCallStateTaskAgain()	115
	12.6.13.2	ApplDescCheckDynDidMemoryArea()	116
	12.6.13.3	Non-volatile memory support	117
		12.6.13.3.1 DescDynDefineDidPowerUp()	119
		12.6.13.3.2 DescDynIdMemContentRestored ()	120
		12.6.13.3.3 DescDynDefineDidPowerDown ()	121
		12.6.13.3.4 ApplDescStoreDynIdMemContent ()	122
		12.6.13.3.5 ApplDescRestoreDynIdMemContent ()	123
12 6 14	Memory A	ccess Callbacks	123



			12.6.14.1	ApplDescReadMemoryByAddress()	123
			12.6.14.2	ApplDescWriteMemoryByAddress()	125
		12.6.15	Flash Boot	Loader Support	125
			12.6.15.1	DescSendPosRespFBL()	126
			12.6.15.2	ApplDescInitPosResFblBusInfo()	127
		12.6.16	Debug Inte	erface / Assertion	127
			12.6.16.1	ApplDescFatalError()	127
		12.6.17	"Spontane	ous Response" transmission	131
			12.6.17.1	DescSendApplSpontaneousResponse ()	131
			12.6.17.2	ApplDescSpontaneousResponseConfirmation()	133
		12.6.18	Generic Pr	ocessing Notifications	134
			12.6.18.1	ApplDescManufacturerIndication	134
			12.6.18.2	ApplDescManufacturerConfirmation	135
			12.6.18.3	ApplDescSupplierIndication	136
			12.6.18.4	ApplDescSupplierConfirmation	137
13					
	13.1	-	-	col service MainHandler	
	13.2	•		e MainHandler	
	13.3	•	•	l Handler	
	13.4			et Handler	
	13.5			transition function	
	13.6		•	buffer mechanism	
		13.6.1	•	hronous write	
		13.6.2	,	ronous write	
	13.7			oing to sleep while diagnostic is active	
	13.8		=	sponse without request after FBL flash job	
	13.9			to use ANSI C instead of hardware optimized bit typ	
	13.10	•		d Addressing	
	13.11		=	ssing	
	13.12	use "D	ynamic Nori	mal Addressing Multi TP" with multiple tester	153
14	Relate	d docume	ents		156
15	Glossa	ary			157
16					
	Joind	~ t			150



Illustrations

Figure 3-1: Manuals and References for CANdesc	
Figure 4-1: General request flow	
Figure 4-2: DESC run diagram	
Figure 4-3: Request message mapping	. 16
Figure 4-4: Request processing stages	
Figure 5-1 Default session state configuration in the CDD	. 19
Figure 6-1 CANdesc GENy startup screen	. 21
Figure 6-2 Example of GENy global CANdesc settings	. 23
Figure 6-3 Activated feature "Generic Processing Notifications"	. 28
Figure 6-4 GENy diagnostic service overview	. 29
Figure 6-5 GENy generic sub-service setup	. 30
Figure 6-6 GENy predefined sub-service setup	. 31
Figure 6-7 GENy signal API enabled sub-service setup	. 32
Figure 6-8 GENy signal view of a sub-service	. 33
Figure 6-9 GENy signal handler types	. 33
Figure 6-10 GENy direct access signal handler settings	. 34
Figure 6-11 GENy CANdesc timing parameters	. 36
Figure 6-12 GENy CANdesc security access parameters	. 37
Figure 6-13 Security settings in GENy	
Figure 6-14 GENy CANdesc scheduler parameters	. 40
Figure 7-1 CANdescBasic add a user session	. 43
Figure 7-2 CANdescBasic change user session name, id or completely delete user	
session	
Figure 7-3 CANdescBasic session configuration at service overview	. 45
Figure 7-4 CANdescBasic session configuration at service Id level	. 45
Figure 7-5 CANdescBasic session configuration at sub-service level	. 46
Figure 8-1 CANdesc multi identity mode	
Figure 8-2 Defining VSGs in CANdelaStudio	
Figure 8-3 Setting a VSG for service in CANdelaStudio	
Figure 9-1: Linearly written positive response on single PID request	
Figure 9-2: "On the fly" response data writing.	
Figure 9-3: Negative response on single PID	. 57
Figure 9-4: Linearly written positive response on multiple PIDs (global ring buffer option is	
off)	
Figure 9-5: Negative response on multiple PIDs (global ring buffer option is off)	
Figure 9-6: Linearly written response data on multiple PIDs (global ring buffer option is on)	
Figure 9-7: Negative response on multiple PIDs (global ring buffer option is on)	
Figure 9-8: Post-Handler execution sequence.	
Figure 9-9: Defining a DDID.	
Figure 9-10: Reading a DDID	
Figure 10-1 Call order of Manufacturer- and Supplier-Notficiation	
Figure 10-2 Read out a DDID with generic processing notifications	
Figure 11-1 Illustration of the feature BusyRepeatResponder	
Figure 11-2 Example of the "Number of Rx(Tx) Channels" settings	
Figure 12-1 DynDID definition restore and tester interaction	
Figure 12-2 Store DynDID definitions	
Figure 13-1 GENy TP configuration	
Figure 13-2 GENy TP callbacks	
Figure 13-3 GENy TP callbacks (physical addressing)	153
Figure 13-4 GENy TP callbacks (functional addressing)	154



2 Introduction

This document has not the job to describe the diagnostic itself. The focus of this document is the technical aspects of the CANdesc component.



Please note

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



3 Documents this one refers to...

- > User Manuals CANdesc and CANdescBasic (one for both)
- > Docu OEM

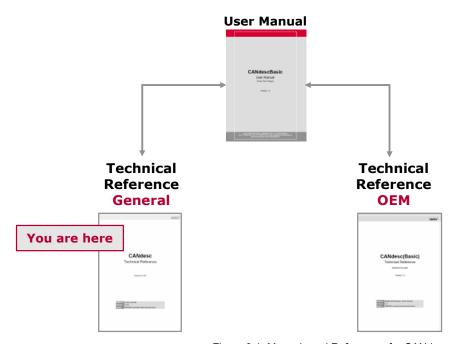


Figure 3-1: Manuals and References for CANdesc

All common topics with CANdesc and CANdescBasic are described within this technical reference very detailed.

Read all about OEM-specific differences in the TechnicalReference_OEM.

For faster integration, please refer to the product's corresponding user manual CANdesc or CANdescBasic.



4 Architecture Overview

This chapter should describe the internal structure and behavior of the CANdesc component.

4.1 CANdesc – Internal processing

4.1.1 Diagnostic protocol

The communication described in the diagnostic protocol consists of a ping-pong communication between a tester (client) and an ECU (server). The tester requests a service in the ECU by transmitting a request to him. The ECU should response with a positive response, if the result of this service is valid or the action is prepared to be done. Is the result negative or the action could not be executed, the ECU should respond negative.

The validity checks have typically the same pattern for all services (as shown in Figure 4-1: General request flow). These components which are included in this flow, build up the main base of the CANdesc component.

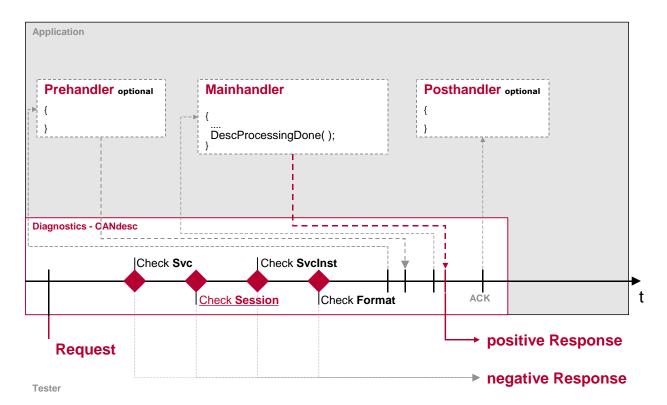


Figure 4-1: General request flow



4.1.2 How does this flow actually work?

The picture below shows a simply structured description of the module functionality.

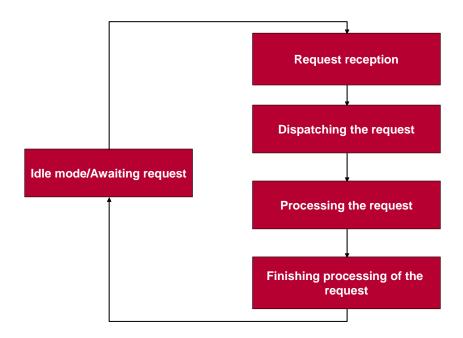


Figure 4-2: DESC run diagram

Let's assume that the component is currently in the "Awaiting request" state. In this state it waits for the next diagnostic request and if it is needed – it provides also timing monitoring.

Once a diagnostic request transmission was initiated from the transport layer, the component enters in the state "Request reception". If the reception is finished, further physical requests will be blocked until the response is sent. Depending on the used OEM a functional request in the ISO 14230 standard will be handled parallel to physical request. The ISO 14229-1 standard is more restricted to the parallel handling. Except the Tester Present Service no other service could be handled parallel.

After the reception of the request is completed the request processing will be prepared. The component is in the "Dispatching request" state. The processing of the request is done at a task level within the next call of the DescTask() function.

First the SID is checked whether supported or not. If not a negative response 'ServiceNotSupported' (NRC \$11) will be sent.

Next step is to check if the supported SID is permitted in the current Session (Diagnostic Mode). If not, the negative response 'ServiceNotSupportedInTheCurrentSession' (NRC \$7F) is sent automatically by the CANdesc component.

¹ Not all services could be handled parallel.



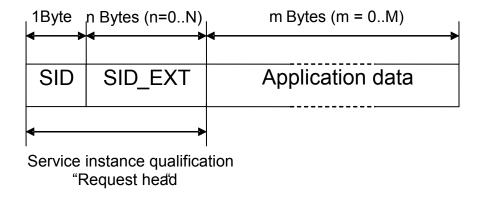


Figure 4-3: Request message mapping

After that the CANdesc component validates, if the sub-service (service instance) is supported or not. This is implemented with a powerful binary search. If the service instance is not supported, the request will be rejected with the corresponding error code 'SubFunctionNotSupported' (NRC \$11, for service which have sub-functions) or 'InvalidFormat' (NRC \$13, for service with data identifiers).

For each service instance which is supported by the current configuration, the CANdesc component knows the exact length of most requests. (Some requests use variable data length elements thus a fixed length doesn't exist.) If the length is known and it does not match, the dispatcher will reject this request (dependent to the manufacturer specification). If the complete request length is not known, the application has to do this job.

If the service instance is found, the state checks (e.g. 'Security Level') will be performed. If all of them are passed then the component enters the state "Processing the request" in the diagram above. This state consists of several parts that are represented in more detailed structure shown below. The dotted lines reveal the optional parts for the implementation. For example – the Pre-, Post- and SignalHandlers are optional and might not be implemented.



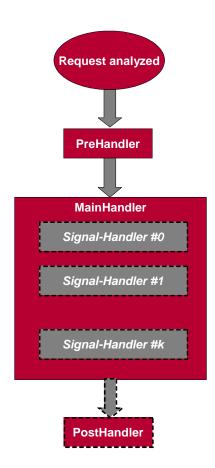


Figure 4-4: Request processing stages

After the response is composed CANdesc must be informed about, to start the transmission of the final response. CANdesc is doing the handshake with the Tester (automatic transmission of RCR-RP) while the state "Processing the request" is active.


Within the end of the transmission the state "Finishing processing of the request" is entered and the PostHandler (if configured) is called. In this PostHandler the application has to do the closing (e.g. updating a state machine, prepare the ECU for a reset ...). The session state for example (which is managed by CANdesc) is also updated in a PostHandler.

4.2 Application interface flow

4.2.1 Session- and CommunicationControl

The services SessionControl and CommunicationControl are typically handled by CANdesc. But the application still has the possibility to reject these service requests. You can find a detailed description in chapter 12.6.6 Session Handling and in chapter 12.6.7 CommunicationControl Handling also.



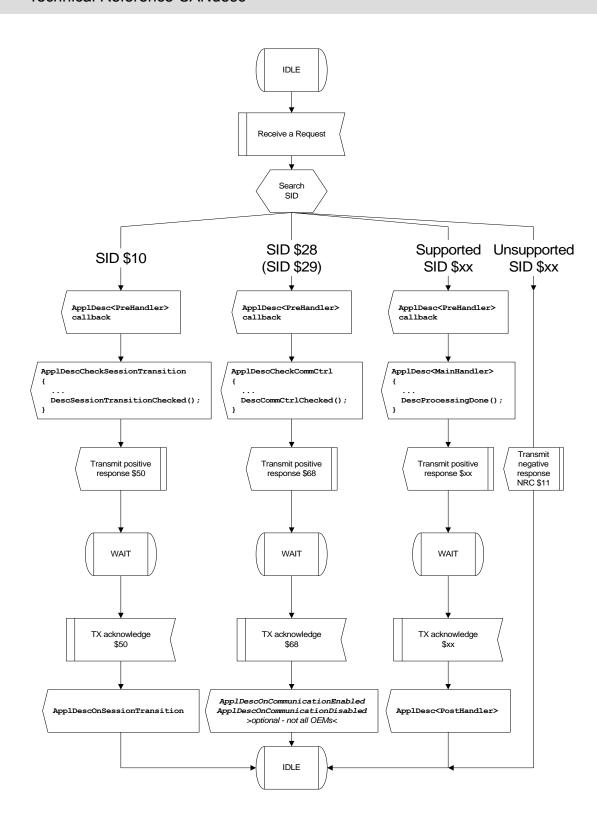

©2015, Vector Informatik GmbH Version: 3.09.00 18 / 158



5 Advanced Configuration

5.1 Configure DBC attributes for diagnostics

If the diagnostic messages shall be defined in the communication data-base file (DBC), and not received via CANdriver ranges (e.g. in case of normal fixed or extended addressing), the following attributes in the DBC file must exist and shall be set as shown below.

Attribute Name	Object Type	Value Type	Values the default value is written in bold	Description
DiagRequest	Message	Enum	No Yes	Specifies (Yes) that the message is a diagnostic physical USDT request message.
DiagResponse	Message	Enum	No Yes	Specifies (Yes) that the message is a diagnostic USDT response message.
DiagState	Message	Enum	No Yes	Specifies (Yes) that the message is a diagnostic functional USDT request message.
DiagUudtResponse	Message	Enum	false true	Specifies (true) that the message is a diagnostic UUDT response message.

Table 5-1: DBC file diagnostic message attributes

5.2 Configure the default session state in the CDD

The configuration of the default session state in the CDD must comply with the following conditions:

The **qualifier** must be set to "Default" (the name can be different)

It must be the first item in the list of states

An example configuration is shown in Figure 5-1.

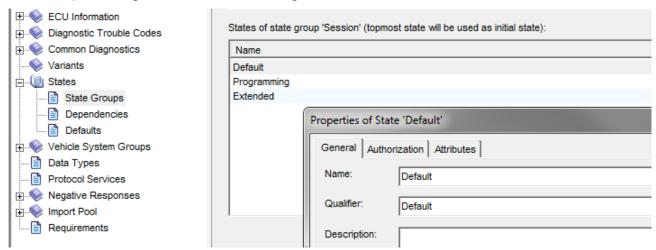


Figure 5-1 Default session state configuration in the CDD





Caution

An incorrectly specified default session state qualifier may result in a compile error.

5.3 Configuration of Mode 0x06 in the CDD file

If available, CANdesc offers a basic support for the OBD services. For each OBD service CANdesc will provide one callout on SID level where the user has to implement the functionality of service 0x06. However, to be able to generate CANdesc properly, OBD service 0x06 has to be configured properly in the CDD. How to configure the service properly is described in the application note /AN-IDG-1-013/ available in the download center on our homepage.



6 CANdesc Configuration in GENy

Since version 6.00.00, the CANdesc configuration concept has been improved by splitting the concrete ECU parameterization and software integration from the diagnostic specification.

The configuration of CANdesc in GENy consists of two important steps:

Importing a diagnostic description file. Currently only CANdela (CDD) files are supported therefore in further only the term CDD file will be used.

Setup all service options required by the application like:

Configure the service handlers (pre-, main- and post-handlers)

Setup the service specific settings, like maximum number of dynamically defined items per DynDID, size of scheduler for periodic data reading, etc.

Setup timing parameters (e.g. periodic rates).

The second step is optional, since after importing a CDD file all important settings will be already prepared for usage. If there are missing or invalid settings, GENy will notify you at generation time.

6.1 Step One – Importing an ECU Diagnostic Description

After activating the CANdesc component in GENy, you will have the following view:


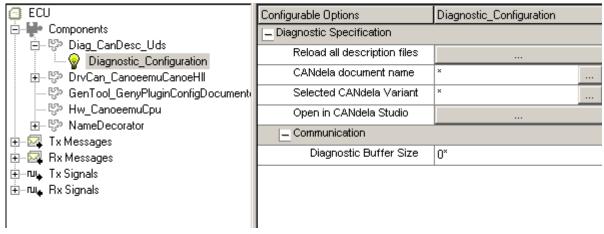


Figure 6-1 CANdesc GENy startup screen

At this time GENy does not have any CDD file and cannot generate CANdesc. You have to specify a CDD file, using the button on the option "CANdela document name".

After selecting the CDD file, the CANdesc component tree view will look like:



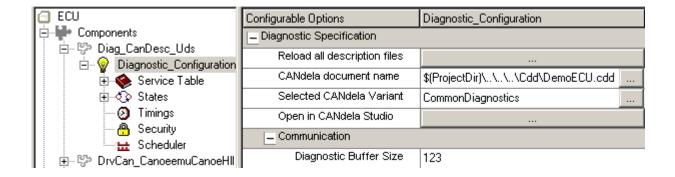



Info

Please note, the diagnostic buffer size is now set to a non-zero value. At CDD import time, GENy calculates a statistic over all services with simple, linear data structure and sets the buffer size to fit the longest request resp. response message. The message window will show you which service requires the suggested buffer size:



Complex services like reading the fault memory information or upload/download/transferdata are excluded from this statistic, since the worst case response calculation is not possible.

You can still set another value for the buffer size, even lower as the size suggested by GENy. At generation time, the code generator will check again the set buffer size and consider more options you have changed (like RingBuffer support) and notify you if the buffer size is too small.

Now you can try to generate your diagnostic layer, using the default settings.

6.2 Step Two – ECU Diagnostic Configuration in GENy

Once the CDD content is imported, there are several options that can and shall be set up for best match on your ECU integration needs.



What You Can Configure in GENy

The goal of splitting the ECU integration configuration from the ECU diagnostic specification is to provide a simplified view on what the ECU diagnostic application developer is able to configure without danger of changing the diagnostic specification provided by the OEM.

If a CANdesc parameter is not available in the source diagnostic description (CDD file), you will be able to edit it in GENy, even if it is relevant for the diagnostic specification.

The chapters below will show you all configuration parameters of CANdesc that can be set up in GENy.

What You Can Not Configure in GENy

All diagnostic parameters that could affect the ECU behaviour regarding its diagnostic specification, provided by the concrete OEM or would lead to inconsistency between the tester expectations on the ECU behaviour are not editable in GENy. If a change is required on such a parameter, the diagnostic description source shall be modified, to guarantee that the OEM or/and the tester will take this change into account.

6.2.1 Global CANdesc Settings

Under the generic settings you will find the options that affect the overall module performance, independently of the diagnostic services that shall be supported. In the picture and the table below follows the description of the settings for CANdesc.

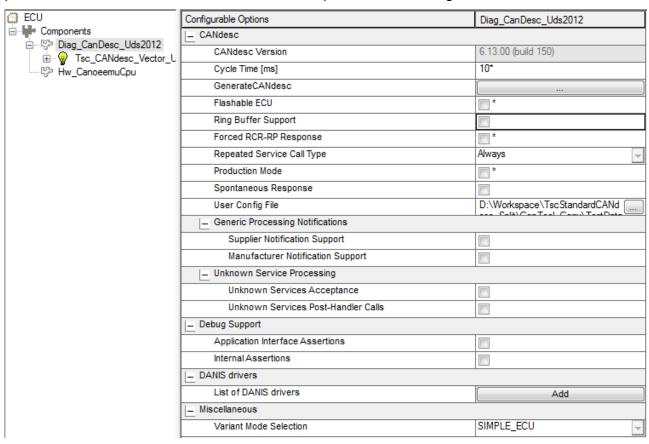


Figure 6-2 Example of GENy global CANdesc settings



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
Cycle Time [ms]	Always available.	Integer	10 1255	The DescTask (resp. DescTimerTask) function must be called EXACTLY in the time period specified here.
				This is important since the time constant will be converted into a number of function calls and if this setting doesn't match the real call cycle, the component internal timeout monitors will not function properly.
Generate CANdesc	Always available.	Button		This feature is only available after you have generated the whole CANbedded package.
				NOTE: If you run into problems, generate the whole package again!
Number of 'Busy- RepeatRequest' responded Requests	OEM dependent availability.	Integer	0 0255	The value is the maximum count of parallel handled diagnostic requests. Only the first diagnostic request will be processed, all other (additional) request, which will be received while the first one is in process, will be also received, but only responded with NRC \$21 ('BUSY - repeat request'). If there are more requests onto the bus than this number, only the first N will be responded - all other will be just ignored.
Flashable ECU	OEM dependent availability.	Boolean	False True	Depending on the car manufacturer this option has different effects. Please, see the OEM specific technical reference document for more information.
Ring Buffer Support	Always available.	Boolean	False True	In case your ECU shall send a very long positive response for some services (usually when reading fault memory) you can reserve enough RAM for the diagnostic buffer to handle the longest possible response length, or you can use the built-in ring-buffer mechanism which allows usage of smaller buffer. The linear buffer usage saves ROM and runtime but needs more RAM, the ring-buffer saves RAM (you may send 4095 Byte response with a 20Byte buffer) but requires more ROM and causes run-time overhead when used. NOTE: This



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				option just unlocks the built-in support, but the selection usage of the feature is done at run-time by your application (for each service independently).
Forced RCR-RP Response	OEM dependent availability.	Boolean	False True	In some cases (e.g. prior jump into the FBL (FlashBootLoader), ECU busy so no task function can be called for long period of time) it is necessary to prevent the tester from ECU response timeout. Enabling this feature you will be able to send a RCR-RP (ResponseCorrectlyReceived-ResponsePending) response any time during an active service processing (main-handler called but no DescProcessingDone has been called yet).
Repeated Service Call Type	Always available.	Enum	Deactivated Always Individual	In some cases (usually for slow services like reading from EEPROM) it is useful to let the component to poll your application (service main-handler) until the service execution is completed. Otherwise you have to leave the service's main-handler function and trigger an own additional polling task and finalize the service from there. Using the built-in polling mechanism you will save ROM and run-time. Also it prevents from confusing code structures. Always: Each main-handler will be called as long as the application didn't call <i>DescProcessingDone</i> (). Individual: Each main-handler will decide by itself if it will be called once or as long as the application didn't call <i>DescProcessingDone</i> ().
Production Mode	OEM dependent availability.	Boolean	False True	Enabling the production mode will set all options in the possible safest (uncritical) value. Some car manufacturers don't allow all of the features in production, so they will be turned off.
Spontaneous Response	Available if Service 0x86 is part of the diagnostic configuration.	Boolean	False True	This setting enables the possibility to send diagnostic responses without a preceding request. This feature is needed for Service 0x86 with Transmission Type I.



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				The spontaneous response can be triggered via the API DescSendApplSpontaneousResponse.
Supplier Notification Support	Available if CANdesc according to ISO 14229-1 2012 is used.	Boolean	False True	If this option is enabled, CANdesc notifies the application on incoming service requests and outgoing responses. CANdesc only notifies the application if the requested service is supported in the active session and security state. For more details see 10 Generic Processing Notifications
Manufacturer Notification Support	Available if CANdesc according to ISO 14229-1 2012 is used.	Boolean	False True	If this option is enabled, CANdesc notifies the application on incoming service requests and outgoing responses. CANdesc notifies the application right before the processing of the request starts and after a response has been sent. For more details see 10 Generic Processing Notifications
Unknown Services Acceptance	OEM dependent availability.	Boolean	False True	In some cases if the diagnostic database doesn't contain all necessary service Ids, or you need a (some) test identifier(s), you can enable this option which will redirect all received requests with unknown service Ids to your application for additional acknowledgment and processing.
Unknown Services Post Handler Calls	OEM dependent availability.	Boolean	False True	If the option 'Unknown Services Acceptance' is enabled, you may use this feature to be notified each time an unknown service processing has been accomplished. This post handler usage is the same as the one of the normal services post handlers.
Application Interface Assertions	Always available.	Boolean	False True	The SW component provides built- in debug support (assertion) to ease up the integration and test into the project. In general, the usage of assertions is recommended during the integration and pre-test phases. It is not recommended to enable the assertions in production code due to increased runtime and ROM needs. The assertion checks the correctness of the assigned



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				condition and calls an error- handler in case this fails. The error handler is called with an error and line number. You can find information about the defined error numbers in the Desc.h file.
Internal Assertions	Always available.	Boolean	False True	The SW component provides built- in debug support (assertion) to ease up the integration and test into the project. In general, the usage of assertions is recommended during the integration and pre-test phases. It is not recommended to enable the assertions in production code due to increased runtime and ROM needs. The assertion checks the correctness of the assigned condition and calls an error- handler in case this fails. The error handler is called with an error and line number. You can find information about the defined error numbers in the Desc.h file.
List of DANIS drivers	Always available.	String List		Add an arbitrary list of DANIS drivers for custom bus access. Each entry here will result in a user driver, which can be used to connect CANdesc to arbitrary transport layers. Example: Adding a driver name "MostTp" will force CANdesc to generate templates for a driver with this name. You will have only to implement the functions of the driver skeleton.
UUDT Message Confirmation Timeout [ms]	Available only if UUDT message transmission is supported.	Integer	100 165535	This is the maximum time after which a UUDT (Unacknowledged Unsegmented Data Transfer) message will be deleted from the CAN drive request queue and (if possible) will be replaced by the next queued message.
Faultmemory Iteration Limiter	OEM dependent availability.	Integer	0 0255	Limit the iteration depth for fault memory read services.

©2015, Vector Informatik GmbH Version: 3.09.00 27 / 158



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				Some fault memory (\$19) services can consume much runtime when performed en bloc. To reduce the run time of the CANdesc task, use this option to limit the iteration depth of the fault memory access function so your controller can handle the workload.
				ATTENTION: Depending on your Tp timeout settings, to lower the number of iterations can result in an aborted transmission due to buffer underrun. A value of 0 (zero) will disable any limitation.
Variant Mode Selection	OEM dependent availability.	Enum	None Multi Identity Mode VSG Mode	Note: This setting is independent from communication identities! None: The diagnostics support one configuration only. Multi Identity Mode: The diagnostics support different diagnostic variants. One variant is active a time. VSG Mode: Diagnostic Entities (SubServices, DTCs) are grouped into VSGs. Several VSGs can be active at a time.

Table 6-1 GENy global CANdesc settings

6.2.1.1 Generic Processing Notifications (UDS2012)

On activation of the feature "Generic Processing Notifications", GENy shows the names of the additional callbacks that will be generated. The names of the callbacks are fixed and cannot be modified (see Figure 6-3). For a detailed description of the feature see chapter 10 Generic Processing Notifications.

Generic Processing Notifications					
Supplier Notification Support	V				
Supplier Indication Function Name	ApplDescSupplierIndication*				
Supplier Confirmation Function Name	AppIDescSupplierConfirmation*				
Manufacturer Notification Support	V				
Manufacturer Indication Function Name	ApplDescManufacturerIndication*				
Manufacturer Confirmation Function Name	ApplDescManufacturerConfirmation*				

Figure 6-3 Activated feature "Generic Processing Notifications"



6.2.2 Service Specific Settings

Once the CDD file is imported you can have an overview of the supported services of your ECU:

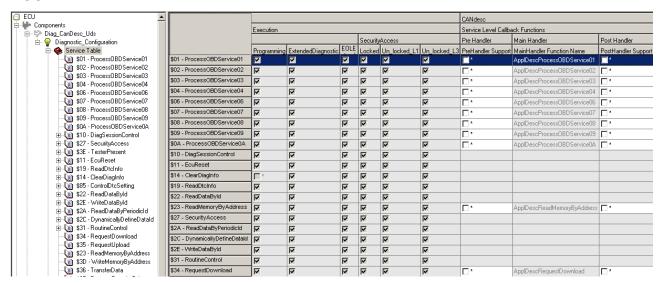


Figure 6-4 GENy diagnostic service overview

On this level you can also configure all services that will be supported on service Id level only.

6.2.2.1 Generic Service Settings

Using the CANdesc component tree view you can explore the detailed settings for each service and its sub-services (if available).

A generic sub-service setup looks like the picture below:



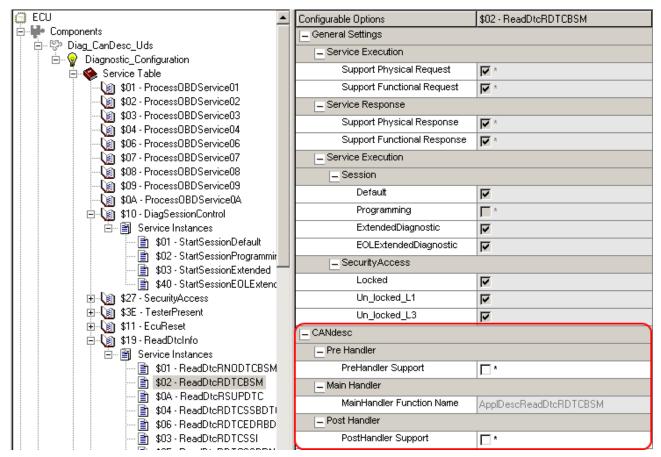


Figure 6-5 GENy generic sub-service setup

Almost all services have a very simple configuration view. You can see the main-handler is always available and a preview of the call-back name is shown.

You can only add a pre- and / or a post-handler to such a service, if required.

6.2.2.2 Predefined (implemented) Services in CANdesc

There are configurations (OEM dependent) where several services are fully implemented by CANdesc. Such service can be, StartDiagnsoticSession, SecurityAccess, DynamicallyDefinedDataIdentifier, ReadDataByPeriodicIdentifier, etc.

Those services that will not be handled by the application are marked in GENy as shown on the picture:



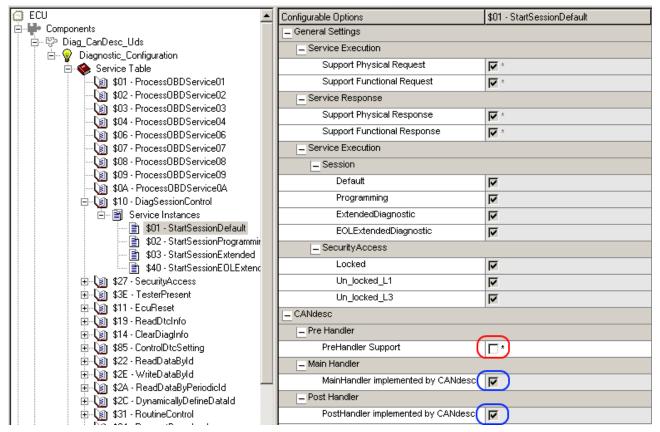


Figure 6-6 GENy predefined sub-service setup

As you can see, the main-handler is grayed and marked as "implemented by CANdesc". The same can apply (depends on the service) also to the pre- and post-handlers of the service.

In the example on the *Figure 6-6 GENy predefined sub-service setup* you see that the pre-handler is still free for usage. This means you can still implement a pre-handler to check additional conditions prior CANdesc will be able to process the service. For other service it could be also the post-handler free for implementation.

There are several services that make some exceptions to the predefined implementation rule:

Service 0x2A:

PreHandler configuration is possible: If a pre-handler is required, it must be enabled on all sub-functions of the concrete DID. The pre-handler name will be "ApplDescPreReadPeriodicDid<DID instance name>".

PreHandler on "stop all" is not used by CANdesc and will not be considered during the code generation even if it is enabled.

Main-Handler are set to "implemented by CANdesc" since the data reading call-back will be the corresponding 0x22 DID service call. This means that if the corresponding service 0x22 DID has been set to use the "Signal API", the periodic reading service will use it too.

Post-Handlers are not supported at all.



Service 0x2C:

PreHandler configuration is possible: If a pre-handler is required, it must be enabled on all sub-functions of the concrete DID. The pre-handler name will be "ApplDescPreDynDefineDid<DID instance name>".

PreHandler on "clear all" is not used by CANdesc and will not be considered during the code generation even if it is enabled.

Main-Handler are set to "implemented by CANdesc" since the DID definition is always done by CANdesc.

Post-Handler are not supported at all.

6.2.2.3 Signal Access Enabled Services

Some services such as the UDS ones 0x22/0x2A and 0x2E, can be processed on signal level. This means CANdesc will analyze the request/response data structure and generate the service main-handler, leaving to the application only the task to provide the signal values for the response, resp. to write the requested signal values to the ECU memory.

The setting view of such a service is shown below:

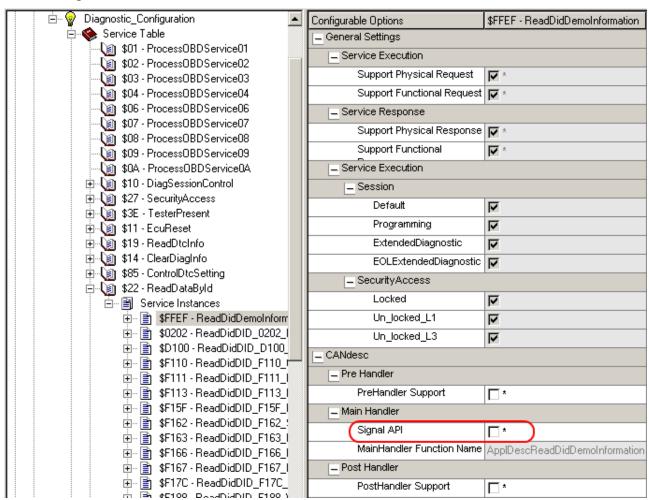


Figure 6-7 GENy signal API enabled sub-service setup



Note: For the read dynamically defined DID service, there is no signal access since they are always implemented by CANdesc internally.

If the "Signal API" option is not enabled this service is to be implemented like any other diagnostic service. The data object specific settings, described below, will have no effect on the code generation.

If the "Signal API" option is enabled, CANdesc will generate per default a call-back function for any data object (signal) the service contains. You can specify more options on each signal, to achieve the maximum advantage of CANdesc – fully implemented diagnostic service.

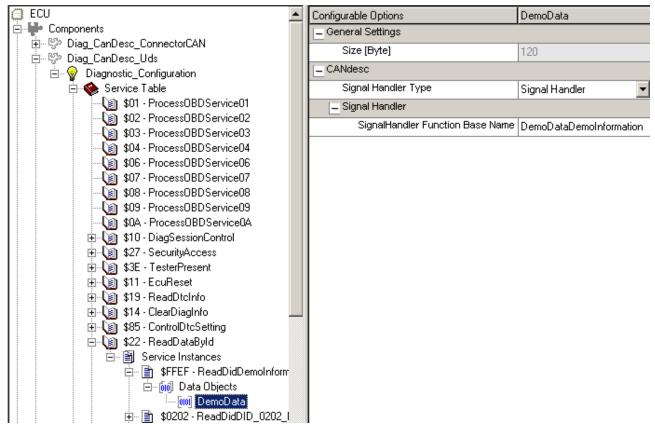


Figure 6-8 GENy signal view of a sub-service

You can have three types of signal handling:

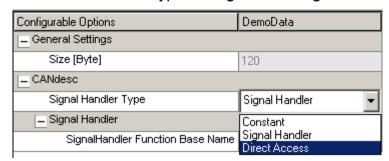


Figure 6-9 GENy signal handler types

©2015, Vector Informatik GmbH Version: 3.09.00 33 / 158





FAQ

Constant is only possible if the CDD file has contained constant value for the selected data object. You can not specify in GENy a constant value for a signal handler.

In case of selected "Direct Access" signal handling, the following options will be enabled:

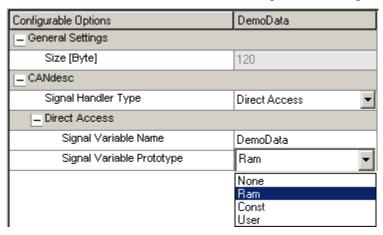


Figure 6-10 GENy direct access signal handler settings

Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
Signal Handler Type	Only for signal API enabled services.	Enum	SignalHandler Constant DirectAccess	Constant: The data value is constant. The data value can be used directly. This is used only when the corresponding subservice uses a signal API main handler. Signal Handler: Use a callback function to get/set the data value. This function is used only when the corresponding subservice uses a signal API main handler. Direct Access: Directly use a variable to access the data object. Also, a signal API main handler has to be used for this setting to have any effect.
SignalHandler Function Base Name	Only for signal API enabled services and a signal access through a	String	<pre><dataobjectq ualifier="">+<dia ginstancequal="" ifier=""></dia></dataobjectq></pre>	This value is used as base for the signal access function - depending on how the value is used, the name entered here is prefixed with



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
	SignalHandler is selected			different prefixes, e.g ApplDescRead / ApplDescWrite.
				You can override the default name, by specifying an own signal base. The Prefix (e.g. ApplDesc can not be overridden).
Signal Variable Name	Only for signal API enabled services and if DirectAccess signal handling is selected	String	<dataobjectq ualifier></dataobjectq 	The name of the signal variable. Example: c_dataTemp g_applData.bit0
Signal Variable Prototype	Only for signal API enabled services and if DirectAccess signal handling is selected	Enum	Ram None Const User	To create the proper extern declaration to access the signal variable, the proper access modifiers have to be specified. None: No prototype is generated at all. "DescType.h" where the user has to define the real typedefs (for structure access for example). Ram: The variable is located in RAM. Const: The variable is located in ROM.
Signal Variable User Prototype	Only for signal API enabled services and if DirectAccess signal handling is selected and if the Signal Variable Prototype is set to User	String	Empty	User: Set a user defined prototype. Set the prototype of the signal variable. Example: boolean EcuTempType

6.2.3 Timing Settings

GENy imports all possible timings that the diagnostic description source provides. Those parameters that are available in the CDD file are considered as a part of the ECU specification and are not modifiable in GENy. If a modification of those parameters is required, please change their values in the diagnostic description file and re-import it in GENy.



All other parameters can be set up manually, but the default value already matches the OEM specification.

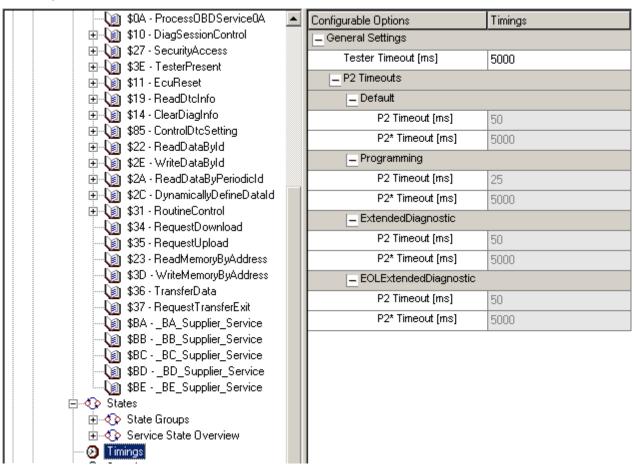


Figure 6-11 GENy CANdesc timing parameters

6.2.4 Security Access Settings (UDS2006)

If the security access service is implemented by CANdesc (see the service handler on the service 0x27 instances), you can set here the level specific attributes, like attempts to start the delay time, delay time on power on, etc.



Caution

It is OEM specific property whether the security access parameters will be evaluated security level specific or not. In case the security access service specification of the concrete OEM requires only global configuration of these options, the code generator will calculate the maximum value over all levels for each parameter and this value will be used by the service implementation in CANdesc.

Example: Level 1 has "Attempt Counter" = 1, and Level 2 has for the same parameter = 3. CANdesc will use then for "Attempt Counter" = 3 for all security levels.



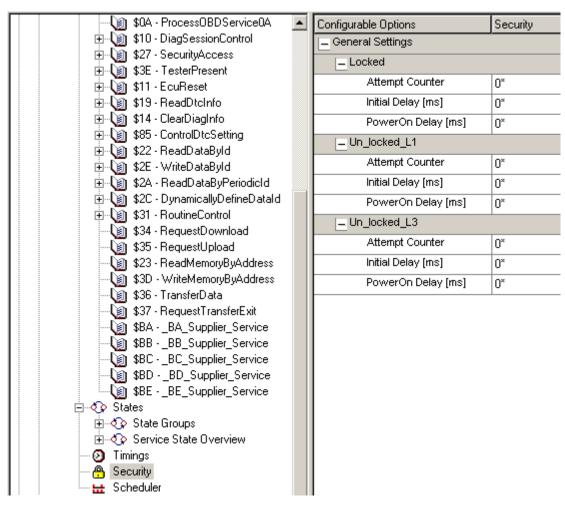


Figure 6-12 GENy CANdesc security access parameters

Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
Attempt Counter	Only if the SecurityAccess state group is available	Integer	0 1255	Specifies the maximum number of failed attempts to unlock the ECU. If this number is reached, a delay for the next security access try will be inserted.
				If a non-zero value is entered, the delay time must be set to a non-zero value too.
				Note: This parameter has only effect only if the SecurityAccess service is handled by CANdesc.
Initial Delay [ms]	Only if the SecurityAccess state group is available	Integer	0 165535	Specifies the delay time after the maximum retry attempt count has been reached.
				If a non-zero value is entered, the

©2015, Vector Informatik GmbH Version: 3.09.00 37 / 158



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				attempt count must be set to a non-zero value too.
				Note: This parameter has only effect only if the SecurityAccess service is handled by CANdesc.
PowerOn Delay [ms]	Only if the SecurityAccess state group is available	Integer	0 165535	Specifies the delay time at power on.
	available			If a non-zero value is entered, the delay time must be set to a non-zero value too.
				Note: This parameter has only effect only if the SecurityAccess service is handled by CANdesc.

6.2.5 Security Access Settings (UDS2012)

Due to the new features in CANdesc UDS2012, the configuration of the security levels in GENy has changed.

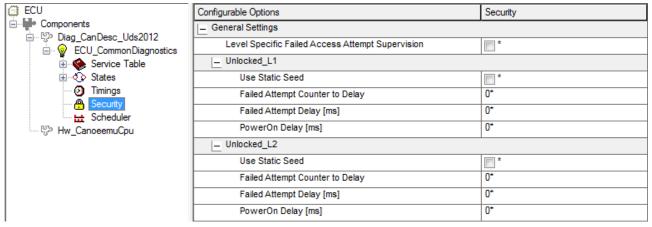


Figure 6-13 Security settings in GENy

Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
Level Specific Failed Access Attempt Supervision	Only if the SecurityAccess state group is available	Boolean	False True	Switch to select whether a global false attempt counter and delay timer for all security levels shall be used (false) or if each level has its own false attempt counter and delay timer (true).
Use Static Seed	Only if the SecurityAccess state group is	Boolean	False True	For each level can be selected if a static seed is used (true) or not (false). Static seed means that



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
	available			CANdesc stores the seed and re- uses the seed in a positive response to a seed request for that level, until the level is unlocked.
Failed Attempt Counter to Delay	Only if the SecurityAccess state group is available	Integer	Value imported from the Cdd file. 065535	The number of failed security unlock attempts allowed before a delay is imposed between attempts.
Failed Attempt Delay [ms]	Only if the SecurityAccess state group is available	Integer	Value imported from the Cdd file. 065535	The delay time in ms which is imposed if the Failed Attempt Counter limit has been reached. Further security access attempts are discarded, until the delay has expired.
PowerOn Delay [ms]	Only if the SecurityAccess state group is available	Integer	Value imported from the Cdd file. 065535	The delay time in ms which is imposed when the ECU is powered on. Requests to unlock the security level are declined until the delay has expired.

6.2.6 Scheduler Settings

If the ECU shall support the periodic data reading service, the following settings are relevant and shall be setup to match the ECU performance and RAM resource availability.



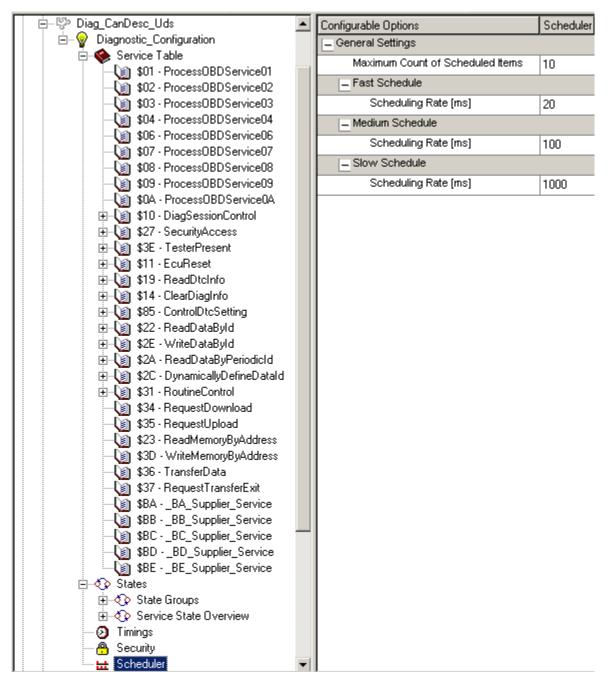


Figure 6-14 GENy CANdesc scheduler parameters

Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
Maximum Count of Scheduled Items	Only if the periodic data reading service is available in the ECU configuration.	Integer	5 1255	The maximum number of items that are sent periodically. You can only request at most this number of periodic DIDs, independently per scheduling rate. Example:

Technical Reference CANdesc



Attribute Name	Availability	Value Type	Values The default value is written in bold	Description
				If set up 5 items for scheduling, CANdesc will be able to schedule at most 5 items at fast, 5 items at slow and 5 items at medium rate.
				Note: If the scheduler size exceeds the total number of available periodic DIDs, CANdesc will automatically reduce the size to the lowest value.
Fast/Medium/Slow Scheduling Rate [ms]	Only if the periodic data reading service is available in the ECU configuration.	Integer	OEM dependent 165535	Specifies the timings of each scheduling rate that the ECU supports.



7 CANdescBasic Configuration in GENy

As already stated in 6 CANdesc Configuration in GENy since version 6.00.00, the CANdesc configuration in GENy has been changed. Both CANdesc and CANdescBasic variants share the same GUI and settings representation in GENy. Due to the reduced feature set in CANdescBasic, its GENy GUI provides you correspondingly a reduced configuration option set, covering all of the CANdescBasic requirements.

7.1 Global CANdescBasic Settings

CANdescBasic shares the same global settings as the CANdesc variant (please refer to chapter 6.2.1 Global CANdesc Settings).



Info

CANdescBasic does not support any of the multi identity modes!

7.2 Service Specific Settings

In CANdescBasic, you don't have any more an external diagnostic specification document that shall be imported (like a CDD file). In your software delivery, there is already a prepared diagnostic configuration template that fulfills the concrete OEM and its diagnostic protocol requirements.



Info

In CANdescBasic versions, prior 6.00.00, it was possible to import information, out of a CDD file, whether a service Id is supported or not-supported and any new sessions. In CANdesc 6.00.00 and newer this feature is temporarily disabled, but you still can manually configure these changes.

Since CANdescBasic provides only a Sid view over the diagnostic services, its service specific configuration is performed primarily within the service overview grid in GENy (please refer to chapter 0

Service Specific Settings

CANdescBasic also provides a built in support for some of the diagnostic services like CANdesc, but its scope is reduced (due to lack of enough service definition information) only to the most important for diagnostic communication services (e.g. DiagnosticSessionControl, TesterPresent, etc.). You will recognize these services in GENy as described in chapter 6.2.2.2 Predefined (implemented) Services in CANdesc.



7.3 Timing Settings

The configuration aspect of the CANdescBasic timings settings is the same as described in *6.2.3 Timing Settings*, with the difference, that here there is no CDD file but a predefined template.

7.4 Diagnostic State Configuration

CANdescBasic has a built in support only for the diagnostic session states. All other states like SecurityAccess and ECU specific service execution conditions shall be implemented by the application.

The supplied CANdescBasic template already includes all mandatory session, specified by the concrete OEM. If some additional sessions needed, you can add them in GENy as shown below:

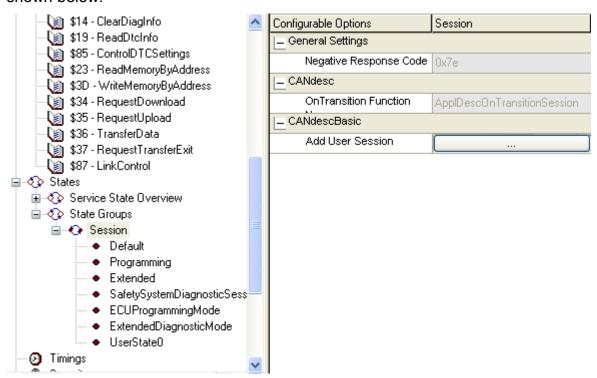


Figure 7-1 CANdescBasic add a user session



Info

For any session added by you (user sessions), GENy automatically creates all session transitions, required by the concrete diagnostic protocol (e.g. UDS, KWP2000). Examples:

Service 0x10:

<AllExistingSessions>-><NewSsession>,

<NewSession>-><NewSession>

Service 0x20:

<NewSession>-><DefaultSession>





Caution

The allowed session Ids are protocol dependent. For example: on UDS you can not specify user sessions with Ids greater than 0x7F. On KWP2000 any value is acceptable for session Id.

The session Id must be a unique value among all sessions, supported by your ECU.

For the user defined session, you can any time change their name, session or completely remove them:

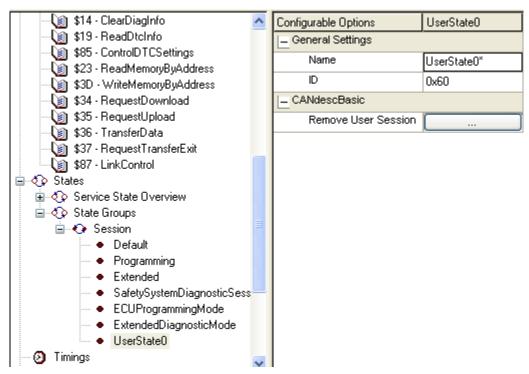


Figure 7-2 CANdescBasic change user session name, id or completely delete user session

Once a user session has been added, you can configure for each service whether it shall be supported or not in the new session. You can do this configuration either on the service overview grid, or if there are some service that have sub-services, for each sub-service. The pictures below show each of the service level configuration views.



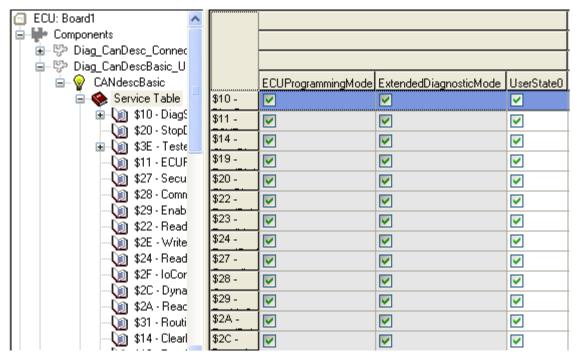


Figure 7-3 CANdescBasic session configuration at service overview

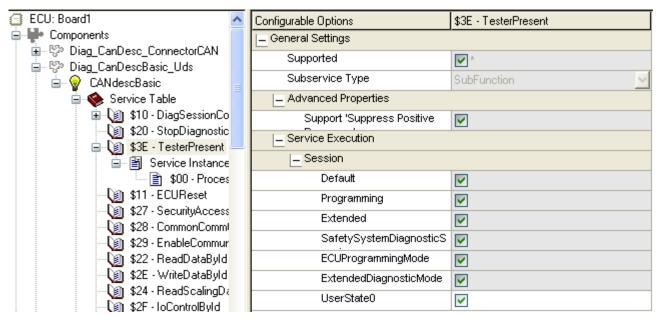


Figure 7-4 CANdescBasic session configuration at service Id level



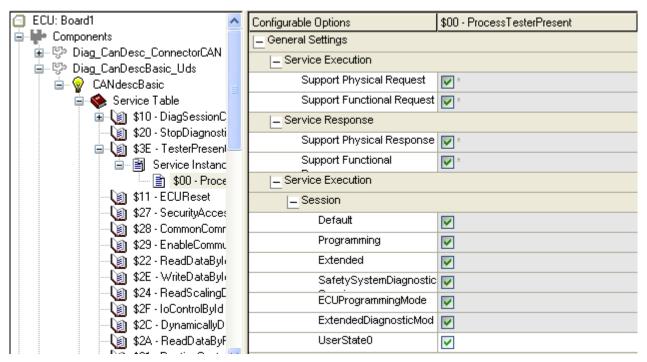


Figure 7-5 CANdescBasic session configuration at sub-service level



8 Multi Identity Support

CANdesc allows you to use multiple diagnostic configuration sets – a use case where the ECU always communicates over the same connection, but shall implement different functionality depending on some hardware (jumper) setting.

All supported configuration sets are described in the following chapters.



Info

Please note:

The multi identity feature of CANdesc is: firstly supported in CANdesc 6.00.00; not supported at all in the CANdescBasic variant.

8.1 Single Identity Mode

CANdesc has a static configuration set – once all services and communication connections are configured, and the program code is flashed into the ECU there are no more configuration changes possible.

8.1.1.1 Configuration in CANdela

You need just to prepare the corresponding CDD variant for your ECU configuration in CANdelaStudio.

8.1.1.2 Configuration in GENy

Import the CDD file and the corresponding variant in GENy (please refer to *chapter 6.2* Step Two – ECU Diagnostic Configuration in GENy for details).

8.2 VSG Mode

The VSG mode is a special multi identity mode, which has the following characteristics:

- Allows to support multiple diagnostic configuration variants each variant reflects a VSG from the imported CDD file, and additionally there is a base variant that contains all services that does not belong to any VSG.
- One or several configuration variants can be simultaneously activated during the ECU initialization. The base variant is always active.



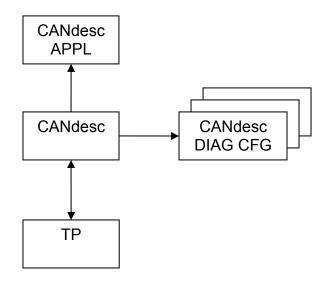


Figure 8-1 CANdesc multi identity mode

CANdesc will be initialized with the base variant at ECU start up sequence. If required, additional variant(s) can be activated by the application (please refer to chapter 12.6.2 *Multi Variant Configuration Functions* for more information about the variant initialization).

8.2.1 Implementation Limitations

In order to generate the correct NRC for a requested service Id (e.g. 0x7F (ServiceNotSupprtedInActiveSession), CANdesc considers all of its sub-services diagnostic session specific execution precondition and calculates a diagnostic session filter for the SID. In case of a multi-identity such a calculation shall be made for all of the diagnostic configuration variants, which will cost a lot of ROM resources.

In order to keep CANdesc ROM resources as low as possible the service Id specific session filtering is created considering the superset of all sub-services it contains, independently of their configuration affiliation. Depending on the active configuration set in the ECU, this limitation can lead to the following effect:

A requested service will be responded with the NRC 0x12 (SubfunctionNotSupported) or 0x31(requestOutOfRange), depending on if it has a sub-function or not, instead of the NRC 0x7F. Such a configuration could be for example:

Service 0x22 (ReadDataByldentifier) supports only two DIDs:

0xF100 - supported only in the default diagnostic sessions and available only in variant 1;

0xF101 – supported only in a non-default session and available only in variant 2.

CANdesc will summarize in this case, that service 0x22 is allowed in any diagnostic session since there is at least one DID supported in at least one of each session.

Now let's assume the ECU is powered up with active variant 2. If the client sends a request 0x22 0xF100 while in the default diagnostic session, CANdesc will respond with



the NRC 0x31 (DID not supported), instead of the 0x7F (none of the DIDs in the active configuration is executable in the default session -> the service Id itself is not executable in the session -> NRC 0x7F would be expected).

8.2.2 Configuration in CANdela

> If multiple diagnostic configuration sets shall be selectable in CANdesc, you will need a CDD with several VSGs where each describes a diagnostic configuration set.



Caution

CANdesc supports the multiple diagnostic configurations only on service/sub-service availability level. Therefore the following limitations must be considered while creating the separate CDD files resp. CANdela variants for CANdesc:

- A service can be completely deactivated within a VSG;
- A sub-service (e.g. DID, sub-function, etc.) can be completely deactivated within a VSG;
- > If a service exist in multiple VSGs, then it must have exactly the same properties
- > Execution pre-conditions (e.g. diagnostic session, security access, etc.)
- > Support of SPRMIB
- > Addressing mode (physical/function)
- > Response behavior (response on physical/function request)
- If a sub-service exist in multiple VSGs, then it must have exactly the same properties
- > Execution pre-conditions (e.g. diagnostic session, security access, etc.), resp. trigger of state transitions.
- > Addressing mode (physical/function)
- > Response behavior (response on physical/function request)
- > Protocol information semantic (sub-function, identifier, etc.)
- > Request resp. response content must be identical same data structure, data types, and constant value (if any available)
- > Service 0x31 (RoutineControlByldentifier) specifics
- > The multi-identity varying is allowed only on RID level. If a RID is supported in multiple variants, then the sub-functions supported by this RID must be the same (i.e. it is not allowed to have one variant with only "start" sub-function and one with "start and stop" for the one and same RID).
- > Service 0x2F (IoControlByldentifier) specifics
- > The multi-identity varying is allowed only on DID level. If a DID is supported in multiple variants, then the control options supported by this DID must be the same (i.e. it is not allowed to have one variant with only "ShortTermAdjustment" and one with "ShortTerm-Adjustment and ReturnControlToEcu" for the one and same DID).
- >
- > If at least one of the above requirements is not fulfilled, the variant that violates the rule will not be imported.

>

Version: 3.09.00



8.2.3 Configuration in CANdela

Please follow the steps below on how to configure VSG in CANdelaStudio.

- 1.
- 2. Defining all available VSGs for the concrete ECU.
- 3. In CANdelaStudio, select the Vehichle System Groups view and add all necessary VSGs into the VSG pool.

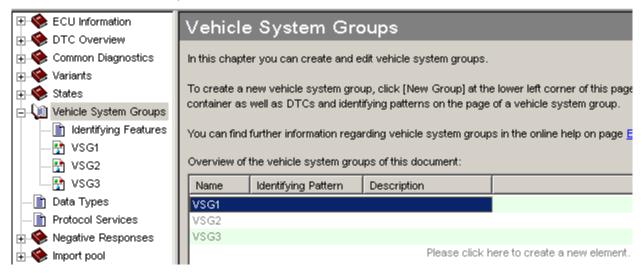


Figure 8-2 Defining VSGs in CANdelaStudio

The name of the created VSG will be used later by CANdesc for the diagnostic configuration constants that the CANdesc application shall use during the configuration activation phase (please refer to chapter 12.6.2 Multi Variant Configuration Functions).

Once all of the required VSGs are created, you can start with the service to VSG assignment.

- 4. Service to VSG assignment
- 5. Using CANdelaStudio you can assign any diagnostic instance to none, one or multiple VSGs. Those services that do belong to a diagnostic instance without a VSG assignment will be considered as services of the base variant (services that are always available).



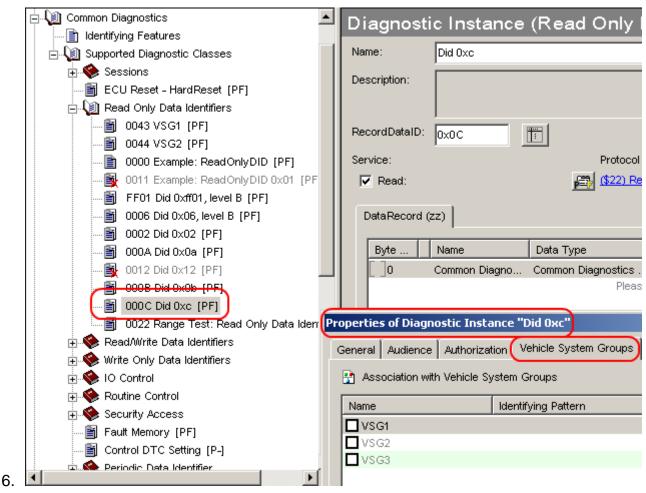


Figure 8-3 Setting a VSG for service in CANdelaStudio

8.2.4 Configuration in GENy

In order to put GENy into VSG mode, you have to select it on the CANdesc component root. Please refer to the chapter 6.2.1 Global CANdesc Settings for details about the variant selection option.

Now import the CDD file, containing the VSGs in GENy as described in chapter 6.1 Step One – Importing an ECU Diagnostic Description. That is all.

8.3 Multi Identity Mode

Multi Identy Mode is not supported by CANdesc.



9 Diagnostic Service Implementation Specifics

9.1 Clear Diagnostic Information (SID \$14) (UDS2012)



Caution

This section does not apply to all ECU configurations. It is only applied in special cases where clear diagnostic information is supported!

The sevice ClearDiagnosticInformation is used by the client to clear diagnostic information in a memory of one or multiple server(s).

9.1.1 Tasks performed by CANdesc

To a certain degree CANdesc validates the request. The validation of service-level states (session, security and user states) is performed by CANdesc before CANdesc calls the application callback.

9.1.2 Task to be performed by the Application

The application has to verify the length of the request and also has to check if the passedon groupOfDTC parameter is valid.

9.2 ReadDTCInformation (SID \$19)

9.2.1 Limitations of the service

When CANdesc is used with an AR3 DEM from Vector, some sub-functions of service 0x19 are implemented internally. The DEM generates lists of the available Snapshot and ExtendedData records which are used by CANdesc for iteration. In case the services are internally implemented, the maximum amount of Snapshot records and Extended Data records supported by CANdesc is limited to 240 records each.

9.3 ReadDataByldentifier (SID \$22)

This service has the purpose to read some predefined data records (PID). Each PID has a concrete data structure which is designed by CANdelaStudio.

As the standard case the request contains a single PID. This results in a single response containing the data structure of the record.



Single PID mode (well know case) example for PID \$1234

Tester's request:

\$22 \$12 \$34

ECU's response:

\$62 \$12 \$34 Data block

The UDS allows to request multiple PIDs in a single request. This results is also a single response including the data structure of each requested PID.

Multiple PID mode example for PIDs: \$1234, \$ABCD

Tester's request:

\$22 \$12 \$34 \$AB\$CD

ECU's response:

\$62 \$12 \$34 Data block \$AB\$CD Data block

CANdesc will hide this multiple PID processing from the application. To do that some minor limitations in the interface has to be made (see chapter 9.3.2 Single PID mode). To show the differences, we discuss first the standard case. In the standard case there is no multiple PID processing possible. The second chapter (9.3.3 Multiple PID mode) is showing the multiple PID processing.

Which mode is used depends on the configuration (typically the OEM).



9.3.1 Limitations of the service

Session management

This service contains no sub-function identifier which means the global state group "session" may not be selected as a "relevant group" for any instance of this service. If there is a need for a PID to be rejected under a certain session, all PIDs must follow this rule and be specified to be rejected for this session. As a result the whole SID \$22 will be rejected for this session. This behavior is harmonized with the UDS protocol specification, which allows service identifiers to be rejected in a session but no parameter identifiers.



9.3.2 Single PID mode

The Single PID mode is configured automatically, if the number of PIDs that can be requested at the same time, is limited to one PID. If more than one PID is requested, the request will be rejected with 'RequestOutOfRange' (NRC \$31).

If the multiple PID mode of CANdesc is deactivated, the service \$22 will be executed and processed like any other diagnostic service without any additional specifics or limitations.

9.3.2.1 Sending a positive response using linear buffer access

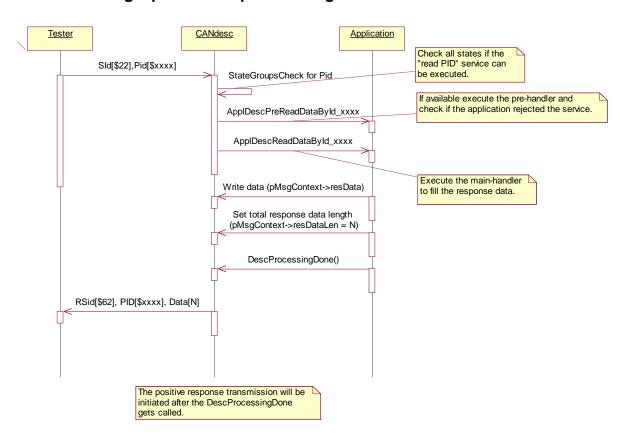


Figure 9-1: Linearly written positive response on single PID request

©2015, Vector Informatik GmbH Version: 3.09.00 55 / 158



9.3.2.2 Sending a positive response using ring buffer access

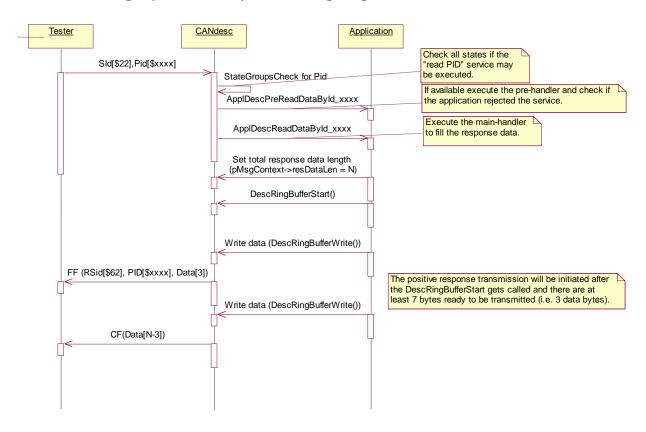


Figure 9-2: "On the fly" response data writing.

©2015, Vector Informatik GmbH Version: 3.09.00 56 / 158



9.3.2.3 Sending a negative response

Due to the fact that the negative response handling has changed in the multiple PID mode, we recommend to do the same handling in the Single PID mode, too. Please refer the chapter 9.3.3.2 "Ring buffer active configuration" for the recommended negative response handling.

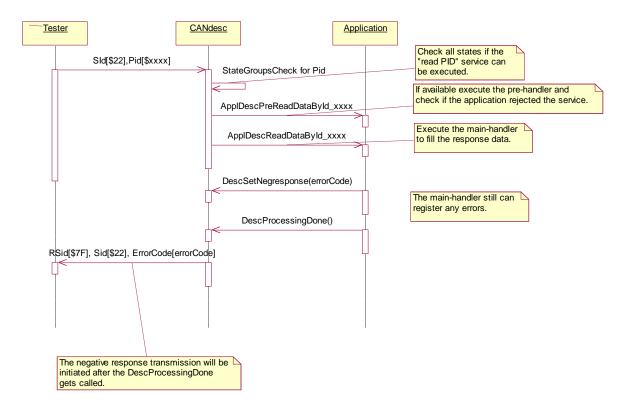


Figure 9-3: Negative response on single PID

9.3.3 Multiple PID mode

The Multiple PID mode is configured automatically if the number of PIDs, that can be requested at the same time, is greater than one. If more than this predetermined number of PIDs is requested, the request will be rejected with 'RequestOutOfRange' (NRC \$31).

In this configuration some minor limitations must be taken into account while using the CANdesc interfaces.

For the service "ReadDataByldentifier" the ring-buffer feature can be used. Depending on the usage of this feature, there are two main use cases for the multiple PID mode.:



9.3.3.1 Pure linear buffer configuration

The ring-buffer feature is deactivated in general.

If the system doesn't use any ring buffer access for filling the response, the PID pipeline is still quite simple and therefore with less limitations to the CANdesc API usage and application performance.

9.3.3.1.1 Sending a positive response

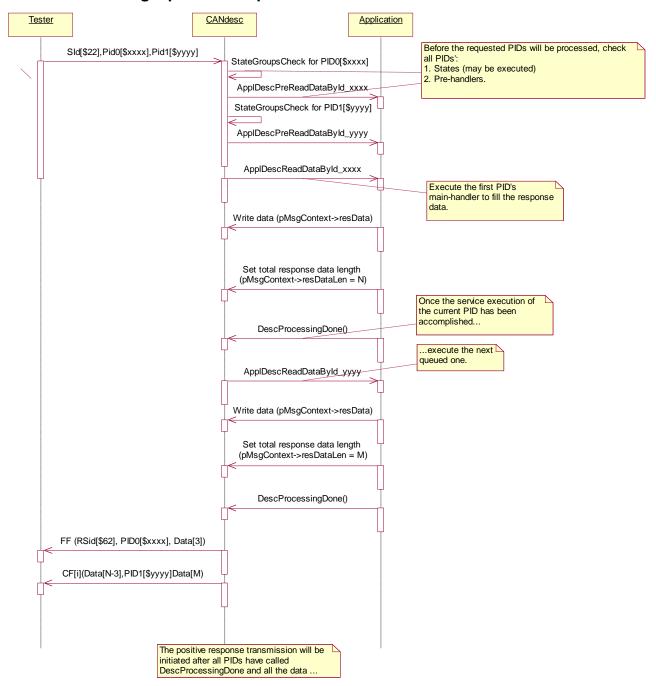


Figure 9-4: Linearly written positive response on multiple PIDs (global ring buffer option is off)

©2015, Vector Informatik GmbH Version: 3.09.00 58 / 158



9.3.3.1.2 Sending a negative response

This example depicts the case where from two requested PIDs the first one may not be accessible and rejects the service execution.

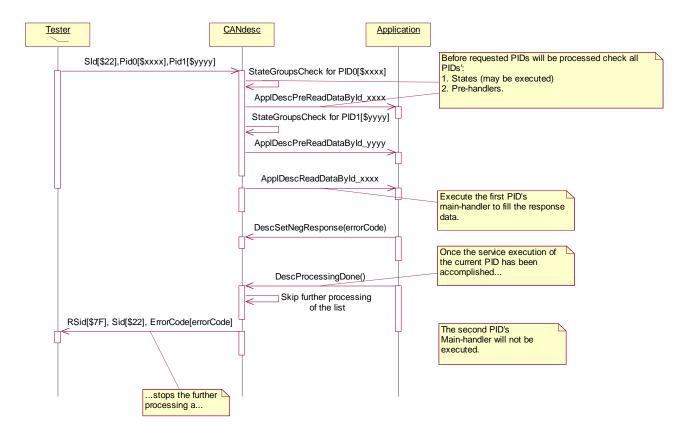


Figure 9-5: Negative response on multiple PIDs (global ring buffer option is off)

9.3.3.2 Ring buffer active configuration

Attention: The Ring-Buffer in 'Multiple PID' services can be first-time used since CANdesc version 2.13.00

Different concepts for the buffer handling were discussed while development. Two solutions with different pros and cons are discussed here:

Multiple buffer

Normally each service handler (MainHandler routine) has the whole diagnostic buffer available (apart from the protocol header bytes hidden by CANdesc). Based on this logic the service \$22 using PID pipelining has the same tasks as the normal service processor: executing a PID handler and provide him the whole diagnostic buffer for response data. This will hide the whole process and makes the application's life easier (no exceptions for the implementation). To realize this concept means to provide a separate diagnostic buffer for each PID which size is the same as the main one (configured by GENtool). This is a fast and quite simple solution but requires too much RAM to be reserved for only the case that sometimes the testers would like to use the maximum capacity of the ECU (i.e. requests as many PIDs as possible for this ECU in a single request).

Pros: less ROM usage



Cons: very high RAM usage

virtual multiple buffer

This concept is more generically designed and will not have additional ROM overhead if the pipeline size will be increased. An intelligent buffer concept gives the application the whole size of the buffer for each MainHandler call.

Once the whole data for the current PID has been written, the data supplement will stop (because the next PID handler will not be called). The transmission in the transport layer is started and some time later it runs into buffer under-run. This 'signal' is used to call the next PID MainHandler. This MainHandler has to provide his data very quick. Otherwise the response transmission will stop (due to a continuously buffer under-run).

Pros: less RAM usage (practically independent of the maximum list size).

Cons: moderate ROM overhead / the response data must be composed very quickly.

The virtual multiple buffer concept is the implemented solution. The application can choose for each PID separately to write the data linearly or by using the ring buffer.

performance requirements

The application has performance requirements:

If linear access has been chosen, the whole response data of each MainHandler must be filled within the lower duration of the P2 time and the TP confirmation timeout. Normally the P2 time is shorter than the transport layers confirmation timeout so just take into account that each Main-Handler must be able to fill its response data within a time far shorter than the P2 time.

If ring buffer access has been chosen, the application has to call the "DescRingBufferWrite" fast enough to keep TP from confirmation timeout.

Negative response on PID

The negative response handling **is changed** in the multiple PID mode! This affects all protocol-services with a activated 'May be combined' property. The UDS specification encloses only the SIDs: \$22 and \$2A. For all other services the negative response handling is not changed!

If the application has to reject a request (e.g. ignition key check) it has to do that in the PreHandler. The application is **not allowed** to call "DescSetNegResponse()" to send a negative response in any MainHandler.

This limitation is based on the concept to check all reject conditions in PreHandlers before starting the transmission. This is necessary because after CANdesc has executed the first MainHandler (which starts the positive response transmission) there will be no chance to send a negative response.

The usage of the concept: CANdesc starts to call all PreHandlers of this multiple PID request. If no negative response is set, CANdesc will start to call the corresponding MainHandlers. Within the first call of DescProcessingDone() the transmission is initiated.

Note (for version 3.02.00 of CANdesc and above):



In case the application sets an error code during the main-handler execution in non-debug (released) version of the component, depending on the situation will lead to:

For service \$22:


First DID of the list main-handler: sending a negative response to service \$22;

Second or any of the succeeding DIDs in the list: transmission interruption.

For service \$2A:

Ignoring the scheduled response.

9.3.3.2.1 Sending a positive response

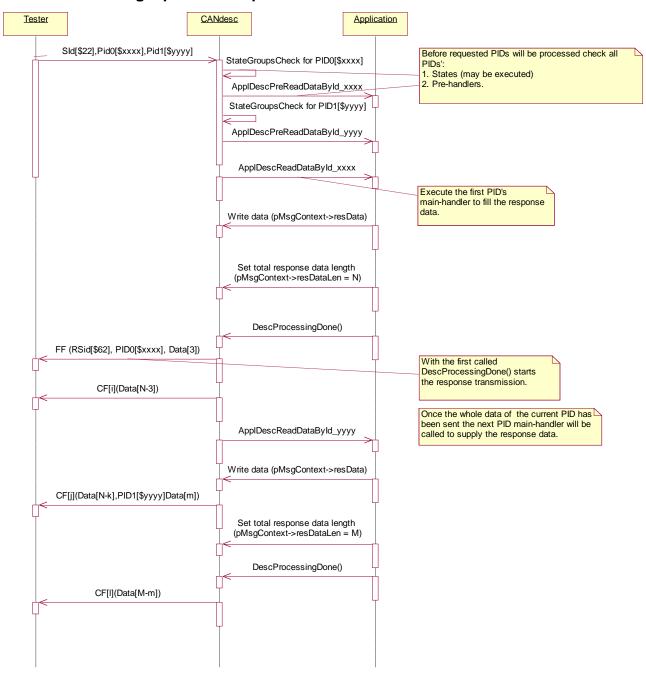

©2015, Vector Informatik GmbH Version: 3.09.00 61 / 158



Figure 9-6: Linearly written response data on multiple PIDs (global ring buffer option is on)

9.3.3.2.2 Sending a negative response

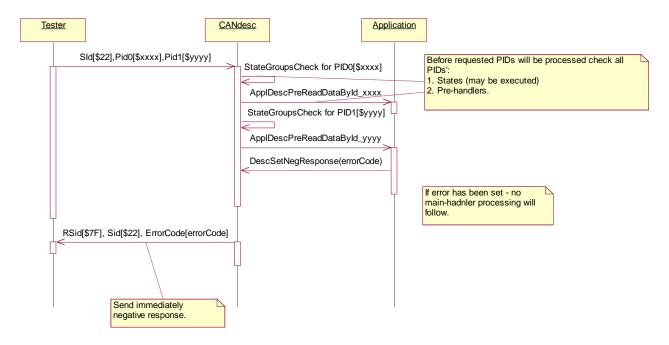


Figure 9-7: Negative response on multiple PIDs (global ring buffer option is on)

©2015, Vector Informatik GmbH Version: 3.09.00 62 / 158



9.3.3.2.3 PostHandler execution rule

All PostHandlers are executed after the finished response transmission (like a normal PostHandler).

Independent of the ring-buffer option setting (enabled or disabled), the execution of the service \$22 PostHandler(s) has the following rule which has to be taken into account: calling the Post-Handler of a specific PID means: either the PreHandler of this PID has been previously called or its MainHandler.

The following sequence chart depicts this:

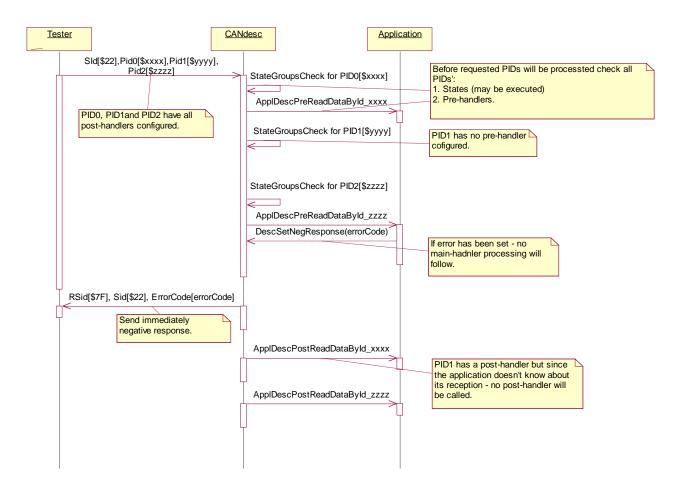


Figure 9-8: Post-Handler execution sequence.

9.4 DynamicallyDefineDataIdentifier (SID \$2C) (UDS)

The DynamicallyDefineDataIdentifier service allows the client (tester) to dynamically define in a server (ECU) a data identifier that can be read via the ReadDataByIdentifier service at a later time.

The intention of this service is to provide the client with the ability to group one or more data elements into a data superset that can be requested en masse via the

©2015, Vector Informatik GmbH Version: 3.09.00 63 / 158



ReadDataByIdentifier or ReadDataByPeriodicIdentifier service. The data elements to be grouped together can either be referenced by:

a source data identifier, a position and size or,

a memory address and a memory length, or,

a combination of the two methods listed above using multiple requests to define the single data element. The dynamically defined dataIdentifier will then contain a concatenation of the data parameter definitions.

The definition of the dynamically defined data identifier can either be done via a single request message or via multiple request messages. This allows for the definition of a single data element referencing source identifier(s) and memory addresses. The server has to concatenate the definitions for the single data element. A redefinition of a dynamically defined data identifier can be achieved by clearing the current definition and start over with the new definition.

At last the dynamically defined data identifier consists of a list of (non-dynamically) defined data identifiers and memory area ranges that can be used in any combination.

For more information, see /ISO 14229-1/

9.4.1 Feature set

These are the supported subfunctions for service \$2C (DynamicallyDefineDataIdentifier):

Subfunction Name	Hex Value
defineByldentifier	01
defineByMemoryAddress	02
clearDynamicallyDefinedDataIdentifier	03

9.4.2 API Functions

The reception of a Service \$2C request will either delete a DynamicDataIdentifier (DDID) or PeriodicDataIdentifier (PDID) by subfunction \$03 or build a DDID/PDID by (several times) using subfunction \$01 and/or \$02.

For subfunction \$02 (defineByMemoryAddress) there is a new application callback function (see chapter 12.6.13 "DynamicallyDefineDataIdentifier (\$2C) (UDS) functions"). It allows the application to permit or deny the extension of the DDID/PDID by accessing the defined memory range. The callback function must check, if the requested memory area is readable for the external Tester and if the current security state of the ECU permits the extension of the DDID/PDID. See chapter 12.6.13.2 for the full set of checks to be executed.

Please note that later, when reading the DDID by using service \$22 (ReadDataByldentifier), further (security) checks for each element of the DDID's list are executed to verify that e.g. the (then active) security state permits the *reading* of the memory area or DID. These checks (of Service \$22 and \$23) are done in the traditional sequence of Pre-, Main- and PostHandler.



The reception of a Service \$22 request starts a new context in CANdesc. Typically the requested data can not be asked from the application by using one single callback function but must be constructed sequentially by collecting data for each part of the DDID's definition list:

A requested basic source data identifier (DID) is asked of the application by the respective callback (as for Service \$22 request), the result data is stripped down to the defined position and size

A memory address is read by its defined function (typically the same as used for a Service \$23 request) and the defined 'size' bytes are collected.

As recommended from /ISO 14229-1/ to prevent data consistency problems a recursive definition of DDIDs is NOT supported.

The Service \$22 response data is collected by splitting the service request into these basic tasks, then running the well known internal functions that were defined for them, collect their results and build up the Service \$22 response. Therefore, each of the above tasks starts a new context, executes the defined Pre-, Main- and Post-Handler where Application-Callbacks get data, delivers its result and finally ends its context.

The recursive evaluation of DDIDs enforces the usage of MultiContext mode.

We would like to point out that the described operating sequence above is completely run within CANdesc and totally transparent for the application except for the additional API callback function. Using Service \$2C or \$2A switches CANdesc to MultiContext mode – if your application isn't prepared to support MultiContext mode (by using the defined macros) you'll get compiler errors about inconsistent argument lists.

9.4.3 Sequence Charts

Service \$2C - Define a DDID

The following picture exemplifies the sequence of defining a DDID by several call of Service DynamicallyDefineDataIdentifier (\$2C).

In our example the first Service \$2C request defines the DDID \$F300 to return two independent memory areas. For both areas the callback function ApplDescCheckDynDidMemoryArea() is triggered and in this example the application permits both accesses.

The consecutive Service \$2C request extends the DDID \$F300 by (some fragments of) the existing DID \$F010. As the here executed PreHandler does not set a Negative Response Code, CANdesc considers the extension of the DDID valid and enlarges the DDID definition.

A third Service \$2C request tries to extend the DDID \$F300 once more by another memory area. In our example the call fails, as the specified memory area (\$0000) is not valid for this ECU. The service is negative responded and the previous DDID specification is left untouched.



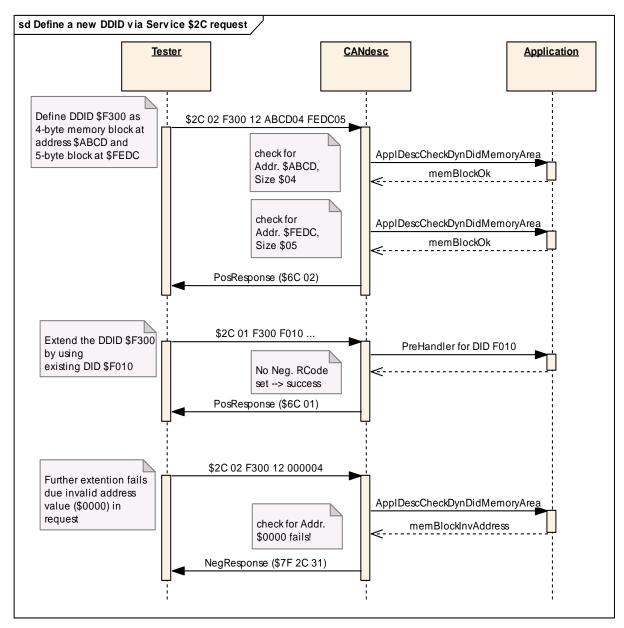


Figure 9-9: Defining a DDID.

Service \$22 - Read a DDID

The above defined DDID is now read by Service ReadDataByldentifier (\$22). Within CANdesc the DDID is disassembled into its elements: One (virtual) request for the first memory range, another request for the second memory range and finally a request for the predefined DID \$F010.



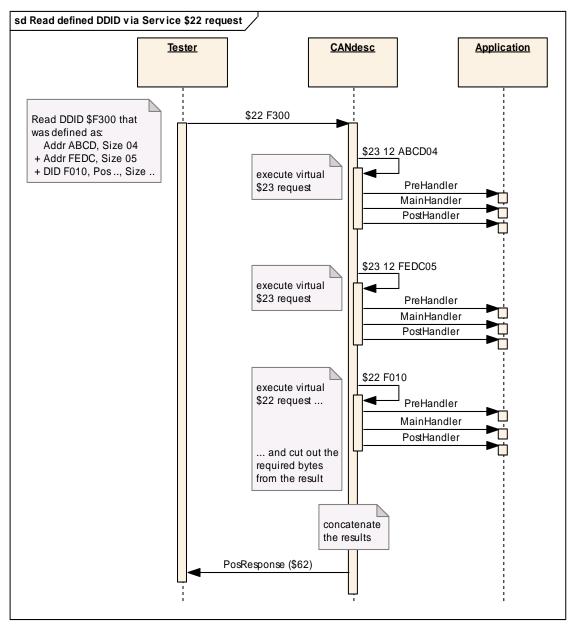


Figure 9-10: Reading a DDID.

Between *CANdesc* and the *application* the sequence looks same as if the tester would have sent 3 requests: (1) ReadMemoryByAddress (\$23) on first address range, (2) ReadMemoryByAddress (\$23) on second address range, and finally (3) ReadDataByIdentifier (\$22) on the DID \$F010. Keep in mind: this is just a picture for the succession of events/API-calls - these requests are not real, the messages are never seen on the bus, the internal sequence is actually slightly different but for the application it looks the same!

9.5 Read/Write Memory by Address (SID \$23/\$3D) (UDS)



Caution

This chapter does not apply to all ECU configurations. Only in special cases the memory access support will be available!



The services \$23 (ReadMemoryByAddress) and \$3D (WriteMemoryByAddress) are handled uniformly in CANdesc.

Basically the memory by address requests look like this:

\$23	FID	address	length	
\$3D	FID	address	length	data

The application need not concern itself with the details how the address and length are formatted. If a valid FID is recognized, CANdesc will extract the address and length information from the request and call an appropriate application callback.

See also:

ApplDescReadMemoryByAddress (12.6.14.1)

ApplDescWriteMemoryByAddress (12.6.14.2)

9.5.1 Tasks performed by CANdesc

To a certain degree CANdesc validates the request.

The basic format checks and service level state validation – this means e.g. security and session validation – are performed before calling the application callback.

Service level state validation means that the request will be denied if all diagnostic instances of service \$23 or \$3D are not allowed in the current state.

In case of WriteMemoryByAddress the application has linear access to the whole data block to write.

9.5.2 Task to be performed by the Application

CANdesc currently does not provide state validation on format identifier level or memory address / memory block level.

This means, that for example different memory addresses shall require different security levels, the application will have to verify that the ECU currently is in an appropriate state to access the requested memory area.

9.5.3 Repeated service calls

The repeated service call feature is available for the memory access callbacks.

Because they have a different prototype than a normal main handler, the usual API 'DescStartRepeatedServiceCall (see 12.6.8.1)' can not be used with the memory access callbacks.

Instead, a new API call 'DescStartMemByAddrRepeatedCall (see 12.6.8.2)' has been added.

To abort the repeated service call, use the usual API.



10 Generic Processing Notifications

If CANdesc UDS2012 is used, the feature "Generic Processing Notifications" is provided. Upon activating this feature, CANdesc will notify the application when the processing of a request starts and ends. Thereby, the notification mechanism is two-staged. On each stage there are two application callbacks, one indication and one confirmation callback. On the first stage "Manufacturer Notification Support", CANdesc will notify the application right before the processing of a fully received request starts, by calling the function ApplDescManufacturerIndication(). When the processing of the request has been finished. the response has been sent and all PostHandlers were called, CANdesc notifies the application again by calling the function ApplDescManufacturerConfirmation(). The application callbacks of the second stage "Supplier Notification Support" are named accordingly ApplDescSupplierIndication() and ApplDescSupplierConfirmation(). The indication callback is called by CANdesc after it has verified that the requested service is supported in the active session, security state and user states. The confirmation callback is also called after the response has been sent, and all PostHandlers were called, but right before the call to ApplDescManufacturerConfirmation(). Thus, the manufacturer and supplier callbacks are called in a nested way. Figure 3-1 illustrates the order of the notification callbacks related to the processing of a service request.

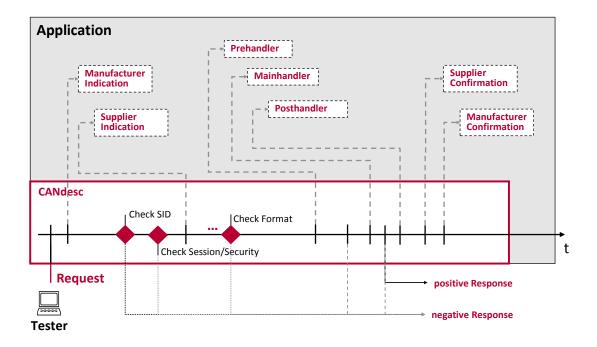


Figure 10-1 Call order of Manufacturer- and Supplier-Notficiation



10.1 Using dynamically defined data Identifier

The Service DynamicallyDefineDataIdentifier allows the definition of data identifiers with other data identifiers or memory areas. These DDIDs can be read via service ReadDataByIdentifier. When reading a DDID, for each source element a virtual request is processed by CANdesc to get the information for this source element from the application(see chapter 9.4). Because CANdesc processes the virtual requests equal to normal requests, the notification functions will not only be called for the \$22 request containing the DDID, but also for each virtual request. The application has to consider these additional calls, in case a DDID is requested.

Figure 10-2 shows an example of reading a DDID with service \$22.

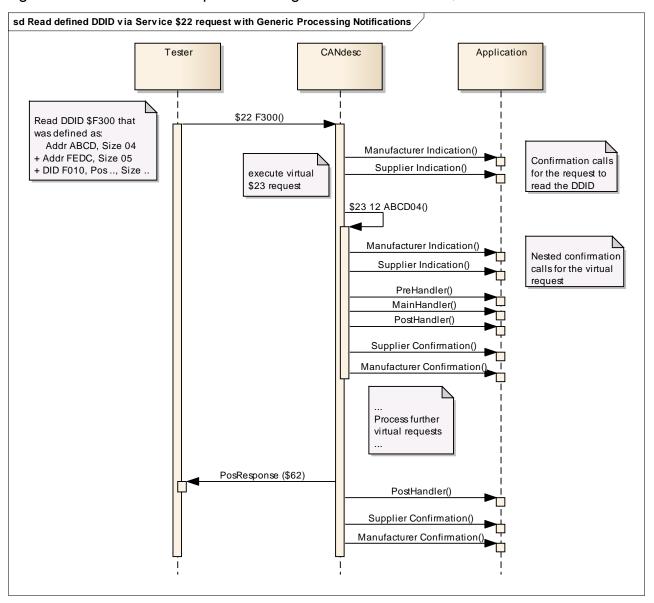


Figure 10-2 Read out a DDID with generic processing notifications



11 Busy Repeat Responder Support (UDS2006 and UDS2012)

Busy Repeat Responder is a feature, that allowes CANdesc to respond to incoming requests during the processing of another request. Such parallel requests are properly received and in the next task cycle of CANdesc responded negatively with NRC BusyRepeatRequest (0x21).

Figure 11-1 illustrates the functionality of the Busy Repeat Responder mechanism. During the processing of Request 1, Requests 2 and 3 from Tester 2 are responded negatively with NRC BusyRepeatRequest. After the processing of request 1 has finished and a positive response has been sent, Request 4 from Tester 2 can be processed properly.

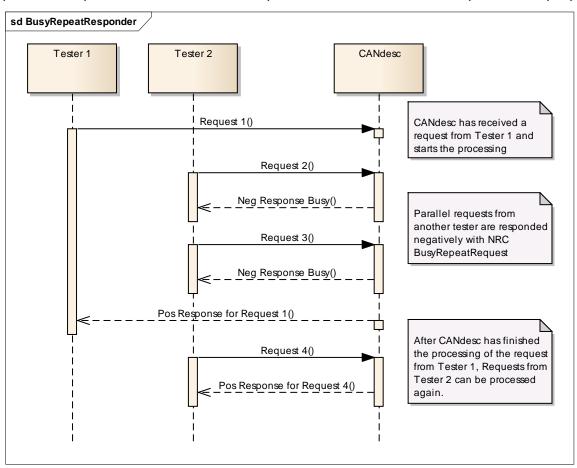


Figure 11-1 Illustration of the feature BusyRepeatResponder

Preconditions that must be fulfilled when using the feature Busy Repeat Responder:

- The TP must be an ISO TP from Vector with TP Class "Dynamic Normal Addressing Multi TP" or "Dynamic Normal Fixed Addressing Multi TP"
- > In the TP configuration the feature "Extended API Overrun Reception" must be active
- > In the TP configuration the number of Rx channels and Tx Channels must be > 1
- > In case of Dynamic Normal Addressing Multi TP, a dispatcher needs to be implemented in the application (for a detailed description see chapter 13.12)



- Restrictions when using the feature Busy Repeat Responder:
- Only physical parallel requests are responded negatively. Functional parallel requests will NOT get a negative response.

11.1 Configuration in GENy

To activate the feature Busy Repeat Responder use the setting in the CANdesc component root (please refer to chapter 6.2.1 Global CANdesc Settings).

Furthermore, the feature requires additional configuration in the TP component. The feature "Extended API – Overrun Reception" must be enabled. This setting is available in the group "Advanced Configuration". To be able to receive another request while one is under processing, the "Number of Rx Channels" and "Number of Tx Channels" must be at least two. The number of channels can be configured in the TP Connection Groups:

E TP Connection Group				
Name	Diag			
Number of Rx Channels	2			
Number of Tx Channels	2			

Figure 11-2 Example of the "Number of Rx(Tx) Channels" settings

In case of "Dynamic Normal Addressing Multi TP" a dispatcher needs to be implemented in the application. The description of the GENy configuration to integrate the dispatcher is described in chapter 13.12 ...use "Dynamic Normal Addressing Multi TP" with multiple tester.



12 CANdesc API

12.1 API Categories

12.1.1 Single Context

This API category is used if no parallel processing is necessary. This is typical for the ISO 14229 specification.

12.1.2 Multiple Context (only CANdesc)

This API category is used if parallel processing is necessary. This means not that CANdesc can work with multiple instances, but only one functional request can be processed parallel to a working physical request.

12.2 Data Types

The following standard data types are used in this document:

vuint8	Represents 8 bit unsigned integer value.
vsint8	Represents 8 bit signed integer value.
vuint16	Represents 16 bit unsigned integer value.
vsint16	Represents 16 bit signed integer value.
vuint32	Represents 32 bit unsigned integer value.
vsint32	Represents 32 bit signed integer value.

Table 12-1: standard data types

Additional data types used in this document are described in the corresponding function description.

12.3 Global Variables

-

12.4 Constants

12.4.1 Component Version

The version of the CANdesc component consist of 3 parts in the following format: **MM.SS.BB**,

Where:

- > **MM** is the main version of the component,
- > **SS** is the subversion of the component,
- > **BB** is the bug-fix version of the component.

To get the current CANdesc version, the application could use the following shared data:



Name	Туре	Description
g_descMainVersion	BCD	Contains the main version part.
g_descSubVersion	BCD	Contains the subversion part.
g_descBugFixVersion	BCD	Contains the bug-fix version part.

Table 12-2: Version API data

Note: The version of the module is the same as the version of the generator's DLL file.

12.5 Macros

12.5.1 Data exchange

The CANdesc provides a generic API for splitting a multi-byte (up to 4 bytes) variable to a byte sequence with platform transparent access to each byte, and assembling a multi-byte (up to 4 bytes) variable from a sequence of bytes.

12.5.1.1 Splitting 16 bit data

The following function could be used to get platform independent access to the corresponding bytes of 16 bit data variable:

vuint8 DescGetHiByte(16BitData)

vuint8 DescGetLoByte(16BitData)

12.5.1.2 **Splitting 32 bit data**

The following function could be used to get platform independent access to the corresponding bytes of 32 bit data variable:

vuint8 DescGetHiHiByte(32BitData)

vuint8 DescGetHiLoByte(32BitData)

vuint8 DescGetLoHiByte(32BitData)

vuint8 DescGetLoLoByte(32BitData)

12.5.1.3 Assembling 16 bit data

The application can create the 16 bit signal from a byte stream using the following API:

uint16 DescMake16Bit(hiByte, loByte)

where the **hiByte**, **loByte** are the corresponding bytes for the returned 16 bit data.



DescInitPowerOn

12.5.1.4 Assembling 32 bit data

The application can create the 32 bit signal from a byte stream using the following API:

uint32 DescMake32Bit(HiHiByte, HiLoByte, LoHiByte, LoLoByte)

where the **HiHiByte**, **HiLoByte**, **LoHiByte**, **LoLoByte** are the corresponding bytes for the returned 32 bit dat

12.6 Functions

12.6.1 Administrative Functions

12.6.1.1 DescInitPowerOn()

	Available since 2.00.00	
	Is Reentrant	
	Is callback	
Prototype		
Single Context		
void DescInitPowerOn (D	escInitParam initParameter)	
Multi Context		
void DescInitPowerOn (D	escInitParam initParameter)	
Parameter		
initParameter	Manufacturer specific type, please refer 'CANdesc: OEM specifics' document	
Return code		
-	-	
Functional Description		
PowerOn Initialization of the CANdesc. This function has to be called once before all other functions of CANdesc after PowerOn.		
Pre-conditions		
Correctly initialized CAN-driver via CanInitPowerOn() and TransportLayer via TpInitPowerOn() .		
Call context		
Background-loop level wit	th global disabled interrupts	
Particularities and Limit	ations	
•	tParameter) must be called after TpInitPowerOn() was called PMC/ documentation), otherwise the reserved diagnostic	

©2015, Vector Informatik GmbH Version: 3.09.00 75 / 158



12.6.1.2 DescInit()

	DescInit
	Available since 2.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
void DescInit (DescInit	Param initParameter)
Multi Context	
void DescInit (DescInit	Param initParameter)
Parameter	
initParameter	Manufacturer specific type, please refer 'CANdesc Part IV: OEM specifics' document
Return code	
-	-
Functional Description	
Re-initialization of CANde	esc.
	d to re-initialize CANdesc (e.g. after WakeUp). All internal states ept the states in this initParameter (e.g. Session or
Pre-conditions	
CANdesc was once initial	ized via DescInitPowerOn ()
Call context	
Background-loop level wit	th global disabled
12.6.1.3 DescTask()	
12101110 2000101011()	DescTask
	Available since 2.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
void DescTask (void)	
VOIG DESCIUSK (VOIG)	
Multi Context	
void DescTask (void)	

©2015, Vector Informatik GmbH Version: 3.09.00 76 / 158



Parameter		
_	-	
Return code		
-	-	
Functional Description		
The function DescTask() application.	has to be called periodically (cycle time $T_{{\scriptsize Desc Call Cycle}})$ by the	
Within the context of this addition the monitoring of	function the interaction with the application is performed. In the timings is done, therefore the accuracy of the timings and on the accuracy of the calls.	
Pre-conditions		
-		
Call context		
	OSEK-OS Task. The task should have a lower or equal priority to the CANdesc component.	
Particularities and Limit	ations	
May not be called if the	e DescStateTask() and DescTimerTask() are called.	
12.6.1.4 DescStateTa	ask()	
	DescStateTask Available since 4.00.00 Is Reentrant Is callback	
Prototype		
Single Context		
void DescStateTask (voi	d)	
Multi Context		
void DescStateTask (void)		
Parameter		
_		
	-	
Return code	-	

©2015, Vector Informatik GmbH Version: 3.09.00 77 / 158



Motivation: Using a single task function for timers and processing leads either to slow processing or to faster timers which costs runtime for the ECU. The timers need very stable cyclical call but the processing tasks may be done "as soon as possible" (i.e. using OSEK to be assigned to lower priority task).

The function **DescStateTask()** has to be called periodically by the application. It is not a timer task – it has no specific time period. As smaller this tasks call period is, so faster will be the service processing.

This task function will process received request and to control the transmission of the responses. Depending on the ECU requirements it is recommended to call this task as soon as possible to avoid delays of the response (e.g. dynamically defined DID, scheduled data, etc.), but take into account that within this task the corresponding MainHandler will be executed too.

P	re-	-CO	nd	iti	on	S

Call context

Background-loop level or OSEK-OS Task. The Task should have a lower or equal priority than all other interaction to the CANdesc component.

Particularities and Limitations

- > May not be called if the **DescTask()** is used (reentrancy is forbidden).
- >

12.6.1.5 DescTimerTask()

	DescTimerTask Available since 4.00.00 Is Reentrant Is callback
Prototype	
Single Context	
void DescTimerTask (voi	.d)
Multi Context	
void DescTimerTask (voi	d)
Parameter	
_	-
Return code	
_	-

©2015, Vector Informatik GmbH Version: 3.09.00 78 / 158



Motivation: Using a single task function for timers and processing leads either to slow processing or to faster timers which costs runtime for the ECU. The timers need very stable cyclical call but the processing tasks may be done "as soon as possible" (i.e. using OSEK to be assigned to lower priority task).

The function **DescTimerTask()** has to be called periodically by the application in the configured task period. It can be called as slow as possible to free run time resources.

Pre-conditions

-

Call context

Background-loop level or OSEK-OS Task. The Task should have a lower or equal priority than all other interaction to the CANdesc component.

Particularities and Limitations

> May not be called if the **DescTask()** is used. This will lead to either reentrancy (consistency) problems or/and to timing issues.

5

12.6.1.6 DescGetActivityState()

DescGetActivityState
Available since 2.00.00
Is Reentrant 🛚
le callback

		is calidack	
Prototype			
Single Context			
DescContextActivity DescGetActivityState (void)			
Multi Context			
DescContextActivity DescGetActivityState (vuint8 iContext)			
Parameter			
iContext	reference to the corresponding request contex	ct	

©2015, Vector Informatik GmbH Version: 3.09.00 79 / 158



Return code There is currently no request processing (even when 1. kDescContextIdle scheduler is active). 2. kDescContextActiveRxBegin Currently request reception is active. Reception finished, request will be processed. 3. kDescContextActiveRxEnd The request was received, is under processing now DescProcessingDone called waiting for data before 4. kDescContextActiveProcess starting the transmission. 5. kDescContextActiveProcessEnd Ready for response transmission. Transmission of the response is currently active. 6. kDescContextActiveTxReady Transmission/processing ended. Post-processing will be performed. 7. kDescContextActiveTx 8. kDescContextActivePostProcess

Functional Description

Motivation: Sometimes the knowledge about the presence of a tester is necessary. A typical use-case is to avoid the ECU from going into sleep mode.

A non-default session indicates that a tester is present. But how can this be done, if the ECU is in the default session?

Due to that fact the ECU application can call the function **DescGetActivityState()** any time to check if CANdesc has something to do or is in idle mode. This can be used e.g. to change the state of the ECU sleep mode.

Note: The return value is bit coded and any senseful combination of the above mentioned values is possible (e.g. *kDescContextActiveRxBegin* | *kDescContextActivePostProcess*). Please check always with bit test (and operation) and not using the value comparison.

Please check always with bit test (and operation) and not using the value comparison.
Pre-conditions
-
Call context
-
Particularities and Limitations
>

12.6.2 Multi Variant Configuration Functions

12.6.2.1 DescInitConfigVariant()

• •	
	DescInitConfigVariant
	Available since 6.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context and Multi Context	
void DescInitConfigVariant (DescVariantMask varMask)	

©2015, Vector Informatik GmbH Version: 3.09.00 80 / 158



Parameter			
varMask	Contains the VSG(s) that shall be active additionally to the base variant		
Return code			
-	-		
Functional Description			
DescInitPowerOn	initialized via one of the APIs		
or DescInit;			
the base variant will be only active (please refer to chapter 8 Multi Identity for more details). If additionally other variants shall be activated, this API shall be called with a parameter value that represents the variants (multiple variants can be OR-ed) that shall be activated.			
The variant values that shall be used for building the API parameter value are located in the desc.h file. The naming convention is as follows: kDescVariant <variant qualifier="" vsg=""></variant>			
Pre-conditions			
-Multi- variant (VSG) mod	e is activated for CANdesc.		
Call context			
-			
Particularities and Limit	ations		
 Shall not interrupt the DescTask function. Best place to call this API is immediately after the CANdesc initialization API-call while the interrupts are still locked. 			
12.6.2.2 DescGetCon	figVariant()		
	DescGetConfigVariant		
	Available since 6.00.00 Is Reentrant ☐		
	Is callback		
Prototype			
Single Context and Multi	Context		
DescVariantMask DescGet	ConfigVariant (void)		
Parameter			
-			

©2015, Vector Informatik GmbH Version: 3.09.00 81 / 158



Return code		
Variant mask	Represents the bit-mapped value of the currently active variants in the ECU.	
Functional Description		
This API returns the bit-m	apped value of the currently active variants set in CANdesc.	
The variant values that shall be used for checking the API return value are located in the desc.h file. The naming convention is as follows: kDescVariant <variant qualifier="" vsg=""></variant>		
Pre-conditions		
-Multi- variant (VSG) mode is activated for CANdesc.		
Call context		
- This API can be called from any call-context.		
Particularities and Limitations		

12.6.3 Service Functions

12.6.3.1 DescSetNegResponse()

	DescSetNegResponse	
	Available since 2.00.00	
	Is Reentrant	
	Is callback	
Prototype		
Single Context		
void DescSetNegResponse	(DescNegResCode errorCode)	
Multi Context		
void DescSetNegResponse	(vuint8 iContext, DescNegResCode errorCode)	
Parameter		
iContext	reference to the corresponding request context	
errorCode	the errorCode is the one of the provided error code constants of CANdesc in the desc.h file with the following naming convention: kDescNrc <error name="">.</error>	
Return code		
_	_	

©2015, Vector Informatik GmbH Version: 3.09.00 82 / 158



DescProcessingDone

Functional Description

In the PreHandler or in the MainHandler function the application has the possibility of forcing negative response with a certain negative response code for the current request when it is necessary.

Pre-conditions

_

Call context

Within a 'Service PreHandler' function and within or after a 'Service MainHandler' function

Particularities and Limitations

- > Once an error was set it can not be overwritten or reset.
- > This function does not finish the processing of the request. It just sets a certain error and after that the application must confirm that the request processing was completely finished by calling DescProcessingDone().

12.6.3.2 DescProcessingDone()

	2000:10	0000111920110
	Availabl	e since 2.00.00
	I	s Reentrant
		ls callback
Prototype		
Single Context		
void DescProcessingDone	(void)	
Multi Context		
void DescProcessingDone	(vuint8 iContext)	
Parameter		
iContext	reference to the corresponding request context	
Return code		
-	-	

Functional Description

After completing the request execution the application must call the API function. By calling this function, depending on the previous actions of the application the CANdesc module will either send a response (positive/negative depending on the error state machine) or no response will be send if the application/CANdesc decides that there must be no response (please refer the Part III User Manual)

			OPT.	
ιел	'e-	\sim	пт	ne

-

Call context

Within or after a 'Service MainHandler' function



Particularities and Limitations

12.6.4 Service callback functions

In CANdesc 6 the naming convention of the service callback function has changed due to standardization reasons. In Table 12-3, the new naming convention can be found. Earlier versions of CANdesc (< 6.0) used always Service-Qualifiers and Instance-Qualifiers from the CDD file. Since CANdesc 6, for Service-Qualifiers always standardized names are used, whereas for Instance-Qualifiers either a standardized name or the name from the CDD file is used. The names of the service callback functions are based on the following pattern:

ApplDesc[Pre|Post]<ServiceQualifier><DiagInstanceQualifier>

When migrating to CANdesc 6 the service callbacks have to be renamed according to the new naming convention.

Service	SubService	Instance-Qualifier	Service-Qualifier	
	0x01	Default		
0x10	0x02	Programming	StartSession	
	0x03	Extended		
	0x01	Hard		
	0x02	KeyOffOn		
0x11	0x03	Soft	EcuReset	
	0x04	EnableRapidShutDown		
	0x05	DisableRapidShutDown		
0x14	None	DiagInfo	Clear	
	0x01	RNODTCBSM	ReadDtc	
	0x02	RDTCBSM		
	0x03	RDTCSSI		
	0x04	RDTCSSBDTC		
	0x05	RDTCSSBRN		
	0x06	RDTCEDRBDN		
	0x07	RNODTCBSMR		
	0x08	RDTCBSMR		
0x19	0x09	RSIODTC		
	0x0A	RSUPDTC		
	0x0B	RFTFDTC		
	0x0C	RFCDTC		
	0x0D	RMRTFDTC		
	0x0E	RMRCDTC		
	0x0F	RMMDTCBSM		
	0x10	RMDEDRBDN		
	0x11	RNOMMDTCBSM		



Service	SubService	Instance-Qualifier	Service-Qualifier
	0x12	RNOOBDDTCBSM	
	0x13	ROBDDTCBSM	
	0x14	RDTCFDC	
	0x15	RDTCWPS	
	0x16	RDTCRDIDBDN	
	0x41	RWWHOBDNDTCBMR	
	0x42	RWWHOBDDTCBMR	
	0x55	RWWHOBDDTCWPS	
0x22	Any	Instance-Qualifier from CDD	ReadDid
0x23	None	MemoryByAddress	Read
0x24	Any	Instance-Qualifier from CDD	ReadScalingDid
	Odd Id		GetSeed
0x27	Even Id	Instance-Qualifier from CDD	SendKey
	0x00	EnableRxEnableTx	
000	0x01	EnableRxDisableTx	On many Otal
0x28	0x02	DisableRxEnableTx	CommCtrl
	0x03	DisableRxDisableTx	
	0x01	Instance-Qualifier from CDD	ReadDidSlow
004	0x02		ReadDidMed
0x2A	0x03		ReadDidFast
	0x04		ReadDidStop
	0x01	Instance-Qualifier from CDD	DynDefineByDid
0x2C	0x02		DynDefineByAddr
	0x03		DynDefineClear
0x2E	Any	Instance-Qualifier from CDD	WriteDid
	0x00		IoCtrlRetCtrlToEcu
	0x01		IoCtrlRstToDefault
0x2F	0x02	Instance-Qualifier from CDD	IoCtrlFrzCurrState
	0x03		IoCtrlShortTermAdj
	0x01		RtnCtrlStart
0x31	0x02	Instance-Qualifier from CDD	RtnCtrlStop
	0x03		RtnCtrlReqRes
0x34	None		RequestDownload
0x35	None		RequestUpload
0x36	None		TransferData
0x37	None		RequestTransferExit
0x3D	None	MemoryByAddress	Write
0x3E	0x00	TesterPresent	Send
0x84	None		SecuredDataTransmission



Service	SubService	Instance-Qualifier	Service-Qualifier
0.05	0x01	Enable	CombralDtaCattina
0x85	0x02	Disable	ControlDtcSetting
	0x00	Stop	
	0x01	OnDtcStatChg	
	0x02	OnTmrInt	
	0x03	OnChgOfDid	
	0x04	ReportActEv	
	0x05	Start	
	0x06	Clear	
000	0x07	OnCompOfVal	Roe
0x86	0x40	StStop	Roe
	0x41	StOnDtcStatChg	
	0x42	StOnTmrInt	
	0x43	StOnChgOfDid	
	0x44	StReportActEv	
	0x45	StStart	
	0x46	StClear	
	0x47	StOnCompOfVal	
	0x01	VerifyFixedBaudrate	
0x87	0x02	VerifySpecificBaudrate	LinkControl
	0x03	TransitionBaudrate	

Table 12-3 Naming convention of service callback functions in CANdesc 6

12.6.4.1 Service PreHandler

ApplDescPre<Service-Qualifier + Instance-Qualifier>>
Available since 2.00.00
Is callback ⊠

Prototype			
Single Context			
void ApplDescPre <servic< th=""><th>e-Qualifier + Instance-Qualifier> (void)</th></servic<>	e-Qualifier + Instance-Qualifier> (void)		
Multi Context			
void ApplDescPre <servic< th=""><th colspan="3">void ApplDescPre<service-qualifier +="" instance-qualifier=""> (vuint8 iContext)</service-qualifier></th></servic<>	void ApplDescPre <service-qualifier +="" instance-qualifier=""> (vuint8 iContext)</service-qualifier>		
Parameter			
iContext	the current request context location		
Return code			
_	-		

©2015, Vector Informatik GmbH Version: 3.09.00 86 / 158



The PreHandler is executed before the Service MainHandler is called. In the PreHandler, the application can hook any (especially application-specific) state validations. One PreHandler implementation may be shared with different service instances (only CANdesc).

To allow quite complex operations to take place, the application has access to the request data using the context data structure (if given).

Pre-conditions

Must be configured to 'User' in attribute 'PreHandlerSupport"

Call context

From DescTask()

Particularities and Limitations

12.6.4.2 Service MainHandler

ApplDesc<Service-Qualifier + Instance-Qualifier>
Available since 2.00.00

Is callback

Prototype

Single Context

void ApplDesc<Service-Qualifier + Instance-Qualifier> (DescMsgContext* pMsgContext)

Multi Context

 $\verb"void ApplDesc<Service-Qualifier + Instance-Qualifier>" (DescMsgContext* pMsgContext)"$

Parameter

```
pMsgContext typedef struct
{

DescMsg reqData;

DescMsgLen reqDataLen;

DescMsg resData;

DescMsgLen resDataLen;

DescMsgLen resDataLen;

DescMsgAddInfo msgAddInfo;

vuint8 iContext;

t_descUsdtNetBus busInfo;
}
DescMsgContext;
```

©2015, Vector Informatik GmbH Version: 3.09.00 87 / 158



DescMsgAddInfo	DescBitType reqType :2; /* 0x01: Phys 0x02: Func */	
	DescBitType resOnReq :2; /* 0x01: Phys 0x02: Func */	
	DescBitType suppPosRes:1; /* 0x00: No 0x01: Yes */	
Read access	pMsgContext->reqData pointer to the first byte of the already extracted request data.	
	pMsgContext->reqDataLen length of the extracted request data.	
	pMsgContext->iContext	
	the current request context location (used only as a handle - DO NOT MODIFY).	
	pMsgContext->msgAddInfo.reqType	
	the current request addressing method. Could be either ,kDescFuncReg' or ,kDescPhysReg' (bitmapped).	
	pMsgContext->msgAddInfo.suppPosRes	
	if set, no positive response will be sent. (UDS only).	
	pMsgContext->busInfo	
	the current request communication information (i.e. driver type (CAN, MOST, FlexRay, etc.), addressing information, communication channel number, tester address (if applicable) etc.	
Write access	pMsgContext->resData	
	pointer to the first position where the response data can be written.	
	pMsgContext->resDataLen length of the written data.	
	pMsgContext->msgAddInfo.resOnReq	
	can be used to disable the response transmission on the current request. If set to '0' no response will be transmitted. Physical and function can be set separately (bitmapped).	
Return code	Transition out be det departetely (bitmapped).	
Return code		
-	-	

The MainHandler processes the service request.

Perform length validation for varying length information of request.

Disassemble any data received with the request telegram and process it,.

Assemble any data to be send with the response and update current response length.

Confirm that the processing is finished.

Pre-conditions

Must be configured to 'User' in attribute 'MainHandlerSupport'

Call context

From DescTask()

Particularities and Limitations

If used as MainHandler for Protocol Services, the Protocol-Service-Qualifier is used instead



12.6.4.3 Service PostHandler

ApplDescPost<Service-Qualifier + Instance-Qualifier>
Available since 2.00.00
Is callback ⋈

 P	ro	10	AV		
	1 15 17 /	1 5 9 /	100.74	ıw.	100

Single Context

void ApplDescPost<Service-Qualifier + Instance-Qualifier> (vuint8 status)

Multi Context

void ApplDescPost<Service-Qualifier + Instance-Qualifier> (vuint8 iContext, vuint8 status)

Parameter

iContext	the current request context location
status (bit-coded)	kDescPostHandlerStateOk The positive response was transmitted successfully kDescPostHandlerStateNegResSent It was a negative response kDescPostHandlerStateTxFailed A transmission error occurred

Return code

_

Functional Description

Any state transition may not be performed before the current service is finished completely (the last frame of the response is sent successfully).

The PostHandler is executed after a confirmation of the message transmission is received and is designated for state adaptation – all other things are already done when the PostHandler is called.

Pre-conditions

Must be configured to 'User' in attribute 'PostHandlerSupport'

Call context

From DescTask()

Particularities and Limitations

- If used as PostHandler for Protocol Services, the Protocol-Service-Qualifier is used instead
- You can override the given name extension (Service-Qualifier + Instance-Qualifier) by using the 'PostHandlerOverrideName'.

12.6.5 Unknown (User) Service Handling

In some cases the ECU shall support a service which is not described in the common way for CANdesc (by means of CANdelaStudio/GENtool). With a little bit more effort inside the application than for the known services the ECU is still be able to support those unknown services. The effort results from the fact that CANdesc knows nothing about this service



(e.g. session, security or other states described in the CDD configuring CANdesc, addressing methods allowed for those services, etc.) and therefore the application must do this work for each unknown service by itself. In fact for CANdesc there is only one unknown service and it is up to the application to differentiate between multiple unknown service(s).

Attention: This feature is available since version 2.11.00 of CANdesc(Basic).

12.6.5.1 How it works

If the feature "Unknown Services Acceptance" is enabled in the GENtool CANdesc uses following handling:

if a service was not recognized by its SID, before the automatic negative response transmission will be sent, the application will be called (see 12.6.5.2 ApplDescCheckUserService) to check this SID too. If it can not recognize it as a valid one the usual negative response will be sent.

If the application has accepted the SID, then a special Unknown Service MainHandler will be called (see 12.6.5.4 Unknown (User) Service MainHandler).

If in GENtool "Unknown Services Post Handler Calls" is set, after the request processing has been accomplished, a special Unknown service PostHandler will be called (see 12.6.5.5 Unknown (User) Service PostHandler).

Note:

Since CANdesc doesn't distinguish among unknown services, a special API was designed to get the application the opportunity to dispatch among the SIDs (in MainHandler and in the PostHandler).

The unknown services are processed on service id level which means the application shall dispatch and do the whole format check of these requests. The state management shall be performed by application, too.

12.6.5.2 ApplDescCheckUserService()

ApplDescCheckUserService
Available since 2.11.00
Is callback ⋈

Prototype		
Single Context		
vuint8 ApplDescCheckUserService (DescMsgItem sid)		
Multi Context		
vuint8 ApplDescCheckUserService (DescMsgItem sid)		
Parameter		
sid	The service identifier which is currently under processing.	

©2015, Vector Informatik GmbH Version: 3.09.00 90 / 158



Return code	
kDescOk	Return this value if the service id is a "user defined" one.
	Return this value if the service id is unknown for the application
kDescFailed	too.

The currently received request contains a service Id unkown to CANdesc. Within this function the ECU application has to decide immediately if the SID is known or not. Depending on the return value, CANdesc will process this request further or will reject it by sending a negative response 'ServiceNotSupported'.

Pre-conditions

The "Unknown Services Acceptance" option is enabled in the GENtool configuration.

Call context

From DescTask() (in KWP diagnostics also from RxInterrupt).

Particularities and Limitations

12.6.5.3 DescGetServiceId()

	DescGetServiceId
	Available since 2.11.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
DescMsgItem DescGetServ	iceId (void)
Multi Context	
DescMsgItem DescGetServ	iceId (vuint8 iContext)
Parameter	
iContext	The current request context location
Return code	
DescMsgItem	The service id which is currently under processing.
Functional Description	
Reports the service id of t	he currently processed unknown-service request.
Pre-conditions	
The "Unknown Services A	acceptance" option is enabled in the GENtool configuration.
Call context	
From DescTask()	

©2015, Vector Informatik GmbH Version: 3.09.00 91 / 158



Particularities and Limitations

> This function may be called at any time within a diagnostic request life cycle starting at the call of the MainHandler and ending by the PostHandler (if configured) or (if none configured) by calling **DescProcessingDone**

12.6.5.4 Unknown (User) Service MainHandler

ApplDescUserServiceHandler
Available since 2.11.00
Is callback

✓

1 2 1	10	7.0	7.01	nn
м	May.	IL W.	19/4	pe

Single Context

void ApplDescUserServiceHandler (DescMsgContext* pMsgContext)

Multi Context

void ApplDescUserServiceHandler (DescMsgContext* pMsgContext)

Parameter

pMsgContext

Please refer to section 12.6.4.2 Service MainHandler for details about this parameter.

Read Access

pMsgContext->regData

pointer to the first byte after the service Id.

The other members of the parameter are described in 12.6.4.2 Service MainHandler

Write access

pMsgContext->resData

pointer to the first byte after the response SID, where the data (incl. sub-parameters) will be written.

The other members of the parameter are described in 12.6.4.2 Service MainHandler

Return code

Functional Description

This MainHandler is called for all unknown service requests at service id level, so the application has to do following:

Perform service id dispatching (if more than one user defined service shall be used).

Perform length validation for varying length information of request.

Perform parameter (if any) validation.

Disassemble any data received with the request telegram and process it.

Assemble any data to be send with the response and update current response length Confirm that the processing is finished.

Pre-conditions

The "Unknown Services Acceptance" option was enabled in the GENtool configuration.

Call context

From DescTask()



Particularities and Limitations

- > Please refer the section 12.6.4.2 Service MainHandler.
- > **DescGetServiceId()** may be called here to dispatch the SID of the currently processed unknown service (please refer to 12.6.5.3 DescGetServiceId)

12.6.5.5 Unknown (User) Service PostHandler

ApplDescPostUserServiceHandler
Available since 2.11.00
Is callback ⊠

_				
P.	roi	70	7.41	20
	III. WAL	447	34	W-

Single Context

void ApplDescPostUserServiceHandler (vuint8 status)

Multi Context

void ApplDescPostUserServiceHandler (vuint8 iContext, vuint8 status)

Parameter

iContext,	status	Please refer to section 12.6.4.3 Service PostHandler for
		information.

Return code

-

Functional Description

The functionality of the user service PostHandler is the same as the one of the normal service PostHandler. Please refer to 12.6.4.3 Service PostHandler for more details.

Pre-conditions

The "Unknown Services Post Handler Calls" option was enabled in the GENtool configuration.

CANdesc version >= 2.11.00

Call context

From **DescTask()**

Particularities and Limitations

- > Please refer to section 12.6.4.3 Service PostHandler for information.
- DescGetServiceId() may be called here to dispatch the SID of the currently postprocessed user service (please refer to 12.6.5.3 DescGetServiceId)

12.6.6 Session Handling

12.6.6.1 ApplDescCheckSessionTransition()

ApplDescCheckSessionTransition

Available since 2.00.00

Is callback

✓

©2015, Vector Informatik GmbH Version: 3.09.00 93 / 158



Prototype

Single Context

void ApplDescCheckSessionTransition (DescStateGroup newState, DescStateGroup formerState)

Multi Context

Darameter

void ApplDescCheckSessionTransition (vuint8 iContext, DescStateGroup newState,
DescStateGroup formerState)

Full message Context

void ApplDescCheckSessionTransition (DescMsgContext* pMsgContext, DescStateGroup newState, DescStateGroup formerState)

i didilictoi	
pMsgContext	Pointer to the current message context (refer to 12.6.4.2)
iContext	the current request context location
newState	the CANdesc component has change to this session state

the CANdesc component has change from this session state

Return code

_

Functional Description

This hook function will be called, while session request is received (SID \$10). If the application wants to discard this request, an error must be set (via **DescSetNegResponse()**).

The application always has to confirm this hook function via **DescSessionTransitionChecked()**.

Both above functions can be called also outside of the context of this function (e.g. application task waiting for results form an I/O port). CANdesc will send RCR-RP response as long as the application delays the confirmation for the session transition.

In some cases the application has to know whether the SPRMIB in the request was set or not. Since this API call does not contain this information, a dedicated API in CANdesc provides it: DescIsSuppressPosResBitSet ().

Pre-conditions

At least one DiagnosticSessionControl service must be configured to 'OEM' in attribute 'MainHandlerSupport'

Call context

From DescTask()



Particularities and Limitations

> Call the API function **DescSessionTransitionChecked()** to end the service processing

>

12.6.6.2 Desc	SessionTransitionChec	ked()
		DescSessionTransitionChecked Available since 2.00.00 Is Reentrant Is callback
Prototype		
Single Context		
void DescSession	nTransitionChecked (void)	
Multi Context		
void DescSession	nTransitionChecked (vuint	.8 iContext)
Parameter		
iContext	the current reques	et context location
Return code		
-	-	
Functional Desc	ription	
	ion has finished the process SessionTransition() this fu	
Pre-conditions		
At least one DiagnosticSessionControl service must be configured to 'OEM' in attribute 'MainHandlerSupport'		
Call context		
Within or after a '	AppIDescCheckSessionT	ransition()' function
Particularities a	nd Limitations	
> If this function RCR-RP response		desc component sends automatically the
12.6.6.3 Desc	lsSuppressPosResBitS	et ()
		DescIsSuppressPosResBitSet
		Available since 5.07.14
		Is Reentrant Is callback
Prototype		
Single Context		

©2015, Vector Informatik GmbH Version: 3.09.00 95 / 158



DescBool DescIsSuppress	PosResBitSet (void)	
Multi Context		
DescBool DescIsSuppress	PosResBitSet (vuint8 iContext)	
Parameter		
iContext	the current request context location	
Return code		
kDescTrue	The SPRMIB is set.	
kDescFalse	The SPRMIB is NOT set.	
Functional Description		
This API can be always called while a diagnostic service processing is ongoing to get the information about the SPRMIB state. All main-handlers do contain this information already in the pMsgContext parameter so use it instead of this API. In some other cases the application does not have access to the pMsgContext, and there the API can be used.		
Pre-conditions		
Only for UDS configuration May be called only while a data can be reported.	ns. a diagnostic service processing is ongoing. Otherwise invalid	
Call context		
Any.		
Particularities and Limit	ations	
>		

12.6.6.4 ApplDescOnTransitionSession()

		Available since 2.00.00
		Is Reentrant
		Is callback
Prototype		
Single Context		
void ApplDescOnTransitionSession	(DescStateGroup newState,	
	DescStateGroup formerState)	
Multi Context		
void ApplDescOnTransitionSession	(DescStateGroup newState,	
	DescStateGroup formerState)	

©2015, Vector Informatik GmbH Version: 3.09.00 96 / 158

ApplDescOnTransitionSession



Parameter	
newState	the CANdesc component has change to this session state
formerState	the CANdesc component has change from this session state
Return code	
-	-
Functional Description	
	e of a SessionControl request the session will transit to the unction informs the application that such a transition occurs.
Pre-conditions	
-	
Call context	
From DescTask() interrupts might be disable	ed
Particularities and Limit	ations
> Only informational fund	ction

12.6.6.5 DescSetStat	eSession()
	DescSetStateSession
	Available since 2.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
void DescSetStateSessio	n (DescStateGroup newSession)
Multi Context	
void DescSetStateSessio	n (DescStateGroup newSession)
Parameter	
newSession	the CANdesc component will change to this session state
Return code	
-	-
Functional Description	
•	of the SessionState-group can be changed by the ECU

application. The transition notification function 'ApplDe called to notify the application about the new session.



Pre-conditions Pre-conditions
-
Call context
-
Particularities and Limitations
> Please refer to section 12.6.11.2 "DescSetState <stategroup>()" for more details.</stategroup>

12.6.6.6 DescGetStateSession()

DescGetStateSession
Available since 2.00.00
Is Reentrant ⊠

			is calidack
Prototype			
Single Context			
currentSession DescGetStateSes	ssion (void)		
Multi Context			
currentSession DescGetStateSession (void)			
Parameter			
-			
Return code			
currentSession			

Functional Description

This function returns the current session state. Since the states are bit-coded the evaluation expressions may be optimized for multiple use cases.

Example: Code execution only when either default or extended session is active.

```
lState = DescGetStateSession();
if ( (lState & (kDescStateSession<Default>) | kDescStateSession<Extended>)) != 0 )
{
   /*execute code*/
}
```

Pre-conditions

_

Call context

-



Particularities and Limitations

> Please refer to section 12.6.11.1 "DescGetState<StateGroup>()" for more details.

12.6.6.7 DescGetSessionIdOfSessionState

DescGetSessionIdOfSessionState
Available since 3.00.00
Is Reentrant ⊠
Is callback □

Prototype		
Any Context		
DescMsgItem DescGetSess	cionIdOfSessionState (DescStateGroup sessionState)	
Parameter		
sessionState	- Must be one of the valid session states (i.e. the value of the API DescGetStateSession()).	
Return code		
DescMsgItem	- Is the corresponding session identifier value.	
Functional Description		
This function provides a conversion from a session state to its corresponding session identifier (e.g. calling this function with parameter <i>kDescStateSessionDefault</i> will return <i>0x01</i>).		
Pre-conditions		
-		
Call context		
-		
Particularities and Limitations		
>		

12.6.7 CommunicationControl Handling

This API is provided, if the ECU supports the serviceCommunicationControl (UDS) or service 0x28/0x29 Dis-/EnableNormalMessageTransmission (KWP).

©2015, Vector Informatik GmbH Version: 3.09.00 99 / 158



12.6.7.1 ApplDescCheckCommCtrl()

ApplDescCheckCommCtrl
Available since 2.00.00
Is callback ⊠

Prototype		
Single Context		
void ApplDescCheckCommC	trl (DescOemCommControlInfo* commControlInfo)	
Multi Context		
void ApplDescCheckCommC	trl (vuint8 iContext, DescOemCommControlInfo* commControlInfo)	
Parameter		
iContext	The current request context location	
commControlInfo	OEM dependent	
Return code		
-	-	
Functional Description		
The execution of this service is completely done within the CANdesc component. This hook function can be used to permit the application to reject the execution under some circumstance. If the application wants to discard this request, an error must be set (via <code>DescSetNegResponse()</code>). The application always has to confirm this hook function (via <code>DescCommCtrlChecked()</code>).		
The CommunicationControl service must be activated and the attribute 'MainHandlerSupport' has to be set to 'OEM'		
Call context		
From DescTask()		
Particularities and Limit	ations	
> If the API function DescCommCtrlChecked() will be not called, the service processing will not end		
12.6.7.2 DescCommCtrlChecked() DescCommCtrlChecked Available since 2.00.00 Is Reentrant		
	Is callback	
Prototype		
Single Context		

©2015, Vector Informatik GmbH Version: 3.09.00 100 / 158



void DescCommCtrlChecked (void)		
Multi Context		
void DescCommCtrlChecke	d (vuint8 iContext)	
Parameter		
iContext	the current request context location	
Return code		
_	-	
Functional Description		
The CANdesc component calls a hook function to check for the execution permission of the CommunicationControl service. Within or after this hook function (ApplDescCheckCommCtrl()) the application can set an error (DescSetNegResponse()) to reject the request. This function is used to terminate the hook function ApplDescCheckCommCtrl().		
Pre-conditions		
The CommunicationContribution (MainHandlerSupport' has	rol service must be activated and the attribute s to be set to 'OEM'	
Call context		
Within or after ApplDesc	CheckCommCtrl()	
Particularities and Limit	ations	
>		
12.6.8 Periodic call of 'Service MainHandler' 12.6.8.1 DescStartRepeatedServiceCall() DescStartRepeatedServiceCall Available since 2.00.00 Is Reentrant Is callback		
Prototype	is caliback	
Single Context		
	riceCall (DescMainHandler descMainHandler)	
Multi Context		

Parameter

descMainHandler

Reference to a function. The function prototype must be based on a 'Service MainHandler'.

Technical Reference CANdesc



iContext	The current request context location
Return code	
-	-

Functional Description

The application can use this function to get a periodic call to the specified function (in the parameter) from the CANdesc component.

It is possible to use the same 'Service MainHandler' function as it is called in.

Pre-conditions

Call context

Within or after a 'Service MainHandler' function

Particularities and Limitations

- > CANdesc can do no validation, if this pointer is valid.
- > Is the parameter NULL, the periodic calls will get stopped.
- > The function is called in the same cycle time (context) as the DescTask()



12.6.8.2 DescStartMemByAddrRepeatedCall()

	DescStartMemByAddrRepeatedCall
	Available since 5.06.04
	Is Reentrant
	Is callback
Prototype	
Single Context	
void DescStartMemByAddrRep	eatedCall ()
Multi Context	
void DescStartMemByAddrRep	eatedCall (vuint8 iContext)
Parameter	
iContext	The current request context location
Return code	
-	-
Functional Description	
The application can use the memory by address hand	nis function to get a periodic call to the current Read/Write ler.
Pre-conditions	
Call context	
Within ApplDescReadMer	moryByAddress or ApplDescWriteMemoryByAddress.
Particularities and Limit	ations
The memory access had DescTask()	andler is called in the same cycle time (context) as the

12.6.9 Ring Buffer Mechanism

The ring-buffer option can be used to save RAM when some responses are quite long and reserving such space of RAM is impossible. In contrast to the linear responses, where the response data will be first written and then the transmission to the tester will be initiated, the ring-buffer concept starts a transmission as soon as it has either the whole data (for short [single frame] responses) or at least enough data to fill a first-frame of a multi-frame transmission. Once the ring buffer has been activated and the response transmission initiated, the application must supply enough data to keep the transmission away from lack of data. In multiple PID mode, the application can decide in each PID main handler to use the ring buffer or not. However, if one of the PIDs has dynamic length, the ring buffer mechanism can not be used for any PID in the list.



DescRingBufferStart



Note

The ring buffer should only be used for long responses, because using the ring buffer instead of the linear buffer causes a runtime overhead.

12.6.9.1 DescRingBufferStart()

	Available since 2.00.00	
	Is Reentrant	
	Is callback	
	is caliback [
Prototype		
Single Context		
void DescRingBufferStar	t (void)	
Multi Context		
void DescRingBufferStar	t (vuint8 iContext)	
Parameter		
iContext	reference to the corresponding request context	
Return code		
-	-	
Functional Description		
After completing the request validation the application can decide (in runtime), if the ring-		

buffer mechanism should be used or not.

By calling this function, the decision is made to use the ring-buffer. Otherwise DescProcessingDone() should be called, after filling the response data (in a linear way). Either DescProcessingDone() or DescRingBufferStart() will finish the response handling. Depending on the previous actions of the application the CANdesc module will either send a response (positive/negative depending on the error state machine) or no response will be send if the application/CANdesc decides that there must be no response (please refer the Part III User Manual).

The transmission of the positive response will not start immediately. The application has to fill the ring-buffer first. If the ring-buffer has enough data, the transmission will be started (internally).

Pre-conditions

- ring-buffer has been enabled in the configuration

Call context

Within or after a 'Service MainHandler' function



Particularities and Limitations

- > This API **must not** be called from any of the other handler type (Pre- or PostHandlers)
- > Either DescProcessingDone() or DescRingBufferStart() must be used to finish the response handling.
- > Total response length must be written before!
- > No response data must be written before!
- > This function **must not** be called in interrupt context
- > **Limitation:** Until CANdesc version 2.13.00 it was not possible to use the Ring-Buffer in 'Multiple PID' services (as described in section 9.3.3 Multiple PID mode)
- > **UDS limitation:** Always check the SPRMIB prior starting the ring-buffer. If this bit is set, the ring-buffer shall not be started. Instead DescProcessingDone() must be called (see 13.6).
- When Repeated Service Call feature is used for polling a function that fills the Ring-Buffer, then the function DescStartRepeatedServiceCall() must be called after the function DescRingBufferStart().

12.6.9.2 DescRingBufferWrite()

	DescRingBufferWrite
	Available since 2.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
vuint8 DescRingBufferWr	ite (DescMsg data, DescMsgLen dataLength)
Multi Context	
vuint8 DescRingBufferWr	ite (vuint8 iContext, DescMsg data, DescMsgLen dataLength)
Parameter	
iContext	Reference to the corresponding request context
DescMsg	Pointer to application data, which should be copied into ring-buffer.
DescMsgLen	Amount of data, which should be copied (from pointer data) into ring-buffer.
Return code	
vuint8	kDescOk If the copy process was successful kDescFailed if the data are not copied into the ring-buffer

©2015, Vector Informatik GmbH Version: 3.09.00 105 / 158



The application writes data into the ring-buffer by this function. It is not necessary that the application must write the data in the context of a special API function.

The write order is always linear! The first written byte is the first byte in the response message.

Pre-conditions

ring-buffer has been enabled in the configuration;

DescRingBufferStart() must be called first, to activate the ring-buffer mechanism.

Call context

- This API shall not interrupt the DescTask. Required for the case the currently ongoing transmission is interrupted due to a communication error, and the application still writes into the buffer.

Particularities and Limitations

- dataLength must be lower or equal to the ring-buffer size, else the function will always fail
- > CANdesc has already filled the first bytes (SID, etc.) into the ring-buffer. So in the first call of DescRingBufferWrite() the dataLength must lower as the buffer size + these byte

12.6.9.3 DescRingBufferCancel()

	DescRingBufferCancel
	Available since 5.01.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
void DescRingBufferCanc	el (void)
Multi Context	
void DescRingBufferCanc	el (vuint8 iContext)
Parameter	
iContext	Reference to the corresponding request context
Return code	
_	-

©2015, Vector Informatik GmbH Version: 3.09.00 106 / 158



The application may call this API once the a data acquisition error has been occurred after the ring-buffer has been activated via <code>DescRingBufferStart()</code>.

CANdesc will automatically determine the appropriate action depending on its current internal state:

if the response data transmission has not been started yet, a negative response will be sent back.

If the response transmission has been started – a transmission interrupt will occur – the tester will not get a complete response.

Dra-		- L	4: -	
	76761	1 T A I I	i il l' a l	1 n L ~

ring-buffer has been enabled in the configuration

DescRingBufferStart() must be called before to activate the ring-buffer mechanism

\circ			
I IIIICA II II	60 B	1 1 4 1	7 A 3
Call		117	. ч =

-

Particularities and Limitations

>

12.6.9.4 DescRingBufferGetFreeSpace()

12.0.0.1 DooorkingBa	nor Con Tocopaco()	
	DescRingBufferGetFreeSpace Available since 2.00.00	
	Is Reentrant	
	Is callback	
Prototype		
Single Context		
DescMsgLen DescRingBuff	erGetFreeSpace (void)	
Multi Context		
DescMsgLen DescRingBuff	erGetFreeSpace (vuint8 iContext)	
Parameter		
iContext	reference to the corresponding request context	
Return code		
DescMsgLen	The amount of free space/bytes in the ring-buffer.	
Functional Description		
This function returns the a	amount of free space/bytes in the ring-buffer.	
Pre-conditions		
ring-buffer has been enabled in the configuration DescRingBufferStart() must be called before to activate the ring-buffer mechanism		

©2015, Vector Informatik GmbH Version: 3.09.00 107 / 158



Call context		
-		
12.6.9.5 DescRingBufferGetProgress()		
		DescRingBufferGetProgress
		Available since 2.00.00
		Is callback
Prototype		
Single Context		
DescMsgLen DescRingBufferGetProgress (void)		
Multi Context		
DescMsgLen DescRingBufferGetProgress (vuint8 iContext)		
Parameter		
iContext	reference to the corresponding	request context
Return code		
DescRingBufferProgress	Current byte position in the who	ole response.
Functional Description		
This function returns the progress of the copy process.		
Pre-conditions		
ring-buffer has been enabled in the configuration		
DescRingBufferStart() must be called before to activate the ring-buffer mechanism		
Call context		
-		
Particularities and Limitations		

12.6.10 Signal Interface of CANdesc

CANdesc will provide a signal interface to the ECU application. This can help the ECU application to assemble the response automatically. No further code changes are necessary, if a signal will move or change its size.

The current implementation has only support for a synchronous signal interface. This means the ECU application has to provide the signal value within the call/context of the Signal Handler function (while reading) or to write the within the call/context of the Signal Handler function (while writing).

©2015, Vector Informatik GmbH Version: 3.09.00 108 / 158



12.6.10.1 ApplDesc<Signal-Handler>()

ApplDesc<Signal-Handler>
Available since 2.00.00
Is callback ⋈

Prototype

Single Context

- ApplDesc<Service-Qualifier + Data-Object-Qualifier + Instance-Qualifier> (-)

Multi Context

- ApplDesc<Service-Qualifier + Data-Object-Qualifier + Instance-Qualifier> (-)

Parameter

vuint8, vsint8, vuint16, vsint16, vuint32, vsint32, DescMsg (vuint8*)	Available for write services. Type depend on signal type
DescMsg (vuint8*)	Available for read services and signals > 32 bit (N bit)

Return code

vuint8, vsint8,	Available for read services.
	Type depend on signal type.
vuint32, vsint32	
vuint16, vsint16, vuint32, vsint32	Type depend on signal type.

Functional Description

A Signal Handler is generated if the Service MainHandler is configured to be generated. In this case, writing Signal Handlers are generated for all dataObjects transported with the request and reading Signal Handlers are generated for all dataObjects transported with the response (read/write from application point of view).

The data type of the Signal Handler argument depends on the dataObject which is to be processed.

Pre-conditions

Must be configured to 'generated' in attribute 'MainHandlerSupport'

Call context

From DescTask()

Particularities and Limitations

You can override the given name extension (Service-Qualifier + Data-Object-Qualifier + Instance-Qualifier) by using the SignalHandlerOverrideName.

12.6.10.2 Configuration of direct signal access

Application variable for direct access (default = not set) If this variable is specified, an access to the given external (= application) variable is generated. Nothing has to be done by the application. The external variable must be defined inside the application.



SignalHandlerOverrideName (default = not set). You can adapt the name of the Signal Handler setting this value. By using this "Override Name" it is also possible to reuse an already existing Signal Handler

12.6.11 State Handling (CANdesc only)

12.6.11.1 DescGetState <stategroup>()</stategroup>		
	DescGetState <stategroup: Available since 2.00.0 Is Reentrant ∑ Is callback ☐</stategroup: 	
Prototype		
Single Context		
DescStateGroup DescGetS	tate <stategroup-qualifier> (void)</stategroup-qualifier>	
Multi Context		
DescStateGroup DescGetS	tate <stategroup-qualifier> (void)</stategroup-qualifier>	
Parameter		
_	-	
Return code		
DescStateGroup	The current state of the state group	
Functional Description		
This function returns the current session state. Since the states are bit-coded the evaluation expressions may be optimized for multiple use cases. Example: Code execution only when either the current state of this group is either state X or state Y.		
1State = DescGetState		
if ((1State & (kDescState	<pre>< StateGroupQualifier ><statequalifier_x>) </statequalifier_x></pre>	
kDescState	<pre>< StateGroupQualifier ><statequalifier_y>)) != 0)</statequalifier_y></pre>	
{		
/*execute code*/		
}		
Pre-conditions		
-		

Call context

-

Particularities and Limitations

For each state of a state-group a constant is defined in desc.h: kDescState<StateGroup-Qualifier><StateQualifier>

©2015, Vector Informatik GmbH Version: 3.09.00 110 / 158



12.6.11.2 DescSetState<StateGroup>()

	DescSetState <stategroup></stategroup>		
	Available since 2.00.00		
	Is Reentrant		
	Is callback		
Prototype			
Single Context			
void DescSetState <stategroup-qu< td=""><td>ualifier> (DescStateGroup newState)</td></stategroup-qu<>	ualifier> (DescStateGroup newState)		
Multi Context			
void DescSetState <stategroup-qu< td=""><td>ualifier> (DescStateGroup newState)</td></stategroup-qu<>	ualifier> (DescStateGroup newState)		
Parameter			
DescStateGroup	the state in which the state group should be changed		
Return code			
_	-		
Functional Description			
By this function the state of the state-group can be changed by the ECU application. The transition notification function 'ApplDescOnTransition< StateGroupQualifier >' will be called to notify the application about the new state. Example:			
DescSetState <stategroupqualifier>(kDescState<stategroupqualifier><statequalifier>);</statequalifier></stategroupqualifier></stategroupqualifier>			
This line will force CANdesc to cha	ange the state of the given state group to the new one.		
Pre-conditions			
-			
Call context			
-From a task with priority lower or	equal to the DescTask.		
Particularities and Limitations			
For each state of a state-group kDescState <stategroup-qua< p=""></stategroup-qua<>	a constant will be defined in desc.h: lifier> <state-qualifier></state-qualifier>		
The ApplDescOnTransition <s case. Also if the newState is the</s 	StateGroup-Qualifier>() notification function is called in any e same as the current stat		

©2015, Vector Informatik GmbH Version: 3.09.00 111 / 158



12.6.11.3 ApplDescOnTransition«StateGroup»()

	ApplDescOnTransition«StateGroup»
	Available since 2.00.00
	Is Reentrant
	Is callback
Prototype	
Single Context	
void ApplDescOnTransiti	<pre>on<stategroup-qualifier>(DescStateGroup newState,</stategroup-qualifier></pre>
Multi Context	
void ApplDescOnTransiti	on <stategroup-qualifier> (DescStateGroup newState,</stategroup-qualifier>
Parameter	
newState	the CANdesc component has changed to this session state
formerState	the CANdesc component has changed from this session state
Return code	
-	-
Functional Description	
This notification function v	will be called each time a transition has happened.
Pre-conditions	
-	
Call context	
From DescTask() interrupts might be disable	ed
Particularities and Limit	ations
kDescState <stategro< th=""><td>te-group a constant will be defined in desc.h: oup-Qualifier><statename-qualifier></statename-qualifier></td></stategro<>	te-group a constant will be defined in desc.h: oup-Qualifier> <statename-qualifier></statename-qualifier>
> For some exceptions (e.g. Session) the newState can be the same as the formerState



12.6.12 Force "Response Correctly Received - Response Pending" transmission

In some cases it is useful for the application to be sure that it has enough time to accomplish a process without causing the tester to get response timeout. In such cases the application can use the "force RCR-RP" mechanism of CANdesc, which prevents timeout between the tester and the ECU application.

How it works:

This feature is mostly applicable when a FlashBootLoader (FBL) is available for the ECU. Before starting it, the application wants to assure that there is enough time to perform reset and activate the FBL before the tester gets response timeout. The RCR-RP mechanism notifies the tester that some action is ongoing and so resets the timeout timer in the tester.

To transmit a 'Response Correctly Received - Response Pending' response the application has to call the DescForceRcrRpResponse() function. To be sure this response is transmitted, the application has to wait for the transmission confirmation of this forced RCR-RP response (the function ApplDescRcrRpConfirmation). Depending on its transmission status parameter the application can decide how the processing shall continue (a jump to FBL or to close the request processingth negative response).

12.6.12.1 DescForceRcrRpResponse()

	DescForceRcrRpResponse	
	Available since 2.11.00	
	Is Reentrant	
	Is callback	
Prototype		
Single Context		
void DescForceRcrRpResponse (void)		
Multi Context		
void DescForceRcrRpResponse (vuint8 iContext)		
Parameter		
iContext	reference to the corresponding request context	
Return code		
-	-	
Functional Description		
Calling this function the application can force CANdesc to send immediately (not later than the next call of DescTask() function) a RCR-RP response.		
Pre-conditions		
CANdesc was configured	to use this option (enabled in the GENtool).	



Call context

Task or interrupt.

Particularities and Limitations

This function can be called: after a call of a MainHandler function (e.g. ApplDescCheckSessionTransition()) and until the call of ApplDescResponsePendingOverrun() or ApplDescResponsePendingOvertimed() orpConfirmation().

12.6.12.2 AppIDescRcrRpConfirmation()

ApplDescRcrRpConfirmation
Available since 2.11.00
Is callback

✓

Prototype
Single Context
void ApplDescRcrRpConfirmation(vuint8 status)
Multi Context
void ApplDescRcrRpConfirmation(vuint8 iContext, vuint8 status)

Parameter	
iContext	Reference to the corresponding request context
status	If the transmission was successful, the parameter value will be <i>kDescOk</i> . Otherwise – <i>kDescFailed</i> .
Return code	
-	-

Functional Description

Once the RCR-RP response has been forced, this function will be called in any case. The transmission status is reported by the status parameter.

Pre-conditions

CANdesc was configured to use this option (enabled in the GENtool).

Call context

CAN Driver TX-ISR → TP Confirmation → this function

Particularities and Limitations

> Be aware of time consuming implementation for this function (interrupt call context).

12.6.13 DynamicallyDefineDataIdentifier (\$2C) (UDS) functions

Since this feature is only for some OEM available, please refer to the OEM specific documentation to find out if is applicable for your configuration.



DescMayCallStateTaskAgain

12.6.13.1 DescMayCallStateTaskAgain()

	Available since 4.00.00 Is Reentrant Is callback	
Prototype		
Single Context		
DescBool DescMayCallSta	teTaskAgain (void)	
Multi Context		
DescBool DescMayCallStateTaskAgain (void)		
Parameter		
_	-	
Return code		
kDescTrue	TRUE if you may call again the state task within this application task cycle.	
kDescFalse	FALSE if the DescStateTask() must not be called again.	

Functional Description

Motivation: The **DescStateTask()** can be called as fast as possible but it still can not be enough fast for complex service processing (e.g. DDIDs containing long descriptions) to match fast timing-performance requirements. This function provides the info if the application may call again the state-task in the same task context without causing endless loop (important for non-preemptive OS environments).

Example of the API usage:

```
void ApplDiagTask(void) /* application function called as fast as possible */
{
    do /* pump the state task as long as needed */
    {
        DescStateTask();
    }
    while (DescMayCallStateTaskAgain() == kDescTrue);
}
```

©2015, Vector Informatik GmbH Version: 3.09.00 115 / 158



Pre-conditions

- Preprocessor define "**DESC_ENABLE_HIPERFORMANCE_DYNDID_MODE**" is available (using user-config file in GENtool).
- The application uses the split-task concept (i.e. calls **DescState-/TimerTask()** instead of **DescTask()**).

Call context

Background-loop level or OSEK-OS Task. The Task should have a lower or equal priority than all other interaction to the CANdesc component.

Particularities and Limitations

>

12.6.13.2 ApplDescCheckDynDidMemoryArea()

ApplDescCheckDynDidMemoryArea
Available since 3.02.00

Must be Reentrant ⊠

Is callback

Prototype

Any Context

```
DescDynDidMemCheckResult ApplDescCheckDynDidMemoryArea (
DescDynDidMemBlockAddress srcAddr,
DescDynDidMemBlockSize len );
```

Parameter

srcAddr	Start address (Service \$2C 02 request parameter 'memoryAddress').
len	Length of block to read (Service \$2C 02 request parameter 'memorySize').

Return code

memBlockOk	Permit the access to requested memory block and extend the DDID.
memBlockInvAddress	Forbid the access due invalid requested memory address (requestOutOfRange).
memBlockInvSize	Forbid the access due invalid requested block length (requestOutOfRange).
memBlockInvSecurity	Forbid the access due current security mode settings prohibit the DDID definition (securityAccessDenied).
memBlockInvCondition	Forbid the access due other restrictions (conditionsNotCorrect).

If the memory access if forbidden, the Service \$2C Request is negative responded with NRC 22 (conditionsNotCorrect), 31 (requestOutOfRange) or 33 (securityAccessDenied).

©2015, Vector Informatik GmbH Version: 3.09.00 116 / 158



Functional Description

This callback function is triggered when defining a DDID that shall read bytes from the ECU's memory (Service Request \$2C 02). The application can permit the (re-)definition of the DDID or forbid it.

The service request is responded according to this.

The application must check

if the given srcAddr and following len bytes are valid ECU addresses and if they are readable,

if the current security state allows to define the DDID right now,

if there are other conditions that may forbid the definition of the DDID.

If all checks allow the DDID definition, the callback function must return memBlockOk.

FYI: When later reading the defined DDIDs by service \$22, the standard checks [of Service \$23 ReadMemoryByAddress] are executed, that perform security checks before accessing the memory.

So, above security check with service \$2C shall prove that the current security state permits the *definition* of the DDID, the security check in service \$22 (resp. \$23) proves [in the context of the then existing security state] the actual *reading* of the memory range.

Pre-conditions

_

Call context

From DescTask()

Particularities and Limitations

12.6.13.3 Non-volatile memory support

For some car-manufactures CANdesc provides NVRAM support for the dynamically defined DID definitions. There are some APIs that must be operated and some call-backs to be implemented by the application in order to get the NVRAM support fully operational.

The following diagrams show the two operations on NVRAM – restore (at power on) and st ore (usuall prior power off) data.



Caution

At each CANdesc initialization (e.g. ECU reset/ power on) the "restore" procedure must be performed!



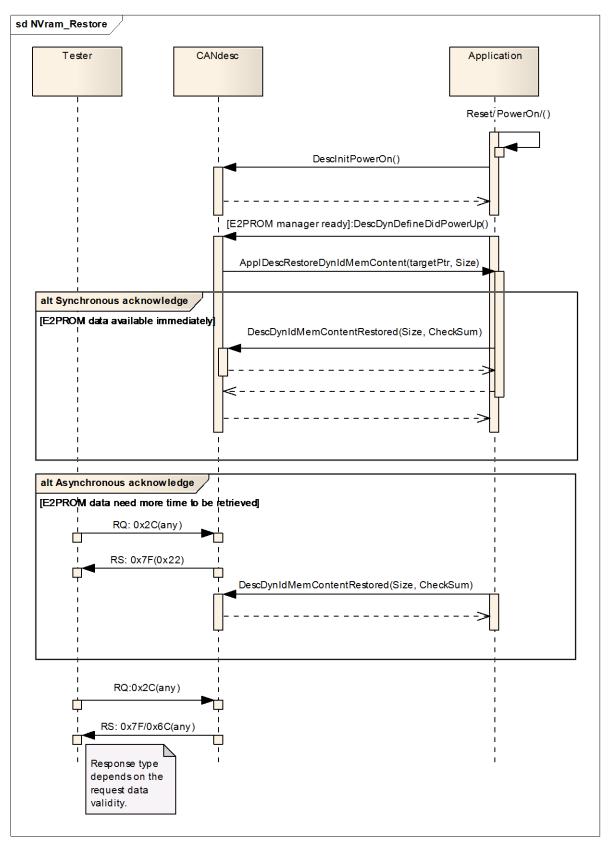


Figure 12-1 DynDID definition restore and tester interaction

©2015, Vector Informatik GmbH Version: 3.09.00 118 / 158





Info

The store operation can be performed at any time not only at power down.

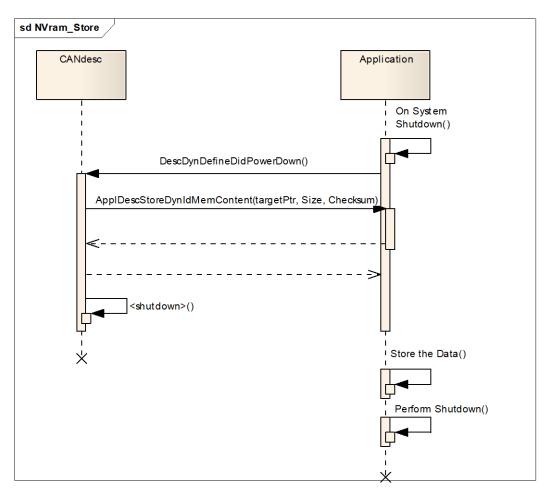


Figure 12-2 Store DynDID definitions

12.6.13.3.1 DescDynDefineDidPowerUp()

DescDynDefineDidPowerUp
Available since 5.06.09
Is Reentrant
Is callback

Prototype	
Single Context	
void DescDynDefineDidPowerUp (void)	
Multi Context	
void DescDynDefineDidPowerUp (void)	

©2015, Vector Informatik GmbH Version: 3.09.00 119 / 158



Parameter		
-	-	
Return code		
-	-	
Functional Description		
Once the ECU has been powered one/reset or just need to be reinitialized, this API must be called to restore the dynamically defined DID content.		
Pre-conditions	VRAM manager is initialized.	
	store the DynDID definitions to the NVRAM (OEM specific	
Call context		
- any		
Particularities and Limit	ations	
> Must be called after De	escInitPowerOn().	
12.6.13.3.2 DescDynId	MemContentRestored () DescDynIdMemContentRestored Available since 5.06.09 Is Reentrant Is callback	
Prototype		
Single Context		
_	tRestored (DescDynDidStorageInfo storageInfo)	
Multi Context		
void DescDynIdMemContentRestored (DescDynDidStorageInfo storageInfo)		
Parameter		
storageInfo.nvData	Not used The give (in button) of the rectard table	
storageInfo.nvDataSize	The size (in bytes) of the restored table. The stored checksum, calculated by CANdesc at store time.	
storageInfo.checkSum		
Return code		
-	-	

©2015, Vector Informatik GmbH Version: 3.09.00 120 / 158



Functional Description

After CANdesc has requested the application to restore the DynDID data ("ApplDescRestoreDynIdMemContent ()"), this API must be called to notify CANdesc that the DynDID content has been restored and can be used.

Pre-conditions

- Service 0x2C needs to store the DynDID definitions to the NVRAM (OEM specific requirement)

Call context

Pre-conditions

requirement)
Call context

- any

- any

Particularities and Limitations

> none

12.6.13.3.3 DescDynDefineDidPowerDown ()

	Available since 5.06.09	
	Is Reentrant	
	Is callback	
Prototype		
Single Context		
void DescDynDefineDidPo	werDown (void)	
Multi Context		
void DescDynDefineDidPowerDown (void)		
Parameter		
	-	
Return code		
_	-	
Functional Description		
If the ECU has to be reset or just power off /shutdown, this API must be called to store the current DID definitions.		

In order to save E2PROM write cycles, the application may perform compare to the current E2PROM content and decide whether to store the table content or not.

- Service 0x2C needs to store the DynDID definitions to the NVRAM (OEM specific

DescDynDefineDidPowerDown

©2015, Vector Informatik GmbH Version: 3.09.00 121 / 158



Particularities and Limitations

- > Shall be called prior power-down/shutdown execution
- May be called any time to store the current content of the DynDID tables.

12.6.13.3.4 ApplDescStoreDynIdMemContent ()

ApplDescStoreDynIdMemContent
Available since 5.06.09
Is Reentrant ☐
Is callback ☒

		15 Callback
Prototype		
Single Context		
void ApplDescStoreDynId	MemContent (DescDynDidStorageInfo storageInfo)	
Multi Context		
void ApplDescStoreDynIdMemContent (DescDynDidStorageInfo storageInfo)		
Parameter		
storageInfo.nvData	The pointer to the data to be stored; The size (in bytes) of the table;	

storageInfo.nvData	The pointer to the data to be stored,
_	The size (in bytes) of the table;
storageInfo.nvDataSize	The checksum value, calculated by CANdesc, to be stored.
storageInfo.checkSum	

Return code	
	-

Functional Description

Once this API is called by CANdesc, the application must trigger a write E2PROM procedure to store the data given by CANdesc and the checksum value.

In order to save E2PROM write cycles, the application may perform compare to the current E2PROM content and decide whether to store the table content or not.

Pre-conditions

- Service 0x2C needs to store the DynDID definitions to the NVRAM (OEM specific requirement)

Call context

- any

Particularities and Limitations

> CANdesc does not keep the data pointed by the parameter pointer during the write operation! The application must mirror the data if needed!

©2015, Vector Informatik GmbH Version: 3.09.00 122 / 158



12.6.13.3.5 ApplDescRestoreDynIdMemContent ()

	Is Reentrant ☐ Is callback ⊠	
Prototype		
Single Context		
void ApplDescRestoreDyn	IdMemContent (DescDynDidStorageInfo storageInfo)	
Multi Context		
void ApplDescRestoreDyn	IdMemContent (DescDynDidStorageInfo storageInfo)	
Parameter		
storageInfo.nvData	The pointer to the data to where the stored data shall be written	
storageInfo.nvDataSize	The size (in bytes) of the table expected. Not used	
storageInfo.checkSum		
Return code		
-	-	
Functional Description		
Once this API is called by CANdesc, the application must trigger a read E2PROM procedure to restore the data for CANdesc and the checksum value.		
Once the read process has completed, the API "DescDynIdMemContentRestored ()" must be called to acknowledge the operation status to CANdesc.		
Pre-conditions		
- Service 0x2C needs to store the DynDID definitions to the NVRAM (OEM specific requirement)		
Call context		
- any		
Particularities and Limitations		
>		

12.6.14 Memory Access Callbacks

12.6.14.1 ApplDescReadMemoryByAddress()

AppIDescReadMemoryByAddress
Available since 5.06.04
Is Reentrant
Is callback

ApplDescRestoreDynIdMemContent

Available since 5.06.09

©2015, Vector Informatik GmbH Version: 3.09.00 123 / 158



Prototype

Any Context

void ApplDescReadMemoryByAddress (DescMsgContext* pMsgContext,
t descMemByAddrInfo* pMemInfo)

Parameter	
pMsgContext	Please refer to section 12.6.4.2 Service MainHandler for details about this parameter.
pMsgContext->resData	The response buffer pointer
pMsgContext->resDataLen	The actual response length
pMemInfo->address	The address to read from
pMemInfo->length	The number of bytes to read

Return code

Functional Description

This callback is called for read memory by address requests. The application has to do following:

Perform memory block validation (negative response can be set by calling DescSetNegResponse()).

Optional: Perform additional state validations (negative response can be set by calling DescSetNegResponse()).

Copy the requested memory contents into the response buffer.

Set the response data length to the number of bytes copied.

Confirm that the processing is finished (by calling *DescProcessingDone()*).

Pre-conditions

- > The read memory by address service is supported.
- > Please refer to chapter 9.5 Read/Write Memory by Address (SID \$23/\$3D) (UDS) for more details of the availability of this API. If you don't see this API provided in desc.h, then this feature is not supported for your project.

Call context

From DescTask()

Particularities and Limitations

> To call this handler periodically, 'DescStartMemByAddrRepeatedCall' needs to be used

©2015, Vector Informatik GmbH Version: 3.09.00 124 / 158



12.6.14.2 ApplDescWriteMemoryByAddress()

ApplDescWriteMemoryByAddress

Available since 5.06.04

Is Reentrant

Is callback 🛛

Prototype

Any Context

void ApplDescWriteMemoryByAddress (DescMsgContext* pMsgContext,
t descMemByAddrInfo* pMemInfo)

Parameter

pMsgContext	Please refer to section 12.6.4.2 Service MainHandler for details about this parameter.
pMsgContext->reqData	The pointer to the data to store
pMemInfo->address	The address to write to
pMemInfo->length	The number of bytes to write

Return code

-

Functional Description

This callback is called for write memory by address requests. The application has to do following:

Perform memory block validation (negative response can be set by calling DescSetNegResponse()).

Optional: Perform additional state validations (negative response can be set by calling <code>DescSetNegResponse()</code>).

Copy the provided data into the memory area.

Confirm that the processing is finished (by calling DescProcessingDone()).

Pre-conditions

- > The write memory by address service is supported.
- > Please refer to chapter 9.5 Read/Write Memory by Address (SID \$23/\$3D) (UDS) for more details of the availability of this API. If you don't see this API provided in desc.h, then this feature is not supported for your project.

Call context

From DescTask()

Particularities and Limitations

> To call this handler periodically, 'DescStartMemByAddrRepeatedCall' needs to be used

12.6.15 Flash Boot Loader Support

CANdesc provides some features to comply with the HIS flash boot loader procedures.



These features are not released for all OEMs so if the below listed APIs are not available in your CANdesc version, then for the OEM, you currently use CANdesc, does not require, resp. has another FBL procedures.

12.6.15.1 DescSendPosRespFBL()

See 13.8

	DescSendPosRespFBL	
	Available since 4.05.00	
	Is Reentrant	
	Is callback	
Prototype		
Any Context		
void DescSendPosRespFBL	(t_descFblPosRespType posRespSId)	
Parameter		
posRespSId	One of the following values are allowed:	
-	> kDescSendFblPosRespEcuHardReset	
	> kDescSendFblPosRespDscDefault.	
Return code		
-	-	
Functional Description		
The application shall call this function as soon as possible after the initialization of the CANdesc component is done and the ECU is able to communicate.		
Once this function called, CANdesc will try to send the corresponding positive response as follows:		
 kDescSendFblPosRespEcuHardReset – a positive response to EcuHardReset (\$51 \$01) will be sent. 		
> kDescSendFblPosRespDscDefault – a positive response to DiagnosticSessionControl Default session (\$50 \$01 \$P2time \$P2Star/10) will be sent.		
If CANdesc is currently busy with a new tester request, there will be no response sent by this API.		
Pre-conditions		
The FBL positive respons	e feature is supported.	
Call context		
Any.		
Particularities and Limit	ations	

©2015, Vector Informatik GmbH Version: 3.09.00 126 / 158



12.6.15.2 ApplDescInitPosResFblBusInfo()

ApplDescInitPosResFblBusInfo
Available since 5.07.04
Is Reentrant
ls callback ⊠

Prototype		
Any Context		
vuint8 ApplDescInitPosResFblBusInfo (t_descUsdtNetBus* pBusInfo)		
Parameter		
pBusInfo	Reference to the bus information structure that will be initialized here.	
pBusInfo->busType	The bus driver that will send the response	
pBusInfo->comChannel	The communication channel on which the response will be sent. (relevant only on multi channel systems)	
pBusInfo->testerId	The tester address which will be respond to. (relevant only on bus systems with source/target addresses)	
Return code		
kDescOk	Operation was successful, the FBL positive response will be sent.	
kDescFailed	Operation failed – no FBL positive response will be sent.	

Functional Description

This callback is called once the application decided to call the API *DescSendPosRespFBL* to get the concrete addressing information.

The application shall initialize only the parameter described above. The optional ones can be skipped if not relevant on your system.

The FBL positive response feature is supported.

From DescSendPosRespFBL context.

> -

12.6.16 Debug Interface / Assertion

12.6.16.1 ApplDescFatalError()

AppIDescFatalErr	'or
Available since 2.00.	00
Is Reentrant	
Is callback	\boxtimes



-				
	100	If a b	A.V	pe
	184	201	III. 1	1 A Y A-1

Single Context

void ApplDescFatalError (vuint8 errorCode, vuint16 lineNumber)

Multi Context

void ApplDescFatalError (vuint8 errorCode, vuint16 lineNumber)

Pa	14	0.0	7	7.0	72

	The errorCode is a classification of the assertion. The errorCodes can be also found in file 'desc.h'. The errorCodes are listed below:
lineNumber	A line number of file 'desc.c' from which this function is called.

Return code

_	-

Functional Description

The CANdesc debug interface is similar to assertion constructof common programming languages. Assertions are code checks which are written so that they should always evaluate to true. If an assertion is false, it indicates a possible bug in the program, corrupt system state or a misoperation of the user-interface.

CANdesc is calling the function ApplDescFatalError() function to indicate a evaluation of an assertion to false. If this will happen it is recommended to halt the program's execution immediately. This could be reach by an endless loop in that call-back.

The assertions can be disabled in the GenTool settings. The resource (ROM and runtime) consumption can be reduced by disabling the assertions.

Error codes

kDescAssertWrongTpTxChannel (0x00):

The wrong TP channel is used – verify the TP interface to the CANdesc component

kDescAssertIndexTableInvalidReference (0x02):

Internal generation failure.

kDescAssertSvcTableUnreachableItem (0x03):

Internal generation failure.

kDescAssertSvcTableInvalidReference (0x04):

Internal generation failure.

kDescAssertSvcTableInconsistentNumber (0x05):

Internal generation failure.



kDescAssertMissingMainHandler (0x06):

Internal generation failure.

kDescAssertInvalidContextId (0x08):

Wrong iContext should be used - Check the consistency of the iContext parameter in the application.

kDescAssertSvcTableIndexOutOfRange (0x09):

Internal generation failure.

kDescAssertSvcInstTableIndexOutOfRange (0x0A):

Internal generation failure.

kDescAssertContextIdWasModified (0x0B):

The iContext member of the pMsgContext parameter in the MainHandler functions are illegal modified – verify the MainHandler functions in the application

kDescAssertProcessingDoneCallAfterResFlushing (0x0E):

DescProcessingDone() is called at least twice for one request – check the call of DescProcessingDone() in the application.

kDescAssertTooLongSingleFrameResponse (0x0F):

Response length of a periodic DID is exceeding the SingleFrame length – check the response length for periodic DIDs.

kDescAssertApplLackOfConfirmation (0x11):

The time for response processing is too long – verify if the call of DescProcessingDone() is done in any case.

kDescAssertZeroStateValue (0x13):

The state parameter is zero – check state handling

kDescAssertInvalidContextMode (0x16):

Internal runtime error

kDescAssertUnexpectedWriteIntoRingBuffer (0x17):

DescRingBufferWrite() is called without activated ring-buffer

kDescAssertRingBufferWriteExceedsTheResLen (0x18):

DescRingBufferWrite() is called to often

kDescAssertIllegalUsageOfNegativeResponse (0x1A):

After call of DescProcessingDone() a negative response is set



kDescAssertDiagnosticBufferOverflow (0x1B):

currently not available

kDescAssertFuncReqWoResMayNotUseRingBuffer (0x1C):

It is not possible to use the ring-buffer feature for functional request (KWP only)

kDescAssertSchedulerTimerEventWithoutAnyPID (0x1E):

Internal runtime error

kDescAssertSchedulerRingBufferlsActivated (0x1F):

For periodic DIDs it is not possible to use the ring-buffer.

kDescAssertUnknownTpTransmissionType (0x21):

Internal runtime error

kDescAssertIllegalAddRequestCount (0x22):

Internal runtime error

kDescAssertNoSidCanBeReportedInIdleMode (0x23):

Call of DescGetSeriveId() while not a user-service is processed

kDescAssertInvalidUsageOfForceRcrRpApi (0x24):

The DescForceRcrRpResponse() function is used illegal.

kDescAssertPidResLenToCddDefNotMatched (0x26):

The response length set by the application do not fit to the response length defined in CANdela (cdd).

kDescAssertPidResLenToCurrLinearFreeSpace (0x27):

Internal runtime error

kDescAssertMissingDataForTransmission (0x28):

Internal runtime error

kDescAssertSchedulerFreeCellNotFound (0x29):

Internal runtime error

kDescAssertInvalidStateParameterValue (0x2A):

The state parameter value is wrong – check state handling in your application

kDescAssertNoFreelCNChannel (0x2B):

Internal runtime error



kDescAssertInvalidDescICNClient (0x2C): Internal runtime error
internal fundine error
kDescAssertNoFreeMsgContext (0x2D):
Internal runtime error
kDescAssertUnExpectedContextWithResponse (0x2E):
A response will be sent out of a wrong context.
kDescAssertIllegalCallOfRingBufferCancel (0x2F):
The API DescRingBufferCancel() has been called for a response that is not using the ring-buffer concept (e.g. DescRingBufferStart() was not called).
buller concept (e.g. Descringbuller start() was not called).
kDescNetAssertWrongIsoTpRxChannel (0x40):
The wrong TP channel is used – verify the TP interface to the CANdesc component
kDescNetAssertWronglsoTpTxChannel (0x41):
The wrong TP channel is used – verify the TP interface to the CANdesc component
kDescNetAssertWrongBusType (0x42):
The wrong bus type is used – verify the TP interface to the CANdesc component
kDescAssertDescIcnIllegalTargetPointer (0x50):
Internal runtime assertion
At least on type of assertions are activated
Form ISR or task level. The interrupts might be disabled
Total for or lask level. The interrupts might be disabled
> After a call of this function the system is not stable anymore. It can not be guaranteed
that this component or the whole system is still working in correct manner.
12.6.17 "Spontaneous Response" transmission

To implement the service \$86 (Respone On Event) it is necessary to transmit a message without a previous request. If the same CAN ID have to be used for this reponse as for the diagnostics response, CANdesc provides an API to trigger the transmission.

12.6.17.1 DescSendApplSpontaneousResponse ()

DescSendApplSpontaneousResponse
Available since 6.09.00
Is Reentrant
Is callback

©2015, Vector Informatik GmbH Version: 3.09.00 131 / 158



Prototype

Any Context

DescBool DescSendApplSpontaneousResponse (DescMsg resData,

DescMsqLen resLen,

t descUsdtNetBus* pBusInfo)

Parameter	
resData	Pointer to an application buffer with response data (including posive response header).
resLen	Number of bytes to be sent (up to 4095 bytes).
pBusInfo	Reference to the bus information structure that will be initialized here.
pBusInfo->busType	The bus driver that will send the response.
pBusInfo->comChannel	The communication channel on which the response will be sent. (relevant only on multi channel systems).
pBusInfo->testerId	The tester address which will be respond to (relevant only on bus systems with source/target addresses).
Return code	
kDescTrue	Operation was successful, the response will be sent.
kDescFalse	Operation failed – no response will be sent.

Functional Description

Calling this function the application can force CANdesc to send immediately a spontaneous response.

If CANdesc is currently busy with a tester request, there will be no response sent by this API and kDescFalse will be returned.

If this API returns kDescTrue, the application shall wait for the

ApplDescSpontaneousResponseConfirmation() prior initiating a new spontaneous transmission.

Pre-conditions

The API is available under one of the following conditions:

CANdesc was configured to use this option (enabled in the GENtool). Only possible to configure if Service 0x86 is contained in the cdd.

For specific OEMs in case FBL behavior according to HIS is required (please refer to 13.8...send a positive response without request after FBL flash job)

Call context

Task or interrupt.

Particularities and Limitations

> -



12.6.17.2 ApplDescSpontaneousResponseConfirmation()

ApplDescSpontaneousResponseConfirmation

Available since 6.09.00

Is callback

✓

Pr			100	
1544	/ A Y I	ran.	n v a	@ T = 1

Single Context

void ApplDescSpontaneousResponseConfirmation (vuint8 status)

Multi Context

void ApplDescSpontaneousResponseConfirmation (vuint8 iContext, vuint8 status)

Parameter 4 8 1

i didiliotoi	
iContext	Will be always "kDescPrimContext".
status	If the transmission was successful, the parameter value will be <i>kDescOk</i> . Otherwise – <i>kDescFailed</i> .
Return code	
_	-

Functional Description

Once the spontaneous response has been successfully triggered (ref. DescSendApplSpontaneousResponse ()), this function will be called in any case. The transmission status is reported by the status parameter.

Pre-conditions

Only available if the API DescSendApplSpontaneousResponse () is available.

Call context

CAN Driver TX-ISR → TP Confirmation → this function

Particularities and Limitations

> Be aware of time consuming implementation for this function (interrupt call context).

©2015, Vector Informatik GmbH Version: 3.09.00 133 / 158



12.6.18 Generic Processing Notifications

12.6.18.1 ApplDescManufacturerIndication

ApplDescManufacturerIndication
Available since 6.13.00
Is callback

✓

Prototype

Single Context

void ApplDescManufacturerIndication (vuint8 sid,

vuint8* data,

vuint16 length,

vuint8 reqType,

t descUsdtNetBus* pBusInfo)

Multi Context

void ApplDescManufacturerIndication(vuint8 iContext,

vuint8 sid,

vuint8* data,

vuint16 length,

vuint8 reqType,

t descUsdtNetBus* pBusInfo)

Parameter

iContext	The current request context location (used only as a handle - DO NOT MODIFY).
sid	The service identifier of the received service request.
data	Pointer to the first byte of the request data (without service identifier byte).
length	Length of the request data (without service identifier byte)
reqType	The current request addressing method. Could be either ,kDescFuncReq' or ,kDescPhysReq' (bitmapped).
pBusInfo	The current request communication information (i.e. driver type (CAN, MOST, FlexRay, etc.), addressing information, communication channel number, tester address (if applicable) etc.

©2015, Vector Informatik GmbH

Return code

Version: 3.09.00



Functional Description

This function is called right before CANdesc starts the processing of a received request.

Pre-conditions

Only available if the feature "Manufacturer Notification Support" is activated and CANdesc UDS2012 is used.

Call context

From DescTask()

Particularities and Limitations

>

12.6.18.2 ApplDescManufacturerConfirmation

ApplDescManufacturerConfirmation

Available since 6.13.00

Is callback

✓

ro	7.5	744		
I III W J	1, 0 /	10.74	w,	-

Single Context

void ApplDescManufacturerConfirmation(vuint8 status)

Multi Context

void ApplDescManufacturerConfirmation (vuint8 iContext,

vuint8 status)

Pa	4	0.0	100	70	6
	100		l wil	1, 44	ш

iContext	The current request context location
	(used only as a handle - DO NOT MODIFY).
status	kDescPostHandlerStateOk The positive response was transmitted successfully
	kDescPostHandlerStateNegResSent
	It was a negative response
	kDescPostHandlerStateTxFailed
	A transmission error occurred

Return code

_

Functional Description

This function is called after the processing of a request has been finished, a response has been sent (or sending has failed) and all service PostHandlers were called.

Pre-conditions

Only available if the feature "Manufacturer Notification Support" is activated and CANdesc UDS2012 is used.



Call context

From DescTask ()

Particularities and Limitations

>

12.6.18.3 ApplDescSupplierIndication

ApplDescSupplierIndication
Available since 6.13.00
Is callback

✓

Prototype

Single Context

void ApplDescSupplierIndication(vuint8 sid,

vuint8* data,

vuint16 length,

vuint8 reqType,

t descUsdtNetBus* pBusInfo)

Multi Context

void ApplDescSupplierIndication(vuint8 iContext,

vuint8 sid,

vuint8* data,

vuint16 length,

vuint8 reqType,

t descUsdtNetBus* pBusInfo)

Parameter

iContext	The current request context location (used only as a handle - DO NOT MODIFY).
sid	The service identifier of the received service request.
data	Pointer to the first byte of the request data (without service identifier byte).
length	Length of the request data (without service identifier byte)
reqType	The current request addressing method. Could be either ,kDescFuncReq' or ,kDescPhysReq' (bitmapped).

©2015, Vector Informatik GmbH Version: 3.09.00 136 / 158



pBusInfo	The current request communication information (i.e. driver type (CAN, MOST, FlexRay, etc.), addressing information, communication channel number, tester address (if applicable) etc.
Return code	
-	-

Functional Description

This function is called during the processing of a request, after CANdesc has verified that the requested service is allowed in the active session and security state.

Pre-conditions

Only available if the feature "Supplier Notification Support" is activated and CANdesc UDS2012 is used.

Call context

From DescTask()

Particularities and Limitations

>

12.6.18.4 ApplDescSupplierConfirmation

ApplDescSupplierConfirmation
Available since 6.13.00

Is callback 🛛

Prototype

Single Context

void ApplDescSupplierConfirmation(vuint8 status)

Multi Context

void ApplDescSupplierConfirmation (vuint8 iContext,

vuint8 status)

Parameter	
iContext	The current request context location (used only as a handle - DO NOT MODIFY).
status	kDescPostHandlerStateOk The positive response was transmitted successfully kDescPostHandlerStateNegResSent It was a negative response kDescPostHandlerStateTxFailed A transmission error occurred
Return code	
_	-

©2015, Vector Informatik GmbH Version: 3.09.00 137 / 158



Functional Description

This function is called after the processing of a request has been finished, a response has been sent (or sending has failed) and all service PostHandlers were called. It is called before *ApplDescManufacturerConfirmation()*.

Pre-conditions

Only available if the feature "Supplier Notification Support" is activated and CANdesc UDS2012 is used.

Call context

From DescTask ()

Particularities and Limitations

>



13 How To...

13.1 ...implement a protocol service MainHandler

```
//1. Read ProtocolService
// - dynamic length
// - PIDs
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsgContext)
  /* Check the length */
  if (pMsgContext->reqDataLen > 2)
    /* Check the sub-parameters */
   vuint16 param;
    /* Compose one parameter combining the HiByte and the LoByte in this order*/
    param = DescMake16Bit(pMsgContext->reqData[0], pMsgContext->reqData[1]);
    /* Dispatch the parameter */
    switch (param)
      case 0xFFFF:
        if (pMsgContext->regDataLen != 0xFFFF)
          /* Write some data (skip the parameter offsets 0 und 1) */
         pMsqContext->resData[2] = DescGetLoByte(0x1234);
          pMsgContext->resData[3] = DescGetHiByte(0x1234);
          /* Set the response length */
          pMsgContext->resDataLen = 4;
        else
          DescSetNegResponse(pMsqContext->iContext, kDescNrcInvalidFormat);
        break;
      default:
        /* unknown parameter */
        DescSetNegResponse (pMsgContext->iContext, kDescNrcInvalidFormat);
  else
   DescSetNegResponse(pMsgContext-iContext, kDescNrcInvalidFormat);
  /* In this case we did everything in the main-handler */
  DescProcessingDone (pMsgContext->iContext);
//2. Read ProtocolService
// - dynamic length
// - sub-function
```



```
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsqContext*
pMsqContext)
  /* Check the length */
  if (pMsgContext->regDataLen > 1)
    /* Dispatch the sub-function */
    switch (pMsgContext->reqData[0])
      case 0xFF:
        if (pMsgContext->reqDataLen != 0xFFFF)
          /* Format check ok: write some data (skip the parameter) */
          pMsgContext->resData[1] = DescGetLoByte(0x1234);
          pMsgContext->resData[2] = DescGetHiByte(0x1234);
          /* Set the response length */
          /* Hint: if the response length wasn't set, zero value is assumed! */
          pMsgContext->resDataLen = 3;
        else
          /* Wrong sub-parameter format */
          DescSetNegResponse(pMsgContext->iContext, kDescNrcInvalidFormat);
        break;
      default:
        /* Unknown sub-function */
        DescSetNegResponse (pMsgContext->iContext,
                           kDescNrcSubfunctionNotSupported);
    }
  else
   DescSetNegResponse(pMsgContext-iContext, kDescNrcInvalidFormat);
  /* In this case we did everything in the main-handler */
 DescProcessingDone (pMsgContext->iContext);
//3. Write ProtocolService
// - dynamic length
// - PIDs
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsqContext)
  /* Check the sub-parameters */
 vuint16 param;
  /* Check the length */
  if (pMsgContext->reqDataLen > 2)
    /* Compose one parameter combining the HiByte and the LoByte in this order
    param = DescMake16Bit(pMsqContext->reqData[0], pMsqContext->reqData[1]);
    /* Dispatch the parameter */
    switch (param)
```



```
case OxFFFF:
        if (pMsqContext->reqDataLen != 0xFFFF)
          /* Copy from the request data to your application */
          /* Use the data pointed by: pMsgContext->reqData[2],
             pMsgContext->reqData[3], etc.*/
        else
          DescSetNegResponse(pMsgContext->iContext, kDescNrcInvalidFormat);
        break;
      default:
        /* unknown parameter */
        DescSetNegResponse(pMsgContext->iContext, kDescNrcRequestOutOfRange);
  else
    DescSetNegResponse(pMsgContext-iContext, kDescNrcInvalidFormat);
  /* In this case we did everything in the main-handler */
  /* Hint: if the response length wasn't set, zero value is assumed! */
  DescProcessingDone (pMsqContext->iContext);
//4. Write ProtocolService
// - dynamic length
// - Sub-function
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsqContext)
  /* Check the sub-parameters */
  vuint16 param;
  /* Check the length */
  if (pMsgContext->reqDataLen > 2)
    /* Compose one parameter combining the HiByte and the LoByte in this order*/
    param = DescMake16Bit(pMsgContext->reqData[0], pMsgContext->reqData[1]);
    /* Dispatch the parameter */
    switch (param)
      case 0xFFFF:
        if (pMsgContext->reqDataLen != 0xFFFF)
          /* Copy from the request data to your application */
          /* Use the data pointed by: pMsgContext->reqData[2],
             pMsgContext->reqData[3], etc.*/
        else
          DescSetNeqResponse(pMsqContext->iContext, kDescNrcInvalidFormat);
        break;
      default:
        /* unknown sub-function /
        DescSetNegResponse(pMsgContext->iContext,
```



```
kDescNrcSubfunctionNotSupported);
}
else
{
    DescSetNegResponse(pMsgContext-iContext, kDescNrcInvalidFormat);
}
/* In this case we did everything in the main-handler */
/* Hint: if the response length wasn't set, zero value is assumed! */
DescProcessingDone(pMsgContext->iContext);
```

13.2 ...implement a service MainHandler

```
//5. Read Service
// - dynamic length
// - sub-function/PID
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsgContext)
  /* Check the length */
  if (pMsgContext->regDataLen != 0xFFFF)
    /* Format check ok: write some data */
    pMsgContext->resData[0] = DescGetLoByte(0x1234);
    pMsgContext->resData[1] = DescGetHiByte(0x1234);
    /* Set the response length */
    /* Hint: if the response length wasn't set, zero value is assumed! */
   pMsgContext->resDataLen = 2;
  else
    /* Wrong sub-function format */
   DescSetNegResponse(pMsgContext->iContext, kDescNrcInvalidFormat);
  /* In this case we did everything in the main-handler */
  DescProcessingDone (pMsgContext->iContext);
//6. Read Service
// - static length
// - sub-function/PID
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsqContext)
  /* Format check ok: write some data */
  pMsgContext->resData[0] = DescGetLoByte(0x1234);
  pMsgContext->resData[1] = DescGetHiByte(0x1234);
  /* Set the response length */
  /* Hint: if the response length wasn't set, zero value is assumed! */
  pMsgContext->resDataLen = 2;
  /* In this case we did everything in the main-handler */
```

©2015, Vector Informatik GmbH Version: 3.09.00 142 / 158



```
DescProcessingDone (pMsgContext->iContext);
}
//7. Write Service
// - dynamic length
// - sub-function/PID
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsgContext)
  /* Check the length */
  if (pMsgContext->reqDataLen != 0xFFFF)
    /* Format check ok: write some data */
    /* Copy from the request data to your application */
    /* Use the data pointed by: pMsgContext->reqData[0],
       pMsgContext->reqData[1], etc.*/
  else
    /* Wrong sub-function format */
   DescSetNegResponse(pMsgContext->iContext, kDescNrcInvalidFormat);
  /* In this case we did everything in the main-handler */
  /* Hint: if the response length wasn't set, zero value is assumed! */
 DescProcessingDone (pMsgContext->iContext);
//8. Write Service
// - static length
// - sub-function/PID
void DESC API CALLBACK TYPE ApplDescManiOnTimerEvent storeEvent(DescMsgContext*
pMsgContext)
  /* Copy from the request data to your application */
  /* Use the data pointed by: pMsgContext->reqData[0], pMsgContext->reqData[1],
     etc.*/
  /* In this case we did everything in the main-handler */
  /* Hint: if the response length wasn't set, zero value is assumed! */
 DescProcessingDone (pMsgContext->iContext);
```

13.3 ...implement a Signal Handler

```
//1. ReadSignalHandler
// - length <= 4Byte
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.

vuintx DESC_API_CALLBACK_TYPE ApplDescGetTemp(void)
{
    /* Return directly the signal value */
    return (vuintx) 0xFFFF;</pre>
```

©2015, Vector Informatik GmbH Version: 3.09.00 143 / 158



```
}
//2. ReadSignalHandler
// - length > 4Byte
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.
DescMsgLen DESC API CALLBACK TYPE ApplDescGetTemp (DescMsg tgt)
  /* Copy the signal data into the buffer pointed by "tgt".*/
  /* Return the amount of written bytes */
 return 0;
//3. WriteSignalHandler
// - length <= 4Byte
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.
void DESC API CALLBACK TYPE ApplDescGetTemp(vuintx data)
  /* "data" contains the signal value as-is from the request.
     Copy it into your application. */
//4. ReadSignalHandler
// - length > 4Byte
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.
DescMsgLen DESC API CALLBACK TYPE ApplDescGetTemp(DescMsg src)
  /* Copy the signal data from the buffer pointed by "src".*/
  /* Return the amount of copied bytes */
  return 0;
```

13.4 ...implement a Packet Handler

```
//1. ReadPacketHandler
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.

void DESC_API_CALLBACK_TYPE ApplDescGetTemp(DescMsg pMsg)
{
    /* Copy the signal value into the "pMsg" buffer. */
    pMsg[0] = DescGetLoByte(0x1234);
    pMsg[1] = DescGetLoByte(0x1234);
}
```

13.5 ...implement a state transition function

```
//1. StateTransitionNotification
// Limitations: No DescProcessingDone() or DescSetNegResponse() allowed.
```

©2015, Vector Informatik GmbH Version: 3.09.00 144 / 158

Technical Reference CANdesc




```
void DESC_API_CALLBACK_TYPE ApplDescOnTransitionSession(DescStateGroup
formerState, DescStateGroup newState)
{
    /* You are just notified that this state group has performed a transition from
    * "formerState" to the "newState". */
}
```

©2015, Vector Informatik GmbH Version: 3.09.00 145 / 158



13.6 ...work with the ring-buffer mechanism

13.6.1 with asynchronous write

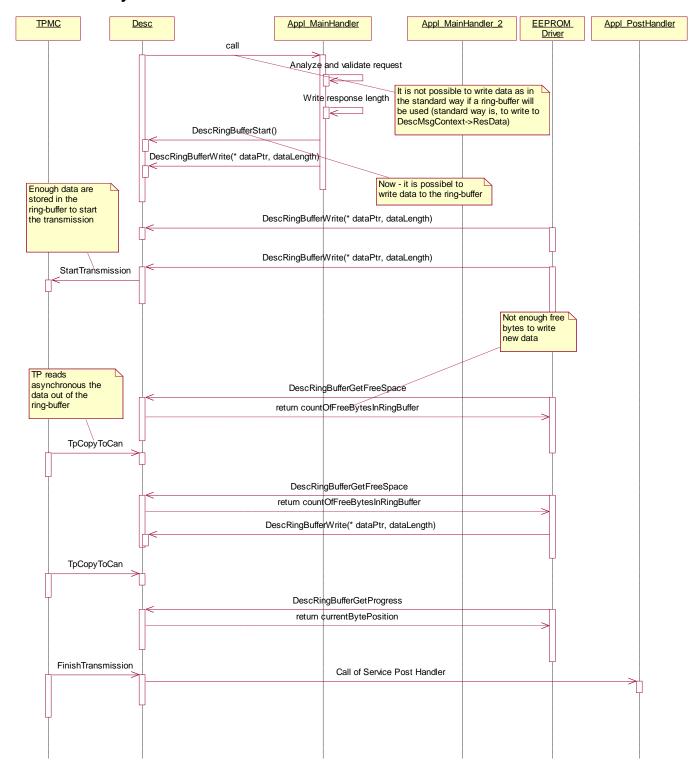

```
//1. Read Service (with asynchronous Ring-Buffer)
// - static length
// - sub-function/PID
vuint8 g iContext;
```


©2015, Vector Informatik GmbH Version: 3.09.00 146 / 158



```
void DESC API CALLBACK TYPE ApplDescReadDTC(DescMsgContext* pMsgContext)
  vuint8 lData;
  /* Format check already done by CANdesc */
  /* Analysis of request has to done by ECU application */
  /* Set the response length */
  pMsgContext->resDataLen = 16;
  /* Fill the first data */
  1Data = 5;
  /* Store iContext for further interaction with CANdesc */
  g iContext = pMsgContext->iContext;
  /* check only on services with sub-function (e.g. 0x19) */
  if(pMsgContext->msgAddInfo.suppPosRes != 0)
    /* since no response required - skip further processing */
   DescProcessingDone (pMsgContext->iContext);
  }
else
   /* Now we have to set CANdesc into the Ring-Buffer mode */
  DescRingBufferStart(pMsqContext->iContext);
   /* Now it is possible to write into the Ring-Buffer */
  DescRingBufferWrite(pMsqContext->iContext, &lData, 1);
   /* Now trigger e.g. an EEPROM read event */
  }
}
EEPROM TASK (xyz)
  vuint8 lDTC[3];
  /* Wait for EEPROM event */
  /* EEPROM event is finished with reading */
   DescRingBufferWrite(g iContext, &lDTC, 3);
 /* Now trigger next EEPROM reading */
```



13.6.2 with synchronous write

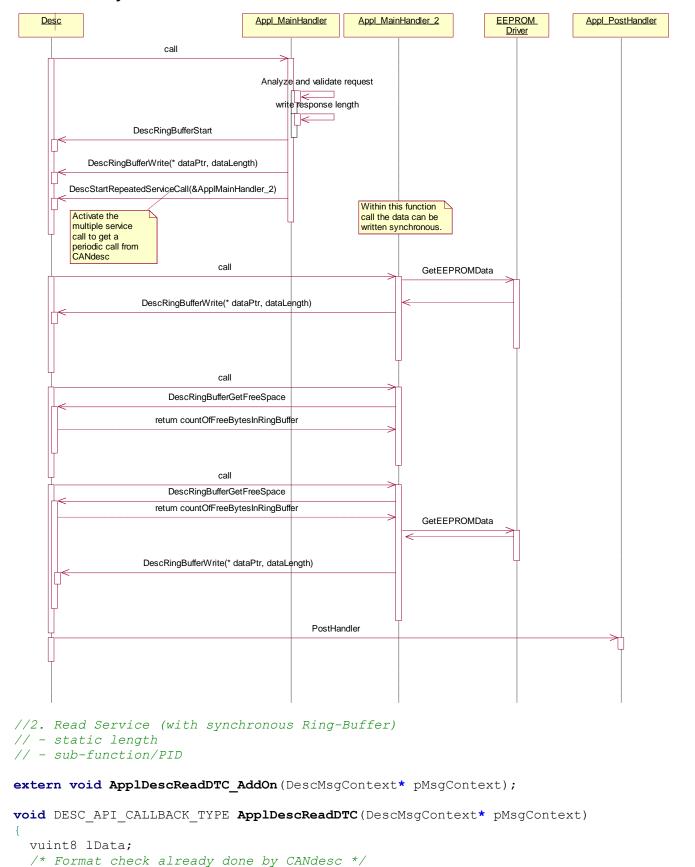

©2015, Vector Informatik GmbH Version: 3.09.00 148 / 158



```
/* Analysis of request has to done by ECU application */
  /* Set the response length */
  pMsgContext->resDataLen = 16;
  /* Fill the first data */
  1Data = 5;
  /* check only on services with sub-function (e.g. 0x19) */
  if(pMsgContext->msgAddInfo.suppPosRes != 0)
    /* since no response required - skip further processing */
    DescProcessingDone (pMsgContext->iContext);
else
   /* Now we have to set CANdesc into the Ring-Buffer mode */
   DescRingBufferStart(pMsgContext->iContext);
   /* Now it is possible to write into the Ring-Buffer */
   DescRingBufferWrite(pMsgContext->iContext, &lData, 1);
   /* Use RepeatedSeriveCall feature to poll e.g. EEPROM driver */
   DescStartRepeatedServiceCall(pMsgContext->iContext, &ApplDescReadDTC AddOn);
}
void ApplDescReadDTC AddOn(DescMsqContext* pMsqContext)
  vuint8 lDTC[3];
  DescMsqLen freeSpace;
  /* Check if enough space is free in ring-buffer */
  freeSpace = DescRingBufferGetFreeSpace();
  if (freeSpace >= 3)
  /* try to read from EEPROM */
  /* Success - result is in 1DTC */
   DescRingBufferWrite(pMsgContext->iContext, &lDTC, 3);
  else
    /* nothing to do, wait for next MainHandler call, ring-buffer is full */
```

13.7 ...prevent the ECU going to sleep while diagnostic is active

Most car manufactures have the requirement to keep the ECU alive while the diagnostic layer is active; including a pending request or a non-default session is currently active.

This requirement is handled by CANdesc for some car manufactures (see OEM specific TechnicalReference_CANdesc document for details)

The following code example shows all necessary steps to keep the ECU alive while diagnostic jobs are running (e.g. non-default session):

```
{
  DescContextActivity lActivity;
```

©2015, Vector Informatik GmbH Version: 3.09.00 149 / 158



13.8 ...send a positive response without request after FBL flash job

According to some specifications the application has to send a positive response either to "diagnostic session control – default session" or "ECU reset – hard reset" after a successful flash job without a request. The Flash Boot Loader has to set a flag (reset response flag) in RAM or EEPROM which has to be evaluated by the application at startup. Depending on its value the application has to call the CANdesc function <code>DescSendPosRespFBL()</code> with the appropriate response ID.

CANdesc provides the API DescSendPosRespFBL() for this purpose.

Due to bus communication is necessary to send the positive response; some limitations have to be handled by the application:

- 1) Bus communication is to be requested by the application
- 2) If bus communication is possible, the application has to call <code>DescSendPosRespFBL()</code>. CANdescBasic will send the positive response.
- 3) The application will be called (*ApplDescInitPosResFblBusInfo(*)) to provide the concrete addressing information of the response.
- 4) Bus communication can be released by the application.

13.9 ...enforce CANdesc to use ANSI C instead of hardware optimized bit type

CANdesc uses per default the bit-type definition provided by the CANdriver, since it is selected as optimal for the concrete CPU. On this way the CANdesc ROM and RAM resource consumption is kept as low as possible.

Due to the complexity of some CANdesc data structures there can be problems on certain compilers with special bit-structure compiler options.

If you encounter such problems either at compile or at run-time, you can turn the ANSIC C bit-type support in CANdesc on. To do that, just add a user configuration file in GENy with the following content:

```
#define DESC_USE_ANSI_C_BIT_TYPE
```



13.10 ...configure Extended Addressing

If Extended Addressing is used as TP Addressing mode some additional settings have to be done. "DescCheckTA" has to be set for the "Target Address Message Filter" in GENy.

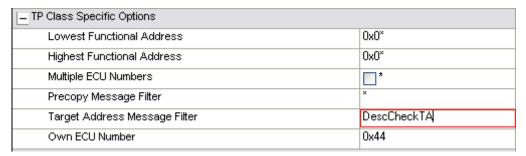


Figure 13-1 GENy TP configuration

Additional a user configuration file has to be used to configure the functional target address. An example for the content of the user configuration file is given below.

#define kDescOemExtAddrFuncTargetAddr 0xFE

13.11 ...use Multiple Addressing

This chapter is a short summary of additional information that the application has to provide for CANdesc if the Tp addressing mode is Multiple Addressing.

In the case that a positive response has to be send after FBL flash job of the application, please assure that the correct addressing information are provided in the callback *ApplDescInitPosResFblBusInfo()*.

Furthermore, the "Rx Get Buffer" and "Rx Indication" functions have to be redirected to the application if one of the Tp Addressing modes is Normal Addressing. This can be done in the GENy configuration of the TP, a callback name different from the one that is implemented in CANdesc has to be entered.



Configurable Options	Diag
TP Connection Group	·
Number of Rx Channels	1
Number of Tx Channels	1*
Rx Get Buffer	DispatcherDescGetBuffer
Rx Indication	DispatcherDescPhysReqInd
Rx Error Indication	DescRxErrorIndication
Rx Single Frame Indication	×
Rx First Frame Indication	×
Rx Consecutive Frame Indication	×
Rx Copy from CAN	×
Rx Flow Control Frame Transmitted	×
Tx Confirmation	DescConfirmation
Tx Error Indication	DescTxErrorIndication
Tx Notification	×
Tx CAN Message transmitted	×
Tx Flow Control Frame received	×
Tx Copy to CAN	DescCopyToCAN
Tx Delay finished	×

Figure 13-2 GENy TP callbacks

The callbacks have to be implemented in the application. In the Get Buffer function the CAN Id has to be set for the FC in the case of Normal Addressing,

The response ID for Normal Addressing has to be set in the Indication function. The response Id has to be set after the call of *DescPhysRegInd()*.

```
/\!\!^* Example: A configuration with only CANdesc Tp connections and only one Tp Tx/Rx channel. ^*/
```

©2015, Vector Informatik GmbH Version: 3.09.00 152 / 158



```
void DispatcherDescPhysReqInd(canuint8 tpChannel, canuint16 datLen)
{
  vuint8 addressingType = (TpRxGetAddressingFormat(tpChannel));

  DescPhysReqInd(tpChannel, datLen);

  /*Set CAN IDs for the Response*/
  if(addressingType == kTpNormalAddressing)
  {

  /* kApplNormalAddressingTxId and kApplNormalAddressingPhysRxId, have to defined by the application*/
  TpTxSetChannelID(0 /*tpTxChannel*/, kApplNormalAddressingTxId, kApplNormalAddressingPhysRxId);
  /* tpTxChannel = 0 is only possible because only one Tx Channel is configured.*/
  }
}
```

13.12 ...use "Dynamic Normal Addressing Multi TP" with multiple tester

This chapter is a short summary of additional information that the application has to provide for CANdesc if the Tp addressing mode is "Dynamic Normal Addressing Multi TP" with more than one tester.

In the case that a positive response has to be send after FBL flash job of the application, please assure that the correct addressing information are provided in the callback <code>ApplDescInitPosResFblBusInfo()</code>.

Furthermore, the "Rx Get Buffer" function has to be redirected to the application. This can be done in the GENy configuration of the TP, a callback name different from the one that is implemented in CANdesc has to be entered.

Name	Diag
Number of Rx Channels	1*
Number of Tx Channels	1*
Rx Get Buffer	DispatcherDescGetBuffer
Rx Indication	DescPhysReqInd
Rx Error Indication	DescRxErrorIndication
Rx Single Frame Indication	•
Rx First Frame Indication	•
Rx Consecutive Frame Indication	•
Rx Copy from CAN	•
Rx Flow Control Frame Transmitted	•
Tx Confirmation	DescConfirmation
Tx Error Indication	DescTxErrorIndication
Tx Notification	•
Tx CAN Message transmitted	•
Tx Flow Control Frame received	-
Tx Copy to CAN	DescCopyToCAN

Figure 13-3 GENy TP callbacks (physical addressing)

©2015, Vector Informatik GmbH Version: 3.09.00 153 / 158



The "Get Buffer" function of the functional connection has to be redirected to the application too.

TP Functional Connection Group	
Get Buffer (mandatory)	DispatcherDescGetFuncBuffer
Indication (mandatory)	DescFuncReqInd
Copy from CAN	•

Figure 13-4 GENy TP callbacks (functional addressing)

The callbacks have to be implemented in the application. The received CAN ID has to be mapped to the corresponding transmit CAN ID and the TP connection number has to be set in the xxxGetBuffer callback:

```
TP MEMORY MODEL DATA canuint8* DispatcherDescGetBuffer(canuint8 tpChannel,
canuint16 datLen)
  TP MEMORY MODEL DATA canuint8* retPtr = V NULL;
  switch(TpRxGetChannelID(tpChannel))
 case kDispatcherRxDiagPhysCanId:
   TpRxSetTransmitID(tpChannel, kDispatcherTxDiagPhysCanId);
   TpRxSetConnectionNumber(tpChannel, kDescDiagConnection);
   retPtr = DescGetBuffer(tpChannel, datLen);
   break;
 case kDispatcherRxDiagAddPhysCanId:
   TpRxSetTransmitID(tpChannel, kDispatcherTxDiagAddPhysCanId);
   TpRxSetConnectionNumber(tpChannel, kDescDiagAddConnection);
   retPtr = DescGetBuffer(tpChannel, datLen);
   break;
 default:
  return retPtr;
```

The receiced CAN ID has to be mapped to the corresponding transmit CAN ID in the xxxGetFuncBuffer callback. Furthermore it is important, that the physical Rx ID is set for the response and not the functional one. This CAN ID is used to recognize the FC of the tester in case of a multiframe response:

```
TP_MEMORY_MODEL_DATA canuint8* DispatcherDescGetFuncBuffer(vuint16 dataLength)
{
    TP_MEMORY_MODEL_DATA canuint8* retPtr = V_NULL;

    switch(TpFuncGetReceiveCanID())
    {
        case kDispatcherRxDiagFunc:
            TpFuncSetTransmitCanID(kDispatcherTxDiagPhysCanId);
            TpFuncSetReceiveCanID(kDispatcherRxDiagPhysCanId);
            TpFuncSetReceiveCanID(kDispatcherRxDiagPhysCanId);
```

©2015, Vector Informatik GmbH Version: 3.09.00 154 / 158



```
retPtr = DescGetFuncBuffer(dataLength);
break;

case kDispatcherRxDiagAddFunc:
   TpFuncSetTransmitCanID(kDispatcherTxDiagAddPhysCanId);
   TpFuncSetReceiveCanID(kDispatcherRxDiagAddPhysCanId);
   retPtr = DescGetFuncBuffer(dataLength);
   break;

default:
   ;
}

return retPtr;
}
```

The code examples above are for 2 testers, in the example are some defines used that have to be provided by the application corresponding to the configuration.

Define	Description
kDispatcherRxDiagPhysCanId	Physical request CAN ID of the first tester
kDispatcherRxDiagFuncCanId	Functional request CAN ID of the first tester
kDispatcherTxDiagPhysCanId	Response CAN ID of the first tester
kDispatcherRxDiagAddPhysCanId	Physical request CAN ID of the second tester
kDispatcherRxDiagAddFuncCanId	Functional request CAN ID of the second tester
kDispatcherTxDiagAddPhysCanId	Response CAN ID of the second tester
kDispatcherTxDiagTpChannel	Transmit Tp Channel of CANdesc. If only one Tp Channel is used, it is has to be set to zero.



14 Related documents

Abbreviation	File Name	Description
/KWP2000/		Keyword 2000 protocol
/TPMC/		User manual of the multi-connection transport layer module. The transport layer is implemented according to /ISO 15765/
/ISO 15765/		This ISO standard describes diagnostics and diagnostics on CAN.
/AN-IDG-1-013/	AN-IDG-1- 013_How_to_Specify_ OBD_Service_06.pdf	Application note for CANdela Studio on how to configure OBD service 0x06. The application note is available in the download center on our homepage.

Note: If no file name is given, the document is not provided by Vector.



15 Glossary

Abbreviation	Description
CANdb	CAN database by Vector which is used by Vector tools.
CANdesc	CAN diagnostics embedded software component
CDD	CANdela Diagnostic Database
CF	Consecutive Frame (transport protocol frame)
CCL	Communication Control Layer
DBC	CAN database format of the Vector company, which is used by the GENtool to gather information about the ECUs in the network, their communication relations, message definitions, signals of messages, network related information (e.g. manufacturer type, network management type, etc.).
ECU	Electronic Control Unit
FBL	Flash Boot Loader
KWP 2000	Keyword Protocol 2000
OSEK	German abbreviation, "Offene Systeme und deren Schnittstellen für die Elektronik im Kraftfahrzeug", means "open systems and the corresponding interfaces for automotive electronics"
RCR-RP	Request Correctly Received – Response Pending
SF	Single Frame
SID	Service Identifier
SPRMIB	Suppress Positive Response Message Indication Bit
TP	Transport Protocol
UDS	Unified Diagnostic Services
VSG	Vehicle System Group



16 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com