

MICROSAR OS SafeContext

Technical Reference

Version 9.01

Status	Released
Document ID	OS01.0280



Document Information

History

Author	Date	Version	Remarks
Rmk	2012-06-26	6.00	creation based on AUTOSAR 3.0 version
Shk	2013-09-18	6.01	SingleSource template applied and variants for ASR3.x, ASR4.x, SafeContext and non-SafeContext prepared
Biv	2014-02-04	6.02	MultiCore references corrected
Zfa	2014-05-05	6.03	Updated timer description
Asl	2014-08-14	8.00	Examples chapter excluded
			TimingAnalyzer removed
			Updated counter related macros and configuration
Asl	2014-10-16	8.01	Added PeripheralRegion API
			Added Non-Trusted Function API
			Added CheckMPUAccess API
Asl	2015-01-29	9.00	Updated interpretation of OsSecondsPerTick and OsCounterTicksPerBase
Rk	2015-06-17	9.01	Added MICROSAR OS Timing Hooks
			Added table of terms to the glossary
			Added the information that forcible termination is currently not supported



Reference Documents

No.	Title	Version
[1]	AUTOSAR_SWS_OS.pdf	V5.0.0
	AUTOSAR OS specification; This document is available in PDF-format on the internet a the AUTOSAR homepage (http://www.autosar.org)	
[2]	AUTOSAR_TR_BSWModuleList.pdf	1.6.0
[3]	OSEK/VDX Operating System Specification	2.2.3
	This document is available in PDF-format on the Internet at the OSEK/VDX homepage (http://www.osek-vdx.org)	
[4]	TechincalReference_Microsar_Os_Multicore.pdf	1.00
[5]	TechnicalReference_MicrosarOS_xxxx.pdf	
	Technical reference of Vector MICROSAR OS; Hardware specific part	
[6]	OIL: OSEK Implementation Language	2.3
	This document is available in PDF-format on the Internet at the OSEK/VDX homepage (http://www.osek-vdx.org)	
[7]	Tutorial_osCAN.pdf	1.00
	Tutorial for the MICROSAR OS OSEK/AUTOSAR Realtime Operating System	
[8]	autosar.xsd	4.0.3
	AUTOSAR XML schema	
[9]	MicrosarOS_xxxx_SafeContext_SafetyManual.pdf	
	Application Conditions for SEooC; Implementation specific document	

Scope of the Document

MICROSAR OS is an operating system, compliant with the AUTOSAR OS and OSEK standards. The general aspects of all SafeContext implementations are described in this document. For each implementation, the hardware specific part is described in a separate document [4].

The implementation is based on the AUTOSAR OS specification [1].

It is also based on the OSEK OS specification 2.2 described in the document [3].

As a SEooC, it is further based on assumptions regarding safety requirements. Details can be found in [9].

This documentation assumes that the reader is familiar with both the OSEK OS specification and the AUTOSAR OS specification.

This documentation describes only the operating system and the code generation tool.

OSEK is a registered trademark of Continental Automotive GmbH (until 2007: Siemens AG).





Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Contents

1	Compone	ent History	14
2	Introduction		
	2.1	Architecture Overview	15
3	Function	al Description	17
	3.1	Features	17
	3.2	Main Functions	17
	3.2.1	Timer and Alarms	18
	3.2.1.1	Time Base	19
	3.2.1.1.1	Counter Macros	19
	3.2.1.1.2	Temporal Range of Alarms	19
	3.2.1.2	Timer Interrupt Routine	19
	3.2.1.2.1	Counter API	19
	3.2.2	Stack Handling	20
	3.2.2.1	Task Stack	20
	3.2.2.2	Interrupt Stack	20
	3.2.2.3	Stack Monitoring	21
	3.2.2.4	Stack Usage	21
	3.2.3	Interrupt Handling	21
	3.2.3.1	Interrupt Categories	22
	3.2.3.1.1	Category 1:	22
	3.2.3.1.2	Category 2:	22
	3.2.3.2	Usage of the Interrupt API before StartOS	23
	3.2.4	Timing Protection	24
	3.2.4.1	Reaction on Protection Failure	24
	3.2.4.2	Timing Measurement	24
	3.2.4.2.1	Timing measurement configuration for a specific task/ISR	25
	3.2.4.2.2	Global configuration of timing measurement	25
	3.2.4.3	Hook functions	26
	3.2.5	Memory Protection	26
	3.2.6	Schedule Tables	27
	3.2.6.1	Synchronization	27
	3.2.6.1.1	Starting a synchronizable Schedule Table	27
	3.2.6.1.2	Autostart	
	3.2.6.1.3	Suspending a Schedule Table and keeping its Synchronization	28
	3.2.6.1.4	Providing a Global Time	28
	3.2.6.1.5	Exact Synchronization	28



3.2.6.1.6	Limits of the Synchronization Algorithm	. 29
3.2.6.1.7	Details about using NextScheduleTable	. 30
3.2.6.1.8	Concurrent Actions	. 30
3.2.6.2	High-Resolution Schedule Tables	. 30
3.2.6.2.1	Setup	. 31
3.2.6.3	Cyclical Expiry Point Actions	. 31
3.2.7	Trusted Functions	. 31
3.2.7.1	Generated Stub Functions	. 31
3.3	Error Handling	. 33
3.3.1	Error Messages	. 33
3.3.2	OSEK / AUTOSAR OS Error Numbers	. 33
3.3.3	MICROSAR OS Error Numbers	
3.3.3.1	Error Numbers of Group Task Management / (1)	. 35
3.3.3.2	Error Numbers of Group Interrupt Handling / (2)	. 37
3.3.3.3	Error Numbers of Group Resource Management / (3)	. 39
3.3.3.4	Error Numbers of Group Event Control / (4)	. 40
3.3.3.5	Error Numbers of Group Alarm Management / (5)	. 42
3.3.3.6	Error Numbers of Group Operating System Execution Control / (6)	. 44
3.3.3.7	Error Numbers of Schedule Table Control / (7)	. 46
3.3.3.8	Error Numbers of Group Counter API / (8)	. 49
3.3.3.9	Error Numbers of Group Timing Protection and Timing Measurement / (9)	. 51
3.3.3.10	Platform specific error codes (A)	. 53
3.3.3.11	Error Numbers of Group Application API (B)	. 53
3.3.3.12	Error Numbers of Group Semaphores (C)	. 54
3.3.3.13	Error Numbers of Group MultiCore related functions (D)	. 55
3.3.3.14	Error Numbers of Group (Non-)TrustedFunctions (E)	. 55
3.3.3.15	Error Numbers of Group IOC (F)	. 56
3.3.4	Reactions on Error Situations	. 56
	n	
4.1	Installation Requirements	
4.2	Installation Disk	
4.3	OIL Configurator	
4.3.1	INI Files of the OIL Tool	
4.3.2	OIL Implementation Files	
4.3.3	Code Generator	
4.4	OSEK Operating System	
4.4.1	Installation Paths	
4.5	XML Configurations	. 59
451	Parameter Definition Files	59



5	Integration	n	. 60
	5.1	Scope of Delivery	. 60
	5.1.1	Static Files	. 60
	5.1.2	Dynamic Files	. 60
	5.1.2.1	Code Generator GENxxxx	. 60
	5.1.2.1.1	Generated file libconf	. 60
	5.1.2.2	Application Template Generator GENTMPL	. 61
	5.2	Include Structure	. 61
6	API Desc	ription	. 62
	6.1	Standard API - Overview	. 62
	6.2	API Functions defined by Vector - Overview	. 65
	6.3	Timing Measurement API	. 66
	6.3.1	GetTaskMaxExecutionTime	. 66
	6.3.2	GetISRMaxExecutionTime	. 67
	6.3.3	GetTaskMaxBlockingTime	. 67
	6.3.4	GetISRMaxBlockingTime	. 68
	6.3.5	GetTaskMinInterArrivalTime	. 69
	6.3.6	GetISRMinInterArrivalTime	. 70
	6.4	Implementation specific Behavior	. 70
	6.4.1	Interrupt Handling	. 70
	6.4.1.1	EnableAllInterrupts	. 71
	6.4.1.2	DisableAllInterrupts	. 72
	6.4.1.3	ResumeAllInterrupts	. 72
	6.4.1.4	SuspendAllInterrupts	. 73
	6.4.1.5	ResumeOSInterrupts	. 74
	6.4.1.6	SuspendOSInterrupts	. 75
	6.4.2	Resource Management	. 76
	6.4.2.1	GetResource	
	6.4.2.2	ReleaseResource	. 77
	6.4.3	Execution Control	. 78
	6.4.3.1	StartOS	. 78
	6.4.3.2	ShutdownOS	. 79
	6.5	Hook Routines	. 80
	6.5.1	Standard Hooks	. 80
	6.5.1.1	StartupHook	. 80
	6.5.1.2	PreTaskHook	. 81
	6.5.1.3	PostTaskHook	. 81
	6.5.1.4	ErrorHook	. 82
	6.5.1.5	ShutdownHook	. 82
	6.5.1.6	ProtectionHook	. 83



6.5.2	ISR Hooks	83
6.5.2.1	UserPreISRHook	83
6.5.2.2	UserPostISRHook	84
6.5.3	Alarm Hook	85
6.5.3.1	PreAlarmHook (currently not supported)	85
6.5.4	MICROSAR OS Timing Hooks	85
6.5.4.1	Hooks for arrival	86
6.5.4.1.1	OS_VTH_ACTIVATION	86
6.5.4.1.2	OS_VTH_SETEVENT	86
6.5.4.1.3	OS_VTH_TRANSFER_SEMA	87
6.5.4.2	Hook for context switch	88
6.5.4.2.1	OS_VTH_SCHEDULE	88
6.5.4.3	Hooks for locking	89
6.5.4.3.1	OS_VTH_GOT_RES	89
6.5.4.3.2	OS_VTH_REL_RES	90
6.5.4.3.3	OS_VTH_REQ_SPINLOCK	90
6.5.4.3.4	OS_VTH_GOT_SPINLOCK	91
6.5.4.3.5	OS_VTH_REL_SPINLOCK	92
6.5.4.3.6	OS_VTH_TOOK_SEMA	93
6.5.4.3.7	OS_VTH_REL_SEMA	93
6.5.4.3.8	OS_VTH_DISABLEDINT	94
6.5.4.3.9	OS_VTH_ENABLEDINT	95
6.6	Non-Trusted Functions	95
6.6.1	Functionality	95
6.6.2	API	96
6.7	MPU Access Checking API	96
6.8	Peripheral Regions	
6.8.1	Reading functions	97
6.8.2	Writing functions	98
6.8.3	Modifying functions	99
Configur	ation	100
7.1	Configuration and generation process	100
7.1.1	XML Configuration	
7.1.2	OIL Configurator	101
7.2	Configuration Variants	
7.3	Configuration of the XML / OIL Attributes	
7.3.1	OS	
7.3.1.1	ProtectionHookReaction / OsOSProtectionHookReaction	
7.3.1.2	TimingMeasurement / OsOSTimingMeasurement	
7.3.1.3	PeripheralRegion / OsOSPeripheralRegion	



7.3.2	Task	107
7.3.2.1	AUTOSTART / OsTaskAutostart	109
7.3.2.2	TIMING_PROTECTION / OsTaskTimingProtection	109
7.3.2.3	Task attributes concerning the timing analyzer	110
7.3.3	Counter	111
7.3.4	Alarm	112
7.3.4.1	ACTION / OsAlarmAction	113
7.3.4.2	AUTOSTART / OsAlarmAutostart	114
7.3.5	Resource	115
7.3.6	Event	116
7.3.7	ISR	116
7.3.7.1	UseSpecialFunctionName / OslsrUseSpecialFunctionName	117
7.3.7.2	TIMING_PROTECTION / OslsrTimingProtection	118
7.3.7.2.1	LOCKINGTIME / OslsrResourceLock	119
7.3.7.3	ISR Attributes concerning the Timing Analyzer	119
7.3.8	COM	120
7.3.9	NM	120
7.3.10	APPMODE / OsAppMode	120
7.3.11	Application / OsApplication	121
7.3.11.1	Trusted Functions	122
7.3.12	Scheduletable	123
7.3.12.1	AUTOSTART / OsScheduleTableAutostart	123
7.3.12.2	EXPIRY_POINT / OsScheduleTableExpiryPoint	124
7.3.12.3	Expiry point action ADJUST	125
7.3.12.4	Expiry point action ACTIVATETASK	125
7.3.12.5	Expiry point action SETEVENT	126
7.3.12.6	LOCAL_TO_GLOBAL_TIME_SYNCHRONIZATION / OsScheduleTableSync	126
System C	Seneration	
8.1	Code Generator	
8.1.1	Generated Files	
8.1.2	Automatic Documentation	128
8.1.3	Conditional Generation	
8.1.4	Generated files backup	129
8.2	Application Template Generator	129
8.3	Compiler	129
8.3.1	Include Paths	129
	R Standard Compliance	
9.1	Deviations	130

8

Technical Reference MICROSAR OS SafeContext



	9.2	Limitations	130
	9.2.1	API Function OS_GetVersionInfo	130
	9.2.2	Forcible Termination	130
	9.2.3	AUTOSAR Debug support	130
	9.2.4	Port Interface	130
	9.2.5	NULL Pointer Checks	130
	9.2.6	SafeContext specific limitations	130
10	Debuggir	ng Support	132
	10.1	Kernel aware Debugging	132
	10.2	Version and Variant Coding	132
11	Glossary	and Abbreviations	134
	11.1	Abbreviations	134
	11.2	Terms	135
12	Contact		136



Illustrations

Figure 2-1	AUTOSAR 3.x Architecture Overview	. 15
Figure 2-2	AUTOSAR architecture	. 15
Figure 3-1	Functional parts	. 18
Figure 3-2	Counter Macros	
Figure 7-1	System overview of software parts	
Figure 7-2	Relation between Physical Units, Counter Units and Driver Units	112
3		
Tables		
Table 3-1	Supported SWS features	
Table 3-2	Not supported SWS features	. 17
Table 3-3	Interdependence between the OS attribute TimingMeasurement and	
	the task/ISR attribute TIMING PROTECTION	. 26
Table 3-4	OSEK/AUTOSAR OS error numbers	. 33
Table 3-5	Implementation specific error numbers	. 34
Table 3-6	Error types	
Table 3-7	API functions of group Task Management / (1)	. 35
Table 3-8	Error numbers of group Task Management / (1)	. 37
Table 3-9	API functions of group Interrupt Handling / (2)	
Table 3-10	Error numbers of group Interrupt Handling / (2)	
Table 3-11	API functions of group Resource Management / (3)	. 39
Table 3-12	Error numbers of group Resource Management / (3)	. 40
Table 3-13	API functions of group Event Control / (4)	. 40
Table 3-14	Error numbers of group Event Control / (4)	
Table 3-15	API functions of group Alarm Management / (5)	
Table 3-16	Error numbers of group Alarm Management / (5)	
Table 3-17	API functions of group Operating System Execution Control / (6)	. 44
Table 3-18	Error numbers of group Operating System Execution Control / (6)	
Table 3-19	API functions of group Schedule Table Control / (7)	
Table 3-20	Error numbers of group Schedule Table Control / (7)	
Table 3-21	API functions of group Counter API / (8)	
Table 3-22	Error numbers of group Counter API / (8)	
Table 3-23	API functions of group Timing Protection and Timing Measurement / (9).	
Table 3-24	Error numbers of group Timing Protection and Timing Measurement / (9)	
Table 3-25	API functions of group Application API / (B)	
Table 3-26	Error numbers of group Application API / (B)	
Table 3-27	API functions of group Semaphores / (C)	
Table 3-28	Error numbers of group Semaphores / (C)	
Table 3-29	API functions of group (Non-)TrustedFunctions (E)	
Table 3-30	Error numbers of group (Non-)TrustedFunctions (E)	. 56
Table 4-1	Installed components	
Table 4-2	System configuration and generation tools	
Table 5-1	Files generated by code generator GENxxxx	
Table 5-2	Variables generated into the file libconf	
Table 6-1	Standard API functions	
Table 6-2	Vector API functions	
Table 6-3	GetTaskMaxExecutionTime	
Table 6-4	GetISRMaxExecutionTime	
Table 6-5	GetTaskMaxBlockingTime	
Table 6-6	GetISRMaxBlockingTime	. 69

Technical Reference MICROSAR OS SafeContext



Table 6-7	GetTaskMinInterArrivalTime	70
Table 6-8	GetISRMinInterArrivalTime	70
Table 6-9	EnableAllInterrupts	71
Table 6-10	DisableAllInterrupts	72
Table 6-11	ResumeAllInterrupts	73
Table 6-12	SuspendAllInterrupts	74
Table 6-13	ResumeOSInterrupts	75
Table 6-14	SuspendOSInterrupts	76
Table 6-15	GetResource	77
Table 6-16	ReleaseResource	78
Table 6-17	StartOS	79
Table 6-18	ShutdownOS	
Table 6-19	StartupHook	80
Table 6-20	PreTaskHook	81
Table 6-21	PostTaskHook	81
Table 6-22	ErrorHook	82
Table 6-23	ShutdownHook	83
Table 6-24	ProtectionHook	83
Table 6-25	UserPreISRHook	84
Table 6-26	UserPostISRHook	84
Table 6-27	PreAlarmHook	
Table 6-28	OS VTH ACTIVATION	
Table 6-29	OS_VTH_SETEVENT	
Table 6-30	OS_VTH_TRANSFER_SEMA	
Table 6-31	OS VTH SCHEDULE	
Table 6-32	OS VTH GOT RES	
Table 6-33	OS_VTH_REL_RES	
Table 6-34	OS_VTH_REQ_SPINLOCK	
Table 6-35	OS_VTH_GOT_SPINLOCK	
Table 6-36	OS_VTH_REL_SPINLOCK	
Table 6-37	OS_VTH_TOOK_SEMA	
Table 6-38	OS VTH REL SEMA	
Table 6-39	OS VTH DISABLEDINT	
Table 6-40	OS VTH ENABLEDINT	
	sCallNonTrustedFunction	
Table 6-42	osCheckMPUAccess API	
Table 6-43	ReadPeripheral API	
Table 6-44	WritePeripheral API	
Table 6-45	ModifyPeripheral API	
Table 7-1	OS attributes	
Table 7-2	Sub-attributes of ProtectionHookReaction = SELECTED	
Table 7-3	Sub-attributes of TimingMeasurement = TRUE	
Table 7-4	Sub-attributes of PeripheralRegion	
Table 7-5	Task attributes	
Table 7-6	Sub-attributes of TASK->AUTOSTART=TRUE	
Table 7-7	Sub-attributes of TASK-> TIMING PROTECTION=TRUE	
Table 7-8 Table 7-9	Task attributes concerning the timing analyzer Attributes of COUNTER	. III 110
Table 7-10	Attributes of ALARM	
Table 7-10	Sub-attributes of ACTION = ACTIVATETASK	
Table 7-11	Sub-attributes of ACTION = ACTIVATETASK	
Table 7-12	Sub-attributes of ACTION = SETEVENT	
Table 7-13	Sub-attributes of AUTOSTART = TRUE	
1401 0 / - 14	OUD-ALLIDULES OF AUTUOTART = TRUE	TI O

Technical Reference MICROSAR OS SafeContext



Table 7-15	Attributes of RESOURCE	116
Table 7-16	Sub-attributes of EVENT	116
Table 7-17	Attributes of ISR	117
Table 7-18	Sub-attributes of UseSpecialFunctionname /	
	OslsrUseSpecialFunctionName	117
Table 7-19	Sub-attributes of TIMING PROTECTION / OslsrTimingProtection	119
Table 7-20	Sub-attributes of LOCKINGTIME / OslsrResourceLock	119
Table 7-21	ISR attributes concerning the timing analyzer	120
Table 7-22	Attributes of Appmode / OsAppMode	121
Table 7-23	Attributes of Application / OsApplication	122
Table 7-24	Sub-attributes for trusted functions	122
Table 7-25	Attributes of SCHEDULETABLE	123
Table 7-26	Sub-attributes for auto start of a schedule table	124
Table 7-27	Sub-attributes of expiry points	125
Table 7-28	Sub-attributes of expiry point action ADJUST	125
Table 7-29	Sub-attributes of expiry point action ACTIVATETASK	
Table 7-30	Sub-attributes of expiry point action SETEVENT	126
Table 7-31	Sub-attributes SCHEDULETABLE->	
	LOCAL_TO_GLOBAL_TIME_SYNCHRONIZATION = TRUE	127
Table 10-1	Bit-definitions of the variant coding, ucSysVariant1	133
Table 10-2	Bit-definitions of the variant coding, osSysVariant2	
Table 10-3	Bit definitions of the variant coding, osOrtiVariant	
Table 11-1	Abbreviations	
Table 11-2	Terms	



1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

This chapter is included in any MICROSAR component documentation. For the OS, the history on the intended level is not relevant as MICROSAR OS implements all mandatory requirements of AUTOSAR OS.



2 Introduction

This document describes the functionality, API and configuration of the general part of the AUTOSAR BSW module OS as specified in [1].

Supported AUTOSAR Release:	4.0.3	
Supported Configuration Variants:	pre-compile	
Vendor ID:	OS_VENDOR_ID	30 decimal (= Vector- Informatik, according to HIS)
Module ID:	OS_MODULE_ID	1 decimal (according to ref. [2])

2.1 Architecture Overview

The following figure shows where the OS is located in the AUTOSAR architecture.

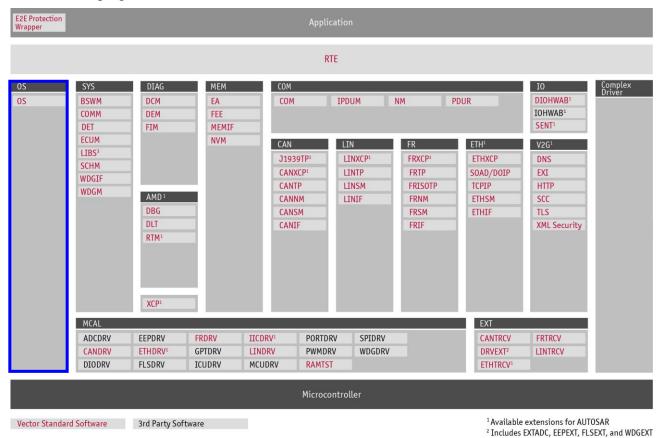


Figure 2-1 AUTOSAR 3.x Architecture Overview

Figure 2-2 AUTOSAR architecture

©2015, Vector Informatik GmbH

Version: 9.01 15 / 136

³ Includes E2E, CRC, CAL (CPL)



The MICROSAR OS is an operating system based on the AUTOSAR OS standard V5.0.0 (ref. [1]) and on OSEK OS standard 2.2.3 (ref. [3]).

This MICROSAR OS operating system is a real time operating system, which was specified for the usage in electronic control units on a range of small to large microprocessors. MICROSAR OS has attributes which differ from commonly known operating systems and which allow a very efficient implementation even on systems with low resources of RAM and ROM.

As a requirement, there is no dynamic creation of new tasks at runtime; all tasks have to be defined before compilation. The operating system has no dynamic memory management and there is no shell for the control of tasks by hand.

The operating system and the application are compiled and linked together to one file, which is loaded into an emulator or is burned into an EPROM or Flash EEPROM.



3 Functional Description

3.1 Features

The features listed in this chapter cover the complete functionality specified in [1].

The "supported" and "not supported" features are presented in the following two tables. For further information of not supported features, also see chapter 9.

The following features described in [1] are supported:

Supported Feature

The Vector MICROSAR OS implements all mandatory features described in the chapter about System Scalability within [1]. However, some minor restrictions apply, see chapter 9 in this document.

Table 3-1 Supported SWS features

The following features described in [1] are supported in MultiCore implementations. However, they are currently not described in this document, but in the additional documentation [4].

Conditionally Supported Feature

MultiCore

Inter OSApplication Communication (IOC)

Table 3-2 Not supported SWS features

The OSEK / AUTOSAR OS specifications leave many points open on implementation. Every OSEK / AUTOSAR OS implementation for a specific microcontroller has to define the open points to achieve an optimal solution for the processor. The operating system has to fit the target microprocessor and the C-compiler. The programming model of the C-compiler is as important as the hardware of the processor.

3.2 Main Functions

The operating system is started by the application. The startup module (which is not part of the operating system) calls the function main. In the main function, the user has to call the API function <code>StartOS</code>. <code>StartOS</code> will initialize the operating system, install the interrupt routine for the alarm handling, and then call the scheduler. <code>StartOS</code> will never return to the main function.

The function of the scheduler is to evaluate the task with the highest priority in the READY state and call this task. If the task was previously pre-empted by another higher priority task, the scheduler resumes the task.



The operating system is controlled by external events. External events can be events from interrupt routines, from the alarm management, or from schedule tables (Alarms and schedule tables are also driven by interrupt service routines). Therefore, any external event will result in the change of task states.

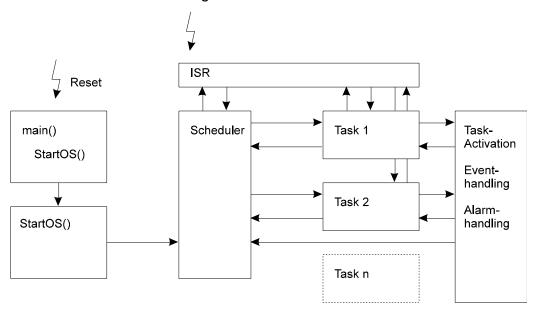


Figure 3-1 Functional parts

Interrupt routines are under the control of the application programmer. An OSEK operating system allows a fast and efficient interrupt handling, so interrupts have a short latency time. It is possible to call certain system functions from interrupt routines. It is necessary that the operating system has knowledge of any existing interrupt routines.

3.2.1 Timer and Alarms

All time-based actions are performed in OSEK using counters, alarms, and schedule tables. Counters are part of the kernel and are incremented by a specific hardware resource or by means of the system service IncrementCounter. In case of a time-based counter, the counter is incremented periodically. Alarms and schedule tables have fixed references to counters. MICROSAR OS supports up to 256 counters.

An alarm, if activated, has a certain value. If the referenced counter reaches the given value, a defined action is performed. The action to each alarm is defined by the OIL Configurator and is compiled into the ROM. The alarm value is passed as a parameter to the functions <code>SetRelAlarm</code> or <code>SetAbsAlarm</code>.

A schedule table, if activated, has a certain starting value. If the referred counter reaches the given value, the first defined action is performed. The further actions are defined relative to this first action. These relative starting times are defined together with the action by the OIL Configurator and compiled into ROM. The starting value is passed as a parameter to the functions <code>StartScheduleTableRel</code> or <code>StartScheduleTableAbs</code>.



3.2.1.1 Time Base

3.2.1.1.1 Counter Macros

To support the portability of OSEK, application alarm related functions, for example SetRelAlarm, should be called using macros for the calculation of ticks based on millisecond or seconds:

SetRelAlarm (Alarm1, OS_xx2TICKS_<CounterName> (1200), OS_xx2TICKS_<CounterName>
(1200));

The macros OS_TICKS2xx_<CounterName>() (whereas xx denotes NS, US, MS or SEC; described by the AUTOSAR standard) may be used to convert tick values (as returned for example by GetElapsedTime() and GetCounterValue()) to into a second based timer unit. Additionally, MICROSAR OS provides the inverse macros OS_xx2TICKS_<CounterName>() for conversion into the opposite direction (see Figure 2-2).




Figure 3-2 Counter Macros



Caution

Depending on the hardware settings, certain nanosecond times may not be representable accurately.

Therefore, if large times, very small times or very high precision is needed, use AUTOSAR OS OsTimeConstant instead (see 7.3.3).

3.2.1.1.2 Temporal Range of Alarms

The temporal range of an alarm depends on the Counter, which drives the alarm. The important configuration attributes here are OsSecondsPerTick and OsCounterMaxAllowedValue (see 7.3.3).

3.2.1.2 Timer Interrupt Routine

The timer interrupt routines are category 2 ISRs and are part of the operating system. The configuration is done automatically by the OS using information that has to be defined in the OIL Configurator.

3.2.1.2.1 Counter API

To obtain the counter specific limits (e.g. maxallowedvalue) the function GetAlarmBase can be used.



1.1.1.1.1 Initialization

Former versions of osCAN and MICROSAR OS provided the API functions:

```
StatusType InitCounter<CounterName>(TickType ticks);
```

These functions have been removed, as they do not conform to the standardized counter API described in [1]. Instead, counters are always initialized to 0 during StartOS().

1.1.1.1.1.2 Read Counter

MICROSAR OS provides the API functions GetCounterValue and GetElapsedValue as defined by [1].

Former versions of osCAN and MICROSAR OS provided the API functions:

```
TickType GetCounterValue<CounterName>(void);
```

These functions have been removed, as they do not conform to the standardized counter API described in [1]. It is recommended to use the API function GetCounterValue defined by AUTOSAR Standard instead.

1.1.1.1.3 Increment Counter

```
StatusType IncrementCounter(CounterType CounterName);
```

This function is the AUTOSAR OS standardized function to trigger a counter.



Example

The ISR that triggers the counter must be of category 2.

```
ISR(MyCounterISR)
{
    IncrementCounter(MyCounter);
}
```

Former versions of osCAN and MICROSAR OS provided the API function

```
void CounterTrigger<CounterName>(void);
```

These functions have been removed, as they do not conform to the standardized counter API described in [1]. It is recommended to use the API function IncrementCounter defined by AUTOSAR Standard instead.

3.2.2 Stack Handling

3.2.2.1 Task Stack

Each task has its own stack. The task stack holds all local data and return addresses of the task. In addition, the register context of the task is saved onto the stack if the task is preempted. If the task is transferred to the running state again, the register context is removed from the task stack to restore the previously saved registers.

3.2.2.2 Interrupt Stack

The implementation of interrupt stacks depends on the hardware, and is described in ref. [4].



3.2.2.3 Stack Monitoring

MICROSAR OS SafeContext always initializes the last useable bytes of each stack with an indicator value.

This indicator is then checked with each task switch or ISR exit. A change of the element value indicates a stack overflow by the task or ISR. In this case, the system calls the <code>ErrorHook</code> (if configured), the <code>ShutdownHook</code> (if configured) and enters the shutdown state.



Note

MICROSAR OS checks the indicator value only at task switches and on a return from an ISR. Therefore, stack overflows are not detected immediately. Detection might be delayed arbitrary in case of a stack overflow in a hook routine. Some implementations of MICROSAR OS implement additional checks of the indicator value, see [4]. If memory protection is configured, stack overflows in tasks and ISRs of non-trusted applications are found immediately by the memory protection if the stack is followed by an area with no access rights.

In case a stack fault is detected by memory protection, the ProtectionHook is called with parameter E_OS_PROTECTION_MEMORY. If a stack fault is detected by stack monitoring, MICROSAR OS goes into shutdown after the ProtectionHook.

3.2.2.4 Stack Usage

If StackUsageMeasurement is set to TRUE, the OS fills all available stacks with the indicator value 0xAA during StartOS (startup times will be slower). This allows measuring the amount of stack used since StartOS by counting the amount of bytes that have not been overwritten yet.

The following function is available to determine the amount of used stack:

osuint16 osGetStackUsage(TaskType taskId)

- > Argument: Task number
- > Return value: Maximum stack usage (bytes) by task since call of StartOS()

Additional implementations specific functions may be available. Please see the hardware specific part of the documentation of this implementation [4].



Caution

Dependent on the stack size, the measurement operation can take a long time.

3.2.3 Interrupt Handling

Implementation specific details about interrupt handling are described in the hardware specific part of this implementation [4].





Caution

Knowledge about the interrupt handling is very important. If interrupt routines are used it is essential to read this chapter.

3.2.3.1 Interrupt Categories

The OSEK OS specification defines two groups of interrupts.

3.2.3.1.1 Category 1:

Interrupts of category 1 are in general not allowed to use API functions; as such, these routines can be programmed without restrictions and are completely independent from the kernel. The programming conventions depend on the utilized compiler and assembler.

Category 1 interrupts can be enabled before call of StartOS(). If interrupts of category 1 and 2 cannot be disabled separately, all interrupts must be disabled.

Interrupts of category 1 are allowed to call the interrupt API as an exception to the rule presented above. If the interrupt API is used and the category 1 interrupts are enabled before the call of Startos, the user has to take care about variable initialization of the interrupt API, as described in chapter 3.2.3.2.

1.1.1.1.4 Exceptions and SC2, SC3, SC4

According to the AUTOSAR-Standard, category 1 interrupts should be avoided with SC2, SC3 and SC4. MICROSAR OS does not allow category 1 interrupts with TimingProtection. Because non-maskable interrupts need to be configured to category 1, some MICROSAR OS implementations allow exceptions even with timing protection.

The user may write "normal" interrupt code in an exception routine, which returns to the application. Please note that this sort of exception routines will cause the exception handler to add runtime to the account of the interrupted task or ISR.

3.2.3.1.2 Category 2:

Interrupts of category 2 may use certain restricted API functions. Interrupts of category 2 can be programmed as normal C functions using the macro ${\tt ISR(name)}$. The C function is called by the operating system. The necessary preparation for the interrupt routine is done automatically by a generated function.

```
ISR (AnInterruptRoutine)
{
    /* code with API calls */
}
```



Caution

Category 2 interrupts must be disabled until call of StartOS()! This also applies for the timer interrupts, i.e. this interrupt must be stopped by the user at a software reset.



To ensure data consistency, the operating system needs to disable category 2 interrupts during critical sections of code. Therefore, applications must not use non-maskable interrupts as category 2 interrupts.

3.2.3.2 Usage of the Interrupt API before StartOS

The usage of the interrupt API functions is in general allowed before the operating system is started. The affected functions are:

- > DisableAllInterupts, EnableAllInterrupts
- > SuspendAllInterrupts, ResumeAllInterrupts
- > SuspendOSInterrupts, ResumeOSInterrupts

However, these functions use some internal variables that have to be initialized to zero before the first call of the interrupt API. Typically, this initialization is performed by the startup code (which might be delivered with the compiler). In case no startup code is used, the function <code>osInitialize()</code> needs to be called. <code>osInitialize</code> initializes the variables which are used in the interrupt API.



3.2.4 Timing Protection

The timing protection is implemented in the Scalability Classes 2 and 4. This chapter provides some hints on the functionality according to the AUTOSAR OS standard [1] and describes additional functionality provided by Vector MICROSAR OS. To enable the timing protection of a task or ISR, the OIL-attribute TIMING_PROTECTION of the respective task or ISR needs to be configured, as described in chapters 7.3.2.2 and 7.3.7.2. (AUTOSAR XML: OsTaskTimingProtection/OsIsrTimingProtection).



Caution

The runtime of all tasks and ISRs is observed, however parts of the time for task switch and interrupt entry/exit cannot be monitored by the timing protection. Therefore, some extra time for task switches and interrupt entry/exit needs to be considered in the configuration of the timing protection.



Caution

Timing Protection is implemented with interrupts. If the application manually disables interrupts anywhere, the timing protection cannot work as expected. In order to enable and disable interrupts, the application **must** use the following API functions:

- > DisableAllInterupts, EnableAllInterrupts
- > SuspendAllInterrupts, ResumeAllInterrupts
- > SuspendOSInterrupts, ResumeOSInterrupts



Caution

The timing protection works very precise. However, if an OS API function is called by a task/ISR, the OS may enter a critical section; if a timing protection violation is detected while the system is in a critical section, the call of the protection hook may be delayed until the end of the critical section. Note, that critical sections in AUTOSAR OS are very short.

3.2.4.1 Reaction on Protection Failure

The AUTOSAR specification describes different possibilities how to react to a protection violation. In SafeContext implementations, reaction to such a situation is limited to Shutdown.

3.2.4.2 Timing Measurement

MICROSAR OS is not only able to provide timing protection but allows using the same functionality for timing measurement. If timing measurement is performed for a specific task or ISR, the OS measures the following times for that task or ISR:

- > the maximum run time since StartOS
- > the maximum locking times for resources and interrupts since StartOS



> the minimum time distance between two arrivals since StartOS

The debugger can read the result of the timing measurement via ORTI. Alternatively, the application may use the timing measurement API as described in chapter 6.4.

The OS attribute TimingMeasurement and the task/ISR attribute TIMING_PROTECTION are provided to setup timing protection and measurement.

The hardware timers and internal data structures to store measured times are limited in size. When this limit is exceeded by any measured time (e.g. of a resource or interrupt lock), the ErrorHook function is called and the system goes into shutdown state.

3.2.4.2.1 Timing measurement configuration for a specific task/ISR

Timing measurement can be configured individually for each task and ISR. As timing protection requires the OS to measure the timing values, timing measurement is performed for all tasks and ISRs that have timing protection configured by means of the attribute <code>TIMING_PROTECTION</code>. By selecting the sub attribute <code>OnlyMeasure</code>, the OS disables the timing protection but still measures the timing values. Please note that this configuration might be overridden by means of the global configuration, described in the next chapter.

3.2.4.2.2 Global configuration of timing measurement

In order to save configuration time, the timing measurement can be configured globally for all tasks and ISRs. MICROSAR OS provides the OIL-attribute TimingMeasurement (AUTOSAR XML: OsoSTimingMeasurement) for that purpose. That attribute provides the possibilities to:

- > Disable the timing measurement globally. This is an optimization to save memory and runtime of the timing measurement. Please set the attribute TimingMeasurement to FALSE (deselect it) for this configuration.
- > Collect timing data for all tasks and ISRS. The collected timing values can be used to perform scheduleability analysis and to set up the timing protection later on. For this configuration, please set the attribute TimingMeasurement to TRUE (select it) and choose OnlyMeasureAll for the value of the sub attribute GlobalConfig.
- > Perform timing measurement as configured for the task or ISR. Set the attribute TimingMeasurement to TRUE (select it) and select AsSelected for the value of the subattribute GlobalConfig to achieve this.
- > Ignore the task/ISR attribute OnlyMeasure (perform timing measurement and protection as if this attribute was set to FALSE). For this configuration, please set the attribute TimingMeasurement to TRUE (select the attribute) and select ProtectAndMeasureAll for the value of the subattribute GlobalConfig.

The chapter 7.3.2.2 provides a description of the attribute <code>TIMING_PROTECTION</code> for tasks while chapter 7.3.7.2 provides the respective description for ISRs. Chapter 7.3.1.4 provides a description of the attribute <code>TimingMeasurement</code>. The table below documents the interdependence between the OS-attribute <code>TimingMasurement</code> and the task/ISR-Attribute <code>TIMING_PROTECTION</code>.



os		TASK/ISR			
		TIMING_PROTECTION			
Timing- Global-		FALSE	TRUE		
Measuremen t	Config		OnlyMeasure		
			FALSE	TRUE	
FALSE ¹		No timing protection, no timing measurement,	Timing protection but no timing measurement	Timing protection but no timing measurement, warning as the sub attribute OnyMeasure is overridden	
TRUE	Only- Measure- All	No timing protection but timing measurement	No timing protection but timing measurement, warning as the sub attribute OnlyMeasure is overridden	No timing protection but timing measurement	
	AsSelecte d	No timing protection and no timing measurement	Timing protection and measurement	No Timing protection but timing measurement	
	ProtectAn d- MeasureAl 1	No timing protection but timing measurement	Timing protection and measurement	Timing protection and measurement, warning as the sub attribute OnlyMeasure is overridden.	

Table 3-3 Interdependence between the OS attribute TimingMeasurement and the task/ISR attribute TIMING PROTECTION

3.2.4.3 Hook functions

The runtime of the hook functions PreTaskHook and PostTaskHook (Chapters 6.6.2 and 6.6.3) is considered to belong to the runtime of the currently active task.



Caution

Depending on the implementation, the execution of the ProtectionHook might be delayed until the PreTaskHook or PostTaskHook has finished. In case of a protection violation during the PostTaskHook while a task state change into the states SUSPENDED or WAITING, the call of the ProtectionHook gets lost. Therefore, the PreTaskHook and the PostTaskHook are allowed for debugging purposes only. They must be disabled in production code, see [9].

The runtime of the hook functions UserPreIsrHook and UserPostIsrHook (Chapters 6.6.7 and 6.6.8) is considered to belong to the runtime of the currently active ISR.

3.2.5 Memory Protection

MICROSAR OS uses the MPU of the microcontroller to implement memory protection as described in [1]. Former versions of MICROSAR OS fulfilled the AUTOSAR requirement OS195 and prevented write access to Task/ISR private data areas even within an

©2015, Vector Informatik GmbH Version: 9.01 26 / 136

¹ Optimization: The timing measurement API is unavailable



OSApplication. This behaviour is defined as optional by AUTOSAR and not implemented in most current versions of MICROSAR OS. It is explicitly mentioned in [5] if supported.

3.2.6 Schedule Tables

MICROSAR OS implements schedule tables as defined by the AUTOSAR standard. The document [1] provides the base description of schedule tables and their usage. This chapter is meant as an extension that clarifies and corrects some points, provides details about points left open and describes corrections and extensions by MICROSAR OS.

AUTOSAR defines schedule tables for all scalability classes, but synchronization to a global time only for SC2 and SC4. MICROSAR OS offers some additional error checking to the AUTOSAR standard.

3.2.6.1 Synchronization

In SC2 and SC4 or the High-Resolution Schedule Tables option, it is possible to synchronize a schedule table to a global time source. The schedule table must be marked with the OIL attribute <code>LOCAL_TO_GLOBAL_TIME_SYNCHRONIZATION</code>.

3.2.6.1.1 Starting a synchronizable Schedule Table

One way to start a synchronizable schedule table is to use the functions <code>StartScheduleTableRel(Tablename, TimeOffset)</code> and <code>StartScheduleTableAbs(Tablename, Time)</code>. The time parameters refer to the local time and not to the global time. It is assumed that the schedule table will not have an offset to global time: when synchronization starts, the start of the schedule table is moved to global time zero. Note that the schedule table always starts at the stated start time. A call of <code>SyncScheduleTable</code> does not influence this start time. Synchronization starts after execution of the first expiry point.

The recommended way to start a synchronizable schedule table is to use the combination of StartScheduleTableSynchron (Tablename) and SyncScheduleTable(). The first expiry point is executed at global time 0. The schedule table starts execution after a global time is available, i.e. after calling SyncScheduleTable() for the schedule table. If SyncScheduleTable() is never called for the schedule table, the schedule table is never executed. The following algorithm describes a possibility to set up a timeout:

Set up alarm to the timeout time. When the alarm GetScheduleTableStatus() indicates that the schedule table is still waiting, call with arbitrary time. Note: if the call SyncScheduleTable() an SyncScheduleTable() is done in an interrupt, it may occur between the two API calls, and thus gets overridden by the arbitrary time.

3.2.6.1.2 Autostart

For an automatic start of a schedule table on startup of the OS, the attribute AUTOSTART must be set. The sub-attribute TYPE defines how the start is performed. The possibilities are: ABSOLUT, RELATIVE and SYNCHRON. These types of autostart are similar to the normal start of a schedule table using StartScheduleTableAbs, StartScheduleTableRel or StartScheduleTableSynchron. For ABSOLUT and RELATIVE, an absolute or relative start time needs to be provided. In case of SYNCHRON,



the schedule table starts after SynchScheduleTable has been called and the global time reaches zero.

Note, that just like for StartScheduleTableSynchron(), the schedule table will wait forever if SyncScheduleTable() is never called.

3.2.6.1.3 Suspending a Schedule Table and keeping its Synchronization

The AUTOSAR standard does not define a way to suspend the execution of a schedule table and keep its synchronization for later restart. The suggested approach is to use <code>NextScheduleTable()</code> to append a schedule table that effectively does nothing.

Currently, AUTOSAR does not define a way to retrieve the internal schedule table time (neither the currently estimated global time nor the time relative to the first expiry point of the schedule table).

3.2.6.1.4 Providing a Global Time

The current global time is handed to the schedule table via SyncScheduleTable(). If a deviation of the schedule table to the global time is found, the schedule table starts to synchronize at the next expiry point that allows synchronization.

The global time must be a continuous range of integers: So e.g. FlexRay's time tuple (cycle, macroticks) cannot directly be used as global time, but must be converted.

The provided global time must have the same resolution as the local time and the same period as the schedule table time (i.e. the LENGTH of the schedule table). If this is not the case, it must be converted before being handed to SyncScheduleTable().



Example

Converting the FlexRay time:

Be <code>gMacroPerCycle</code> the number of <code>macroticks</code> per cycle, <code>cycle</code> the current cycle number, <code>macroticks</code> the current macrotick number and <code>f</code> is the factor to convert the FlexRay tick length the HW counter tick length:

GlobalTime = (gMacroPerCycle * cycle + macroticks) * f

3.2.6.1.5 Exact Synchronization

There is always a time span between reading the global time and handing it to the operating system. Therefore, synchronization is never absolutely exact.

If an interrupt interferes, the time span may be unexpectedly large. While this may be ignorable if the resolution is large compared with the interrupt running times, it is noticeable when using a fine grained global time, for example in conjunction with High-Resolution Schedule Tables, or if some (higher prior) interrupts have long running times. It is desirable to be undisturbed by (higher prior) interrupts during synchronization.

The AUTOSAR Standard demands, that calling any API functions is not allowed in between function pairs



DisableAllInterrupts/EnableAllInterrupts, SuspendAllInterrupts/ResumeAllInterrupts, SuspendOSInterrupts/ResumeOSInterrupts.

MICROSAR OS makes an exception from the standard in this point: SyncScheduleTable() can be called in between these function pairs.

Therefore, a Sync procedure may look like the following example:

```
DisableAllInterrupts();
now=getCurrentGlobalTime();
SyncScheduleTable(MyScheduleTable, now);
EnableAllInterrupts();
```



Caution

This is unnecessary if SyncScheduleTable() is called from an interrupt which does not allow nesting.

Also note, that SuspendAllInterrupts()/DisableAllInterrupts() still allow timing protection interrupts (if timing protection is used).

3.2.6.1.6 Limits of the Synchronization Algorithm

The synchronization algorithm as described by the AUTOSAR standard only corrects deviations of the past – it does not make assumptions about deviations of the present or the future. Differences in clock speed (between local time and global time) are not completely compensated.

Simplified synchronization algorithm: When <code>SyncScheduleTable</code> is called, the difference between the local schedule table time and the provided global time is computed and stored internally. Nothing more happens until an expiry point expires. Then, the times between subsequent expiry points are adapted. The adaptation stops once the computed deviation is compensated or a new global time is provided. In case new deviations between the global and local time occur, they are considered after the next call of <code>SyncScheduleTable</code> in the same way as just described.

As a result of this algorithm, a permanent deviation in the speed of global and local clock might not be compensated completely.



Example

The local schedule table time² runs 10 % slower then the global time. Whenever the global time reaches a multiple of 100, the function <code>SyncScheduleTable</code> is called to provide the global time to the schedule table. Both times start simultaneously at zero. When the global time reaches 100, the local time is 90 because of the 10 % difference. <code>SyncScheduleTable</code> is called, and computes a difference of 10. We assume now that the difference is compensated until the next call of <code>SyncScheduleTable</code> occurs. The local time is then: <code>90+10+90=190</code> while the global time is 200. Again we have the same difference, so 10 needs to be corrected. The same occurs for all subsequent calls of <code>SyncScheduleTable</code>, too.

©2015, Vector Informatik GmbH Version: 9.01 29 / 136

² The local time is based on the MCU's internal clock.



Although the computed difference between current time values of global and local time is corrected, the same difference occurs in the next synchronization step. However, using synchronization the deviation stays constant. Without synchronization, it would accumulate.

3.2.6.1.7 Details about using NextScheduleTable

The AUTOSAR standard leaves open certain details of using NextScheduleTable with synchronizable schedule tables. The following describes the implementation of NextScheduleTable MICROSAR OS.

If two schedule tables are chained using the API function NextScheduleTable(), the second schedule table takes over the synchronized schedule table time of the predecessor³.

When switching to a schedule table that does not allow synchronization, the remaining difference to the global time is saved: upon switching to a schedule table that allows synchronization it will immediately start to synchronize.

3.2.6.1.8 Concurrent Actions

If a task is activated at an expiry point, and an event for this task is set at the same expiry point, always all tasks will be activated before events are set. However, if two schedule tables are using the same counter; one of these schedule tables activates a task and the other schedule table sets an event for this task at the same time, the behaviour is undefined.

3.2.6.2 High-Resolution Schedule Tables

AUTOSAR schedule tables are driven by a counter (hardware or software), and thus offer the same resolution. While it is possible to configure a higher resolution for the counter, this increases also the interrupt load. High-Resolution Schedule Tables offer a microsecond resolution or better⁴ without unnecessary additional interrupt load: At each expiry point, a timer interrupt is reprogrammed so it will be reactivated exactly at the following expiry point⁵.

Note that high resolution schedule tables are not supported by all MICROSAR OS implementations.

It is possible to use standard schedule tables and High-Resolution Schedule Tables at the same time. High-Resolution Schedule Tables support the full AUTOSAR API, including synchronization (see 3.2.5.1) and are particularly suited for FlexRay.

³ Therefore, if the two schedule tables have a different LENGTH, switching from one to the other is undefined: it may work, but may also lead to unexpected results. This is not checked at runtime (and cannot be checked at generation time).

⁴ The actually achievable best resolution depends on the hardware, hardware settings and application

⁵ while the activation of the schedule table handler is done as exact as the underlying counter (the hardware) allows it, a certain time span will expire until the expiry point is actually processed. Interrupts, non-preemptive tasks and interrupt disabling times impose an additional jitter.



3.2.6.2.1 Setup

To create a High-Resolution Schedule Table, create a Schedule Table and choose any High-Resolution Counter as the underlying counter. This counter is available only on the MICROSAR OS implementations that support high resolution schedule tables; it is automatically available if supported.

3.2.6.3 Cyclical Expiry Point Actions

Cyclical expiry point actions are a Vector specific extension of the AUTOSAR Standard to ease the configuration of schedule table actions. In case an expiry point action shall be executed cyclicly within a schedule table, the user may select the sub-attribute Cyclic. This allows him to define a cycle time in the sub-attribute CycleTime. This informs the generator that the expiry point action shall occur repeatedly with the configured cycle time starting at the offset of the expirity point, the action belongs to.

In case, the sub-attributes <code>Cyclic</code> and <code>CycleTime</code> have been configured, the generator of the OS copies the expiry point actions to the configured locations within the schedule table before it generates the schedule table. In case, there is already an expiry point at a location where a cyclical expiry point action shall occur, the cyclical action is simply added to the actions of that expiry point. In case there is no expiry point configured at the location where a cyclical expiry point action schall occur, the generator invents an expiry point. Please note that generator invented expiry points do not allow synchronization as there is no configuration of the synchronization step width possible.

3.2.7 Trusted Functions

MICROSAR OS OSEK/AUTOSAR provides two possibilities to call trusted functions: by direct call of API function CallTrustedFunction or by using generated stub functions.

It is possible to mix applications using direct calls and applications using generated stub functions.



Caution

Inside trusted functions there is full access to all memory. Therefore, each trusted function with address arguments for return values must check the access rights of the caller before writing results through an address argument. The API provides the functions <code>CheckTaskMemoryAccess</code> and <code>CheckISRMemoryAccess</code> for address checking.

3.2.7.1 Generated Stub Functions

The generation of stubs for trusted functions is a Vector specific extension of the AUTOSAR OS standard to ease the usage of trusted functions.

To enable stub generation for an application, the TRUSTED attribute of this application and the sub-attribute GenerateStub must be set to TRUE.

In this case, a caller stub with the name Call_<name> is generated for each trusted function of the application, where <name> is the name of the trusted function. The generated stub function Call_<name> packs its parameters into a structure as needed by



the standard API function CallTrustedFunction and calls that API function. Another generated stub function performs an unpacking of the parameters so that the user's trusted function does not need to get all the parameters via one pointer, but can have a set of parameters and a return value like any legal C-function.

In case the sub-attribute <code>GenerateStub</code> is set to <code>TRUE</code>, the user has to define the parameters and the return value of the trusted function as well. The sub-attribute <code>Params</code> shall contain a comma-separated list of type and parameter name (as they would occur in a function definition in C). The sub-attribute <code>ReturnType</code> shall define the return type of the function.

The stubs are generated into the file trustfct.c.

See <u>10.8</u> for an example using generated stub functions for trusted applications.



Caution

The generator does not produce prototypes for the trusted functions to be called by the trusted function stubs. The prototypes shall be provided by the writer of these functions and included into the file usrostyp.h. Parameter types and the return type need to be defined there also in case they are no simple types of the C-language. The file usrostyp.h is described in chapter 5.2.



3.3 Error Handling

3.3.1 Error Messages

If the kernel detects errors, the OSEK error handling is called. The hook routine ErrorHook is called if selected.

Depending on the situation in which an error was detected the error handling will return to the current active task or the system will be shut down.

3.3.2 OSEK / AUTOSAR OS Error Numbers

The OSEK specification defines several error numbers that are returned by the API functions. A certain error number has different meanings for different API functions. The user has to know the API function to interpret the error number correctly.

With the AUTOSAR OS specification, the range of error numbers was extended. The following table shows all specified error numbers.

Erro	r Code	Description
0	E_OK	Service executed successfully
1	E_OS_ACCESS	Several APIs: general access of object failure
2	E_OS_CALLEVEL	Several APIs: service accessed from wrong context
3	E_OS_ID	Several APIs: service called with wrong ID
4	E_OS_LIMIT	Several APIs: service called too often
5	E_OS_NOFUNC	Several APIs: (warning) service not executed
6	E_OS_RESOURCE	Several APIs: service called with occupied resource
7	E_OS_STATE	Several APIs: object is in wrong state
8	E_OS_VALUE	Several APIs: passed parameter has wrong value
9	E_OS_SERVICEID	Several APIs: service can not be called
10	E_OS_ILLEGAL_ADDRESS	Several APIs: invalid address passed
11	E_OS_MISSINGEND	Several APIs: task terminated without TerminatTask
12	E_OS_DISABLEDINT	Several APIs: service called with disabled interrupts
13	E_OS_STACKFAULT	Stack monitoring detected fault
14	E_OS_PROTECTION_MEMORY	Memory access violation
15	E_OS_PROTECTION_TIME	Execution time budget exceeded
16	E_OS_PROTECTION_ARRIVAL	Arrival before the timeframe expired
17	E_OS_PROTECTION_LOCKED	Task/ISR blocked too long (e.g. by disabled interrupts)
18	E_OS_PROTECTION_EXCEPTION	A trap occurred

Table 3-4 OSEK/AUTOSAR OS error numbers

The additional implementation specific error numbers are defined as:



Error	Code	Description
20	E_OS_SYS_ASSERTION	This error is generated if the kernel detects an internal inconsistency. The reason and an exact explanation is described below.
21	E_OS_SYS_ABORT	This error is generated if the kernel has to shut down the system but the reason was not an API function.
22	E_OS_SYS_DIS_INT	This error number is no longer used. It is replaced by the AUTOSAR OS conformant number E_OS_DISABLEDINT.
23	E_OS_SYS_API_ERROR	This error is generated if an error occurs in an API function and there is no error code specified in the OSEK specification. The reason and an exact explanation is described below.
24	E_OS_SYS_ALARM_MANAGEMENT	A general warning issued in certain cases involving the alarm management. Detailed description in the implementation specific manual
25	E_OS_SYS_WARNING	A general warning issued in certain cases. Detailed description in the implementation specific manual.

Table 3-5 Implementation specific error numbers

More implementation specific errors may be described in ref. [4].

3.3.3 MICROSAR OS Error Numbers

In addition to the OSEK error numbers, all MICROSAR OS implementations provide unique error numbers for an exact error description. All error numbers are defined as a 16-bit value. The error numbers are defined in the header file <code>osekerr.h</code> and are defined according to the following syntax:

```
0xgfee
  ||+--- consecutive error number
  |+--- number of function in the function group
  +---- number of function group
```

The error numbers common to all MICROSAR OS implementations are described below. The implementation specific error numbers have a function group number >= 0xA000 and are described in the document [4].

To access these error numbers the ERRORHOOK has to be enabled. The numbers are then accessible via the macro OSErrorGetosCANError().

Error Types:

Error Type	Description
OSEK	OSEK / AUTOSAR error. After calling the ErrorHook, the program is continued.
assertion	System assertion error. After calling the ErrorHook the operating system is shut down. Assertion checking is always enabled in SafeContext implementations.



Error Type	Description
syscheck	System error. After calling the ErrorHook the operating system is shut down. Refer to the specific error for a description how to enable or disable error checking.

Table 3-6 Error types

3.3.3.1 Error Numbers of Group Task Management / (1)

Group (1) contains the functions:

API Function	Abbreviation	Function Number
ActivateTask	AT	1
TerminateTask	TT	2
ChainTask	HT	3
Schedule	SH	4
GetTaskState	GS	5
GetTaskID	GI	6
osMissingTerminateError	MT	7

Table 3-7 API functions of group Task Management / (1)

Error numbers of group (1):

Error Code		Description	
		Error Type	Reason
0x1101	osdErrATWrongTaskID	OSEK	Called with invalid task ID
0x1102	osdErrATWrongTask Prio	assertion	Task has wrong priority level
0x1103	osdErrATMultiple Activation	OSEK	number of activation of activated task exceeds limit
0x1104	osdErrATIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x1105	osdErrATAlarm MultipleActivation	OSEK	Number of activation of activated task exceeds limit (task activation is performed by alarm-expiration or expiry point action)
0x1106	osdErrATNoAccess	OSEK	Calling application has no access rights for this task
0x1107	osdErrATCallContext	OSEK	Called from invalid call context
0x1108	osdErrATWrongAppState	OSEK	Referenced object is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x1201	osdErrTTDisabled Interrupts	OSEK	TerminateTask called with disabled interrupts
0x1202	osdErrTTResources	OSEK	TerminateTask called with occupied



Error Co	ode	Description	
		Error Type	Reason
	Occupied		resources
0x1203	osdErrTTNotActivated	assertion	TerminateTask attempted for a task with activation counter == 0 (not activated)
0x1204	osdErrTTOnInterrupt Level	OSEK	TerminateTask called from an interrupt service routine
0x1205	osdErrTTNoImmediate TaskSwitch	assertion	TerminateTask has tried to start the Scheduler without success.
0x1206	osdErrTTCallContext	OSEK	Called from invalid call context
0x1208	osdErrTTWrongActiveTa skID	assertion	Task index is not valid during call of TerminateTask
0x1301	osdErrHTInterrupts Disabled	OSEK	ChainTask called with disabled interrupts
0x1302	osdErrHTResources Occupied	OSEK	ChainTask called with occupied resources
0x1303	osdErrHTWrongTaskID	OSEK	New task has invalid ID
0x1304	osdErrHTNotActivated	assertion	Tried to terminate a task which have an activation counter which is zero
0x1305	osdErrHTMultiple Activation	OSEK	Number of activation of new task exceeds limit
0x1306	osdErrHTOnInterrupt Level	OSEK	ChainTask called on interrupt level
0x1307	osdErrHTWrongTask Prio	assertion	ChainTask was called from wrong priority level
0x1308	osdErrHTNoImmediate TaskSwitch	assertion	ChainTask has tried to activate the Scheduler without success.
0x1309	osdErrHTCallContext	OSEK	Called from invalid call context
0x130A	osdErrHTNoAccess	OSEK	Calling application has no access rights for this task
0x130B	osdErrHTWrongAppState	OSEK	Referenced object is owned by an OSApplication which was terminated.
0x130D	osdErrHTWrongActiveTa skID	assertion	Task index is not valid during call of ChainTask
0x1401	osdErrSHInterrupts Disabled	OSEK	Schedule called with disabled interrupts
0x1402	osdErrSHOnInterrupt Level	OSEK	Schedule called on interrupt level
0x1403	osdErrSHScheduleNot Allowed	assertion	Schedule called from task with enabled stack sharing by setting NotUsingSchedule in the OIL Configurator
0x1405	osdErrSHResources Occupied	OSEK	Called with an occupied resource



Error Code		Description	
		Error Type	Reason
0x1406	osdErrSHCallContext	OSEK	Called from invalid call context
0x1409	osdErrSHWrongActiveTa skID	assertion	Task index is not valid during call of Schedule
0x1501	osdErrGSWrongTaskID	OSEK	Called with invalid task ID
0x1502	osdErrGSIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x1503	osdErrGSIllegalAddr	OSEK	Caller has no write access rights for address argument
0x1504	osdErrGSCallContext	OSEK	Called from invalid call context
0x1505	osdErrGSNoAccess	OSEK	Calling application has no access rights for this task
0x1506	osdErrGSWrongAppState	OSEK	Referenced object is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x1507	osdErrGSOddInvocation	assertion	Invocation of internal function osGetTaskState detected although ReducedStatusChecks was enabled
0x1601	osdErrGIIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x1602	osdErrGIIllegalAddr	OSEK	Caller has no write access rights for address argument.
0x1603	osdErrGICallContext	OSEK	Called from invalid call context
0x1604	osdErrGIOddInvocation	assertion	Invocation of internal function osGetTaskID detected although ReducedStatusChecks was enabled
0x1701	osdErrMTMissing TerminateTask	syscheck	Exit of task without the call of TerminateTask or ChainTask. This error is detected in EXTENDED STATUS only.

Table 3-8 Error numbers of group Task Management / (1)

3.3.3.2 Error Numbers of Group Interrupt Handling / (2)

Group (2) contains the functions:

API Function	Abbreviation	Function Number
EnableAllInterrupts	EA	4
DisableAllInterrupts	DA	5
ResumeOSInterrupts	RI	6
SuspendOSInterrupts	SI	7
osUnhandledException	UE	8



API Function	Abbreviation	Function Number
osSaveDisableLevelNested	SD	9
osRestoreEnableLevelNested	RE	Α
osSaveDisableGlobalNested	SG	В
osRestoreEnableGlobalNested	RG	С
ResumeAllInterrupts	RA	D
SuspendAllInterrupts	SA	Е
GetISRID	II	2
Interrupt Exit (SC3 only)	IX	3

Table 3-9 API functions of group Interrupt Handling / (2)

Error numbers of group (2):

Error Code		Description	
		Error Type	Reason
0x2401	osdErrEAIntAPIWrong Sequence	assertion	DisableAllInterrupts not called before
0x2501	osdErrDAIntAPI Disabled	assertion	Interrupts are disabled with functions provided by OSEK
0x2801	osdErrUEUnhandled Exception	syscheck	An unhandled exception or interrupt was detected. This error check is always enabled.
0x2901	osdErrSDWrongCounter	assertion	Wrong counter value detected
0x2A01	osdErrREWrongCounter	assertion	Wrong counter value detected
0x2B01	osdErrSGWrongCounter	assertion	Wrong counter value detected
0x2C01	osdErrRGWrongCounter	assertion	Wrong counter value detected
0x2201	osdErrIIIntAPI Disabled	OSEK	GetISRID was called with interrupts disabled.
0x2202	osdErrIICallContext	OSEK	Called from invalid call context
0x2301	osdErrIXResources Occupied	OSEK	An ISR of category 2 was left with resources still occupied.
0x2302	osdErrIXIntAPI Disabled	OSEK	An ISR of category 2 was left with interrupts disabled by DisableAllInterrupts, SuspendAllInterrupts or SuspendOSInterrupts

Table 3-10 Error numbers of group Interrupt Handling / (2)



3.3.3.3 Error Numbers of Group Resource Management / (3)

Group (3) contains the functions:

API Function	Abbreviation	Function Number
GetResource	GR	1
ReleaseResource	RR	2

Table 3-11 API functions of group Resource Management / (3)

Error numbers of group (3):

Error Code		Description	
		Error Type	Reason
0x3101	osdErrGRWrongResource ID	OSEK	Invalid resource ID
0x3102	osdErrGRPriority Occupied	assertion	Ceiling priority of the specified resource already in use
0x3103	osdErrGRResource Occupied	OSEK	Resource already occupied
0x3104	osdErrGRNoAccess Rights	assertion	Task has no access to the specified resource
0x3105	osdErrGRWrongPrio	OSEK	Specified resource has a wrong priority. Possible reason: the task has no access rights to this resource.
0x3106	osdErrGRIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x3107	osdErrGRNoAccess	OSEK	Calling application has no access rights for this resource
0x3108	osdErrGRCallContext	OSEK	Called from invalid call context
0x3109	osdErrGRISRNoAccess Rights	OSEK	Calling ISR has no access rights for this resource
0x310B	osdErrGRWrongTaskID	assertion	Task index is not valid during call of GetResource
0x3201	osdErrRRWrongResource ID	OSEK	Invalid resource ID
0x3202	osdErrRRCeiling PriorityNotSet	assertion	Ceiling priority of the resource not found in the ready bit field
0x3203	osdErrRRWrongTask	assertion	Resource occupied by a different task
0x3204	osdErrRRWrongPrio	OSEK	Specified resource has a wrong priority. Possible reason: the task has no access rights to this resource.
0x3206	osdErrRRNotOccupied	OSEK	The specified resource is not occupied by the task
0x3207	osdErrRRWrongSequence	OSEK	At least one other resource must be released before



Error Code		Description	
		Error Type	Reason
0x3208	osdErrRRIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x3209	osdErrRRNoAccess	OSEK	Calling application has no access rights for this resource
0x320A	osdErrRRCallContext	OSEK	Called from invalid call context
0x320B	osdErrRRISRNoAccess Rights	OSEK	Calling ISR has no access rights for this resource
0x320D	osdErrRRNoReadyTaskFo und	assertion	No valid priority found when calling ReleaseResource
0x320E	osdErrRRWrongTaskID	assertion	Task index is not valid during call of ReleaseResource
0x320F	osdErrRRWrongHighRdyP rio	assertion	No valid high ready priority task index during call of ReleaseResource

Table 3-12 Error numbers of group Resource Management / (3)

3.3.3.4 Error Numbers of Group Event Control / (4)

Group (4) contains the functions:

API Function	Abbreviation	Function Number
SetEvent	SE	1
ClearEvent	CE	2
GetEvent	GE	3
WaitEvent	WE	4

Table 3-13 API functions of group Event Control / (4)

Error numbers of group (4):

Error Code		Description	
		Error Type	Reason
0x4101	osdErrSEWrongTaskID	OSEK	Invalid task ID
0x4102	osdErrSENotExtended Task	OSEK	Cannot SetEvent to basic task
0x4103	osdErrSETaskSuspended	OSEK	Cannot SetEvent to task in SUSPENDED state. The error code might occur in case of API call SetEvent or in case of alarm/schedule table action to set an event.
0x4104	osdErrSEWrongTask Prio	assertion	Wrong task priority detected



Error Code		Description		
		Error Type	Reason	
0x4105	osdErrSEIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK	
0x4106	osdErrSECallContext	OSEK	Called from invalid call context	
0x4107	osdErrSENoAccess	OSEK	Calling application has no access rights for this task	
0x4108	osdErrSEWrongAppState	OSEK	Referenced task is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	
0x4201	osdErrCENotExtended Task	OSEK	A basic task cannot clear an event	
0x4202	osdErrCEOnInterrupt Level	OSEK	ClearEvent called on interrupt level	
0x4203	osdErrCEIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK	
0x4204	osdErrCECallContext	OSEK	Called from invalid call context	
0x4301	osdErrGEWrongTaskID	OSEK	Invalid task ID	
0x4302	osdErrGENotExtended Task	OSEK	Cannot GetEvent from basic task	
0x4303	osdErrGETaskSuspended	OSEK	Cannot GetEvent from a task in SUSPENDED state	
0x4304	osdErrGEIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK	
0x4305	osdErrGEIllegalAddr	OSEK	Caller has no write access rights for address argument	
0x4306	osdErrGECallContext	OSEK	Called from invalid call context	
0x4307	osdErrGENoAccess	OSEK	Calling application has no access rights for this task	
0x4308	osdErrGEWrongAppState	OSEK	Referenced task is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	
0x4309	osdErrGEOddInvocation	assertion	Invocation of internal function osGetEvent detected although ReducedStatusChecks was enabled	
0x4401	osdErrWENotExtended Task	OSEK	WaitEvent called by basic task	
0x4402	osdErrWEResources Occupied	OSEK	WaitEvent called with occupied resources	
0x4403	osdErrWEInterrupts Disabled	OSEK	WaitEvent called with disabled interrupts	
0x4404	osdErrWEOnInterrupt Level	OSEK	WaitEvent called on interrupt level	
0x4405	osdErrWECallContext	OSEK	Called from invalid call context	



Table 3-14 Error numbers of group Event Control / (4)

3.3.3.5 Error Numbers of Group Alarm Management / (5)

Group (5) contains the functions:

API Function	Abbreviation	Function Number
GetAlarmBase	GB	1
GetAlarm	GA	2
SetRelAlarm	SA	3
SetAbsAlarm	SL	4
CancelAlarm	CA	5
osWorkAlarm	WA	6

Table 3-15 API functions of group Alarm Management / (5)

Error numbers of group (5):

Error Code		Description	
			Reason
0x5101	osdErrGBWrongAlarmID	OSEK	Invalid alarm ID
0x5102	osdErrGBIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x5103	osdErrGBIllegalAddr	OSEK	Caller has no write access rights for address argument
0x5104	osdErrGBCallContext	OSEK	Called from invalid call context
0x5105	osdErrGBNoAccess	OSEK	Calling application has no access rights for this alarm
0x5106	osdErrGBWrongAppState	OSEK	Referenced object is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x5201	osdErrGAWrongAlarmID	OSEK	Invalid alarm ID
0x5202	osdErrGANotActive	OSEK	Alarm not active
0x5203	osdErrGAIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x5204	osdErrGAIllegalAddr	OSEK	Caller has no write access rights for address argument
0x5205	osdErrGACallContext	OSEK	Called from invalid call context
0x5206	osdErrGANoAccess	OSEK	Calling application has no access rights for this alarm
0x5207	osdErrGAWrongAppState	OSEK	Referenced alarm is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE



Error Co	ode	Description	
		Error Type	Reason
0x5301	osdErrSAWrongAlarmID	OSEK	Invalid alarm id
0x5302	osdErrSAAlreadyActive	OSEK	Alarm already active
0x5303	osdErrSAWrongCycle	OSEK	Specified cycle is out of range
0x5304	osdErrSAWrongDelta	OSEK	Specified delta is out of range
0x5305	osdErrSAIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x5306	osdErrSAZeroIncrement	OSEK	SetRelAlarm was called with the parameter increment set to zero. (This is no longer allowed with AUTOSAR OS)
0x5307	osdErrSACallContext	OSEK	Called from invalid call context
0x5308	osdErrSANoAccess	OSEK	Calling application has no access rights for this alarm
0x5309	osdErrSAWrongAppState	OSEK	Referenced alarm is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x5401	osdErrSLWrongAlarmID	OSEK	Invalid alarm ID
0x5402	osdErrSLAlreadyActive	OSEK	Alarm already active
0x5403	osdErrSLWrongCycle	OSEK	Specified cycle is out of range
0x5404	osdErrSLWrongStart	OSEK	Specified start is out of range
0x5405	osdErrSLIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x5406	osdErrSLCallContext	OSEK	Called from invalid call context
0x5407	osdErrSLNoAccess	OSEK	Calling application has no access rights for this alarm
0x5408	osdErrSLWrongAppState	OSEK	Referenced alarm is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x5501	osdErrCAWrongAlarmID	OSEK	Invalid alarm ID
0x5502	osdErrCANotActive	OSEK	Alarm not active
0x5503	osdErrCAIntAPI Disabled	OSEK	Interrupts are disabled with functions provided by OSEK
0x5504	osdErrCAAlarmInternal	syscheck	Internal error detected while alarm was cancelled. This error is only detected when OSInternalChecks is set to Additional.
0x5505	osdErrCACallContext	OSEK	Called from invalid call context
0x5506	osdErrCANoAccess	OSEK	Calling application has no access rights for this alarm
0x5507	osdErrCAWrongAppState	OSEK	Referenced alarm is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE



Error Code		Description	
		Error Type	Reason
0x5601	osdErrWAWrongIDonHeap	assertion	Wrong alarm ID in heap data structure for alarm management
0x5602	osdErrWAHeapOverflow	assertion	Overflow in internal data structure for alarm management
0x5603	osdErrWAUnknownAction	assertion	Invalid alarm action type during processing of an expired alarm
0x5604	osdErrWAWrongCounterI D	assertion	Invalid counter ID during processing of an expired alarm with OsAlarmAction=OsAlarmIncrementC ounter.

Table 3-16 Error numbers of group Alarm Management / (5)

3.3.3.6 Error Numbers of Group Operating System Execution Control / (6)

Group (6) contains the functions:

API Function	Abbreviation	Function Number
osCheckStackOverflow	SO	1
osSchedulePrio	SP	2
osGetStackUsage	SU	3
osCheckLibraryVersionAndVariant	CL	4
osErrorHook	EH	5
StartOS	ST	6
osSchedInsertTask	QI	7
osSchedRemoveRunningTask	QR	8
osSchedOnHomePrio	QS	9
osSchedOccupyInternalResource	QO	Α

Table 3-17 API functions of group Operating System Execution Control / (6)

Error numbers of group (6):

Error Code		Description	
		Error Type	Reason
0x6101	osdErrSOStackOverflow	syscheck	Task stack overflow detected. This error is only detected when the OIL attribute WithStackCheck is set to TRUE.
0x6201	osdErrSPInterrupts Enabled	assertion	Scheduler called with enabled interrupts
0x6301	osdErrSUWrongTaskID	assertion	Called with invalid task ID



Error Code		Description		
		Error Type	Reason	
0x6401	osdErrCLWrongLibrary	syscheck	Wrong library linked to application. This error check is always enabled.	
0x6501	osdErrEHInterrupts Enabled	assertion	ErrorHook called with enabled interrupts	
0x6601	osdErrSTMemoryError	assertion	StartOS failed while initializing memory.	
0x6602	osdErrSTNoImmediate TaskSwitch	assertion	StartOS tried to activate the Scheduler without success.	
0x6603	osdErrSTWrongAppMode	syscheck	StartOS was called with an invalid parameter value. This error is only detected if the attribute STATUS is set to EXTENDED.	
0x6604	osdErrSTConfigCRCErro r	assertion	Configuration CRC mismatch detected during StartOS	
0x6606	osdErrSTConfigMagicNr Error	assertion	Error reading the magic number from config block during StartOS	
0x6607	osdErrSTInvalidMajorV ersion	assertion	Error reading the major version number from config block during StartOS	
0x6608	osdErrSTInvalidMinorV ersion	assertion	Error reading the minor version number from config block during StartOS	
0x6609	osdErrSTInvalidSTCfg	assertion	Schedule table has an invalid autostart type value.	
0x6701	osdErrQIWrongTaskPrio	assertion	Wrong Task Priority in osSchedInsertTask	
0x6801	osdErrQRInterruptsEna bled	assertion	Interrupts are enabled during osSchedRemoveRunningTask	
0x6802	osdErrQRWrongTaskID	assertion	Task index not valid in osSchedRemoveRunningTask	
0x6803	osdErrQRWrongTaskPrio	assertion	Priority not valid in osSchedRemoveRunningTask	
0x6804	osdErrQRWrongHighRdyP rio	assertion	High ready task priority not valid in osSchedRemoveRunningTask	
0x6901	osdErrQSInterruptsEna bled	assertion	Interrupts are enabled during osSchedOnHomePrio	
0x6902	osdErrQSNoReadyTaskFo und	assertion	No High ready task has been found in osSchedOnHomePrio	
0x6903	osdErrQSWrongPriority	assertion	Priority not valid in osSchedOnHomePrio	
0x6A01	osdErrQOWrongTaskID	assertion	Task index not valid in osSchedOccupyInternalResource	

Table 3-18 Error numbers of group Operating System Execution Control / (6)



3.3.3.7 Error Numbers of Schedule Table Control / (7)

Group (7) contains the functions:

API Function	Abbreviation	Function Number
StartScheduleTableRel	SR	1
StartScheduleTableAbs	SS	2
StopScheduleTable	SP	3
GetScheduleTableStatus	SG	4
NextScheduleTable	SN	5
osWorkScheduleTable	WS	6
SyncScheduleTable (SC2 and SC4)	SY	7
SetScheduleTableAsync (SC2 and SC4)	AY	8
StartScheduleTableSynchron (SC2 and SC4)	TS	С

Table 3-19 API functions of group Schedule Table Control / (7)

Error numbers of group (7):

Error Code		Description	
		Error Type	Reason
0x7101	osdErrSRWrongID	OSEK	StartScheduleTableRel was called with an invalid schedule table ID.
0x7102	osdErrSRAlready RunningOrNext	OSEK	StartScheduleTableRel was called for a schedule table that is already running or next.
0x7103	osdErrSRZeroOffset	OSEK	StartScheduleTableRel was called with the parameter Offset set to zero.
0x7104	osdErrSROffsetTooBig	OSEK	StartScheduleTableRel was called with the parameter Offset bigger than MAXALLOWEDVALUE of the respective counter.
0x7105	osdErrSRIntAPI Disabled	OSEK	StartScheduleTableRel was called with disabled interrupts.
0x7106	osdErrSRCallContext	OSEK	Called from invalid call context
0x7107	osdErrSRNoAccess	OSEK	Calling application has no access rights for this schedule table
0x7109	osdErrSRImplicite Sync	OSEK	StartScheduleTableRel was called for an implicitly synchronized ScheduleTable
0x710a	osdErrSRWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x7201	osdErrSSWrongID	OSEK	StartScheduleTableAbs was called with an invalid schedule table ID.
0x7202	osdErrSSAlready	OSEK	StartScheduleTableAbs was called for



Error Code		Description		
		Error Type	Reason	
	RunningOrNext		a schedule table, which is already running or next.	
0x7203	osdErrSSTickvalueToo Big	OSEK	StartScheduleTableAbs was called with the parameter TickValue bigger than MAXALLOWEDVALUE of the respective counter.	
0x7204	osdErrSSIntAPI Disabled	OSEK	StartScheduleTableAbs was called with disabled interrupts.	
0x7205	osdErrSSCallContext	OSEK	Called from invalid call context	
0x7206	osdErrSSNoAccess	OSEK	Calling application has no access rights for this schedule table	
0x7207	osdErrSSWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	
0x7301	osdErrSPWrongID	OSEK	StopScheduleTable was called with an invalid schedule table ID.	
0x7302	osdErrSPNotRunning	OSEK	StopScheduleTable was called for a schedule table, which is in stopped or next state.	
0x7303	osdErrSPIntAPI Disabled	OSEK	StopScheduleTable was called with disabled interrupts.	
0x7304	osdErrSPCallContext	OSEK	Called from invalid call context	
0x7305	osdErrSPNoAccess	OSEK	Calling application has no access rights for this schedule table	
0x7306	osdErrSPUnknownCase	Assertion	An internal error occured	
0x7307	osdErrSPWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	
0x7401	osdErrSGWrongID	OSEK	GetScheduleTableStatus was called with an invalid schedule table ID.	
0x7402	osdErrSGIntAPI Disabled	OSEK	GetScheduleTableStatus was called with disabled interrupts	
0x7403	osdErrSGCallContext	OSEK	Called from invalid call context	
0x7404	osdErrSGNoAccess	OSEK	Calling application has no access rights for this schedule table	
0x7405	osdErrSGIllegalAddr	OSEK	Caller has no write access rights for address argument	
0x7406	osdErrSGWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	
0x7407	osdErrSGOddInvocation	assertion	Invocation of internal function osGetScheduleTableStatus detected although ReducedStatusChecks was	



Error Code		Description	
		Error Type	Reason
			enabled
0x7501	osdErrSNWrongCurrent ID	OSEK	NextScheduleTable was called with an invalid schedule table ID for the parameter ScheduleTableID_current.
0x7502	osdErrSNWrongNextID	OSEK	NextScheduleTable was called with an invalid schedule table ID for the parameter ScheduleTableID_next.
0x7503	osdErrSNNotRunning	OSEK	NextScheduleTable was called to chain a schedule table after another schedule table, that is currently not running.
0x7504	osdErrSNAlready RunningOrNext	OSEK	NextScheduleTable was called to chain a running schedule table after another schedule table.
0x7505	osdErrSNDifferent Counters	OSEK	NextScheduleTable was called to chain two schedule tables, which are driven by different counters.
0x7506	osdErrSNIntAPI Disabled	OSEK	NextScheduleTable was called with interrupts disabled.
0x7507	osdErrSNCallContext	OSEK	Called from invalid call context
0x7508	osdErrSNNoAccess	OSEK	Calling application has no access rights for this schedule table
0x7509	osdErrSNWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x7601	osdErrWSUnknownAction	assertion	An invalid action was found in a schedule table
0x7602	osdErrWSUnknown Reaction	assertion	An internal error occured
0x7603	osdErrWSWrongID	assertion	No valid schedule table index in osWorkScheduleTable
0x7701	osdErrSYCallContext	OSEK	Called from invalid call context
0x7702	osdErrSYWrongID	OSEK	Called with wrong schedule table ID
0x7703	osdErrSYNoAccess	OSEK	Calling application has no access rights for this schedule table
0x7704	osdErrSYIntAPI Disabled	OSEK	Called with interrupts disabled
0x7705	osdErrSYSTNotRunning	OSEK	The Schedule table is currently not running
0x7706	osdErrSYGlobalTimeToo Big	OSEK	The Global Time is larger than the LENGTH of the schedule table
0x7707	osdErrSYSyncKindNot Explicit	OSEK	SyncScheduleTable was called for a Schedule table that is not explicitly synchronized.



Error Code		Description	
		Error Type	Reason
0x7708	osdErrSYWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x7801	osdErrAYCallContext	OSEK	Called from invalid call context
0x7802	osdErrAYWrongID	OSEK	Called with wrong schedule table ID
0x7803	osdErrAYNoAccess	OSEK	Calling application has no access rights for this schedule table
0x7804	osdErrAYIntAPI Disabled	OSEK	Called with interrupts disabled
0x7805	osdErrAYWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x7C01	osdErrTSCallContext	OSEK	Called from invalid call context
0x7C02	osdErrTSWrongID	OSEK	Called with invalid schedule table id.
0x7C03	osdErrTSNoAccess	OSEK	Calling application has no access rights for this schedule table
0x7C04	osdErrTSIntAPI Disabled	OSEK	Called with interrupts disabled
0x7C05	osdErrTSSTAlready Running	OSEK	The schedule table is already running or scheduled to run after a currently running schedule table
0x7C06	osdErrTSGlobalTimeToo Big	OSEK	The offset to Global Time is larger than the LENGTH of the schedule table
0x7C08	osdErrTSSyncKindNot Explicit	OSEK	StartScheduleTableSynchron was called for a Schedule table that is not explicitly synchronized.
0x7C09	osdErrTSWrongAppState	OSEK	Referenced schedule table is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE

Table 3-20 Error numbers of group Schedule Table Control / (7)

3.3.3.8 Error Numbers of Group Counter API / (8)

Group (8) contains the functions:

API Function	Abbreviation	Function Number
IncrementCounter	IC	1
GetCounterValue	GC	3
GetElapsedValue	GV	4

Table 3-21 API functions of group Counter API / (8)

Error numbers of group (8):



Error Code		Description	
		Error Type	Reason
0x8101	osdErrICWrongCounter ID	OSEK	IncrementCounter was called for an invalid counter or a hardware counter.
0x8102	osdErrICIntAPI Disabled	OSEK	IncrementCounter was called with interrupts disabled.
0x8103	osdErrICCallContext	OSEK	Called from invalid call context
0x8104	osdErrICNoAccess	OSEK	Calling application has no access rights for this counter
0x8105	osdErrICWrongAppState	OSEK	Referenced counter is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x8301	osdErrGCCallContext	OSEK	Called from invalid call context.
0x8302	osdErrGCIntAPIDisabled	OSEK	Called with disabled interrupts
0x8303	osdErrGCWrongID	OSEK	Parameter CounterID is invalid
0x8304	osdErrGCNoAccess	OSEK	Counter not accessible by the caller
0x8305	osdErrGCIllegalAddr	OSEK	Location the reference parameter Value points to is not writable for the calling application
0x8306	osdErrGCWrongAppState	OSEK	Referenced ISR is owned by an OSApplication that is not in state APPLICATION_ACCESSIBLE
0x8307	osdErrGCOddInvocation	assertion	Invocation of internal function osGetCounterValue detected although ReducedStatusChecks was enabled
0x8401	osdErrGVCallContext	OSEK	Called from invalid call context.
0x8402	osdErrGVIntAPIDisabled	OSEK	Called with disabled interrupts
0x8403	osdErrGVWrongID	OSEK	Parameter CounterID is invalid
0x8404	osdErrGVNoAccess	OSEK	Counter not accessible by the caller
0x8405	osdErrGVIllegalAddr	OSEK	Location a reference parameter points to is not writable for the calling application
0x8406	osdErrGVWrongAppState	OSEK	Referenced ISR is owned by an OSApplication that is not in state APPLICATION_ACCESSIBLE
0x8407	osdErrGVIllegalValue	OSEK	The passed value is illegal
0x8408	osdErrGVIllegalPointer s	OSEK	The pointers for out parameters Value and Elapsed Value are identical.
0x8409	osdErrGVOddInvocation	assertion	Invocation of internal function osGetElapsedValue detected although ReducedStatusChecks was enabled

Table 3-22 Error numbers of group Counter API / (8)



3.3.3.9 Error Numbers of Group Timing Protection and Timing Measurement / (9) Group (9) contains the functions:

API Function	Abbreviation	Function Number
GetTaskMinInterArrivalTime	TM	0
BlockingTimeMonitoring	BM	7
GetTaskMaxExecutionTime	TE	8
GetISRMaxExecutionTime	IE	9
GetTaskMaxBlockingTime	ТВ	Α
GetISRMaxBlockingTime	IB	В
ExecutionTimeMonitoring	ET	D
GetISRMinInterArrivalTime	MI	F

Table 3-23 API functions of group Timing Protection and Timing Measurement / (9)

Error numbers of group (9):

Error Code		Description	
		Error Type	Reason
0x9001	osdErrTMWrongTaskID	OSEK	Called with wrong TASK ID
0x9002	osdErrTMNoAccess	OSEK	The calling application has no access rights for the TASK
0x9003	osdErrTMIllegalAddr	OSEK	The caller has no access rights for the memory region
0x9004	osdErrTMWrongAppState	OSEK	Referenced task is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x9702	osdErrBMResAlready Measured	assertion	A blocking time measurement was started that is already running. This might happen if timing protection is active and SuspendAllInterrupts is called after DisableAllInterrupts has already been called.
0x9703	osdErrBMInvalidProces sInStart	assertion	Internal error: attempt to start Block Timing Protection with an invalid task or ISR
0x9704	osdErrBMInvalidProces sInStop	assertion	Internal error: attempt to stop Block Timing Protection with an invalid task or ISR
0x9705	osdErrBMInvalidResour ce	assertion	Attempt to monitor blocking time for an invalid resource detected.
0x9801	osdErrTEWrongTaskID	OSEK	GetTaskMaxExecutionTime was called with an invalid task identifier
0x9802	osdErrTENoAccess	OSEK	The calling application has no access



Error Co	ode	Description	
		Error Type	Reason
			rights for this task
0x9803	osdErrTEIllegalAddr	OSEK	The caller has no access rights for this memory region
0x9804	osdErrTEWrongAppState	OSEK	Referenced task is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x9901	osdErrIEWrongISRID	OSEK	GetISRMaxExecutionTime was called with an invalid ISR identifier
0x9902	osdErrIENoAccess	OSEK	The calling application has no access rights for this ISR
0x9903	osdErrIEIllegalAddr	OSEK	The caller has no access rights for this memory region.
0x9904	osdErrIEWrongAppState	OSEK	Referenced ISR is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x9A01	osdErrTBWrongTaskID	OSEK	Called with wrong Task ID
0x9A02	osdErrTBWrongBlock Type	OSEK	Called with wrong blocking type
0x9A03	osdErrTBWrongResource ID	OSEK	Called with wrong resource ID
0x9A04	osdErrTBNoAccessTo Task	OSEK	The calling application has no access rights for the task
0x9A05	osdErrTBNoAccessTo Resource	OSEK	The calling application has no access rights for the resource
0x9A06	osdErrTBIllegalAddr	OSEK	The caller has no access rights for this memory region
0x9A07	osdErrTBWrongAppState	OSEK	Referenced task is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE
0x9B01	osdErrIBWrongISRID	OSEK	Called with wrong ISR ID
0x9B02	osdErrIBWrongBlock Type	OSEK	Called with wrong blocking type
0x9B03	osdErrIBWrongResource ID	OSEK	Called with wrong resource ID
0x9B04	osdErrIBNoAccessToISR	OSEK	The calling application has no access rights for the ISR
0x9B05	osdErrIBNoAccessTo Resource	OSEK	The calling application has no access rights for the resource
0x9B06	osdErrIBIllegalAddr	OSEK	The caller has no access rights for the memory region
0x9B07	osdErrIBWrongAppState	OSEK	Referenced ISR is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE



Error Code		Description		
		Error Type	Reason	
0x9D01	osdErrETNoCurrent Process	assertion	Execution Time Monitoring has detected an invalid process ID	
0x9F01	osdErrMIWrongISRID	OSEK	Called with wrong ISR ID	
0x9F02	osdErrMINoAccess	OSEK	The calling application has no access rights for the ISR	
0x9F03	osdErrMIIllegalAddr	OSEK	The caller has no access rights for the memory region	
0x9F04	osdErrMIWrongAppState	OSEK	Referenced ISR is owned by an OSApplication which is not in state APPLICATION_ACCESSIBLE	

Table 3-24 Error numbers of group Timing Protection and Timing Measurement / (9)

3.3.3.10 Platform specific error codes (A)

Group (A) contains platform specific error numbers. Please refer to [5] for further detail.

3.3.3.11 Error Numbers of Group Application API (B)

Group (B) contains the functions:

API Function	Abbreviation	Function Number
GetApplicationState	AS	1
AllowAccess	AA	2
TerminateApplication	TA	4

Table 3-25 API functions of group Application API / (B)

Error numbers of group (B):

Error Code		Description	on
		Error Type	Reason
0xB101	osdErrASCallContext	OSEK	Called from invalid call context.
0xB102	osdErrASIntAPIDisabled	OSEK	Called with disabled interrupts
0xB103	osdErrASWrongAppID	OSEK	Called with invalid OSApplication ID
0xB104	osdErrASOddInvocation	assertion	Invocation of internal function osGetApplicationState detected although ReducedStatusChecks was enabled
0xB201	osdErrAACallContext	OSEK	Called from invalid call context.
0xB202	osdErrAAIntAPIDisabled	OSEK	Called with disabled interrupts
0xB203	osdErrAAWrongState	OSEK	Currently active application is not in state APPLICATION_RESTARTING



Error Code		Description	on
		Error Type	Reason
0xB401	osdErrTAWrongRestart Option	OSEK	Invalid restart option
0xB402	osdErrTACallContext	OSEK	Called from invalid call context
0xB403	osdErrTAIntAPI Disabled	OSEK	Called with interrupts disabled
0xB404	osdErrTAWrongAppID	OSEK	Called with wrong OSApplication ID.
0xB405	osdErrTANoAccess	OSEK	Caller has not sufficient access rights to terminate the given OSApplication.
0xB406	osdErrTAWrongAppState	OSEK	Referenced application is in wrong state.
0xB407	osdErrTAInvalidTaskSta te	assertion	Task state corrupt in TerminateApplication

Table 3-26 Error numbers of group Application API / (B)

3.3.3.12 Error Numbers of Group Semaphores (C)



Note

This group is only available for implementations that have been ordered with the feature Semaphores.

Group (C) contains the functions:

API Function	Abbreviation	Function Number
osGetSemaphore	GM	1
osReleaseSemaphore	RS	2

Table 3-27 API functions of group Semaphores / (C)

Error numbers of group (C):

Error Code		Description	on
		Error Type	Reason
0xC101	osdErrGMWrongSemaphore ID	OSEK	GetSemaphore called with wrong Semaphore ID
0xC102	osdErrGMOnInterruptLev el	OSEK	Called on Interrupt Level
0xC103	osdErrGMNotExtendedTas k	OSEK	Called from a Basic Task
0xC104	osdErrGMResourcesOccup	OSEK	Called while resources are occupied



Error Code		Description	on
		Error Type	Reason
	ied		
0xC105	osdErrGMInterruptsDisa bled	OSEK	Interrupts are disabled with functions provided by OSEK
0xC201	osdErrRSWrongSemaphore ID	OSEK	ReleaseSemaphore called with wrong Semaphore ID
0xC203	osdErrRSAlreadyRelease d	OSEK	Tried to release a semaphore that is not occupied
0xC204	osdErrRSWrongTaskPrio	assertion	Task has wrong priority level
0xC205	osdErrRSInterruptsDisa bled	OSEK	Interrupts are disabled with functions provided by OSEK

Table 3-28 Error numbers of group Semaphores / (C)

3.3.3.13 Error Numbers of Group MultiCore related functions (D)

Group (D) is reserved for MultiCore implementations. MultiCore specific detail is currently contained in the additional documentation. Please refer to [4] for further detail.

3.3.3.14 Error Numbers of Group (Non-)TrustedFunctions (E)

Group (E) contains the functions:

API Function	Abbreviation	Function Number
CallTrustedFunction	СТ	3
CallNonTrustedFunction	NT	4
PeripheralAPI functions	PA	5

Table 3-29 API functions of group (Non-)TrustedFunctions (E)

Error numbers of group (E):

Error Code		Description	on
		Error Type	Reason
0xE301	osdErrCTWrongFctIdx	OSEK	Invalid function index for trusted function
0xE302	osdErrCTCallContext	OSEK	Called from invalid call context
0xE303	osdErrCTIntAPI Disabled	OSEK	Called with interrupts disabled
0xE404	osdErrNTWrongFctIdx	OSEK	Invalid function index for non-trusted function
0xE405	osdErrNTCallContext	OSEK	Called from invalid call context
0xE406	osdErrNTIntAPI Disabled	OSEK	Called with interrupts disabled



Error Code		Description				
		Error Type	Reason			
0xE501	osdErrPAInvalidAreaInd ex	assertion	Not a valid peripheral region ID used within the API			
0xE502	osdErrPANoAccessRight	assertion	The current caller does not have access rights to the peripheral region			
0xE503	osdErrPAInvalidAddress	assertion	The address which is accessed is not included within the passed peripheral region			

Table 3-30 Error numbers of group (Non-)TrustedFunctions (E)

3.3.3.15 Error Numbers of Group IOC (F)

Group (F) is reserved for implementations supporting IOC. IOC specific detail is currently contained in the platform specific documentation. Please refer to [5] for further detail.

3.3.4 Reactions on Error Situations

Depending on the error that has occurred, different reactions are performed:

- > Errors detected from wrong usage of API functions: Call of ErrorHook and return to the calling task or interrupt routine.
- > Errors detected in the kernel: Call of ErrorHook and call of ShutdownOS (which calls ShutdownHook).



4 Installation

The MICROSAR OS package might be delivered together with other MICROSAR embedded software. In this case, the OS is already included in the delivered package, and no separate installation is necessary. If MICROSAR OS is delivered stand alone, it comes up with an installation program, which installs the operating system source files and the OIL Configurator. To use the OS with ARXML configurations, the DaVinci configurator must be installed in addition.

4.1 Installation Requirements

The installation program and the OIL Configurator are 32-bit Windows programs.

Requirements:

- Microsoft Windows95, Windows98, Windows NT, Windows 2000, Windows XP, Windows Vista, Windows 7
- > 64 MByte of free disk space (for a complete installation)

4.2 Installation Disk

All parts of the OSEK system, the OIL Configurator, and the code generator are delivered with a Windows installation program. The installation program copies all files onto the local hard disk and sets all paths in the INI files. The installation program asks the user for an installation path; this path is the root path for all installed components. The selected path is referred to in the following as root. The delivered installation uses the path C:\OSEK as the default root path.

There are two possible installation styles than can be selected:

- > MICROSAR style: compatible with Vector AUTOSAR stack
- osCAN style: compatible with osCAN

The installation paths are determined depending on the selected style

The installed components are:

Components	osCAN style	MICROSAR style
OIL Configurator	root\OILTOOL	root\Generators\Tools\OilTool
OSEK system	root\HwPlatform	root\BSW\Os

Table 4-1 Installed components



4.3 OIL Configurator



Info

Please note that 'OIL Configurator' and 'OIL Tool' are used as synonyms in this document.

The OIL Configurator is a common tool for different OSEK implementations. The implementation specific parts are the code generator and the OIL implementation files for the code generator.

Components	osCAN style	MICROSAR style
OIL Configurator	root\OILTOOL	root\Generators\Tools\OilTool
OIL implementation files	root\OILTOOL\GEN	root\Generators\Os
Code generator	root\OILTOOL\GEN	root\Generators\Os

Table 4-2 System configuration and generation tools

4.3.1 INI Files of the OIL Tool

The OIL Configurator has two INI files, which are in the directory of the OIL Configurator:

- > OILGEN.INI
- > OILCFG.INI

4.3.2 OIL Implementation Files

The implementation files are copied onto the local hard disk by the installation program. The OIL tool has knowledge about these files through the INI file OILGEN.INI (the correct path is set by the installation program).

The implementation files are described in the hardware specific part of this manual [4].

4.3.3 Code Generator

The code generator GENXXXX.EXE is copied onto the local hard disk by the installation program. The code generator is defined in the INI-file OILGEN.INI. ('xxxx' has to be replaced by a hardware dependent abbreviation)

4.4 OSEK Operating System

4.4.1 Installation Paths

The delivered operating system parts are organized in different subdirectories.

The following structure is used by osCAN style installations:

> root\HwPlatform\APPL\Compiler\Derivative	Sample applications
> root\HwPlatform\BIN	executable files (e.g. make tool)
> root\HwPlatform\bswmd_files	XML parameter descrption files



> root\HwPlatform\DOC	Documentation
> root\HwPlatform\INCLUDE	OSEK include files
> root\HwPlatform\LIB	OSEK library (only if a library is available)
> root\HwPlatform\SRC	OSEK sources (C and Assembler)

The following structure is used by MICROSAR style installations:

> root\Demo\Os	Sample applications
> root\Generators\Os	executable files (e.g. make tool)
> root\Generators\Components_Schemes\ Os_ <platform and="" derivate="">_bswmd \bswmd</platform>	XML parameter descrption files
> root\Doc\TechnicalReferences	Documentation
> root \Doc\UserManuals	
> root\BSW\Os	OSEK include files
> root\BSW\Os	OSEK library (only if a library is available)
> root\BSW\Os	OSEK sources (C and Assembler)

4.5 XML Configurations

AUTOSAR uses for configuration files the XML format. An XML Schema (ref. [8]) defines the structure. For each derivative there is an ECU Parameter Definition File (file extension is arxml) which defines all attributes (standard attribute and vendor/platform specific attributes).

The Vector implementation of AUTOSAR OS uses the OIL [6] configuration file format or ECU Configuration files. A conversion of ECUC files to OIL, as it was necessary in former versions of MICROSAR OS, is not required any more.

4.5.1 Parameter Definition Files

Parameter Definition Files for the implementation can be found in the directory root\HwPlatform\BSWMD files (osCAN style) or

root\Generators\Components_Schemes\Os_<platform and
derivate> bswmd\bswmd (MICROSAR style).

The files have the name OS <platform and derivate> bswmd.arxml.



5 Integration

This chapter gives necessary information for the integration of the MICROSAR OS into an application environment of an ECU.

5.1 Scope of Delivery

The delivery of the OS contains the files that are described in the chapters 5.1.1 and 5.1.2:

5.1.1 Static Files

The static file list is described in the platform specific technical reference [4]

5.1.2 Dynamic Files

The dynamic files are generated by the code generator GENxxxx (xxxx is replaced by hardware platform name).

5.1.2.1 Code Generator GENxxxx

File Name	Description
tcb.c	tcb contains the task control block and other OS object
tcb.h	task and other OS object related information, like task Ids – definitions required by static include files (e.g. array sizes)
tcbpost.h	task and other OS object related information, like task lds – declarations that require static include files (e.g. typedef's)
trustfct.h	Header containing trusted function information
trustfct.c	Trusted function data and generated stubs
libconf	Information for usage in makefiles, not available on all platforms, see chapter 5.1.2.1.1
<oilfilename>.ort</oilfilename>	Generated if kernel aware debugging with the ORTI interface is enabled,

Table 5-1 Files generated by code generator GENxxxx

In addition to the files listed in Table 5-1, some hardware dependent files are generated which are described in the hardware specific technical reference [4].

5.1.2.1.1 Generated file libconf

The file libconf is meant for the inclusion into makefiles. It sets some variables in accordance to general configuration settings of MICROSAR OS to inform the make process about them. Dependent on the platform, the file may contain more information or be even unavailable, so please see the hardware specific technical reference [4].

The table below describes the generated variables.



Variable	Meaning
LIB	Always 0, because MICROSAR OS SafeContext cannot be configured to library variant.
STATUS_LEVEL	Reflects the setting of the configuration attribute STATUS of MICROSAR OS. Possible values: EXTENDED_STATUS = 1
DEBUG_SUPPORT	Always 1, because ORTIDebugSupport is always enabled for MICROSAR OS SafeContext.

Table 5-2 Variables generated into the file libconf

5.1.2.2 Application Template Generator GENTMPL

Former versions of MICROSAR OS and osCAN came with a template code generator which generates a main.c template file with empty implementations for the objects defined in the configuration. This is not supported any more in newer implementations.

5.2 Include Structure

The header files tcb.h and tcbpost.h are included into the file os.h. The user must include os.h in every module of his application. The headers tcb.h and tcbpost.h are included automatically. Always recompile all files after a new generation of tcb.h and tcbpost.h.

If an application is using trusted functions and the Vector extension "GenerateStubs", an include file named usrostyp.h must be present in the include path. This file must contain all user specific data types used for trusted functions.



6 API Description

6.1 Standard API - Overview

This chapter gives an overview of all standard API functions defined for the OS. The following synonyms present the standard specifications:

- > ASR: AUTOSAR standard, reference [1]
- > OSEK: OSEK standard, reference [3]

These standard specifications contain the detailed API descriptions. In case part of an API function is implementation specific, the detailed API description is given in a further subchapter in this document.

API Function Prototype		Standard Specification		Scalability Class				
		OSEK	ASR	1	2	3	4	
Task Handling								
StatusType ActivateTas	k (TaskType TaskID)	-						
StatusType TerminateTa	sk (void)			-	-	-	=	
StatusType ChainTask	(TaskType TaskID)				-	-	-	
StatusType Schedule	(void)	-			-	-	-	
StatusType GetTaskID	(TaskRefType TaskID)	-		-	-	-	-	
StatusType GetTaskStat	e (TaskType TaskID, TaskStateRefType State)	-					-	
Event Control								
StatusType SetEvent	TaskType TaskID, EventMaskType Mask)	•		•	•	•	•	
StatusType ClearEvent	EventMaskType Mask)			-	-	-	-	
StatusType GetEvent	TaskType TaskID, EventMaskRefType Mask)	-					-	
StatusType WaitEvent	EventMaskType Mask)				-	-		
Interrupt Handling								
·	nandling functions is implementation s cific technical reference [4].	specific. F	or a de	taile	ed			
void EnableAllInterrup	ts (void)	-				-		
void DisableAllInterru	pts (void)			-	-	-	-	
void ResumeAllInterrup	ts (void)			-	-	-	-	
void SuspendAllInterru	pts (void)			-	-	-	-	
void ResumeOSInterrupt	s (void)				-	-	-	
void SuspendOSInterrup	ts (void)			-	=	-	-	

©2015, Vector Informatik GmbH Version: 9.01 62 / 136



API Function Prototype		Standa Specifi		Sc Cla	y		
		OSEK	ASR	1	2	3	4
Resource Management							
The behaviour of the resource r	management functions is implement	ation spe	ecific				
StatusType GetResource	(ResourceType ResID)	-		-	-		
StatusType ReleaseResour	cce (ResourceType ResID)				-		-
Alarms							
StatusType GetAlarmBase	(AlarmType AlarmID, AlarmBaseRefType Info)			•	•	•	•
StatusType GetAlarm	(AlarmType AlarmID, TickRefType Tick)			-			-
StatusType SetRelAlarm	<pre>(AlarmType AlarmID, TickType Increment, TickType cycle)</pre>			•			
StatusType SetAbsAlarm	<pre>(AlarmType AlarmID, TickType Start, TickType cycle)</pre>						
StatusType CancelAlarm	(AlarmType AlarmID)			-	-		-
Execution Control							
void StartOS	(AppModeType Mode)						
void ShutdownOS	(StatusType Error)				-		-
ISRType GetISRID	(void)				-		-
AppModeType GetActiveAp	plicationMode(void)	-			-		-
ApplicationType GetAppl	licationID (void)						-
StatusType CallTrusted (TrustedFunctionIndexTrustedFunctionParamet			•				
StatusType GetApplicat (ApplicationType Appli ApplicationStateRefType	cation,						
Hook Routines							
The context for called hook rousee hardware specific technical	tines is implementation specific. For reference [4].	a detaile	ed descr	iptic	n s	ee	
void ErrorHook	(StatusType Error)						
void PreTaskHook	(void)						
void PostTaskHook	(void)	-					
void StartupHook	(void)						
void ShutdownHook	(StatusType Error)						
ProtectionReturnType Pr	otectionHook (StatusType Fatalerror)		•				-



API Function Prototype		rd cation	Sc	у		
	OSEK	ASR	1	2	3	4
Schedule Tables						
StatusType StartScheduleTableRel (ScheduleTableType ScheduleTableID, TickType Offset)		•	ľ	•	•	-
StatusType StartScheduleTableAbs (ScheduleTableType ScheduleTableID, TickType Start)			•			-
StatusType StopScheduleTable (ScheduleTableType ScheduleTableID)						
StatusType NextScheduleTable (ScheduleTableType ScheduleTableID_From, ScheduleTableType ScheduleTableID_To)			•			-
StatusType StartScheduleTableSynchron (ScheduleTableType ScheduleTableID)						-
StatusType SyncScheduleTable (ScheduleTableType ScheduleTableID, TickType Value)						-
StatusType SetScheduleTableAsync (ScheduleTableType ScheduleTableID)						
StatusType GetScheduleTableStatus (ScheduleTableType ScheduleTableID, ScheduleTableStatusRefType ScheduleStatus)						
Counters						
StatusType IncrementCounter (CounterType CounterID)		•	Ī	Ť	•	Ī
StatusType GetCounterValue (CounterType CounterID, TickRefType Value)						-
StatusType GetElapsedValue (CounterType CounterID, TickRefType Value, TickRefType ElapsedValue)		•	•			
Access Rights Management						
AccessType CheckISRMemoryAccess (ISRType ISRID, MemoryStartAddressType Address, MemorySizeType Size)		•				-
AccessType CheckTaskMemoryAccess (TaskType TaskID, MemoryStartAddressType Address, MemorySizeType Size)						
ObjectAccessType CheckObjectAccess (ApplicationType ApplID, ObjectTypeType ObjectType,)						



		Standard Specification		Scalability Class		
	OSEK	ASR	1	2	3	4
ApplicationType CheckObjectOwnership (ObjectTypeType ObjectType,)					-	

Table 6-1 Standard API functions

6.2 API Functions defined by Vector - Overview

This chapter gives an overview of all API functions defined for the OS by Vector. Further chapters contain detailed descriptions of these API functions.

API Function Prototype		ala ass	bilit	У
	1	2	3	4
Measurement API				
For a detailed description see chapter 6.4.				
StatusType GetTaskMaxExecutionTime (TaskType TaskID, osTPTimeRefType MaxTime)		•		-
StatusType GetISRMaxExecutionTime (ISRType TaskID, osTPTimeRefType MaxTime)		•		-
StatusType GetTaskMaxBlockingTime (TaskType TaskID, BlockTypeType BlockType, ResourceType ResourceID, osTPTimeRefType MaxTime)		•		-
StatusType GetISRMaxBlockingTime (ISRType ISRID, BlockTypeType BlockType, ResourceType ResourceID, osTPTimeRefType MaxTime)				
StatusType osGetISRMinInterArrivalTime (ISRType ISRID, osTPTimeStampRefType MinTime)		•		-
StatusType osGetTaskMinInterArrivalTime (TaskType ISRID, osTPTimeStampRefType MinTime)		•		-
Non-Trusted Functions				
Calling service functions from Non-Trusted Applications. The complement part of the API CallTrustedFunction.	ne Al	JTO	SA	R
StatusType osCallNonTrustedFunction (NonTrustedFunctionIndexType FunctionIndex, NonTrustedFunctionParameterRefType FunctionParams)			•	-
Peripheral Region API				
API to access memory mapped hardware registers, which are only accessible in privileged mode.				
osuint8 osReadPeripheral8(osuint16 area, osuint32 address)				
osuint16 osReadPeripheral16(osuint16 area, osuint32 address)				
osuint32 osReadPeripheral32(osuint16 area, osuint32 address)				



API Function Prototype		ala ass	bilit	y
	1	2	3	4
<pre>void osWritePeripheral8(osuint16 area, osuint32 address, osuint8 value)</pre>			-	
<pre>void osWritePeripheral16(osuint16 area, osuint32 address, osuint16 value)</pre>			•	
<pre>void osWritePeripheral32(osuint16 area, osuint32 address, osuint32 value)</pre>			•	
<pre>void osModifyPeripheral8(osuint16 area, osuint32 address, osuint8 clearmask, osuint8 setmask)</pre>			•	
<pre>void osModifyPeripheral16(osuint16 area, osuint32 address, osuint16 clearmask, osuint16 setmask)</pre>			•	
<pre>void osModifyPeripheral32(osuint16 area, osuint32 address, osuint32 clearmask, osuint32 setmask)</pre>			•	
MPU Access Checking API				
Check whether you have read/write access to a given address.				
uint8 osCheckMPUAccess(uint8* DestinationAddress)				

Table 6-2 Vector API functions

6.3 Timing Measurement API

6.3.1 GetTaskMaxExecutionTime

Prototype				
StatusType GetTaskMaxExecutionTime (TaskType TaskID, osTPTimeRefType MaxTime)				
Parameter				
TaskID	The task to be questioned			
MaxTime	Maximum execution time, measured in all finished time frames.			
Return code				
E_OK	No errors			
E_OS_ID	The TaskID is not valid.			
Functional Description				

Functional Description

The maximum execution time of finished executions of the questioned task since StartOS. The value is in ticks of the ExecutionTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations

- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)



Expected Caller Context

> task or cat2 ISR

Table 6-3 GetTaskMaxExecutionTime

6.3.2 GetISRMaxExecutionTime

Prototype						
StatusType GetISRMax	ExecutionTime	(I	SRType	TaskID,	osTPTimeRefType	MaxTime)
Parameter						
TaskID	The task to be qu	estic	oned			
MaxTime	Maximum execution time of the respective ISR for all finished ISR activations.			R activations.		
Return code						
E_OK	No errors					
E_OS_ID	The ISRID is not	vali	id.			

Functional Description

The maximum execution time of finished executions of the questioned ISR since StartOS. The value is in ticks of the ExecutionTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations

- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)

Expected Caller Context

> task or cat2 ISR

Table 6-4 GetISRMaxExecutionTime

6.3.3 GetTaskMaxBlockingTime

```
Prototype

StatusType GetTaskMaxBlockingTime (
    TaskType TaskID,
    BlockTypeType BlockType,
    ResourceType ResourceID,
    osTPTimeRefType MaxTime )
```

Parameter		
TaskID	The task to be questioned	
BlockType	OS_ALL_INTERRUPTS, OS_OS_INTERRUPTS or OS_RESOURCE	
ResourceID	If BlockType == OS_RESOURCE, ResourceID specifies the Resource	



MaxTime	Maximum of all measured times.		
Return code			
E_OK	No errors		
E_OS_ID	The TaskID, the BlockType or the ResourceID are invalid.		

Functional Description

The maximum blocking time of finished locking sequences of the questioned task and the resource or interrupt lock type since StartOS. The value is in ticks of the BlockingTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations

- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)

Expected Caller Context

> task or cat2 ISR

Table 6-5 GetTaskMaxBlockingTime

6.3.4 GetISRMaxBlockingTime

Prototype

```
StatusType GetISRMaxBlockingTime (

ISRType ISRID,

BlockTypeType BlockType,

ResourceType ResourceID,

osTPTimeRefType MaxTime )
```

Parameter	
ISRID	The ISR to be questioned
BlockType	OS_ALL_INTERRUPTS, OS_OS_INTERRUPTS or OS_RESOURCE
ResourceID	If BlockType == OS_RESOURCE, ResourceID specifies the Resource
MaxTime	Maximum of all measured times.

Return code			
E_OK	No errors		
E_OS_ID	The TaskID, the BlockType or the ResourceID are invalid.		

Functional Description

The maximum blocking time of finished locking sequences of the questioned ISR and the resource or interrupt lock type since StartOS. The value is in ticks of the BlockingTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations



- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)

Expected Caller Context

> task or cat2 ISR

Table 6-6 GetISRMaxBlockingTime

6.3.5 GetTaskMinInterArrivalTime

Prototype

StatusType **GetTaskMinInterArrivalTime**(TaskType TaskID, osTPTimeStampRefType MinTime)

Parameter				
TaskID	The task to be questioned			
MinTime	nimum time between two task arrivals			
Return code				
E_OK	No errors			
E_OS_ID	The TaskID is not valid.			
E_OS_ACCESS	No access rights to task (SC4 only)			
E_OS_ILLEGAL_ADDRESS	Memory address of MinTime not writeable (SC4 only)			

Functional Description

Returns the minimum time span between two arrivals of a task (see [1]) as measured since StartOS. The value is in ticks of the InterArrivalTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations

- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)

©2015, Vector Informatik GmbH Version: 9.01 69 / 136



Expected Caller Context

> task or cat2 ISR

Table 6-7 GetTaskMinInterArrivalTime

6.3.6 GetISRMinInterArrivalTime

Prototype

StatusType ${\tt GetISRMinInterArrivalTime}$ (<code>ISRType IsrID</code>, <code>osTPTimeStampRefType MinTime</code>)

Parameter			
IsrID	he ISR to be questioned		
MinTime	linimum time between two ISR arrivals		
Return code			
E_OK	No errors		
E_OS_ID	The ISRID is not valid.		
E_OS_ACCESS	No access rights for this ISR (SC4 only)		
E_OS_ILLEGAL_ADDRESS	Memory address of MinTime not writeable (SC4 only)		

Functional Description

Returns the minimum time span between two arrivals of an ISR (see [1]) as measured since StartOS. The value is in ticks of the InterArrivalTime hardware timer. The number of ticks per ms of this timer is printed into the HTML list file.

Particularities and Limitations

- > Available in Scalability Classes 2 and 4.
- > This function is synchronous.
- > This function is reentrant.
- > This function is only available if the attribute TimingMeasurement is set to TRUE (is selected)

Expected Caller Context

> task or cat2 ISR

Table 6-8 GetISRMinInterArrivalTime

6.4 Implementation specific Behavior

The behaviour of the functions listed in this chapter is implementation specific.

6.4.1 Interrupt Handling

In general the usage of the interrupt API functions is allowed before the operating system is started. The affected functions are:

- > DisableAllInterupts
- > EnableAllInterrupts



- > SuspendAllInterrupts
- > ResumeAllInterrupts
- > SuspendOSInterrupts
- > ResumeOSInterrupts

The implementation specific behaviour is of these functions is described in [5].

6.4.1.1 **Enable All Interrupts**

Prototype void EnableAllInterrupts (void) **Parameter** Return code void

Functional Description

This service restores the state saved by DisableAllInterrupts.

This service is a counterpart of DisableAllInterrupts service, which has to be called before, and its aim is the completion of the critical section of code. No API service calls are allowed within this critical section.

The implementation should adapt this service to the target hardware providing a minimum overhead. Usually, this service enables recognition of interrupts by the central processing unit.

This function might be implemented using a global interrupt flag or an interrupt level register.

Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.

Expected Caller Context

Table 6-9 EnableAllInterrupts



6.4.1.2 DisableAllInterrupts

Prototype			
void DisableAllInterrupts (void)			
Parameter	Parameter		
Return code			
Void			

Functional Description

This service disables all interrupts for which the hardware supports disabling. The state before is saved for the EnableAllInterrupts call.

This service is intended to start a critical section of the code. This section shall be finished by calling the <code>EnableAllInterrupts</code> service. No API service calls are allowed within this critical section.

The implementation should adapt this service to the target hardware providing a minimum overhead. Usually, this service disables recognition of interrupts by the central processing unit.

Note that this service does not support nesting. If nesting is needed for critical sections e.g. for libraries SuspendOSInterrupts/ResumeOSInterrupts or SuspendAllInterrupt/ResumeAllInterrupts should be used.

This function might be implemented using a global interrupt flag or an interrupt level register.

Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.

Expected Caller Context

> -

Table 6-10 DisableAllInterrupts

6.4.1.3 ResumeAllInterrupts

Prototype		
void ResumeAllInterrupts (void)		
Parameter		
Return code		
void		



This service restores the recognition status of all interrupts saved by the SuspendAllInterrupts service.

This service is the counterpart of SuspendAllInterrupts service, which has to have been called before, and its aim is the completion of the critical section of code. No API service calls beside SuspendAllInterrupts/ResumeAllInterrupts pairs and SuspendOSInterrupts/ResumeOSInterrupts pairs are allowed within this critical section.

The implementation should adapt this service to the target hardware providing a minimum overhead.

SuspendAllInterrupts/ResumeAllInterrupts can be nested. In case of nesting pairs of the calls SuspendAllInterrupts and ResumeAllInterrupts the interrupt recognition status saved by the first call of SuspendAllInterrupts is restored by the last call of the ResumeAllInterrupts service.

This function might be implemented using a global interrupt flag or an interrupt level register.

Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.

Expected Caller Context

> -

Table 6-11 ResumeAllInterrupts

6.4.1.4 SuspendAllInterrupts

Prototype		
<pre>void SuspendAllInterrupts (void)</pre>		
Parameter		
Return code		
void		

©2015, Vector Informatik GmbH Version: 9.01 73 / 136



This service saves the recognition status of all interrupts and disables all interrupts for which the hardware supports disabling.

This service is intended to protect a critical section of code from interruptions of any kind. This section shall be finished by calling the ResumeAllInterrupts service. No API service calls beside

SuspendAllInterrupts/ResumeAllInterrupts pairs and

SuspendOSInterrupts/ResumeOSInterrupts pairs are allowed within this critical section.

The implementation should adapt this service to the target hardware providing a minimum overhead.

This function might be implemented using a global interrupt flag or an interrupt level register.

Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.

Expected Caller Context

> -

Table 6-12 SuspendAllInterrupts

6.4.1.5 ResumeOSInterrupts

Prototype

void ResumeOSInterrupts (void)

Parameter

- -

Return code

void --

Functional Description

This service restores the recognition status of interrupts saved by the SuspendOSInterrupts service.

This service is the counterpart of SuspendOSInterrupts service, which has to have been called before, and its aim is the completion of the critical section of code. No API service calls beside SuspendAllInterrupts/ResumeAllInterrupts pairs and

SuspendOSInterrupts/ResumeOSInterrupts pairs are allowed within this critical section.

The implementation should adapt this service to the target hardware providing a minimum overhead.

SuspendOSInterrupts/ResumeOSInterrupts can be nested. In case of nesting pairs of the calls SuspendOSInterrupts and ResumeOSInterrupts the interrupt recognition status saved by the first call of SuspendOSInterrupts is restored by the last call of the ResumeOSInterrupts service.

This function might be implemented using a global interrupt flag or an interrupt level register



Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.

Expected Caller Context

> -

Table 6-13 ResumeOSInterrupts

6.4.1.6 SuspendOSInterrupts

Prototype

void SuspendOSInterrupts (void)

Parameter

- | .

Return code

void .

Functional Description

This service saves the recognition status of interrupts of category 2 and disables the recognition of these interrupts.

This service is intended to protect a critical section of code. This section shall be finished by calling the ResumeOSInterrupts service. No API service calls beside

SuspendAllInterrupts/ResumeAllInterrupts pairs and

 ${\tt SuspendOSInterrupts/ResumeOSInterrupts} \ \ \textbf{pairs are allowed within this critical section}.$

The implementation should adapt this service to the target hardware providing a minimum overhead.

It is intended only to disable interrupts of category 2. However, if this is not possible in an efficient way more interrupts may be disabled.

This function might be implemented using a global interrupt flag or an interrupt level register.

Particularities and Limitations

- > When using before StartOS, the function osInitialize must be called first to initialize the variables which are used in the interrupt API.
- > The function must not be used within handlers of non-maskable interrupts as this can violate the consistancy of internal variables.



Expected Caller Context

> -

Table 6-14 SuspendOSInterrupts

6.4.2 Resource Management

The affected functions are:

- > GetResource
- > ReleaseResource

The implementation specific behaviour is of these functions is described in [4].

6.4.2.1 GetResource

Prototype		
StatusType GetResource (ResourceType ResID)		
Parameter		
ResID	Reference to resource	
Return code		
E_OK	No error	
E_OS_ID	Resource ResID is invalid	
E_OS_ACCESS	Attempt to get a resource which is already occupied by any task or ISR, or the statically assigned priority of the calling task or interrupt routine is higher than the calculated ceiling priority.	



This call serves to enter critical sections in the code that are assigned to the resource referenced by ResID. A critical section shall always be left using ReleaseResource.

Nested resource occupation is only allowed if the inner critical sections are completely executed within the surrounding critical section (strictly stacked, Restrictions when using resources). Nested occupation of one and the same resource is also forbidden!

It is recommended that corresponding calls to <code>GetResource</code> and <code>ReleaseResource</code> appear within the same function.

It is not allowed to use services which are points of rescheduling for non preemptable tasks (TerminateTask, ChainTask, Schedule and WaitEvent) in critical sections. Additionally, critical sections are to be left before completion of an interrupt service routine.

Generally speaking, critical sections should be short.

The service may be called from an ISR and from task level.

Depending on the possibility to manipulate interrupt levels, this function may be used on interrupt level or not and may be implemented differently.

If used on task level, the behavior and functionality is always the same (according to the specification).

Particularities and Limitations

> -

Expected Caller Context

> Task level or cat2 ISR

Table 6-15 GetResource

6.4.2.2 ReleaseResource

Prototype		
StatusType ReleaseResource (ResourceType ResID)		
Parameter		
ResID	Reference to resource	
Return code		
E_OK	No error	
E_OS_ID	Resource ResID is invalid	
E_OS_NOFUNC	Attempt to release a resource which is not occupied by any task or ISR, or another resource shall be released before.	
E_OS_ACCESS	Attempt to release a resource that has a lower ceiling priority than the statically assigned priority of the calling task or interrupt routine.	



ReleaseResource is the counterpart of GetResource and serves to leave critical sections in the code that are assigned to the resource referenced by Resid.

For information on nesting conditions, see particularities of GetResource.

The service may be called from an ISR and from task level.

Depending on the possibility to manipulate interrupt levels, this function may be used on interrupt level or not and may be implemented differently.

If used on task level, the behavior and functionality is always the same (according to the specification).

Particularities and Limitations

> --

Expected Caller Context

> Task level or cat2 ISR

Table 6-16 ReleaseResource

6.4.3 Execution Control

The affected functions are:

- > StartOS
- > ShutdownOS

The implementation specific behavior is of these functions is described in [4].

6.4.3.1 StartOS

Prototype

void StartOS (AppModeType Mode)

Parameter

Mode application mode

Return code

void -

Functional Description

The user can call this system service to start the operating system in a specific mode.

Only allowed outside of the operating system, therefore implementation specific restrictions may apply.

After calling StartOS the program never returns to the call level of StartOS.

Particularities and Limitations

> -



Expected Caller Context

> C main function

Table 6-17 StartOS

6.4.3.2 ShutdownOS

Prototype

void ShutdownOS (StatusType Error)

Parameter

Error error occurred

Return code

void

Functional Description

The user can call this system service to abort the overall system (e.g. emergency off). The operating system also calls this function internally, if it has reached an undefined internal state and is no longer ready to run.

If a ShutdownHook is configured the hook routine ShutdownHook is always called (with Error as argument) before shutting down the operating system.

If ShutdownHook returns, further behaviour of ShutdownOS is implementation specific.

In case of a system where OSEK OS and OSEKtime OS coexist, ShutdownHook has to return.

Error needs to be a valid error code supported by OSEK OS. In case of a system where OSEK OS and OSEKtime OS coexist, Error might also be a value accepted by OSEKtime OS. In this case, if enabled by an OSEKtime configuration parameter, OSEKtime OS will be shut down after OSEK OS shutdown.

After this service the operating system is shut down.

Allowed at task level, ISR level, in ErrorHook and StartupHook, and also called internally by the operating system.

If the operating system calls ShutdownOS it never uses E OK as the passed parameter value.

After the call of ShutdownHook MICROSAR OS disables all interrupts and will never return to the call level. The ShutdownHook is called with disabled interrupts.

Particularities and Limitations

> --



Expected Caller Context ---

Table 6-18 ShutdownOS

6.5 Hook Routines

MICROSAR OS calls several hook routines. These may be hook routines as described in the OSEK or Autosar standard. Additionally, MICROSAR provides Hook routines for ISR entry/exit, Alarm time and timing supervision (MICROSAR OS Timing Hooks).

These hook routines are described in the subchapters below.

The subchapters describe the prototypes of the called hook routines and their calling contexts. The current stack in the hook routines is implementation specific and described in [4].

6.5.1 Standard Hooks

The hook routines described in the subchapters are defined by the OSEK and Autosar standards.

All these hook routines need to be implemented by the user if they are enabled in the configuration. The OS calls these hook routines with interrupts disabled (if not stated otherwise).

6.5.1.1 StartupHook

Prototypes		
void StartupHook (void) /* general startup hook */		
void StartupHook_ <apr< td=""><td>>> (void) /* application specific startup hook */</td></apr<>	>> (void) /* application specific startup hook */	
Parameter		
Return code		
void		
Functional Description		
The user may call the initialization routines for hardware drivers.		
Particularities and Limitations		
>		
Call Context		
> interrupt or task context		
> The StartupHook routine is called while the operating system is initialized.		

Table 6-19 StartupHook



6.5.1.2 PreTaskHook

Prototype		
void PreTaskHook (void)		
Parameter		
Return code		
void		
 Return code		

Functional Description

The user can use the API function GetTaskID to determine the new task.

Particularities and Limitations

> The PreTaskHook may only be configured for debugging purpose in MICROSAR OS SafeContext, see [9].

Call Context

- > interrupt or task context
- > PreTaskHook is called after a task is set into the RUNNING state (not into the READY state).
- > For particularities of using PreTaskHook when using timing protection, please see [4]

Table 6-20 PreTaskHook

6.5.1.3 PostTaskHook

Prototype	
void PostTaskHook (void)	
Parameter	
Return code	
void	
Functional Description	

Functional Description

The user can use the API function GetTaskID to determine the currently left task.

Particularities and Limitations

> The PostTaskHook may only be configured for debugging purpose in MICROSAR OS SafeContext, see [9].

Call Context

- > interrupt or task context
- > PostTaskHook is called before a task is taken out of the RUNNING state.
- > For particularities of using the PostTaskHook when using timing protection, please see [4]

Table 6-21 PostTaskHook



6.5.1.4 ErrorHook

-		7.0	7.0	00
	II W		UNV	pe

void ErrorHook (StatusType ErrorCode) /* general error hook */
void ErrorHook <App> (StatusType ErrorCode) /* appl. spec. error hook */

Parameter

Error Code Error code of API which detected the error and called the error hook

Return code

void -

Functional Description

The user may use the error number parameter to decide how to react on the error.

Additional error information is available in the error hook if the attributes <code>USEGETSERVICEID</code> and <code>USEPARAMETERACCESS</code> are set to <code>TRUE</code>. This information can be accessed by access macros; for details refer to the OSEK specification [3]. All possible access macros are supported by MICROSAR OS.

If EXTENDED_STATUS is enabled and ErrorInfoLevel is set to Modulnames, additional error information is available in the ErrorHook. The variable osActiveTaskModule is a pointer to the module name and the variable osActiveTaskLineNumber is the line number in the C module where the API function was called. Inspecting these two variables allows the user to locate the source code that caused the error message.

Particularities and Limitations

> --

Call Context

- > interrupt or task context
- > ErrorHook is called every time an API function is called with wrong parameters or if the system detects an error (e.g. stack overflow).

Table 6-22 ErrorHook

6.5.1.5 ShutdownHook

Prototype		
void ShutdownHook (S	StatusType ErrorCode) /* general shutdown hook */	
void ShutdownHook_ <app> (StatusType ErrorCode) /* appl. spec. shutdown hook */</app>		
Parameter		
ErrorCode	Error code of API that detected the error and called the shutdown hook, or the parameter that was passed to ShutdownOS.	
Return code		
void		



The ShutdownHook is called by ShutdownOS

Particularities and Limitations

-

Call Context

- > interrupt or task context
- > The system calls the ShutdownHook routine if the function ShutdownOS was called.

Table 6-23 ShutdownHook

6.5.1.6 ProtectionHook

Prototype	
ProtectionReturnType	<pre>ProtectionHook (StatusType Fatalerror)</pre>
Parameter	
Fatalerror	depending on the detected protection error
Return code	
ProtectionReturnType	The return value determines the strategy of further operation
Functional Description	

Called on occurrence of a protection error. The application code has to decide about the recovery strategy and pass an appropriate return value to the OS.

Particularities and Limitations

> In the scalability class SC1, no call of the ProtectionHook is supported.

Call Context

- > interrupt or task context
- > The ProtectionHook is called if a TimingProtection failure (SC2, SC4), a memory protection failure (SC3, SC4), or processor exception (e.g. division by zero, illegal instruction etc.) is detected by MICROSAR OS.

Table 6-24 ProtectionHook

6.5.2 ISR Hooks

6.5.2.1 UserPreISRHook

Prototype	
Void UserPreISRHook	(ISRType isr)
Parameter	
Isr	The identifier of the ISR that is about to be entered
Return code	
Void	



Called just before entering an ISR routine of a category 2 interrupt.

This Hook is intended to be used as a development aid. For example, it may be used to measure interrupt run times.

This Hook is only available if the attribute CallISRHooks is set to TRUE. Note that this is allowed only for debugging purpose in MICROSAR OS SafeContext, see [9].

Particularities and Limitations

> Only API functions that are allowed in cat2 ISRs are allowed to be called in the UserPreISRHook.

Call Context

- > The UserPreISRHook runs in the exact same context as the ISR that is executed afterwards. This includes settings for interrupt nesting, timing protection, timing measurement and memory protection.
- All OS API functions, incl. GetISRID(), GetApplicationID(), CheckObjectAccess() etc, work just as if called from within the ISR

Table 6-25 UserPreISRHook

6.5.2.2 UserPostISRHook

Prototype	
Void UserPostISRHook	(ISRType isr)
Parameter	
Isr	The identifier of the ISR that was just left
Return code	
Void	

Functional Description

Called just after leaving an ISR routine of a category 2 interrupt.

This Hook is intended to be used as a development aid. For example, it may be used to measure interrupt run times.

This Hook is only available if the attribute CallISRHooks is set to TRUE. Note that this is allowed only for debugging purpose in MICROSAR OS SafeContext, see [9].

Particularities and Limitations

The UserPostISRHook is called only after a regular return from the ISR routine. In particular:

- If an ISR is interrupted by a higher priority ISR, the UserPostISRHook is not called before entering the new ISR.
- > If an ISR is killed, the UserPostISRHook is not called.
- > Only API functions that are allowed in cat2 ISRs are allowed to be called in the UserPostISRHook.

Call Context

- > The UserPreISRHook runs in the exact same context as the ISR that was just executed. This includes settings for interrupt nesting, timing protection, timing measurement and memory protection.
- All OS API functions, incl. GetISRID(), GetApplicationID(), CheckObjectAccess() etc, work just as if called from within the ISR

Table 6-26 UserPostISRHook



6.5.3 Alarm Hook

6.5.3.1 PreAlarmHook (currently not supported)

Prototype		
<pre>void PreAlarmHook_<countername> (void)</countername></pre>		
Parameter		
void		
Return code		
void		

Functional Description

Called in the timer ISR just before the alarm handling of the OS.

This Hook is only available if the timer attribute PreAlarmHook is set to TRUE

Particularities and Limitations

- > Note that this feature is currently not supported. It will be available in future releases.
- > Only API functions that are allowed in cat2 ISRs are allowed to be called in the PreAlarmHook.
- > The execution time of the PreAlarmHook is not considered by the timing protection.

Call Context

- > The PreAlarmHook runs in the same context as the system timer ISR. If an owner application is configured, the system timer ISR and the PreAlarmHook is executed with the application rights of this owner application.
- > Interrupts of category 2 are disabled during the execution of the PreAlarmHook.

Table 6-27 PreAlarmHook

6.5.4 MICROSAR OS Timing Hooks

MICROSAR OS supports timing measurement and analysis by external tools. Therefor it provides timing hooks. Timing hooks inform the external tools about several events within the OS:

- Activation (arrival) of a task or ISR
- Context switch
- Locking of interrupts, resources or spinlocks

This documentation presents the respective hook routines in separate subchapters below.

The OS calls Timing hooks only if the user has configured them as described in Table 7-1, attribute TimingHooks. The user shall implement the hooks as macros in the configured header file. The OS provides empty definitions of these hooks. It uses the empty definition of a hook in case of an unavailable definition by the user. Because of the empty definition, the user needs not to implement all hooks.



6.5.4.1 Hooks for arrival

MICROSAR OS prvides hooks that allow an external tool to trace all activations of task as well as further arrivals like the setting of an event or the release of a semaphore with transfer to another task.

This shall allow the external tool to visualize the arrivals and to measure the time between them in order to allow a schedulability analysis.

Mind that schedulability analysis requires the minimum time between arrivals while these hooks only provide measured values.

6.5.4.1.1 OS_VTH_ACTIVATION

Prototype		
OS_VTH_ACTIVATION(Ta	askId, DestCoreId, CallerCoreId)	
Parameter		
TaskId	Identifier of the task which is activated	
DestCoreId	Identifier of the core on which the task is activated	
CallerCoreId	Identifier of the core which performs the activation (has called ActivateTask, has called TerminateTask or has performed an alarm/schedule table action to activate a task)	
Return code		
_	-	

Functional Description

This hook is called on the caller core when that core has successfully performed the activation of TaskId on the destination core. On single core systems both core IDs are always identical.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-28 OS_VTH_ACTIVATION

6.5.4.1.2 OS_VTH_SETEVENT

Prototype		
OS_VTH_SETEVENT(Tasl	xId, EventMask, StateChange, DestCoreId, CallerCoreId)	
Parameter		
TaskId	Identifier of the task which receives this event	
EventMask	A bit mask with the events which shall be set	



StateChange	TRUE: The task state has changed from WAITING to READY	
	FALSE: The task state hasn't changed	
DestCoreId	Identifier of the core on which the task receives the event	
CallerCoreId	Identifier of the core which performs the event setting (has called SetEvent or performed an alarm/schedule table action to set an event)	
Return code		
-	-	

This hook is called on the caller core when that core has successfully performed the event setting on the destination core. On single core systems both core IDs are always identical.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-29 OS_VTH_SETEVENT

6.5.4.1.3 OS_VTH_TRANSFER_SEMA

Prototype		
OS_VTH_TRANSFER_SEMA	(FromThreadId, ToTaskId, SemaId, DestCoreId, CallerCoreId)	
Parameter		
FromThreadId	Identifier of the thread (task; ISR) which releases the semaphore	
ToTaskId	Identifier ot the task which receives the semaphore	
SemaId	Identifier of the semaphore to be transferred	
DestCoreId	Identifier of the core on which the task igets the semaphore	
CallerCoreId	Identifier of the core which releases the semaphore	
Return code		
-	-	

Functional Description

This hook is called on the caller core when that core has successfully performed release of the semaphore while a task was waiting for that semaphore. On single core systems both core IDs are always identical.



Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The semaphore feature is optional, so this macro may not be necessary on all implementations of MICROSAR OS.

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-30 OS_VTH_TRANSFER_SEMA

6.5.4.2 Hook for context switch

MICROSAR OS provides a hook routine allowing external tools to trace all context switches from task to ISR and back as well as between tasks. So external tools may visualize the information or measure the execution time of tasks and ISRs.

Mind that measured values may not reflect the worst case, which would be necessary for schedulability analysis.

6.5.4.2.1 OS_VTH_SCHEDULE

Prototype	
ToTh	mThreadId, FromThreadReason, nreadId, ToThreadReason, lerCoreId)
Parameter	
FromThreadId	Identifier of the thread (task, ISR) which has run on the caller core before the switch took place
FromThreadReason	OS_VTHP_TASK_TERMINATION: The thread is a task, which has just been terminated.
	OS_VTHP_ISR_END: The thread is an ISR, which has reached its end.
	OS_VTHP_TASK_WAITEVENT: The thread is a task, which waits for an event.
	OS_VTHP_TASK_WAITSEMA: The thread is a task, which waits tor the release of a semaphore.
	OS_VTHP_THREAD_PREEMPT: The thread is interrupted by another one, which has higher priority.
ToThreadId	The identifier of the thread, which will run from now on



ToThreadReason	OS_VTHP_TASK_ACTIVATION: The thread is a task, which was activated.
	OS_VTHP_ISR_START: The thread is an ISR, which will now start execution.
	OS_VTHP_TASK_SETEVENT: The thread is a task, which has just received an event it was waiting for. It resumes execution right behind the call of WaitEvent.
	OS_VTHP_GOTSEMA: The thread is a task, which has just got the semaphore it was waiting for.
	OS_VTHP_THREAD_RESUME: The thread is a task or ISR, which was preempted before and becomes running again as all higher priority tasks and ISRs do not run anymore.
CallerCoreId	Identifier of the core which performs the thread switch
Return code	
_	-

This hook is called on the caller core when that core in case it performs a thread switch (from one task or ISR to another task or ISR). On single core systems both core IDs are always identical.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine

Call context

> The hook routine is called from within operating system internal functions with interrupts disabled.

Table 6-31 OS_VTH_SCHEDULE

6.5.4.3 Hooks for locking

MICROSAR OS provides hooks, which allow an external tool to trace locks. This is important as locking times of tasks and ISRs influence the execution of other tasks and ISRs. The kind of influence is different for different locks and is presented below in the functional description of the respective hooks.

Please keep in mind that measured times for locking may not reflect the worst case.

6.5.4.3.1 OS VTH GOT RES

Prototype		
OS_VTH_GOT_RES(Resid, CallerCoreId)		
Parameter		
ResId	Identifier of the resource which has been taken	
CallerCoreId	Identifier of the core where GetResorce was called	



Return code

|-

Functional Description

The OS calls this hook on a successful call of the API function GetResource. The priority of the calling task or ISR has been increased so that other tasks and ISRs on the same core may need to wait until they can be executed.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-32 OS_VTH_GOT_RES

6.5.4.3.2 OS VTH REL RES

Prototype

OS VTH REL RES (Resid, CallerCoreId)

100	_					
-	<i>6</i> −1	ra	0.0	r = 1	17 -	4
	[[4]	III <		L TI	1,50	н

ResId	Identifier of the resource which has been released
CallerCoreId	Identifier of the core where ReleaseResorce was called

Return code

_ | _

Functional Description

The OS calls this hook on a successful call of the API function ReleaseResource. The priority of the calling task or ISR has been decreased so that other tasks and ISRs on the same core may become running as a result.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-33 OS_VTH_REL_RES

6.5.4.3.3 OS_VTH_REQ_SPINLOCK

Prototype

OS VTH REQ SPINLOCK(SpinlockId, CallerCoreId)



Parameter	
SpinlockId	Identifier of the spinlock which has been requested
CallerCoreId	Identifier of the core where GetSpinlock was called
Return code	
_	-

The OS calls this hook on an unsuccessfull attempt to get a spinlock. The calling task or ISR enters a busy waiting state. Tasks or ISRs of lower priority have to wait until this task or ISR has taken and released the spinlock.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The hook is not called for optimized spinlocks
- > The hook is not called for operating system internal spinlocks
- > The hook is called only on multicore operating system implementations

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-34 OS_VTH_REQ_SPINLOCK

6.5.4.3.4 OS_VTH_GOT_SPINLOCK

Prototype			
OS_VTH_GOT_SPINLOCK(OS_VTH_GOT_SPINLOCK(SpinlockId, CallerCoreId)		
Parameter			
SpinlockId	Identifier of the spinlock which has been taken		
CallerCoreId	Identifier of the core where GetSpinlock or TryToGetSpinlock were called		
Return code			
-	-		

Functional Description

The OS calls this hook whenever a spinlock has successfully been taken. If the task or ISR was not successful immediately (entered busy waiting state), this hook means that it leaves the busy waiting state. From now on no other task or ISR may get the spinlock until the current task or ISR has released it.



Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The hook is not called for optimized spinlocks
- > The hook is not called for operating system internal spinlocks
- > The hook is called only on multicore operating system implementations

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-35 OS_VTH_GOT_SPINLOCK

6.5.4.3.5 OS_VTH_REL_SPINLOCK

Prototype	
OS_VTH_REL_SPINLOCK(SpinlockId, CallerCoreId)
Parameter	
SpinlockId	Identifier of the spinlock which has been released
CallerCoreId	Identifier of the core where ReleaseSpinlock was called
Return code	
_	-

Functional Description

The OS calls this hook on a release of a spinlock. Other tasks and ISR may take the spinlock now.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The hook is not called for optimized spinlocks
- > The hook is not called for operating system internal spinlocks
- > The hook is called only on multicore operating system implementations

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-36 OS_VTH_REL_SPINLOCK



6.5.4.3.6 OS VTH TOOK SEMA

Prototype			
OS_VTH_TOOK_SEMA(Tas	skId, SemaId, CallerCoreId)		
Parameter			
TaskId	Identifier of the task which has taken the semaphore		
SemaId	Identifier of the semaphore which has been taken		
CallerCoreId	Identifier of the core where GetSemaphore was called		
Return code			
_	-		

Functional Description

The OS calls this hook in the API function GetSemaphore if the semaphore was free before the call. If the semaphore was held by another task, the current task is transferred to the waiting state, which is signaled to the external tool by means of the OS_VTH_SCHEDULE hook as described in chapter 6.5.4.2.1.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- The semaphore feature is optional, so this macro may not be necessary on all implementations of MICROSAR OS.

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-37 OS_VTH_TOOK_SEMA

6.5.4.3.7 OS VTH REL SEMA

Prototype			
OS_VTH_REL_SEMA(ThreadId, SemaId, CallerCoreId)			
Parameter			
ThreadId	Identifier of the task or ISR which has released the semaphore		
SemaId	Identifier of the semaphore which has been released		
CallerCoreId	Identifier of the core where ReleaseSemaphore was called		
Return code			
_	_		

©2015, Vector Informatik GmbH Version: 9.01 93 / 136



The OS calls this hook in the API function ReleaseSemaphore if the semaphore becomes free after the call. If a task is currently waiting for the semaphore, the API function GetSemaphore calls OS VTH TRANFER SEMA instead, as described in chapter 6.5.4.1.3.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- The semaphore feature is optional, so this macro may not be necessary on all implementations of MICROSAR OS.

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-38 OS_VTH_REL_SEMA

6.5.4.3.8 OS VTH DISABLEDINT

Prototype				
OS_VTH_DISABLEDINT(IntLockId, CallerCoreId)			
Parameter				
IntLockId	OS_VTHP_CAT2INTERRUPTS: Interrupts have been disabled by means of the current interrupt level. That interrupt level has been changed in order to disable all category 2 interrupts, which also prevents task switch and alarm/schedule table management.			
	OS_VTHP_ALLINTERRUPTS: Interrupts have been disabled by means of the global interrupt enable/disable flag. Additionally to the effects described above, also category 1 interrupts are disabled.			
CallerCoreId	Identifier of the core where interrupts are disabled			
Return code				
-	-			

Functional Description

The OS calls this hook if the application has called an API function to disable interrupts. The parameter IntLockId describes whether category 1 interrupts may still occur.

Mind that the two types of interrupt locking (as described by the IntLockId) are independent from each other so that the hook may be called twice before the hook OS_VTH_ENABLEDINT is called, dependent on the application.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The hook is not called for operating system internal interrupt locks



Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-39 OS_VTH_DISABLEDINT

6.5.4.3.9 OS VTH ENABLEDINT

Prototype				
OS_VTH_ENABLEDINT(Ir	ntLockId, CallerCoreId)			
Parameter				
IntLockId	OS_VTHP_CAT2INTERRUPTS: Interrupts had been disabled by means of the current interrupt level until this hook was called. The OS releases this lock right after the hook has returned.			
	OS_VTHP_ALLINTERRUPTS: Interrupts had been disabled by means of the global interrupt enable/disable flag before this hook was called. The OS releases this lock right after the hook has returned.			
CallerCoreId	Identifier of the core where interrupts are disabled			
Return code				
-	-			

Functional Description

The OS calls this hook if the application has called an API function to enable interrupts.

Mind that the two types of interrupt locking (as described by the IntLockId) are independent from each other so that interrupts may still be disabled by means of the other locking type after this hook has returned.

Particularities and Limitations

- > The hook is expected to be implemented as a macro.
- > Reentrancy is possible on multicore systems with different caller core IDs
- > Call of any operating system API function is prohibited in this hook routine
- > The hook is not called for operating system internal interrupt locks

Call context

> The hook routine is called from within operating system API functions with interrupts disabled.

Table 6-40 OS_VTH_ENABLEDINT

6.6 Non-Trusted Functions

Non-trusted functions are a VECTOR extension to the AUTOSAR OS specification. This concept allows non-trusted applications to provide service functions, which are callable by trusted or non-trusted tasks and ISRs, comparable to the AUTSAR OS API CallTrustedFunction.

6.6.1 Functionality

The OS executes Non-trusted functions with the memory access rights and service protection rights of the owner application. These functions can access local data of the owner application



without the possibility to overwrite private data of other applications. Non-trusted functions have no access to the data on the callers stack.

6.6.2 API

Prototype

NonTrustedFunctionParameterRefType FunctionParams);

Parameter				
FunctionIndex	ionIndex Index of the function to be called.			
FunctionParams	nctionParams Pointer to the parameters for the function to be called. If no parameters are provide a NULL pointer has to be passed.			
Return code				
E_OK	No error			

Functional Description

Executes the non-trusted function referenced by FunctionIndex and passes argument FunctionParams.

The non-trusted function must conform to the following C prototype:

E OS SERVICEID | No function defined for this index

void NONTRUSTED_<name of the non-trusted function(NonTrustedFunctionIndexType,
NonTrustedFunctionParameterRefType);</pre>

The arguments are the same as the arguments of CallNonTrustedFunction.

Particularities and Limitations

- > The non-trusted function is called in user mode with memory protection enabled
- > The function has memory access rights of the owner application
- > The function has the service protection rights of the owner application

Call context

> Task, CAT2 ISR, trusted function, non-trusted function

Table 6-41 API osCallNonTrustedFunction



Note

Vector MICROSAR OS implementations offer the possibility of stub function generation for trusted functions. This mechanism is **not** available for non-trusted functions.

6.7 MPU Access Checking API

MISCROSAR OS provides API, which returns whether the caller has access to a given adderss.

Prototype

uint8 osCheckMPUAccess(uint8* DestinationAddress)



Parameter		
DestinationAddress	The address to be checked for access	
Return code		
uint8	0: Current Software part has write access	
	1: Current Software part has no write access	

Particularities and Limitations

- > The value of DestinationAddress may be temporarly altered within this function (depending on the platform).
- > Due to data consistency, the function should not be used on addresses, which are shared among cores.
- A protection violation may occur during this function. But this protection violation does not lead to a shutdown of the OS
- > This function cannot be called prior to StartOS

Call context

- > ProtectionHook
- > Task trusted/non-trusted
- > ISR Cat2 trusted/non-trusted
- > ErrorHook
- > ShutdownHook,
- > trusted function
- > non trusted function
- > StartupHook

Table 6-42 osCheckMPUAccess API

6.8 Peripheral Regions

On some platforms, there are memory mapped hardware registers, which are only accessible in privileged mode. To access this kind of registers even in non-trusted applications (i.e. non-privileged mode), MICROSAR OS provides Peripheral Regions.

To access such registers you have to configure a Peripheral Region and pass it's ID to the Peripheral Region API. The OS checks whether the caller has access to this region and performs the requested access operation.

The OS provides access functions for the following access types: 8, 16, and 32 bit.

6.8.1 Reading functions

Prototype			
osuint8	osReadPeripheral8(osuint16 area, osuint32 address)		
osuint16	osReadPeripheral16(osuint16 area, osuint32 address)		
osuint32	osReadPeripheral32(osuint16 area, osuint32 address)		



Parameter			
area	dentifier of peripheral regions to the read from		
address	Address to be read from		
Return code			
The content of "address" interpreted as 8 bit, 16 bit or 32 bit value			

- > reads either an 8 bit, or a 16 bit or a 32 bit value from "address"
- > The function performs accessing checks (whether the caller has accessing rights to the peripheral region and whether the address to be read from is within the configured range of the peripheral region)
- The error hook is raised in case of an error
- > A shutdown is not issued in case of an error

Particularities and Limitations

> These functions may not be called from OS hooks

Call context

- > These functions may be called from Task context
- > These functions may be called from category 2 ISR context
- > These functions can be called with interrupts enabled or with interrupts disabled

Table 6-43 ReadPeripheral API

6.8.2 Writing functions

Prototype

void osWritePeripheral8(osuint16 area, osuint32 address, osuint8 value)
void osWritePeripheral16(osuint16 area, osuint32 address, osuint16 value)
void osWritePeripheral32(osuint16 area, osuint32 address, osuint32 value)

VOIG	OBWITCEICIT,	pricials (08	Jainero	arca,	Obdinos	adarcoo,	ODULITEDA	varac,
Parar	neter							

Parameter		
area	Identifier of peripheral regions to the read from	
address	Address to write to	
Value	Value to be written	

Return code

None

Functional Description

- > Writes to either an 8 bit, or a 16 bit or a 32 bit value
- > The function performs accessing checks (whether the caller has accessing rights to the peripheral region and whether the address to be read from is within the configured range of the peripheral region)
- > The error hook is raised in case of an error
- A shutdown is not issued in case of an error



Particularities and Limitations

> These functions may not be called from OS hooks

Call context

- > These functions may be called from Task context
- > These functions may be called from category 2 ISR context
- > These functions can be called with interrupts enabled or with interrupts disabled

Table 6-44 WritePeripheral API

6.8.3 Modifying functions

Prototype

void osModifyPeripheral8(osuint16 area, osuint32 address, osuint8 clearmask,
osuint8 setmask)

void osModifyPeripheral16(osuint16 area, osuint32 address, osuint16 clearmask, osuint16 setmask)

void osModifyPeripheral32(osuint16 area, osuint32 address, osuint32 clearmask, osuint32 setmask)

Parameter				
area	Identifier of peripheral regions to the read from			
address	Address to be modified			
clearmask	Bitmask which is bitwise "ANDed" to "address"			
setmask Bitmask which is bitwise "ORed" to "address"				

Return code

None

Functional Description

- > The function performs accessing checks (whether the caller has accessing rights to the peripheral region and whether the address to be read from is within the configured range of the peripheral region)
- > The error hook is raised in case of an error
- > A shutdown is not issued in case of an error
- After the access checks has passed first the "clearmask" is ANDed to "address" and afterwards the "setmask" is ORed to it.

Particularities and Limitations

> These functions may not be called from OS hooks

Call context

- > These functions may be called from Task context
- > These functions may be called from category 2 ISR context
- > These functions can be called with interrupts enabled or with interrupts disabled

Table 6-45 ModifyPeripheral API



7 Configuration

Since AUTOSAR OS 3.0.0 specification, XML is used to define and describe an OS configuration. However, OIL is still supported as an alternative description language, especially if the OS shall be used stand-alone without any other AUTOSAR software modules.

All OSEK objects and their attributes have to be defined by one of these description languages.

7.1 Configuration and generation process

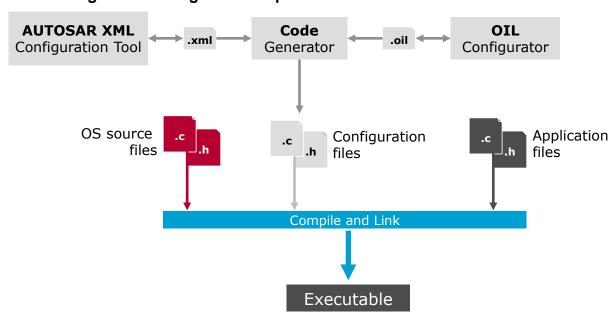


Figure 7-1 System overview of software parts

The figure above shows the complete configuration process of a MICROSAR OS. First all OS objects have to be defined. This can be done either by an AUTOSAR XML configuration tool or by the OIL Configurator (in OIL).

An OIL or XML file is the base of the code generation process. After code generation all files (OS source files, application files and generated OS configuration files) have to be compiled and linked to an executable.

7.1.1 XML Configuration

A configuration which is based on XML must conform to the AUTOSAR XML schema[8].

To edit a MICROSAR OS XML configuration the DaVinci Configurator Pro or Base of Vector Informatik GmbH can be used. Other tools that are able to edit AUTOSAR configurations may also be used.

The XML file that the tool produces has to be passed to the code generator to generate the configuration files.



7.1.2 OIL Configurator

The OIL specification is based on the document "OIL: OSEK Implementation Language – Version: 2.3" (ref. [6]). Additional Attributes are defined by Vector Informatik GmbH; the resulting version of OIL is 4.0.

The OIL Configurator is a Windows based program that is used to configure an OSEK application. The OIL Configurator reads and writes OIL files (OSEK Implementation Language). The usage of the OIL Configurator is described in the online help of the OIL Configurator.

The OIL Configurator has separate property tabs for each OSEK object type. Each object has several standard attributes that are defined in the OIL specification. Additional attributes that are implementation specific are described in the hardware specific document [4].

7.2 Configuration Variants

The OS supports the configuration variants

> VARIANT-PRE-COMPILE

The MICROSAR OS system is typically delivered with the source code. The kernel is implemented in several optimized variants, which are enabled from the OIL Configurator using C defines. The source code of the operating system has to be compiled if the configuration has changed. For some implementations, a library version of the operating system is also supplied. For different configurations, different libraries have to be linked to the application.

The configuration classes of the OS parameters depend on the supported configuration variants. For their definitions please see the OS_<platform and derivate> bswmd.arxml file.

7.3 Configuration of the XML / OIL Attributes

Some of the attributes of an OSEK object are standard for all OSEK implementations, and some are specific for each implementation.

This chapter describes the attributes the user can set for each OSEK object. Please note that setting an attribute to TRUE is used as a synonym for selecting it and setting to FALSE is used as a synonym for deselecting it. The reason is that a selection in the OIL Configurator corresponds to setting the attribute to TRUE in the OIL file (this can be checked by opening the OIL file with a normal text editor).



Caution

If a library version of the operating system is used, some attributes or attribute values are not available or predefined.



7.3.1 OS

The OS object can only be defined once. The OS object controls general aspects of the operating system.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	n.a.		 OIL: Freely selectable name, not used by the code generator.
			> XML: Not available in XML
Comment	n.a.		Any comment.
CC	OsOSCC	ECC2, AUTO	MICROSAR OS SafeContext must always be configured to support Conformance class ECC2.
STATUS	OsStatus	EXTENDED	MICROSAR OS SafeContext must always be configured to support extended status (error) messages.
SCALABILITY CLASS	OsScalabilityClass	SC3, SC4, AUTO.	MICROSAR OS SafeContext can be ordered in Scalability classes SC3 or SC4. It must be configured with the ordered Scalability class.
SCHEDULE	OsOSSchedule	MIXED, AUTO	MICROSAR OS SafeContext always supports preemptive and non-preemptive tasks, thus scheduling policy must be configured to mixed preemptive.
n.a.	OsHooks	hook routines as stated below (as Booleans)	XML: Used as a container to store hook routine information.OIL: not available
STARTUPHOOK	OsStartupHook	TRUE	The StartupHook is always called at system startup of a MICROSAR OS SafeContext.
			> XML: This attribute is placed in container OsHooks
ERRORHOOK	OsErrorHook	TRUE	The ErrorHook is always called if an error occurs in a MICROSAR OS SafeContext.
			> XML: This attribute is placed in container OsHooks
SHUTDOWNHOOK	OsShutdownHook	TRUE	The ShutdownHook is always called at system shutdown of a MICROSAR OS SafeContext.
			> XML: This attribute is placed in container OsHooks
PRETASKHOOK	OsPreTaskHook	FALSE	The PreTaskHook is not supported by MICROSAR OS SafeContext. However, there is a debug switch to turn it on during development, see 6.5.1.2 and [9].
			> XML: This attribute is placed in container OsHooks



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
POSTTASKHOOK	OsPostTaskHook	FALSE	The PostTaskHook is not supported by MICROSAR OS SafeContext. However, there is a debug switch to turn it on during development, see 6.5.1.3 and [9]. > XML: This attribute is placed in container
			OsHooks
PROTECTIONHOO K	OsProtectionHook	TRUE	The ProtectionHook is always called when a protection error is detected in a MICROSAR OS SafeContext.
			> XML: This attribute is placed in container OsHooks
CallISRHooks	OsOSCallISRHook s	FALSE	The UserPreISRHook and UserPostISRHook are not supported by MICROSAR OS SafeContext. However, there is a debug switch to turn them on during development, see 6.5.2.1, 6.5.2.2 and [9].
USEGET SERVICEID	OsUseGetService Id	TRUE	Access macros for the service ID information are always available in the error hook.
USEPARAMETER- ACCESS	OsUseParameter Access	FALSE	Access macros for the context related information in the error hook are not supported in MICROSAR OS SafeContext.
USERES SCHEDULER	OsUseRes Scheduler	TRUE, FALSE	This parameter is available, as the AUTOSAR standard requires it. Since AUTOSAR 4 the resource RES_SCHEDULER was removed as special case, therefore this attribute is silently ignored by MICROSAR OS.
STACK MONITORING	OsStackMonitoring	TRUE	A stack check is performed with each task switch. See also chapter 3.2.2.3 for details.
StackUsageMeasure ment	OsStackUsageMe asurement	TRUE, FALSE, AUTO	If selected, the stacks are filled with an indicator value during StartOS. This allows measuring the stack usage of tasks and ISRs. See also chapter 3.2.2.5. If AUTO is selected, StackUsageMeasurement uses the same setting as STACKMONITORING.
ErrorInfoLevel	OsOSErrorInfo Level	STANDARD	MICROSAR OS SafeContext will report standard OSEK error codes and unique error numbers, but no additional information about the error location.
OSInternalChecks	OsOSInternal Checks	ADDITIONAL	MICROSAR OS SafeContext will always perform all available runtime error checks.
Compiler	OsOSCompiler	Implementatio n specific	The compiler can be chosen. If there is only one compiler this attribute is also set by default.
ORTIDebug Support	OsOSORTIDebug Support	TRUE	The OS generator always produces an ORTI.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
ORTIDebugLevel	OsOSORTIDebug Level	ORTI_22_Add itional	MICROSAR OS SafeContext will always support version 2.2 of the ORTI standard with all available features.
UserConfigurationV ersion	OsOSUserConfigu rationVersion	165535	Version number of the OS configuration. This numeric value is not used by the OS, but enables the user to track changes in the configuration and validate the configuration version actually used in the ECUC. Therefore, it is suggested to increment this value each time the OS configuration is modified.
ProtectionHook Reaction	OsOSProtection HookReaction	SELECTED	MICROSAR OS SafeContext does not support forcible termination, thus requires this parameter to be set to SELECTED.
			See chapter 7.3.1.3 for information about the sub-attributes and required values for MICROSAR OS SafeContext.
Timing Measurement	OsOSTiming Measurement	TRUE	MICROSAR OS SafeContext will always perform Timing measurement if delivered in Scalability class SC4.
			See chapter 7.3.1.4 for information about the sub-attributes. Chapter 3.2.4.2 provides more detailed information about configuration of timing measurement.
TypeHeader Include	OsOSTypeHeader Include	TRUE, FALSE	If selected, the AUTOSAR type headers are included in the file os_cfg.h. This is included in the file os.h, which has to be included in all source files that use API functions of MICROSAR OS OSEK/AUTOSAR. The AUTOSAR type headers are not necessary for the usage of MICROSAR OS OSEK/AUTOSAR, so it is safe to deselect this attribute.
EnumeratedUnhandl edISRs	OsOSEnumerated UnhandledISRs	TRUE, FALSE	Determines the handling of unassigned interrupt sources. The default of this attribute is FALSE.
			FALSE: This is the normal handling for unassigned interrupt sources. If no interrupt service routine is defined in OIL for an interrupt source the corresponding interrupt vector will be directed to one common unhandled exception handler. This setting must be chosen for the final application software. TRUE: During application development, there may be interrupts issued by unassigned interrupt sources. In such case it could be a big effort to determine the interrupt source. If this
			attribute is set to TRUE the interrupt vector of each unassigned interrupt source will be directed to an unhandled exception routine. If an unhandled exception occurs in that case, the



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			interrupt source which causes this exception can easily be determined by the variable "oslSRUnhandledException_Number". The corresponding interrupt source can be distinguished by having a look into the interrupt vector table which normally is generated to intvect.c. This is a debug feature only and is not permitted for the final application software running on a MICROSAR OS SafeContext. This feature is optional. Please refer to [5] to find out whether a specific implementation of MICROSAR OS supports this feature.
ConditionalGenerati ng	/MICROSAR/Boar d/BoardGeneral/B oardConditionalGe nerating	TRUE, FALSE	Determines whether the OS code generator creates the files only if the relevant configuration has been modified since the last generator run (ConditionalGenerating = TRUE). If ConditionalGenerating = FALSE, the OS files
			are always generated. For details about this attribute, see chapter 8.1.3.

Table 7-1 OS attributes

7.3.1.1 ProtectionHookReaction / OsOSProtectionHookReaction

> MICROSAR OS SafeContext requires this attribute to be set to SELECTED with the following subattributes:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
KILLTASKISR	OsOSKILLTASK ISR	FALSE	MICROSAR OS SafeContext does not support the return value PRO_TERMINATETASKISR.
KILLAPPL	OsOSKILLAPPL	FALSE	MICROSAR OS SafeContext does not support the return value PRO_TERMINATEAPPL.
KILLAPPL_ RESTART	OsOSKILLAPPL_ RESTART	FALSE	MICROSAR OS SafeContext does not support the return value PRO_TERMINATEAPPL_RESTART.
SHUTDOWN	OsOS SHUTDOWN	TRUE	PRO_SHUTDOWN is the only return value supported by MICROSAR OS SafeContext.

Table 7-2 Sub-attributes of ProtectionHookReaction = SELECTED



Caution

Currently MICROSAR OS does not support killing. So only SHUTDOWN should be selected!





Caution

If the Protection hook returns a value that is not configured by means of the sub-attributes of ProtectioHookReaction, the OS performs a Shutdown.



Note

MICROSAR OS allows to use the return values

- PRO KILLTASKISR,
- PRO_KILLAPPL and
- PRO_KILLAPPL_RESTART

In the protection hook as synonyms for

- PRO_TERMINATETASKISR,
- PRO TERMINATEAPPL and
- PRO TERMINATEAPPL RESTART

as long as no macro OS_SUPPRESS_PROTHOOK_OLD_RET_VALS is defined.

7.3.1.2 TimingMeasurement / OsOSTimingMeasurement

This Attribute must be set to TRUE for a MICROSAR OS SafeContext that has been delivered in Scalability class SC4.

Please see also 3.2.4.2 and 7.3.2.2.

> If this attribute is set to TRUE, the subattribute GlobalConfig allows to globally override the Task/ISR settings for Timing Protection and Timing Measurement:

Attribute Na	me	Values	Description
OIL	XML	The default value is written in bold	
GlobalConfig	OsGlobalConfig	ProtectAndMeasureAll AsSelected OnlyMeasureAll	 ProtectAndMeasureAll: The OS provides timing measurement for all tasks and ISRs regardless of their setting in the attribute TIMING_PROTECTION. Timing protection however is provided only for all tasks and ISRs that have the attribute TIMING_PROTECTION set to TRUE. In case the subattribute OnlyMeasure is set to TRUE, that setting is ignored with a warning. In case the attribute TIMING_PROTECTION of a task or ISR is set to FALSE, the OS provides no timing protection. Asselected: The os provides timing protection for a task or ISR if that is configured, the attribute OnlyMeasure is honored. OnlyMeasureAll: The OS does not provide timing protection for any Task or ISR. Instead, it provides timing



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			measurement for all tasks and ISRs. In case a task or ISR is configured to have timing protection and has the subattribute OnlyMeasure set to FALSE, that setting is overridden with a warning.

 Table 7-3
 Sub-attributes of TimingMeasurement = TRUE

7.3.1.3 PeripheralRegion / OsOSPeripheralRegion

OIL Name	XML Name	Values	Description
StartAddress	OsOSStartAddress	-	Numeric value
			Specifies the start address of the peripheral region, which shall be configured.
EndAddress	OsOSEndAddress	-	Numeric value
			Specifies the end address of the peripheral region, which shall be configured.
Identifier	OsOSIdentifier	-	Area name
			Must be a unique C-identifier, which can be used in an application or BSW module to access the peripheral region.
ACCESSING_ APPLICATION	OsOSAccessingApplication	-	Grants access for this Peripheral Region. Multiple applications can be defined for the same Peripheral Region.

Table 7-4 Sub-attributes of PeripheralRegion



Caution

The application is allowed to access memory addresses in the interval of StartAddress <= memory to be accessed <= EndAddress

The "EndAddress" value is included! All bytes of a peripheral access must fit into the peripheral region.

7.3.2 Task

In the section Task all tasks and their attributes have to be defined.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the task. This name is used as an argument to all task-related OSEK API



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			functions (e.g. ActivateTask). The task function (or task body) has to be defined using the C macro TASK() (which appends the suffix func to the task name).
Comment	n.a.		Any comment.
TYPE	OsTaskTYPE	BASIC, EXTENDED, AUTO	Type of the task: either BASIC or EXTENDED. If set to AUTO, the type is calculated based on the settings for events and the activation count.
SCHEDULE	OsTaskSchedule	NON, FULL	Scheduling policy for this task.
PRIORITY	OsTaskPriority	-	The priority of the task. A higher number represents a higher priority (according to the OSEK specification). The priority may be set with gaps, though the gaps will be eliminated by the code generator. Several tasks may be set on the same priority level.
ACTIVATION	OsTaskActivation	-	The number of activations that are recorded in the kernel while the task is possibly running or delayed by higher priority tasks.
			If ACTIVATION is set to a value bigger than 1, no events can be received.
AUTOSTART	OsTaskAutostart	-	If set to TRUE, the task will be activated at startup of the operating system. See chapter 7.3.2.1 for details about the sub-attributes.
EVENT	OsTaskEventRef	-	Reference to an event that is used by this task. This attribute can only be used for extended tasks (the attribute TYPE might be set to EXTENDED or AUTO). This attribute can be used multiply if more than one EVENT has to be assigned.
			If events are used with this task, the attribute ACTIVATION cannot be bigger than 1.
RESOURCE	OsTaskResource Ref	-	Reference to a resource that is occupied by this task. This attribute can be used multiply if more than one RESOURCE shall be assigned.
StackSize	OsTaskStackSize	-	Task stack size in byte. This attribute is only available if the implementation supports configurable task stacks.
TIMING_PROTECTI ON	OsTaskTiming Protection	-	Selects timing protection for the task. See chapter 7.3.2.2 for information about the subattributes.
ACCESSING_ APPLICATION	OsTaskAccessing Application	-	Defines access rights of an application for this task. This attribute can be defined multiply, so different applications might have access right to the same task. This attribute can be used in



Attribute Name		Values	Description
OIL	A IVII	The default value is written in bold	
			scalability classes SC3 and SC4 only.

Table 7-5 Task attributes

7.3.2.1 AUTOSTART / OsTaskAutostart

> OIL: If attribute set to FALSE:

No sub-attributes.

> XML: If this container is not present:

AUTOSTART switched off.

> If attribute is set to TRUE:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
APPMODE	OsTaskAppMode Ref	-	Defines an application mode in which the task is started in automatically. This attribute might be defined several times to start the task in different application modes.

Table 7-6 Sub-attributes of TASK->AUTOSTART=TRUE

7.3.2.2 TIMING_PROTECTION / OsTaskTimingProtection

Please note that TIMING_PROTECTION = TRUE can only be selected for a MICROSAR OS SafeContext that has been delivered in Scalability class SC4.

> If attribute is set to FALSE:

No sub-attributes.

> If this attribute is not defined in XML:

Timing protection is switched off.

The value of this attribute might be overridden by the OS attribute TimingMeasurement, as described in chapters 7.3.1.4 and 3.2.4.2

> If attribute is set to TRUE:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
EXECUTION BUDGET	OsTaskExecution Budget	-	Defines the maximum execution time for the task
TIMEFRAME	OsTaskTimeFrame	-	Defines the minimum time between task activations
MAXOS	OsTaskOsInterrupt	-	Maximum time OS interrupts are locked (by



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
INTERRUPT LOCKTIME	LockBudget		SuspendOSInterrupts)
MAXALL INTERRUPT LOCKTIME	OsTaskAllInterrupt LockBudget	-	Maximum time ALL interrupts are locked (by SuspendAllInterrupts or DisableAllInterrupts)
LOCKINGTIME = RESOURCELOCK	OsTaskResource Lock	-	Is intended to be a container for sub-attributes concerning the locking time of resources
LOCKINGTIME = RESOURCELOCK/ RESOURCE	Inside the container OsTaskResource Lock: OsTaskResource LockResourceRef	-	The resource for which the locking time is specified.
LOCKINGTIME = RESOURCELOCK/ RESOURCELOCK TIME	Inside the container OsTaskResource Lock: OsTaskResource LockBudget	-	Maximum time the resource is locked (by GetResource)
OnlyMeasure	OsOnlyMeasure	TRUE FALSE	If set to FALSE, timing values of this task are measured and violations against the configured values lead to a call of the ProtectionHook. If set to TRUE, the timing values are still measured but no call of the ProtectionHook occurs.

Table 7-7 Sub-attributes of TASK-> $\texttt{TIMING_PROTECTION=TRUE}$

7.3.2.3 Task attributes concerning the timing analyzer

The following attributes have to be used when working with the timing analyzer tool. They are used as input for this tool.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
ComputationTime	OsTask ComputationTime	-	The worst case execution time (in nanoseconds)
Period	OsTaskPeriod	-	The minimum activation period of the task (in nanoseconds)
Deadline	OsTaskDeadline	-	The deadline of the task (in nanoseconds)
PRIORITY	OsTaskPriority	-	Priority of the task
UseResource Occupation	OsTaskUse Resource Occupation	-	If set to TRUE the occupation of resources can be taken into consideration by the analysis tool.
UseResource Occupation=TRUE/	OsTaskUse Resource	-	Reference to the resource that is occupied.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Resource	Occupation =TRUE/OsTask Resource		
UseResource Occupation=TRUE/ OccupationTime	OsTaskUse Resource Occupation =TRUE/OsTask OccupationTime	-	Maximum resource occupation time (in nanoseconds)

Table 7-8 Task attributes concerning the timing analyzer

7.3.3 Counter

The Counter container provides the following configuration attributes.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the counter. This name is used for the Alarm configuration.
Comment	n.a.		Any comment.
MINCYCLE	OsCounterMinCycle	-	This attribute specifies the minimum allowed number of ticks for a cyclic alarm linked to the counter.
MAXALLOWED VALUE	OsCounterMaxAllowedValue	-	Maximum value, which is reachable by the counter in counter ticks.
TICKSPERBASE	OsCounterTicksPerBase	-	This attribute specifies the number of hardware timer ticks required to reach a counterspecific unit. E.g. if you have a periodic tick timer, which is running with 16MHz and it is configured to trigger a timer interrupt with 1kHz. You have 16000 ticks per base.
TYPE	OsCounterType	SOFTWARE, HARDWARE	Defines the type of the counter. Possible settings are SOFTWARE or HARDWARE. SOFTWARE means the counter is incremented by means of the system service IncrementCounter, which has to be called by the application. HARDWARE means the counter is incremented by MICROSAR OS internally.
DRIVER	OsDriver	-	This Container contains the information who will drive the counter. This configuration is only valid if the counter has OsCounterType set to HARDWARE. Sub-Attributes are hardware dependent (see [5]).



Attribute Name	Attribute Name		Description
OIL	XML	The default value is written in bold	
TIMECONSTANT	OsTimeConstant	-	This Container allows the user to define constants, to be used e.g. to compare physical time values with timer tick values.
TIMECONSTANT/ CONSTNAME	OsConstName	-	The name, to be used by the application to get OsTimeValue in counter units.
TIMECONSTANT/ VALUE	OsTimeValue	-	This attribute contains the value of the constant in seconds.
SECONDSPERTICK	OsSecondsPerTick	-	This attribute contains the time of one counter tick in seconds.
ACCESSING_ APPLICATION	OsCounter Accessing Application	-	Defines access rights of an application for this counter. This attribute can be used multiply, so different applications might have access rights to this counter. This attribute can only be used in scalability classes SC3 and SC4.

Table 7-9 Attributes of COUNTER

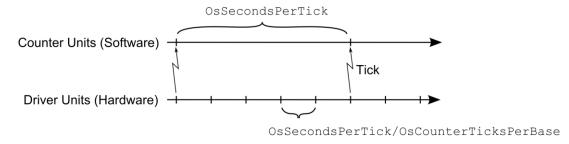


Figure 7-2 Relation between Physical Units, Counter Units and Driver Units



Note

If the OS supports High-Resolution, there is no periodic counter tick. The OS programs the driver to interrupt on demand (e.g. next Alarm, next Expiry Point, etc.). Therefore, the counter has the same resolution as the driver (OsCounterTicksPerBase is 1).

7.3.4 Alarm

The action of an alarm has to be defined statically.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the alarm. This name is used as an argument to all alarm related OSEK API functions (e.g. SetRelAlarm).
Comment	n.a.		Any comment
COUNTER	OsAlarmCounter Ref		Reference to the counter that drives the alarm.
ACTION	OsAlarmAction	> OIL: SETEVENT, ACTIVATETASK, INCREMENTCOU NTER > XML: Choice container: OsAlarmActivateT ask, OsAlarmIncrement Counter, OsAlarmSetEvent	See chapter 7.3.4.1 for more information.
AUTOSTART	OsAlarmAutostart	TRUE FALSE	 OIL: If set to TRUE, the alarm will be activated at startup of the system. XML: If attribute is present, the alarm will be activated at startup of the system. See chapter 7.3.4.2 for more information about the sub-attributes and chapter 3.2.1.3 for more information about static alarms.
ACCESSING_ APPLICATION	OsAlarmAccessin gApplication		Defines access rights of an application for this alarm. This attribute can be used multiply, so different applications might have access rights to this alarm. This attribute can be used in scalability classes SC3 and SC4 only.

Table 7-10 Attributes of ALARM

7.3.4.1 ACTION / OsAlarmAction

> Attribute / ChoiceContainer is set to ACTIVATETASK / OsAlarmActivateTask:



Attribute Name		Values	Description
OIL	AIVIL	The default value is written in bold	
TASK	OsAlarmActivate TaskRef	-	Task to be activated

Table 7-11 Sub-attributes of ACTION = ACTIVATETASK

> Attribute / ChoiceContainer is set to SETEVENT / OsAlarmSetEvent:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
TASK	OsAlarmSetEvent TaskRef	-	Task to which the event should be sent
EVENT	OsAlarmSetEvent Ref		Event to be sent to the specified task

Table 7-12 Sub-attributes of ACTION = SETEVENT

> Attribute / ChoiceContainer is set to INCREMENTCOUNTER / OsAlarmIncrementCounter:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
COUNTER	OsAlarmIncrement CounterRef	-	Name of the counter to be incremented

Table 7-13 Sub-attributes of ACTION = ALARMCALLBACK

7.3.4.2 AUTOSTART / OsAlarmAutostart

- > OIL: This attribute can be either TRUE or FALSE. Depending on the value, there may be different sub-attributes.
- > XML: This attribute can be present in the configuration or it can be omitted. In case this container is present, it has sub-attributes, which are described below.
- > If AUTOSTART is set to TRUE (OIL) or if the container is present (XML):

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
ALARMTIME	OsAlarmAlarmTim e	-	The relative or absolute tick value when the alarm expires for the first time. Note that for an alarm which is RELATIVE the value should be bigger than 0.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
TYPE	OsAlarmAutostar tType	ABSOLUTE RELATIVE	The value corresponds to a call of the API- Functions SetRelAlarm or SetAbsAlarm
CYCLETIME	OsAlarmCycleTim e		This atttibute defines the cycle time of a cyclic alarm in counter units. A zero value indicates that the alarm is not cyclic.
APPMODE	OsAlarmAppMode Ref		Reference to the application modes for which the AUTOSTART shall be performed.

Table 7-14 Sub-attributes of AUTOSTART = TRUE

7.3.5 Resource

Resources have to be defined with the following attributes:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the resource. This name is used as an argument to all resource related OSEK API functions (e.g. GetResource).
Comment	n.a.		Any comment
RESOURCE	OsResource	STANDARD,	This attribute can take the following values:
PROPERTY	Property	LINKED	> STANDARD: A normal resource that is not linked to another resource and is not an internal resource.
			> LINKED: A resource that is linked to another resource with the property STANDARD or LINKED.
			Internal resources are not supported by MICROSAR OS SafeContext.
ACCESSING_ APPLICATION	OsResource Accessing Application		Defines access rights of an application for this resource. This attribute can be used multiply, so different applications might have access rights to this resource. This attribute can only be used in scalability classes SC3 and SC4.
RESOURCE OSResourceLing ResourceRef =LINKED / LINKED	OsResourceLinked ResourceRef		> OIL: If the resource property is set to LINKED, the LINKEDRESOURCE attribute holds a reference to a resource.
RESOURCE			> XML: This attribute holds a reference to a resource.



Table 7-15 Attributes of RESOURCE

7.3.6 **Event**

Events in the OSEK operating system are always implemented as bits in bit-fields. The user could use bit-masks like '0x0001', but to achieve portability between different OSEK implementations, the user should use event names, which are mapped to defined bits by the code generator.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the event. This name is used as an argument to all event related OSEK-API-functions (e.g. SetEvent).
Comment	n.a.		Any comment
MASK	OsEventMask	-	 OIL: Eventmask or AUTO XML: If EventMasks shall be defined automatically this attribute shall be omitted

Table 7-16 Sub-attributes of EVENT



Caution

If the user selects AUTO for the mask, the code generator will search for free bits in the bit mask of the receiving task. It is important to specify each task that receives an event, otherwise the code generator will generate wrong bit-masks.

7.3.7 ISR

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the interrupt service routine.
Comment	n.a.		Any comment
CATEGORY	OslsrCategory	-	 OIL: Number of category for the interrupt service routine (1-2) XML: this attribute can be CATEGORY_1 or CATEGORY_2
RESOURCE	OslsrResourceRef	-	Resource management for ISRs is not supported by MICROSAR OS SafeContext.
TIMING_ PROTECTION	OslsrTiming Protection	-	Selects timing protection for the ISR. See chapter <u>7.3.7.2</u> for information about the subattributes.
EnableNesting	OslsrEnable Nesting	-	If set to TRUE the OS will call the user ISR in a way that interrupts will be enabled again during user ISR. Thus, it is possible that the user ISR can be interrupted by other ISRs.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
UseSpecialFunction Name	OslsrUseSpecial FunctionName	-	Normally the attribute Name/Short-Name defines the C-Name of the ISR. Since this name must be unique, it would not be possible to map different interrupt Sources to a single ISR. This can be done by this attribute. If this attribute is set to TRUE, it is possible to define the function name of the ISR in a separate sub-attribute. These names do not have to be unique.
ACCESSING_ APPLICATION	OslsrAccessing Application	-	Defines access rights of an application for this ISR. This attribute can be used multiply, so different applications might have access rights to this alarm.

Table 7-17 Attributes of ISR

7.3.7.1 UseSpecialFunctionName / OslsrUseSpecialFunctionName

If this attribute is set to TRUE a function name can be specified which is taken as ISR name instead of the Name (OIL) / Short-Name (XML) attribute.

This can be used to map several interrupt sources to one ISR routine.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
FunctionName	OsIsrFunctionName	-	Name of the ISR routine.

Table 7-18 Sub-attributes of UseSpecialFunctionname / OslsrUseSpecialFunctionName



Example

Given two Interrupts MyISR1 and MyISR2. Both shall trigger the same ISR routine. Activate SpecialFuntionName for MyISR2, and set FunctionName to "MyISR1". Now, MyISR2 is mapped onto the MyISR1 routine, which is implemented as usual:

```
ISR (MyISR1)
{
    ...
}
```





Note

The ISR() macro *MUST* be used for the definition of category 2 ISR handlers. If this is not possible, a wrapper using this macro can be used to call the respective ISR handler:

7.3.7.2 TIMING_PROTECTION / OslsrTimingProtection

- > OIL: This attribute has to be set to TRUE to switch on timing protection. The subattributes are only visible if TIMING PROTECTION is TRUE.
- > XML: This attribute has to be present to switch on timing protection.

Please note that timing protection can only be switched on for a MICROSAR OS SafeContext that has been delivered in Scalability class SC4.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
EXECUTIONTIME	OslsrExecution Budget	-	The parameter contains the maximum allowed execution time of the interrupt. > OIL: the times are given in nanoseconds.
			> XML: the times are given in seconds.
TIMEFRAME	OsIsrTimeFrame	-	This parameter contains the minimum inter- arrival time between successive interrupts
			> OIL: the times are given in nanoseconds.
			> XML: the times are given in seconds.
MAXOSINTERRUP TLOCKTIME	OslsrOsInterrupt LockBudget	-	This parameter contains the maximum time for which the ISR is allowed to lock all Category 2 interrupts (via SuspendOSInterrupts()).
			> OIL: the times are given in nanoseconds.
			> XML: the times are given in seconds.
MAXALLINTERRUP TLOCKTIME	OslsrAllInterrupt LockBudget	-	This parameter contains the maximum time for which the ISR is allowed to lock all interrupts (via SuspendAllInterrupts() or DisableAllInterrupts())



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			OIL: the times are given in nanoseconds.XML: the times are given in seconds.
LOCKINGTIME	OslsrResource Lock	-	> OIL: This is a (empty) list of all lock times, in nanoseconds
			> XML: This container holds resource lock times, in seconds.
			Resource lock times are the maximum times an ISR is allowed to hold a resource.
OnlyMeasure	OsOnlyMeasure	TRUE FALSE	If set to FALSE, timing values of this ISR are measured and violations against the configured values lead to a call of the ProtectionHook. If set to TRUE, the timing values are still measured but no call of the ProtectionHook occurs. The value of this attribute might be overridden by the OS attribute TimingMeasurement, as described in chapters 7.3.1.4 and 3.2.4.2.

Table 7-19 Sub-attributes of ${\tt TIMING_PROTECTION}$ / OslsrTimingProtection

7.3.7.2.1 LOCKINGTIME / OslsrResourceLock

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
LOCKINGTIME= RESOURCELOCK/ RESOURCELOCK TIME	OslsrResource LockBudget	-	The parameter contains the maximum allowed time an ISR is allowed to hold a resource OIL: the times are given in nanoseconds. XML: the times are given in seconds.
LOCKINGTIME= RESOURCELOCK/ RESOURCE	OslsrResource LockResourceRef		Holds the reference to this resource

Table 7-20 Sub-attributes of LOCKINGTIME / OslsrResourceLock

7.3.7.3 ISR Attributes concerning the Timing Analyzer

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
ComputationTime	OsIsrComputation Time	-	The worst case execution time (in nanoseconds)
Period	OslsrPeriod		The minimum activation period of the ISR (in nanoseconds)



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Deadline	OslsrDeadline		The deadline of the ISR (in nanoseconds)
AnalysisPriority	OslsrAnalysis Priority		The AnalysisPriority corresponds to the Task attribute PRIORITY / osTaskPriority.
			The AnalysisPriority is an extension of the priority values from tasks to ISRs, so all ISR priorities must have higher values as all task priorities to get correct analysis results. (Some OS Implementations use an attribute similar to priority for the hardware interrupt level. Therefore to the timing analysis an own attribute was introduced).
UseResource Occupation	OsIsrUseResource Occupation		If set to TRUE the occupation of resources can be taken into consideration by the analysis tool.
UseResource Occupation= TRUE/Resource	OsIsrUseResource Occupation=TRUE /OsIsrResource		Reference to the resource that is occupied.
UseResource Occupation= TRUE/ OccupationTime	OsIsrUseResource Occupation=TRUE /OsIsrOccupation Time		Maximum resource occupation time (in nanoseconds)

Table 7-21 ISR attributes concerning the timing analyzer

7.3.8 COM

The section COM is not used by MICROSAR OS.

7.3.9 NM

The section NM is not used with the current MICROSAR OS implementation.

7.3.10 APPMODE / OsAppMode

Application modes have to be defined with the following attributes:

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the application mode. This name is used as an argument to all related OSEK-API-functions and for the definition of the AUTOSTART functionality of tasks and alarms.
Comment	n.a.		Any comment



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
n.a.	OsAppModeId		Internal ID of an Appmode. The value of this attribute is ignored by MICROSAR OS.

Table 7-22 Attributes of Appmode / OsAppMode

7.3.11 Application / OsApplication

The object APPLICATION is meant for the usage with scalability classes SC3 and SC4.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name		Freely selectable name, not used by the code generator.
Comment	n.a.		Any comment.
n.a.	OsApplication Hooks	FALSE	MICROSAR OS SafeContext does not support any application specific Hook routines.
STARTUPHOOK	OsAppStartup Hook	FALSE	MICROSAR OS SafeContext does not support any application specific Hook routines.
			(XML: is contained in OsApplicationHooks)
ERRORHOOK	OsAppErrorHook	FALSE	MICROSAR OS SafeContext does not support any application specific Hook routines.
			(XML: is contained in OsApplicationHooks)
SHUTDOWNHOOK	OsAppShutdown Hook	FALSE	MICROSAR OS SafeContext does not support any application specific Hook routines.
			(XML: is contained in OsApplicationHooks)
TRUSTED	OsTrusted	TRUE, FALSE	OIL: Defines whether the application is trusted or not. See chapter 7.3.11.1 for information about the sub-attributes.
			> XML: This is only a boolean which marks the Application as trusted application
HAS_RESTART TASK	n.a.	FALSE	 OIL: MICROSAR OS SafeContext does not support terminating or restarting an application.
TASK	OsAppTaskRef	-	Reference to all tasks belonging to this application.
ISR	OsApplsrRef	-	Reference to all ISRs belonging to this application.
ALARM	OsAppAlarmRef	-	Reference to all alarms belonging to this application.
SCHEDULETABLE	OsAppSchedule TableRef	-	Reference to all schedule tables belonging to this application.



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
COUNTER	OsAppCounterRef	-	Reference to all counters belonging to this application.
n.a.	OsApplication TrustedFunction	-	Container that is used to define trusted functions.
NonTrusted_Function	OsApplicationNon Trusted_Function	-	List of non-trusted functions provided by this application (only for non-trusted applications).

Table 7-23 Attributes of Application / OsApplication

7.3.11.1 Trusted Functions

- > OIL: trusted functions are defined as sub-attributes of 'TRUSTED=TRUE'.
- > XML: there are containers for trusted functions.

The preconditions for editing the sub-attributes in the next table are TRUSTED=TRUE/TRUSTED_FUNCTION=TRUE for OIL and the existence of (at least one) OsApplicationTrustedFunction container.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
TRUSTED_ FUNCTION =TRUE/TRUSTED FUNCTION =TRUE/NAME	OsTrustedFunction Name	-	List of trusted functions provided by this application.
TRUSTED_ FUNCTION =TRUE/TRUSTED FUNCTION =TRUE/Params	OsApplication Params	-	Parameter (arguments) of trusted function. Empty string means void. Used for stub generation only. See attribute GenerateStub.
TRUSTED_ FUNCTION =TRUE/TRUSTED FUNCTION =TRUE/ReturnType	OsApplication ReturnType	-	Return value data type of trusted function. Empty string means void. Used for stub generation only. See attribute GenerateStub.
TRUSTED_ FUNCTION =TRUE/Generate Stub	OsApplication GenerateStub	-	If set to TRUE, stub functions are generated for all trusted functions of this application.

Table 7-24 Sub-attributes for trusted functions



7.3.12 Scheduletable

Schedule tables have to be defined with the following attributes.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
Name	Short-Name	-	Name of the SCHEDULETABLE. This name is used as an argument to all related OSEK API functions.
Comment	n.a.		Any comment
COUNTER	OsScheduleTable CounterRef	-	Defines the counter used as time basis for this schedule table.
REPEATING	OsScheduleTable Repeating	-	If selected, the schedule table is performed periodically after it is started. If deselected, the schedule table is performed once per activation.
DURATION	OsScheduleTable Duration	-	Defines the length of the schedule table in ticks, based on the underlying counter. This is the time from the first expiry point to the end of the schedule table or in the case of a periodic schedule table, between two subsequent first expiry points. The length is defined in units of ticks of the underlaying counter.
AUTOSTART	OsScheduleTable Autostart	-	 OIL: If set to TRUE, the schedule table is activated at startup of the operating system. XML: If attribute is present, the schedule table is activated at startup of the operating system. See chapter 7.3.13.1 for more information about the sub-attributes.
LOCAL_TO_ GLOBAL_TIME_SY NCHRONIZATION	OsScheduleTable Sync	-	Defines, whether the schedule table shall be synchronized to a global time source. This attribute is only supported in scalability class SC4. Sub-attributes are described in chapter 7.3.13.6.
EXPIRY_POINT	OsScheduleTable ExpiryPoint	-	Defines an expiry point for this schedule table
ACCESSING_ APPLICATION	OsSchTbl Accessing Application	-	Defines access rights of an application for this schedule table. This attribute can be used multiply, so different applications might have access rights to this schedule table.

Table 7-25 Attributes of SCHEDULETABLE

7.3.12.1 AUTOSTART / OsScheduleTableAutostart

- > OIL: If this attribute is set to TRUE sub-attributes are visible and the schedule table is auto started.
- > XML: If this container is present in the configuration the schedule table is auto started



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
APPMODE	OsScheduleTable AppModeRef	-	Defines an application mode in which the schedule table is started automatically. This attribute might be defined several times to start the schedule table in several application modes.
TYPE	OsScheduleTable AutostartType	ABSOLUTE RELATIVE SYNCHRON	Defines the method how the schedule table is autostarted.
TYPE=ABSOLUT/ ABSVALUE	OsScheduleTable StartValue	-	Absolute autostart tick value when the schedule table starts. Only used if the OsScheduleTableAutostartType is ABSOLUTE.
TYPE=RELATIVE/ RELOFFSET	OsScheduleTableS tartValue	-	Relative offset in ticks when the schedule table starts. Only used if the OsScheduleTableAutostartType is RELATIVE.

Table 7-26 Sub-attributes for auto start of a schedule table

7.3.12.2 EXPIRY_POINT / OsScheduleTableExpiryPoint

An expiry point consists of a sequence of actions which are performed on a given tick time of the schedule table. There are the following sub-attributes. Some of them also have sub-attributes.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
ACTION	n.a.	> OIL: ACTIVATETA SK SETEVENT ADJUST	> OIL: a list of actions
OFFSET	OsScheduleTbl ExpPointOffset	-	Defines the time at which the defined actions occur in ticks based on the underlying counter. The time is absolute to the start of the schedule table and is given in ticks of the underlying counter.
ACTION=ADJUST	OsScheduleTbl AdjustableExp Point	-	> XML: containers for holding the sub- attributes in case of expiry point action ADJUST
ACTION =ACTIVATETASK	OsScheduleTable TaskActivation	-	> XML: containers for holding the sub- attributes in case of expiry point action



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			ACTIVATESTASK
ACTION =SETEVENT	OsScheduleTable EventSetting	-	> XML: containers for holding the sub- attributes in case of expiry point action SETEVENT

Table 7-27 Sub-attributes of expiry points

7.3.12.3 Expiry point action ADJUST

- > OIL: the following attributes are visible if the expiry point action is ADJUST
- > XML: the following attributes are located in the container OsScheduleTblAdjustableExpPoint

Those attributes are only relevant in SC2 or SC4 if synchronization mechanisms are used.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
MAXLENGTHEN	OsScheduleTable MaxLengthen		The maximum positive adjustment that can be made to the expiry point offset to achieve synchronizationin ticks based on the underlying counter.
MAXSHORTEN	OsScheduleTable MaxShorten	-	The maximum negative adjustment that can be made to the expiry point offset to achieve synchronization in ticks based on the underlying counter.

Table 7-28 Sub-attributes of expiry point action ADJUST

7.3.12.4 Expiry point action ACTIVATETASK

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
TASK	OsScheduleTable ActivateTaskRef		Reference to the task to be activated.
Cyclic	OsScheduleTable Cyclic	TRUE, FALSE	 OIL: If set to TRUE, this action is repeatedly added to the schedule table. XML: This is a choice container. If set to TRUE the action will be repeatedly added to the schedule table. The cycle time is located in a sub-attribute. See chapter 3.2.6.3 for more details.
Cyclic=TRUE/Cycle Time	OsScheduleTable CycleTime		If the action is declared as cyclic, this attribute holds the cycle time in counter ticks.

Table 7-29 Sub-attributes of expiry point action ACTIVATETASK



7.3.12.5 Expiry point action SETEVENT

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
TASK	OsScheduleTable SetEventTaskRef	-	Task to which the event should be sent
EVENT	OsScheduleTable SetEventRef	-	Event to be sent to the specified task
Cyclic	OsScheduleTable Cyclic	TRUE, FALSE	 OIL: If set to TRUE, this action is repeatedly added to the schedule table. XML: This is a choice container. If set to
			TRUE the action will be repeatedly added to the schedule table.
			The cycle time is located in a sub-attribute. See chapter 3.2.6.3 for more details.
Cyclic=TRUE/Cycle Time	OsScheduleTable CycleTime	-	If the action is declared as cyclic, this attribute holds the cycle time in counter ticks.

Table 7-30 Sub-attributes of expiry point action SETEVENT

7.3.12.6 LOCAL_TO_GLOBAL_TIME_SYNCHRONIZATION / OsScheduleTableSync

- > OIL: If set to TRUE, the synchronization of this schedule table is switched on and the sub-attributes will be visible.
- > XML: If this attribute is present in the configuration the synchronization is used for this schedule table.

This is only relevant in SC4.

Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
SYNC_STRATEGY	OsScheduleTbl SyncStrategy	EXPLICIT IMPLICIT NONE	 Defines the synchronization strategy of this schedule table. EXPLICIT: The schedule table is driven by an OS counter, but processing needs to be synchronized with a different counter, which is not an OS counter object. IMPLICIT: The counter driving the schedule table is the counter with which synchronisation is required NONE: no synchronization is applied at all
SYNC_STRATEGY =EXPLICIT/PRECIS ION	OsScheduleTbl ExplicitPrecision	-	Defines the synchronization tolerance (in ticks) for this schedule table. If the absolute value of the deviation between the schedule table counter and the synchronization counter is smaller than this

Technical Reference MICROSAR OS SafeContext



Attribute Name		Values	Description
OIL	XML	The default value is written in bold	
			value schedule table state is set to SCHEDULETABLE_RUN- NING_AND_SYNCHRONOUS

Table 7-31 Sub-attributes SCHEDULETABLE-> LOCAL_TO_GLOBAL_TIME_SYNCHRONIZATION = TRUE



8 System Generation

This chapter describes the generation of the executable program. The definition of the OIL / XML file was described in the chapter 7 Configuration. The general steps programming an application using the OSEK operating systems are illustrated in chapter 7.1 Configuration and generation process.

The dependencies on include files are described in chapter 5.2 Include Structure.

8.1 Code Generator

The code generator <code>GENXXXX.EXE</code> is delivered with the MICROSAR OS package (xxxx is replaced by the hardware platform name). The code generator is implemented as a 32-bit Windows console application and can be started from the OIL Configurator or directly from the command line.

The code generator has different command-line options. When started without any parameters, a list of all parameters is printed:

```
GENxxxx.EXE, Version: 6.00, Vector Informatik GmbH, 2012
Usage: GENxxxx.EXE [options] <Filename>
-s: print symboltable
-r <Filename>: write errors into file
-g: generate code
-d <Pathname>: path to write generated code
-m: prints list of known implementations
-i <Pathname>: include path for implementation files
-x: include path equals to generator exe path
-f <Filename>: read options and filename from command file
-y: perform a syntax check on OIL file
```

8.1.1 Generated Files

The code generator generates several files as described in chapter 5.1.2 Dynamic Files.

The files always have the same name. They are written to the generation path specified in the OIL Configurator or with the command line option -d.

The '.c' modules have to be compiled and linked to the application.

8.1.2 Automatic Documentation

Automatic documentation of the generation process is provided by two list files, which are generated by the code generator. A basic list file is generated in text format. The more detailed list file is generated in HTML format and can be used to publish a system design in the internet or an intranet. Both files have the same name as the OIL file, i.e.:

- > <OILFileName>.lst (basic list file in text format)
- > <OILFileName>.htm (extended list file in HTML format)

The files are located in the directory of the OIL file.



8.1.3 Conditional Generation

If MICROSAR OS is configured using an OIL file, the OS object provides the attribute ConditionalGenerating. If AUTOSAR ECUC files are used for configuration, the parameter for conditional generation is not located in the OS configuration but in the BSWMD file of the Board, as other modules also use this parameter.

If conditional generation is selected, the generated files are overridden only if the OS configuration has changed since the last generator run. This allows using the file modification date of the generated files to decide which modules need recompilation after configuration changes. Compile times of a complete AUTOSAR stack may be dramatically reduced with this setting in the development cycle.

Setting ConditionalGenerating = FALSE forces the MICROSAR OS code generator to generate the files newly on each run. This is the recommended setting for the final, productive build.

8.1.4 Generated files backup

To avoid a mixed set of generated files from various runs of the generator, already existing files are either deleted or renamed before the new generation starts.

Before previously generated files are overwritten in a new run of a generator, the complete file set is renamed to files with the original name plus a ".bak" suffix (backup file set). This file set contains the last valid generated file set even if a consecutive generator run fails for any reason.

8.2 Application Template Generator

The application template generator is not available in current versions of MICROSAR OS.

8.3 Compiler

The supported compiler package has to be installed, and the search path of the compiler, assembler and linker has to be set. If special options are required, they are described in the hardware specific manual.

8.3.1 Include Paths

The operating system is delivered with include files in the subdirectory root\HwPlatform\include (osCAN style) or root\BSW\Os (MICROSAR style).



9 AUTOSAR Standard Compliance

9.1 Deviations

Currently no known deviations

9.2 Limitations

9.2.1 API Function OS_GetVersionInfo

The function

void OS GetVersionInfo(Std VersionInfoType *version info)

is not supported by MICROSAR OS. The version information can be collected by the following #defines:

Vendor ID	OS_VENDOR_ID
Module ID	OS_MODULE_ID
Major version number	OS_SW_MAJOR_VERSION
Minor version number	OS_SW_MINOR_VERSION
Patch version number	OS_SW_PATCH_VERSION

9.2.2 Forcible Termination

MICROSAR OS does currently not support forcible termination. The only possible reaction on a protection error is to shutdown the system.

9.2.3 AUTOSAR Debug support

MICROSAR OS does not provide any variables and type definitions for AUTOSAR Debugging (See requirements OS549-551 in [1]). The suggested way to gather information about the internals of the OS is to use the ORTI feature supported by MICROSAR OS.

9.2.4 Port Interface

The Port interface described by requirements OS560, OS561 in [1] is not supported by MICROSAR OS.

9.2.5 NULL Pointer Checks

Null pointer checks described by requirements OS566 is [1] are not implemented in MICROSAR OS.

9.2.6 SafeContext specific limitations

In order to achieve a safe execution environment and fulfill the requirement for reduced complexity of ISO26262, the following OSEK/AUTOSAR OS features are not implemented in MICROSAR OS SafeContext.

Pre- and PostTaskHook as well as ISRHooks are only supported as a debug feature and not released for use in safety environments.



- > Application specific hook routines are not supported.
- > Forcible termination of Tasks, ISRs or OS-Applications is neither supported through the service TerminateApplication, nor as a reaction to a protection violation.
- > All checks of the OS must be turned on any time (StackMonitoring, OSInternalChecks).
- > ORTI Debug information is always recorded and cannot be turned off.
- > Internal resources are not supported.
- > StartupHook, ErrorHook, ShutdownHook and ProtectionHook cannot be turned off in the configuration.

Further restrictions may be found in [5] and/or [9].

On the other hand, there are additional features and measures implemented in MICROSAR OS SafeContext to increase safety:

- > StartOS is protected against calls from non-trusted code to avoid unintended reboot.
- An API is provided to allow protected access to peripherals (either by peripheral protection subsystem if provided by the hardware, or by memory protection, see [5] for details). However, trusted applications are always granted full access to all peripherals.
- A global Shared Memory Area allows quick exchange of non-critical data between OS-Applications.
- Non-trusted functions allow a safe execution of non-trusted code triggered by trusted code.
- A user configuration version can be freely assigned and read via an API (osGetConfigBlockVersion), allowing verification that the correct configuration is used during runtime.



10 Debugging Support

10.1 Kernel aware Debugging

All implementations of MICROSAR OS support kernel-aware debugging according to the ORTI specification. On some platforms, proprietary solutions are available.

Refer to the hardware specific documentation [4] for details.

10.2 Version and Variant Coding

The version and the variant are coded into the generated binary or HEX file. The user has the possibility to read version and variant using an emulator, or if the electronic control unit is accessible via the CCP protocol via the CAN bus.

The generator writes version and variant information into a structure, defined in osek.h.

The structure contains the version of the operating system (major and minor version number), the version of the code generator used (major and minor version number), information about the OS configuration bit-encoded into 8-bit values (ucSysVariantX) and information about usage of the OSEK runtime interface (ORTI):

The magic number is defined as 0xAFFEDEAD and may be used for an identification of the version in hex or binary files.

Bits	Meaning	Possible Values
01	Conformance Class	3: ECC2
2	Status Level	1: EXTENDED STATUS
34	Scheduling policy	2: mixed preemptive
5	Stack Check	1: enabled



Bits	Meaning	Possible Values
6	Error information level	0 STANDARD
7	OS internal checks	1 Additional

Table 10-1 Bit-definitions of the variant coding, ucSysVariant1

Bits	Meaning	Possible Values
01	Scalability Class	2: SC3 3: SC4
2	Usage of Schedule tables	0: no schedule tables in system
		1: schedule tables are used
3	Usage of high resolution	0: no high resolution tables in system
	schedule tables	1: high resolution schedule tables are used
4	Schedule table	0: synchronization is not used
synchronization	synchronization	1: synchronization is used
5	Timing protection	0: timing protection is used
		1: timing protection is switched off

Table 10-2 Bit-definitions of the variant coding, osSysVariant2

Bits	Meaning	Possible Values
06	ORTI version	0x22: ORTI 2.2 used
7	ORTI additional information	1: The full set of ORTI information is provided by the OS

Table 10-3 Bit definitions of the variant coding, osOrtiVariant

The data for the structure is located in the constant oskVersionVariant and specified in the OS module osek.c.

The structure also contains implementation specific variant coding which is described in the separate documentation [4].



11 Glossary and Abbreviations

11.1 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
CCP	CAN Calibration Protocol
COM	Communication (= module COM in AUTOSAR/MICROSAR)
CPU	Central Processing Unit
ECU	Electronic Control Unit
EPROM	Erasable Programmable Read Only Memory
EEPROM	Electrically Erasable Programmable Read Only Memory
HIS	Hersteller Initiative Software
IRQ	Interrupt ReQuest
ISR	Interrupt Service Routine
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
NM	Network Management (= module NM in AUTOSAR/MICROSAR)
NMI	Non Maskable Interrupt
OIL	OSEK Implementation Language
ORTI	OSEK RunTime Debugging Interface
OS	Operating System
OSEK	Abbreviation of the German term "Offene Systeme und deren Schnittstellen für die Elektronik im Kraftfahrzeug" - Open Systems and the Corresponding Interfaces for Automotive Electronics
RAM	Random Access Memory
ROM	Read-Only Memory
SC1, SC2, SC3, SC4	Scalability Class 1, -2, -3, -4
SEooC	Safety Element out of Context; a safety related element, which is not developed for a specific item
SRS	Software Requirement Specification
SWC	Software Component
SWS	Software Specification
WCET	Worst Case Execution Time
XML	Extensible Markup Language

Table 11-1 Abbreviations



11.2 Terms

Terms	Description
Forcible Termination	Forcible termination means that a task, an ISR or even a whole OS application is terminated before it has reached its end. This may be caused by a call of the API function TerminateApplication or by returning certain values in the protection hook.
Killing	The term 'killing' is used as a synonym for forcible termination within this document.
Process	The term 'process' is used within this document as a short form of 'task or ISR'.
Thread	The term 'thread' is used as a synonym of the term 'process' within this document.

Table 11-2 Terms



12 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com

For support requests you may write to osek-support@vector.com